

# NAVMAN

## iCN 550

with SmartST™ 2005 Release 2 for iCN 550

### User Manual





---

# Contents

---

Box Contents .....	5
1. Introduction .....	7
2. iCN Features .....	8
3. Starting your iCN.....	12
4. Setting your Destination .....	15
By Address .....	17
By POI .....	20
5. Using the <i>2D Map</i> Screen to Plan a Route.....	23
6. Multi-stop Trips .....	24
7. Viewing your Route .....	29
8. The <i>2D Map</i> Screen <i>Pop-up</i> Menu.....	33
9. Avoiding an Area.....	34
10. Route Demonstrator.....	35
11. Favorites and My Home .....	37
12. Preferences .....	42
13. SmartST Desktop .....	55
14. Updating your iCN .....	57
15. Installing Maps Using SmartST Desktop .....	58
16. SmartST Desktop Advanced Features .....	60
17. Accessories.....	65
Appendix: Street Types .....	66
Support Information .....	74

# Important Safety Information

## Please Read Carefully Before Installing Product in Vehicle

	<p>This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.</p>
	<p>WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</p>
	<p>CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.</p>
	<p>CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.</p>

### WARNING

Removing original equipment, adding accessories or modifying your vehicle could affect the vehicle's safety or make it illegal to operate in some jurisdictions.

Follow all product instructions and all instructions in your vehicle owner's manual regarding accessories or modifications.

Consult your country's and/or state's laws regarding operation of a vehicle with any accessories or modifications.

### WARNING

It is your sole responsibility to place, secure and use the iCN 550 in a manner that will not cause accidents, personal injury or property damage. Always observe safe driving practices.

Mount the iCN 550 in a position that is secure and does not obstruct the driver's view.

Do not mount the iCN 550 in a way that may interfere with the safe operation of the vehicle, the deployment of air bags or other safety equipment.

Do not operate the iCN 550 while driving.

Before you use your iCN 550 for the first time, make yourself familiar with your device and its operation.

On main roads, the distance to an exit calculated by the iCN 550 may be further than the distance shown on road signs. Road signs show the distance to the start of an exit while your iCN 550 shows the distance to the next intersection, i.e., the end of the exit ramp or road. To prepare to exit a road, always follow distance information on road signs.

### CAUTION

Do not handle the iCN 550 while it is hot. Let the product cool, out of direct sunlight.

### CAUTION

Do not expose the iCN 550 to direct sunlight in an unattended vehicle for prolonged periods. Overheating may damage the unit.

To discourage theft, do not leave the iCN 550 in plain view in an unattended vehicle.

**Failure to adhere to these instructions may lead to death, serious injury, or property damage. Navman disclaims all liability for use of the iCN 550 that causes or contributes to death, injury, or property damage or that violates any law. Navman is not responsible for the accuracy of any traffic-related information supplied by other parties and disclaims all liability for any accident, injury or property damage resulting from reliance on such information.**

Thank you for purchasing your Navman iCN 550. We hope you enjoy your new GPS transferable navigation system.

This user manual will help you Drive-Away™ with your iCN, straight out of the box.

Navman welcomes your feedback. To contact us or visit our website, see *Support Information* on page 74.

## Box Contents



AC Power Pack  
with Power Cable

*Note: The number of plugs depends on the country of purchase.*



USB Cable



Protective  
Carry-Case

Mounting Bracket



iCN with GPS Antenna



Remote Control



12V In-Vehicle  
Power Adaptor  
with Power Cable



CD-ROMs, including:

- SmartST™ 2005 software including SmartST Desktop
- Map data
- User Manual (PDF format) and Adobe® Reader®

*Note: the number of disks varies with country of purchase.*



Documentation, including:

- User Manual
- In-Car Installation Guide
- Software Product License/  
Limited Warranty Agreement
- Registration Card



# 1. Introduction

Whether you travel in your own country or elsewhere, the iCN will direct you to your destination without the need for map-books and second-hand instructions.

The Global Positioning System (GPS) is available free of charge, at any time, and is accurate to within 5 m (15 ft). The maps on your iCN provide street-level detail for door-to-door navigation, including Points of Interest (POIs) such as accommodation, gas stations, railway stations and airports.

Use this manual to learn how to operate your iCN efficiently and safely; discover all the different features available to you.

## GPS and GPS Signals

The Global Positioning System is a network of satellites that transmit accurate time and position information worldwide. GPS receivers receive signals from these satellites and use the information to determine an exact location. GPS satellites orbit the earth at around 20,200 kilometers (12,000 miles). While a GPS receiver can detect signals from up to 12 satellites at any time, only three signals are needed to provide a position or "GPS fix" (latitude and longitude) for vehicle navigation systems.

The iCN GPS antenna receives GPS signals. To receive GPS signals, ensure that the iCN is outdoors, or in a vehicle outdoors, and the GPS antenna has an unobstructed view of the sky. The iCN can operate in all types of weather except snowfall.

GPS signals may also be blocked by heat-reflective or heated windscreens. If your vehicle is fitted with such a windscreen, you will need to purchase an external antenna for your iCN to receive GPS signals. See *page 65*.

## 2. iCN Features

We recommend that you familiarise yourself with the iCN's basic operations, such as using the stylus, **4-way toggle** and **Volume** control.

### Front Components



Component	Description
1 Touch Screen	Displays maps and menu options. Tap with the stylus to select menu options or enter information.
2 Fuel	Displays the <i>Select POI</i> screen, listing the nearest gas stations to your current position.
3 Park	Displays the <i>Select POI</i> screen, listing the nearest public parking lot to your current position.
4 Menu	Displays the <i>Main Menu</i> screen. Press and hold to reset the iCN.
5 ESC	Cancels an action, returns to the previous screen or deletes the last text character on the <i>Keyboard</i> screen; hold down for longer to delete a whole line at once.
6 +	Displays a smaller area in greater detail on the <i>Map</i> and <i>3D Map</i> screens, or press and hold to increase the screen brightness.
7 Charge Indicator	<b>Amber</b> indicates that the battery is charging; <b>Green</b> indicates that the battery is fully charged.
8 -	Displays a larger area in less detail on the <i>Map</i> and <i>3D Map</i> screens, or press and hold to decrease the screen brightness.

	Component	Description
9	4-Way Toggle	Selects <i>Main Menu</i> options, keyboard characters and preferences, moves around the <i>2D Map</i> screen to select a destination, and scrolls through lists, such as lists of search results. Press center to confirm the selected menu option, text or preference; press up or down to adjust the viewing angle on the <i>3D Map</i> screen.
10	Page	Cycles through the <i>2D Map</i> , <i>3D Map</i> , <i>Next Turn</i> and <i>Next 5 Turns</i> screens; displays additional preferences or search-result screens, when available.
11	Infrared Receiver	Receives signals from the remote control.

## Side Components



	Component	Description
1	Reset	Resets the iCN; press using the stylus.
2	Volume Control	Rotate up or down briefly to hear a sound test; rotate and hold to adjust volume.
3	Power Socket	Connection socket for vehicle power adaptor or AC power pack cable.
4	USB Socket	Connection socket for USB cable to your computer.
5	SD/MMC Slot	Slot for memory card. Memory card must be inserted with label facing forward.
6	Headphone Socket	Connection socket for headphones or earphones (not included).

## Back Components



	Component	Description
1	Battery Switch	Must be set to <b>ON</b> for normal use. Switching to <b>OFF</b> will turn the battery off, saving battery power.
2	Speaker	Outputs voice commands and warnings. Use the <b>Volume</b> control to adjust.
3	GPS Receiver	Receives signals from GPS satellites when lifted out to the horizontal position.
4	External Antenna Socket	Connection socket for GPS mMCX External Antenna (not included; see page 65). Protected by rubber cover.

## Top Components



	Component	Description
1	Power	Turns the iCN on or off. When off, the iCN enters a suspended state.
2	Stylus	Used to tap the screen to make selections and enter information; Pull out of the slot to use; store in the slot when not using your iCN.

## Stylus



The stylus is your input device. Pull the stylus out of the slot and extend it for ease of use. Store it in the slot when not in use.


- Tap the screen with the stylus to select.
- Tap and drag the screen with the stylus to navigate the *2D Map* and *3D Map* screens.

## Internal Battery

The iCN has an internal battery that when fully charged should power the iCN for 4 hours.

You can monitor battery power at the *Power Status* screen:

*Main Menu* → *Preferences* → *More Preferences* → *Hardware* → *Power Status*

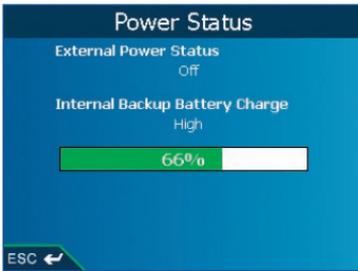

## Charging the Battery

When the battery is charging, the **Charge Indicator** is **amber**; when the battery is fully charged, the **Charge Indicator** is **green**.

- To charge the iCN in a vehicle, plug the vehicle power adaptor into the **Power Socket** on the side of the iCN and the other end into the vehicle power socket.
- To charge the iCN using an electrical wall outlet, plug the AC power cable into the **Power Socket** on the side of the iCN and the AC power pack into the wall outlet.

## 3. Starting your iCN

Before you begin, check if your vehicle is fitted with a heat-reflective or heated windshield. If so, you will need to purchase an external antenna for your iCN to receive GPS signals. See page 65.

### Step One: Position the iCN in your Vehicle

Follow the safety notice on page 7 to ensure that the iCN does not obstruct the driver's view, or interfere with the operation of vehicle airbags and safety devices. Position the iCN in your vehicle according to the instructions in your *In-Car Installation Guide*.

The *Main Menu* screen provides access to all of the iCN's functions, including navigating to a destination.

### Step Two: Turn iCN On

1. If the **Battery Switch** is **OFF**, then remove and use the stylus to switch it **ON**.



2. Gently pull the bottom of the GPS receiver away from the iCN.  
The receiver will lift out to a horizontal position, allowing it to obtain a GPS fix.



3. Press **⏻**.  
The iCN will turn on.


## Step Three: Warning Screen

1. Read the warning message.
2. Tap **Accept** to confirm that you understand.  
The first *Tutorial* screen will display.

## Step Four: Tutorial Screens

1. Read the *Tutorial* screen.
  - To prevent the *Tutorial* from displaying on startup, select the **Do not show Tutorial on startup** check box.
  - You can view the Tutorial again while using your iCN. *See page 54 for details.*
2. Tap  to move through each *Tutorial* screen.  
The *Main Menu* screen will display.

## Main Menu Screen

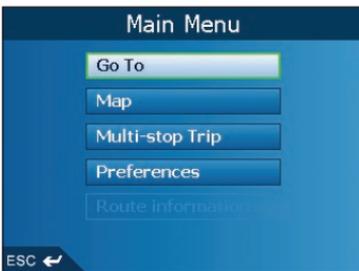

- Use the stylus to select a *Main Menu* option.
- Return to the *Main Menu* screen at any time by pressing .
- The **Route Information** option is only available when a route has been calculated.  
*See page 32 for more information.*

## To Turn your iCN Off

When your iCN is off, it enters a suspended state and the system stops operating. When you turn your iCN on, it returns to the screen you were last viewing.

1. Remove the iCN from the suction-mount bracket if necessary, then gently push the GPS receiver back towards the iCN.  
The receiver will click into place.
2. Press **ⓘ**.  
The iCN will enter a suspended state and the screen will turn off.

## Power-Saving Suspended State

To save battery power, your iCN will automatically enter a suspended state after a set period of time. You can change the default suspended-state settings at the *Power Options* screen.

*Main Menu* → *Preferences* → *More Preferences* → *Hardware* → *Power Options*



*Note: if you are not going to be using the iCN for an extended period of time, switch the **Battery Switch** to **OFF** to save battery power.*

## To Reset your iCN

Normally you do not need to reset your iCN; however, should your iCN not turn on or not respond, you can reset it to solve the problem.

To reset your iCN, either:

- a. Press and hold **≡←**.  
The message *Reset Device?* will display. Tap **Yes**.
- b. Use the stylus to press the **Reset** button on the top of the iCN.

## 4. Setting your Destination

For your safety, enter destination information before you start a journey.


**Do not operate the iCN while driving.**

Select a destination using the *Destination*, *Keyboard* and *Preview* screens, which used together form a destination wizard.

This section describes how to use each of these screens and provides two case studies to help guide you through setting your destination.

### Destination Screen

The *Destination* screen is used to select your destination by area, street, postal code/ZIP code, Point of Interest (POI), intersection, city, town, country or state.

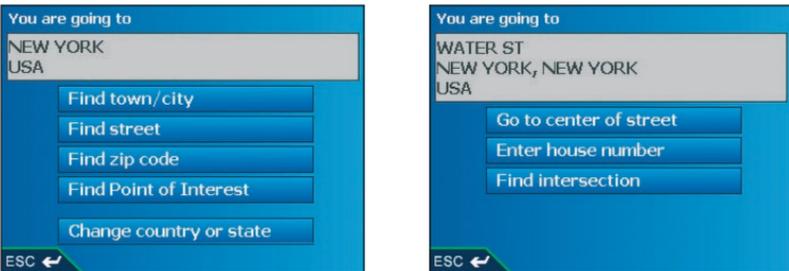

As you specify each part of the address, it will display in the **You are going to** field at the top of the screen. The available options will change to reflect the parts of the address still to be completed.

### Keyboard Screen

The *Keyboard* screen will display when you are required to enter text, such as when searching for a street name. As you select each character, the first two results will display. Tap  to see more search results. Search results will be listed in matching order, with the closest matches appearing at the top of the list. If your destination appears in the list at the top of the screen, tap on it to select it.

The *Keyboard* screen can display in three modes: alphabet, alternate and number/symbol.



Figure 1. Alphabet Keyboard



Figure 2. Alternate Keyboard

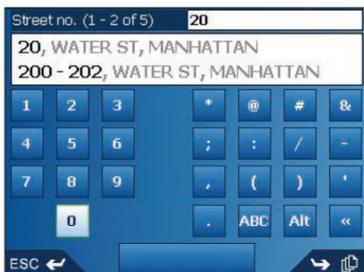




Figure 3. Number/Symbol Keyboard

As you select each character, the first two results will display. Tap  to see more search results.

- To select a character or a search result, tap the character or search result.
- To delete a character, press **ESC** or tap <<; hold **ESC** to delete the line.
- To display the number/symbol *Keyboard* screen (Figure 3), tap **123**.
- To display the alternate *Keyboard* screen (Figure 2), press **+**, or tap **Alt**.
- To display the alphabet *Keyboard* screen (Figure 1), press **-**, or tap **ABC**.

## Preview Screen

The *Preview* screen is used to display a preview of your destination before navigating to it, saving it as a Favorite or displaying it on the *2D Map* screen.

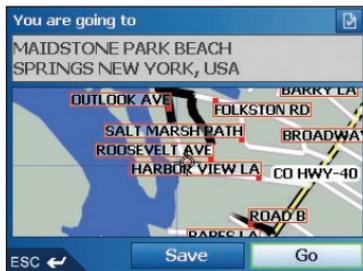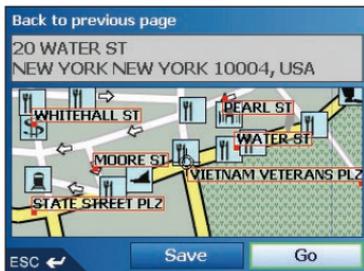

- To display a smaller area in greater detail (zoom in), press **+**.
- To display a larger area in less detail (zoom out), press **-**.
- To display your destination on the *2D Map* screen, tap the preview map. The *2D Map* screen will display.
- To save your destination as a Favorite, tap **Save**. The *New Favorite* screen will display. See Favorites and My Home on page 37.
- To calculate the route and open the *3D Map* screen, tap **Go**. The *3D Map* screen will display.
- To view Point of Interest (POI) details when your destination is a POI, tap . The *POI Detail* screen will display.

# Setting your Destination by Address

## Step One: Open the *Destination* screen

- From the *Main Menu*, tap **Go To**.
- From the *Go To* screen, tap **Address or POI**.  
The *Destination* screen will display.

**Important Note:** *The first time you are setting your destination, the Select Country screen will display instead of the Destination screen. Go to Step Two: Select the Country of Destination, step b.*

*The next time you perform this procedure, the Destination screen will open as expected.*


## Step Two: Select the Country of Destination

- From the *Destination* screen, tap **Change country** or **Change country or state**.  
The *Select country* screen will display.



- Select a country from the list.  
The *Select state* screen will display.

## Step Three: Select the State of Destination

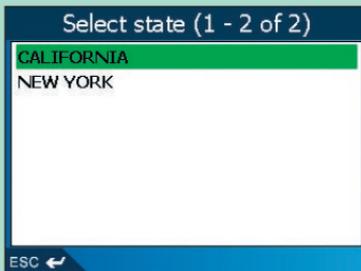


- Select a state from the list.  
The *Destination* screen will display.

## Step Four: Find the Town or City of Destination

- a. From the *Destination* screen, tap **Find town/city**.  
The *Keyboard* screen will display.



- b. Use the *Keyboard* screen to find the town or city of your destination. *For information on using the Keyboard screen, see pages 15-16.*  
The *Destination* screen will display.

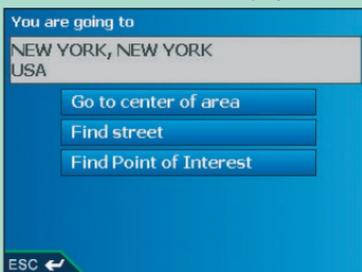


## Step Five: Find the Street of Destination

- a. From the *Destination* screen, tap **Find street**.  
The *Keyboard* screen will display.



- b. Use the *Keyboard* screen to find the street of your destination. *For information on using the Keyboard screen, see pages 15-16.*  
The *Destination* screen will display.

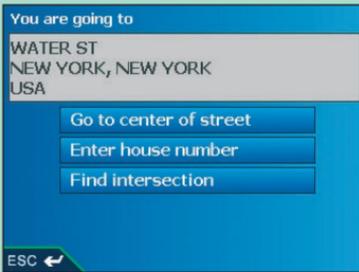


## Step Six: Find the House Number of Destination

- a. From the *Destination* screen, tap **Enter house number**.


The *Keyboard* screen will display.

*Note: If the Enter house number option is not displayed, house numbers are not available for your selected street. Tap Go to center of street to display the Preview screen. Go to step c.*

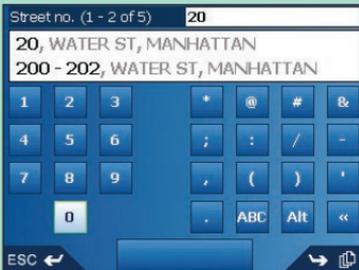

- b. Use the *Keyboard* screen to find the house number of your destination. For information on using the *Keyboard* screen, see pages 15-16.

The *Preview* screen will display.

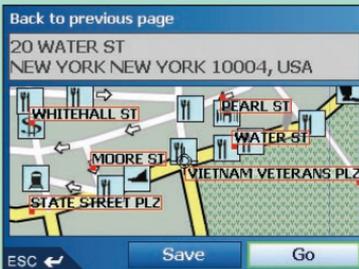

- c. Complete one of the following:

- To calculate the route and open the *3D Map* screen, tap **Go**.  
The *3D Map* screen will display.
- To display the destination on the *2D Map* screen, tap the preview map.  
The *2D Map* screen will display.
- To save the destination as a Favorite, tap **Save**.  
The *New Favorite* screen will display. See *Favorites and My Home on page 37*.
- To change your destination, tap **ESC**.  
The *Destination* screen will display.

To return to the *Main Menu*, press .

## Setting your Destination by POI

A POI is a named site, feature, landmark or public venue which can be displayed as an icon on the map. POIs are grouped by type, such as parks and museums.

### Step One: Open the *Destination* screen


- From the *Main Menu*, tap **Go To**.
- From the *Go To* screen, tap **Address or POI**.  
The *Destination* screen will display.

**Important Note:** *The first time you are setting your destination, the Select country screen will display instead of the Destination screen. Go to Step Two: Select the Country of Destination, step b.*

*The next time you perform this procedure, the Destination screen will open as expected.*


### Step Two: Select the Country of Destination

- From the *Destination* screen, tap **Change country** or **Change country or state**.  
The *Select country* screen will display.

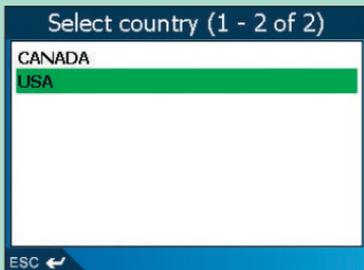

- Select a country from the list.  
The *Select state* screen will display.

### Step Three: Select the State of Destination.

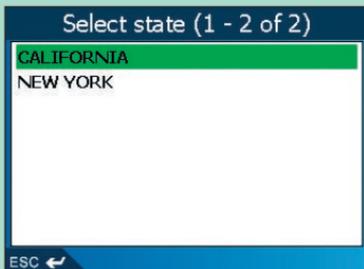


- Select a state from the list.  
The *Destination* screen will display.

## Step Four: Select the Type of POI

Note: To narrow the search for a type of POI, you can first search by Town or City.


- From the *Destination* screen, tap **Find Point of Interest**.  
The *Select POI* screen will display.

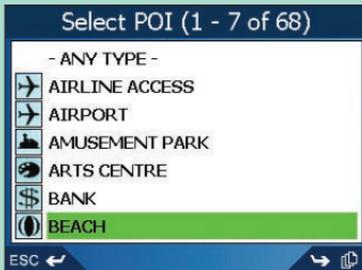

- Select a POI type from the list.  
The *Keyboard* screen will display.



- Use the *Keyboard* screen to find the POI. For information on using the *Keyboard* screen, see pages 15-16.  
The *Preview* screen will display.

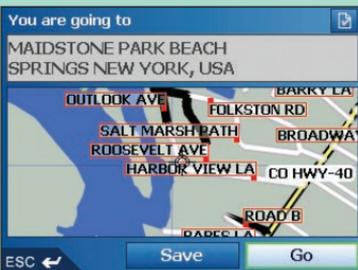

d. Complete one of the following:

- To calculate the route and open the *3D Map* screen, tap **Go**.  
The *3D Map* screen will display.
- To display the destination on the *2D Map* screen, tap the preview map.  
The *2D Map* screen will display.
- To save the destination as a Favorite, tap **Save**.  
The *New Favorite* screen will display. See *Favorites and My Home on page 37*.
- To change your destination, tap **ESC**.  
The *Destination* screen will display.
- To view Point of Interest (POI) details when your destination is a POI, tap .  
The *POI Detail* screen will display.

To return to the *Main Menu*, press .

## 5. Using the *2D Map* screen to Plan a Route

You can plan a route directly from the *2D Map* screen using the *Pop-up* menu.

1. From the *Main Menu*, tap **Map**.

The *2D Map* screen will display.

- Move around the *2D Map* screen using the **4-way toggle** or stylus.
  - To display a smaller area in greater detail, press **+**.
  - To display a larger area in less detail, press **-**.
2. Tap the *Map* screen or press the **4-way toggle** button to display the cross-hairs.
    - To remove the cross-hairs press **ESC**.
  3. Drag the intersection of the cross-hairs to a destination. Where the cross-hairs intersect on a street, the street will highlight and the street name will display.
  4. Tap the intersection of the cross-hairs, or press the **4-way toggle** button to select the street as your destination.

The *Pop-up* menu will display.



5. Select **Navigate to**.  
The route is calculated and displayed on the *3D Map* screen.

## 6. Multi-stop Trips

You can use the *Multi-stop Trip* screen to set multiple destination points for your trip. Your route will be calculated to go via each of these points in the specified order.

Destination points can be added via the *Multi-stop Trip* screen or by selecting **Show Details** from the pop-up menu on the *2D Map* screen, then **Add to Trip**.

You can save up to 200 multi-stop trips, each with up to 14 destination points.

### Step One: Start your Multi-stop Trip

- a. From the *Main Menu*, tap **Multi-stop Trip**.  
The *Multi-stop Trip* screen will display.




- b. Tap **Add**.  
The *Add to Trip* screen will display.



- c. Tap **Address or POI**.  
The *Destination* screen will open.

*Note: You can also add destination points using Favorites, recent destinations and nearest Points of Interest.*

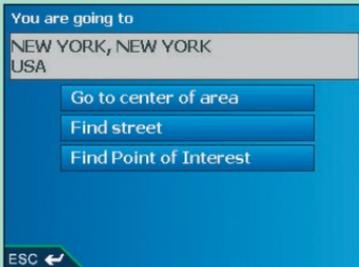


## Step Two: Select the Country of your Destination Point

- a. If the destination point is in a different country to the previous destination point, tap **Change country** or **Change country or state**.  
The *Select country* screen will display.



- b. Select a country from the list.  
The *Destination* screen will display.

## Step Three: Select the State of your Destination Point

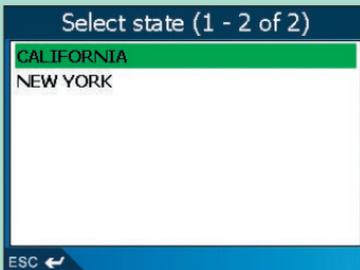


- a. Select a state from the list.  
The *Destination* screen will display.

## Step Four: Find the Town or City of your Destination Point

- a. From the *Destination* screen, tap **Find town/city**.  
The *Keyboard* screen will display.




- b. Use the *Keyboard* screen to find the town or city of your destination. *For information on using the Keyboard screen, see pages 15-16.*  
The *Destination* screen will display.

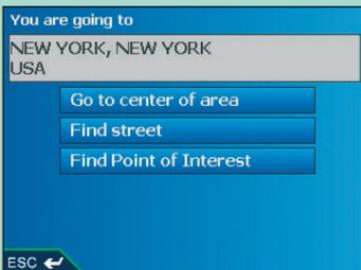

## Step Five: Find the Street of your Destination Point

- a. From the *Destination* screen, tap **Find street**.  
The *Keyboard* screen will display.

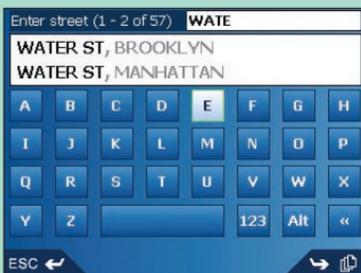

- b. Use the *Keyboard* screen to find the street of your destination point. *For information on using the Keyboard screen, see pages 15-16.*  
The *Destination* screen will display.

## Step Six: Find the House Number of your Destination Point

- a. From the *Destination* screen, tap **Enter house number**.


The *Keyboard* screen will display.

*Note: If Enter house number option is not displayed, house numbers are not available for your selected street. Select Go to center of street to display the Preview screen. Go to step c.*




- b. Use the *Keyboard* screen to find the house number of your destination point. For information on using the *Keyboard* screen, see pages 15-16.

The *Preview* screen will display.

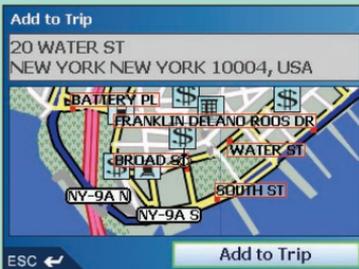

- c. Select **Add to Trip**.

The *Multi-stop Trip* screen will display, listing your destination point.

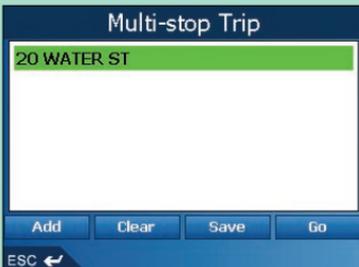

d. Complete one of the following:

*Note: Destination points added, updated or deleted after a multi-stop trip has commenced will not affect the current route.*

If you want to ...	Then ...
add another destination point <i>Note: Destination points added after a multi-stop trip has commenced will not be included in the current route.</i>	<ul style="list-style-type: none"> <li>i tap <b>Add</b>. The Add to Trip screen will display.</li> <li>ii tap <b>Address</b>. The Destination screen will display.</li> <li>iii go to <i>Step Three: Find the Area of your Destination Point</i>.</li> </ul>
change the order of your destination points	<ul style="list-style-type: none"> <li>i select a destination point to move from the list. The Preview screen will display.</li> <li>ii tap <b>Move</b>. The Multi-stop Trip screen will display.</li> <li>iii use the <b>4-way toggle</b> to move the selected destination point to the correct position.</li> </ul>
calculate the route	tap <b>Go</b> . The 3D Map screen will display the calculated route.
delete all destination points	tap <b>Clear</b> .
delete one destination point	<ul style="list-style-type: none"> <li>i select a destination point to delete from the list. The Preview screen will display.</li> <li>ii tap <b>Delete From Trip</b>. The Multi-stop Trip screen will display.</li> </ul>
save the multi-stop trip as a Favorite	<ul style="list-style-type: none"> <li>i tap <b>Save</b>. The New Favorite screen will display.</li> <li>ii tap <b>Save</b>. The Favorite will save and the Multi-stop Trip screen will display.</li> </ul>

To return to the *Main Menu* screen, press .

## Skipping a Destination Point

You can modify a multi-stop trip at any time from the *Multi-stop Trip* screen; however, if you have already commenced a trip, changes will not affect the current route:

*Main Menu* → *Multi-stop Trip*

To skip a destination point during a multi-stop trip, complete the following:

1. Press  to return to the *Main Menu* screen.  
The *Main Menu* screen will display.
2. Tap **Route Information**.  
The *Route Information* screen will display.
3. Tap **Skip Next Dest**.  
The next destination point will be skipped and the route recalculated to the following destination point.

# 7. Viewing your Route

Once a route has been calculated, you can view it in several ways. Press  to cycle through the screens.


## 2D Map Screen

The *2D Map* screen is always oriented North and shows your current position (if a GPS fix is active) and surrounding street names. If a route has been calculated, the route and turns are highlighted.

You can plan a route from the *2D Map* screen. See page 23 for further details.

To view the *2D Map* screen, either tap **Map** on the *Main Menu* screen or press  to cycle through the screens when a route has been calculated.

- To display a smaller area in greater detail, press +.
- To display a larger area in less detail, press -.
- To display the cross-hairs, tap the map. Tap the intersection of the cross-hairs, or press the **4-way toggle** to display the *Pop-up* menu.

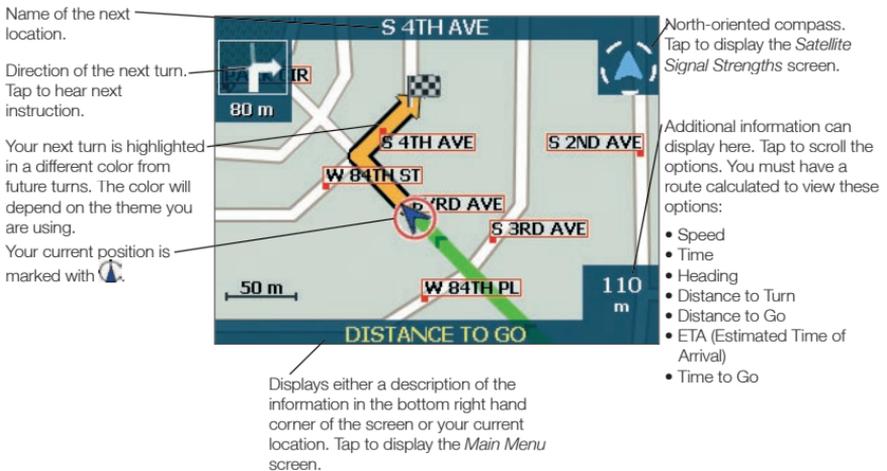

## 3D Map Screen

The *3D Map* screen displays when a route is calculated, oriented to the traveling direction with an adjustable horizon.

It is not possible to plan a route directly from this screen.

To view the *3D Map* screen when a route has been calculated, press  to cycle through the screens.


- To adjust the viewing angle, press the **4-way toggle** up or down.
- To display a smaller area in greater detail, press **+**.
- To display a larger area in less detail, press **-**.
- To display the *Go To Pop-up* summary, press the **4-way toggle**.

Name of the next location.

Direction of the next turn.  
Tap to hear next instruction.

Your next turn is highlighted in a different colour from future turns. The colour will depend on the theme you are using.

Your current position is marked with .

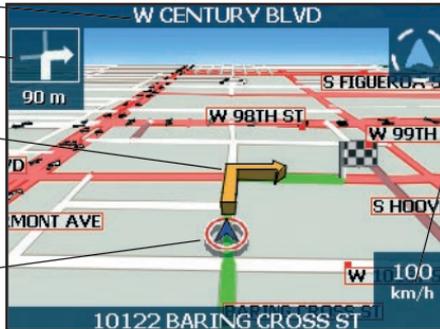

North-oriented compass.  
Tap to display the *Satellite Signal Strengths* screen.

Additional information can display here. Tap to scroll the options. You must have a route calculated to view these options:


- Speed
- Time
- Heading
- Distance to Turn
- Distance to Go
- ETA (Estimated Time of Arrival)
- Time to Go

Displays either a description of the information in the bottom right hand corner of the screen or your current location. Tap to display the *Main Menu* screen.

## Next Turn Screen

The *Next Turn* screen displays information that you need for the next turn, the direction of the turn and the distance to the turn. A route must have been calculated for this screen to be able to display. Access to this screen is controlled by the *Display preferences* screen. See [page 44](#).


To view the *Next Turn* screen when a route has been calculated, press  to cycle through the screens.

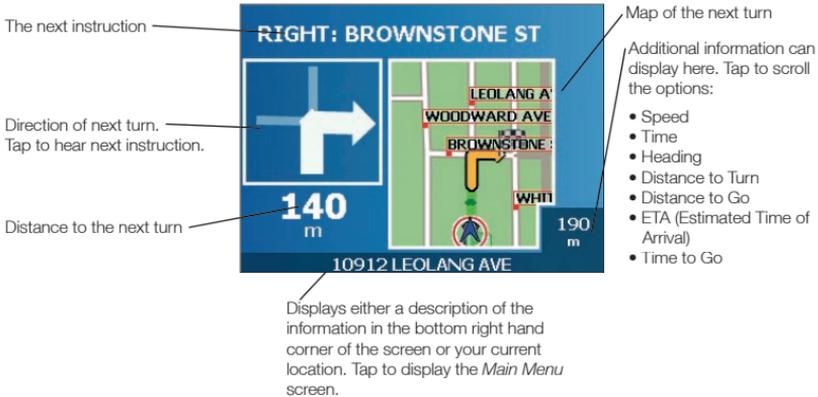

## Next 5 Turns Screen

The *Next 5 Turns* screen displays the next five turns of your route, the turn direction, the street name and the distance to the turn. A route must have been calculated for this screen to be able to display. Access to this screen is controlled by the *Display preferences* screen. See [page 44](#).

To view the *Next 5 Turns* screen when a route has been calculated, press  to cycle through the screens.

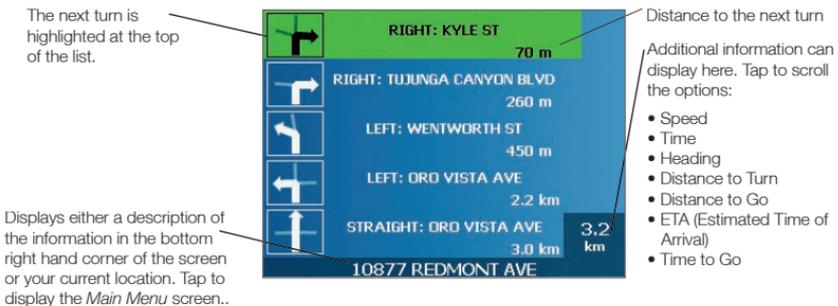

## Back-On-Track™ Automatic Rerouting

Your route is re-directed if you make a wrong turn. The ? symbol will display in the upper left corner of the *3D Map* and *Next Turn* screens while the route recalculates.

## Route Information Screen

The *Route Information* screen provides information about your current route and lets you skip a trip destination point or cancel a route.

The screen is only available from the *Main Menu* when you are navigating a route:  
*Main Menu* → *Route Information*



### Show Route

Tap **Show Route** to display your entire route on the *2D Map* screen.

### Instruction List

Tap **Instruction list** to display the *Instruction List* screen.

The *Instruction List* screen is similar to the *Next 5 Turns* screen (see Page 31) except that it displays your entire route.

- Press  to cycle through the instruction list.

### Summary

Tap **Summary** to display the *Route Summary* screen containing your **From** and **To** addresses, **Estimated Time** to arrival and the **Distance** remaining to your destination.

If you are navigating a multi-stop trip, the information displayed will relate to your next destination point.

### Skip Next Destination

Tap **Skip Next Dest.** to skip the next destination point of your trip.

Only available when navigating a multi-stop trip.

### Cancel Route

Tap **Cancel Route** to cancel the route.

## 8. The 2D Map Screen Pop-up Menu

The *Pop-up* menu allows you to access navigational functions from the *2D Map* screen.

To display the *Pop-up* menu, complete the following:

- From the *Main Menu*, tap **Map**.  
The *2D Map* screen will display.
  - Move around the *2D Map* screen using the **4-way toggle** or stylus.
  - To display a smaller area in greater detail, press **+**.
  - To display a larger area in less detail, press **-**.
- Tap the *Map* screen or press the **4-way toggle** button to display the cross-hairs.
  - To remove the cross-hairs press **ESC**.
- Position the intersection of the cross-hairs on a destination point. Where the cross-hairs intersect on a street, the street will highlight and the street name will display.
- Tap the intersection of the cross-hairs, or press the **4-way toggle** button to select the street as your destination.  
The *Pop-up* menu will display.



- You can choose one of the following options:

Menu Option	Description
<b>Navigate To</b>	Calculates a route from your current location.
<b>Set as Start Location</b>	Sets the selected point as your departure point; SmartST will calculate and display the route to your destination.
<b>Add to Favorites</b>	Displays the <i>New Favorite</i> screen for you to add the selected point as a Favorite.
<b>Show Details</b>	Displays the <i>Address Details</i> screen from which you can: <ul style="list-style-type: none"> <li>View details of the selected point;</li> <li>Add the point to your multi-stop trip;</li> <li>Set the point as your destination point;</li> <li>Save the point as a Favorite.</li> </ul>
<b>Add Avoid Area</b>	Adds an Avoid Area for you to size.
<b>Delete Avoid Area</b>	Deletes the selected Avoid Area.
<b>Nearest POI</b>	Displays the <i>Select POI</i> screen; select the POI type, then the specific POI to navigate to.

## 9. Avoiding an Area

You can calculate a route that avoids a specified area on the map. For example, you may want to avoid an area that frequently experiences traffic problems. Up to ten Avoid Areas can be added. Avoid Areas are displayed as shaded areas. If no alternative route around an Avoid Area exists, you will be routed through an Avoid Area.

### Adding an Avoid Area

1. From the *Main Menu* screen, tap **Map**.  
The *2D Map* screen will display.
2. Tap the *Map* screen or press the **4-way toggle** button to display the cross-hairs.
3. Use the stylus or **4-way toggle** to position the intersection of the cross-hairs to the area that you want to avoid.
4. Tap the intersection of the cross-hairs, or press the **4-way toggle** button to display the *Pop-up* menu.
5. Select **Add Avoid Area**.  
An Avoid Area is displayed.



6. Set the Avoid Area to the correct size and position using the **4-way toggle**.
7. Tap the Avoid Area or press the **4-way toggle** to enable the Avoid Area.

### Deleting an Avoid Area

1. From the *Main Menu* screen, select **Map**.  
The *2D Map* screen will display.
2. Tap the *Map* screen and move the cross-hairs over the Avoid Area that you want to delete.
3. Tap the intersection of the cross-hairs, or press the **4-way toggle** button to display the *Pop-up* menu.
4. Select **Delete Avoid Area**.  
The Avoid Area is deleted.

### Deleting all Avoid Areas

1. From the *Main Menu* screen, tap **Preferences**.
2. From the *Preferences* screen, tap **My Data**.  
The *My Data* screen will display.
3. From the *My Data* screen, tap **Clear Data**.  
The *Clear Data* screen will display.
4. Select **Clear Avoid Areas**. When the warning dialog-box opens, select **Yes**.
5. To return to the *Main Menu*, press .

# 10. Route Demonstrator

The Route Demonstrator allows you to:

- Preview a route.
- Plan and view a route without a GPS fix, such as when you are inside a building.

## Step One: Activate Route Demonstrator

1. From the *Main Menu* screen, tap **Preferences**.
2. From the *Preferences* screen, tap **Routing**.  
The *Routing* screen will display.
3. Press  twice.
4. Select the *Demonstrate Route* check box.
5. Tap **Save**.  
The *Main Menu* screen will display.

## Step Two: Select Departure Point

If you have a GPS fix, you do not need to select a departure point unless you want the demonstrated route to start elsewhere.

1. From the *Main Menu* screen, tap **Map**.  
The *2D Map* screen will display.
2. Tap the *Map* screen or press the **4-way toggle** button to display the cross-hairs.
3. Position the intersection of the cross-hairs on your departure point. Where the cross-hairs intersects on a street, the street will highlight and the street name will display.
4. Tap the intersection of the cross-hairs, or press the **4-way toggle** button.  
The *Pop-up* menu will display.
5. Select **Set as Start Location**.  
The *Pop-up* menu will close.

## Step Three: Select Destination Point

Set a destination either by using the *Destination* screen (see pages 15-22) or by using the *2D Map* screen *Pop-up* menu and completing the following:

1. Tap the *Map* screen or press the **4-way toggle** button to display the cross-hairs.
2. Position the intersection of the cross-hairs on your destination point. Where the cross-hairs intersects on a street, the street will highlight and the street name will display.
3. Tap the intersection of the cross-hairs, or press the **4-way toggle** button.  
The *Pop-up* menu will display.
4. Select **Navigate To**.  
The *Pop-up* menu will close. The *3D Map* screen will display the calculated route in Route Demonstrator mode.
  - If you have selected the *Repeat* check box on the *Routing* preferences screen, the Route Demonstrator will continue to repeat the route.

## To Disable Route Demonstrator

1. Press  to display the *Main Menu* screen.
2. From the *Main Menu* screen, tap **Preferences**.
3. From the *Preferences* screen, tap **Routing**.  
The *Routing* screen will display.
4. Press  twice.
5. Clear the *Demonstrate Route* check box.
6. Tap **Save**.  
The Route Demonstrator will be disabled. The *Main Menu* screen will display.

# 11. Favorites and My Home

You can save up to 200 destinations as Favorites, one of which can be saved as My Home. My Home can be any designated Favorite, but we recommend that it is your home or other common destination. You can save a Favorite from the *Preview* screen after searching for an address, or from the *Pop-up Menu* on the *2D Map* screen.

## Saving a Favorite

1. Either search for an address using the *Destination* and *Keyboard* screens as described in *Setting your Destination*, pages 15-22, or create a multi-stop trip as described in *Multi-stop Trips*, pages 24-28, until the *Preview* screen is displayed.

2. Tap **Save**.

The *New Favorite* screen will display.



3. To change the name of the Favorite, tap the **Name** box.

The *Enter text* screen will display.



- To select a character, tap the character.
- To delete a character, press **ESC** or tap <<; hold **ESC** to delete the line.
- To display the number/symbol *Enter text* screen, tap **123**.
- To display the alternate *Enter text* screen, press **+**, or tap **Alt**.
- To display the alphabet *Enter text* screen, press **-**, or tap **ABC**
- After you have entered a name for the Favorite, tap **Enter**.  
The *New Favorite* screen will display.

4. Complete one of the following:

- To save as My Home, tap **Save as My Home**.  
The Favorite is saved as My Home. The Go To screen will display.
- To save as a favorite, tap **Save as Favorite**.  
The Favorite is saved. The Go To screen will display.

## Saving a Favorite from the 2D Map Screen

1. From the *Main Menu*, select **Map**.  
The *2D Map* screen will display.
2. Tap the *Map* screen or press the **4-way toggle** button to display the cross-hairs.
3. Position the intersection of the cross-hairs. Where the cross-hairs intersect on a street, the street will highlight and the street name will display.
4. Tap the intersection of the cross-hairs, or press the **4-way toggle** button.  
The *Pop-up* menu will display.



5. Select **Add to Favorites**.  
The *New Favorite* screen will display.




6. To change the name of the Favorite, select the **Name** box.  
The *Enter text* screen will display.



- To select a character, tap the character.
  - To delete a character, press **ESC** or tap <<; hold **ESC** to delete the line.
  - To display the number/symbol *Enter text* screen, tap **123**.
  - To display the alternate *Enter text* screen, press +, or tap **Alt**.
  - To display the alphabet *Enter text* screen, press -, or tap **ABC**.
  - After you have entered a name for the Favorite, tap **Enter**.  
The *New Favorite* screen will display.
7. Complete one of the following:
- To save as a favorite, tap **Save as Favorite**.  
The Favorite is saved. The *Go To* screen will display.
  - To save as My Home, tap **Save as My Home**.  
The Favorite is saved as My Home. The *Go To* screen will display.

## Editing the Name of the Favorite

1. From the *Main Menu*, tap **Go To**.
2. From the *Go To* screen, tap **Favorites**.  
The *Favorite* screen will display.
3. Select a Favorite to edit.  
The *Preview Favorite* screen will display.

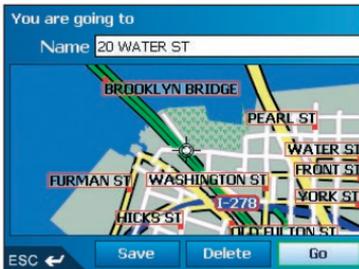


- Tap the **Name** box.  
The *Enter text* screen will display.



- To select a character, tap the character.
  - To delete a character, press **ESC** or tap <<; hold **ESC** to delete the line.
  - To display the number/symbol *Enter text* screen, tap **123**.
  - To display the alternate *Enter text* screen, press +, or tap **Alt**.
  - To display the alphabet *Enter text* screen, press -, or tap **ABC**.
  - After you have entered a name for the Favorite, tap **Save**.  
The *New Favorite* screen will display.
- Complete one of the following:
    - To save as My Home, tap **Save as My Home**.  
The Favorite is saved as My Home. The *Go To* screen will display.
    - To save as a favorite, tap **Save as Favorite**.  
The Favorite is saved. The *Go To* screen will display.

## Deleting a Favorite


- From the *Main Menu*, tap **Go To**.
- From the *Go To* screen, tap **Favorites**.  
The *Favorite* screen will display.
- Select a Favorite to delete.  
The *Preview Favorite* screen will display.

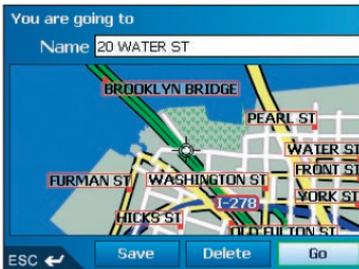

- Tap **Delete**.  
A Warning dialog box will display asking for confirmation to delete the Favorite.
- Tap **Yes**.  
The Favorite is deleted. The *Favorite* screen will display.

## Navigating to a Favorite

1. From the *Main Menu*, tap **Go To**.
2. From the *Go To* screen, tap **Favorites**.  
The *Favorite* screen will display.
3. Select a Favorite.  
The *Preview Favorite* screen will display.

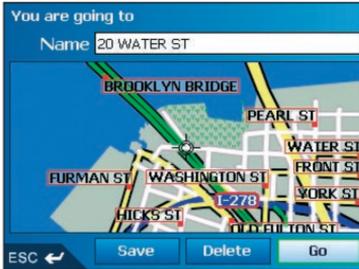

4. Tap **Go**.  
The route is calculated and displayed on the *3D Map* screen.

## Navigating to My Home

1. From the *Main Menu*, tap **Go To**.
2. From the *Go To* screen, tap **My Home**.  
The route is calculated and displayed on the *3D Map* screen.

# 12. Preferences

You can modify the following preferences to suit your needs.

## Screen Brightness

1. Press and hold either the + or - button to display the *Brightness* scale.
2. To increase screen brightness, press +; to decrease screen brightness, press -.  
The *Brightness* scale comprises ten rectangular boxes in a row. As screen brightness is increased, the first seven boxes progressively turn from gray to green; the last three turn red.

You can also adjust brightness from the *Screen* preference screen. See page 51.

## Volume

1. Rotate the **Volume Control** up or down to hear a sound test.
2. Rotate the **Volume Control** up or down and hold to display the volume bar.
  - Rotate the **Volume Control** up or down to adjust the volume.

You can also adjust volume from the *Volume* preference screen. See page 52.

## Routing Preferences

1. From the *Main Menu*, tap **Preferences**.
2. From the *Preferences* screen, tap **Routing**.

The first of three *Routing* screens will display. Press  to move through the *Routing* screens.



3. Complete one of the following:

If you want to...	Then...
change the <b>Route Type</b>	<p>move the <b>Route Type</b> slider towards <b>Quickest</b> to give more weighting to the fastest time when calculating a route.</p> <p>move the <b>Route Type</b> slider towards <b>Shortest distance</b> to give more weighting to the shortest distance when calculating a route.</p>

If you want to...	Then...
change the <b>Preference for freeways</b>	<p>move the <b>Preference for freeways</b> slider towards <b>Less often</b> to use roads other than freeways where possible when calculating a route.</p> <p>move the slider towards <b>More often</b> to use freeways where possible when calculating a route.</p>
change the <b>Preference for urban roads</b>	<p>move the <b>Preference for urban roads</b> slider towards <b>Less often</b> to use roads other than urban roads where possible when calculating a route.</p> <p>move the <b>Preference for urban roads</b> slider towards <b>More often</b> to use urban roads where possible when calculating a route.</p>
revert to default settings	select <b>Set default</b> on the first <i>Routing</i> screen. This will restore the default settings for <b>Route Type</b> , <b>Preference for freeways</b> and <b>Preference for urban roads</b> .
avoid toll roads	select the <b>Avoid toll roads</b> check box.
avoid unsealed roads	select the <b>Avoid unsealed roads</b> check box.
avoid ferries	select the <b>Avoid ferries</b> check box.
receive a warning if your route includes toll roads	select the <b>Toll roads</b> check box to display a warning message at the start of your trip if your route includes toll roads.
receive a warning if your route includes unsealed roads	select the <b>Unsealed roads</b> check box to display a warning message at the start of your trip if your route includes unsealed roads.
receive a warning if your route includes ferries	select the <b>Ferries</b> check box to display a warning message at the start of your trip if your route includes ferries.
enable the Route Demonstrator	select the <b>Demonstrate Route</b> check box. This allows you to plan and view a route without a GPS fix. See page 35 for more information.
enable the Route Demonstrator to play repeatedly	select the <b>Repeat</b> check box.
enable SmartST Demonstration to be played	select the <b>SmartST Demonstration</b> check box. The demonstration will navigate between the first and second Favorites after a 10-second delay.

If you want to...	Then...
enable <b>Track Recording</b> (only to be used if required by Navman Customer Support)	contact Navman Customer Support, as we recommend this feature be used only under the supervision of a Navman technician.


4. Tap **Save**.

The *Main Menu* screen will display.

## Map Preferences — Display Settings

1. From the *Main Menu*, tap **Preferences**.
2. From the *Preferences* screen, tap **Maps**.
3. From the *Maps* screen, tap **Display**.

The first of two *Display* screens will display. Press  to move through the *Display* screens.

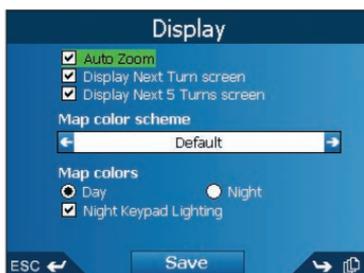

## 4. Complete the following:

If you want to...	Then...
enable Auto Zoom during navigation	select the <b>Auto Zoom</b> check box. If selected, the <i>2D Map</i> and <i>3D Map</i> screen will automatically zoom in or out, depending on your speed, to allow optimal route-viewing.
enable access to the <i>Next Turn</i> screen	select the <b>Display Next Turn screen</b> check box.
enable access to the <i>Next 5 Turns</i> screen	select the <b>Display Next 5 Turns screen</b> check box.
change the color scheme	select your preferred scheme from the <b>Map color scheme</b> box by tapping the left or right arrows or using the left and right sides of the <b>4-way toggle</b> .
improve screen contrast in light or dark conditions	under <b>Map colors</b> , select either <b>Day</b> or <b>Night</b> . If <b>Night</b> is selected, the <b>Night Keypad Lighting</b> checkbox will be enabled.

If you want to...	Then...
turn on the keypad backlight when the iCN is using external power <i>Note: This option is only available when <b>Map colors</b> is set to <b>Night</b>.</i>	select the <b>Night Keypad Lighting</b> check box.
display topographical information on the <i>2D Map</i> and <i>3D Map</i> screens	select the <b>Topographic display</b> check box.
display grid lines on the <i>2D Map</i> and <i>3D Map</i> screens	select the <b>Display Map Grid</b> check box.
display a north-pointing compass on the <i>2D Map</i> and <i>3D Map</i> screens	select the <b>Display Compass on Map</b> check box.
display "no entry" icons on "no entry" roads on the <i>2D Map</i> and <i>3D Map</i> screens	select the <b>Display no entry roads</b> check box.

5. Tap **Save**.

The *Main Menu* screen will display.

## Map Preferences — Points of Interest (POIs)

Points of Interest in a region are grouped into types. This function allows you to select the types you need. For example, you may be only interested in entertainment venues and want to disable other POI types such as schools.

- From the *Main Menu*, tap **Preferences**.
- From the *Preferences* screen, tap **Maps**.
- From the *Maps* screen, tap **Points of Interest**.  
The *Points of Interest* screen will display.




- You may either choose to display (or hide) icons of all POI types on the *2D Map* and *3D Map* screens, or to selectively display desired icons chosen from the list of POI types.
  - To display all POI icons (i.e., icons of all POI types) on the *2D Map* and *3D Map* screens, select **Turn all on**. To hide all POI icons, select **Turn all off**.
  - To select a specific POI type icon for display, select the POI type check box. Repeat until all desired POI types are selected.
  - To view additional pages of POI types, scroll down using the **4-way toggle**, or press .
- Tap **Save**.  
The *Main Menu* screen will display.

## Alerts Preferences — Active POIs


The Active POI settings allow you to set warning chimes and visual warnings for custom POIs that will activate within a chosen radius of your location. For example, a warning chime will sound or a visual warning will display when an active POI is within 150 ft of, but not necessarily on, your route.

*Note: Custom POIs must first be installed on your iCN using SmartST Desktop before they can be set as active POIs. See Points of Interest (POI) Editor on pages 61-63.*

1. From the *Preferences* menu, tap **Safety Alerts**.  
The *Safety Alerts* screen will display.
2. On the *Safety Alerts* screen, tap **Active POI**.  
The *Select Active POI* screen will display.

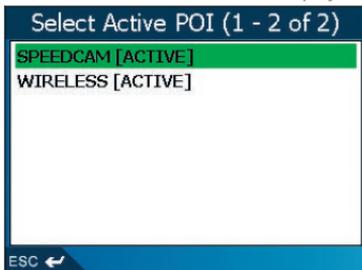

3. Select a custom POI type.  
The *POI Activation Settings* screen will display.

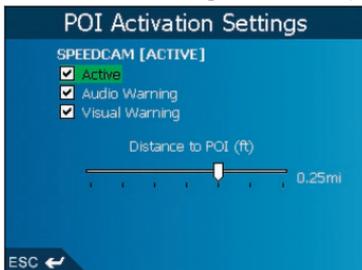

4. Select the **Active** check box to activate the POI.
5. Modify the settings as required:
  - To enable a warning chime when the POI is in close proximity, select the **Audio Warning** check box.
  - To enable a visual warning when the POI is in close proximity, select the **Visual Warning** check box.
  - Move the **Distance to POI** slider to select the distance at which the warnings will activate.
6. Tap **Save**.  
The *Main Menu* screen will display.

# Alerts Preferences - Speed and GPS Signals

The Safety settings allow you to set safety-related warnings.

1. From the *Preferences* menu, tap **Safety Alerts**.  
The *Safety Alerts* screen will display.
2. On the *Safety Alerts* screen, tap **Safety**.  
The *Safety* screen will display.



3. Complete the following:

If you want to...	Then...
enable a warning chime when traveling at or above a designated speed	select the speed in the <b>Speed</b> box by tapping the left or right arrows or using the left and right sides of the <b>4-way toggle</b> . Tap <b>Save</b> . The <i>Safety alerts</i> screen will display. <i>Note: The GPS signal alert will be activated when a Speed alert is selected.</i>
enable a visual warning if the <i>Main Menu</i> screen is accessed in a moving vehicle	select the <b>Warn driver when operating</b> check box.
enable a warning chime and visual warning when the GPS signal has been lost	select the <b>Warn when GPS lost</b> check box. <i>Note: The GPS signal alert will be activated when a Speed alert is selected.</i>

4. Tap **Save**.  
The *Main Menu* screen will display.

# My Data Preferences - My Points of Interest (My POI)

Custom Points of Interest (POIs) are installed from the SmartST Desktop POI Editor (see pages 61-63), and listed on the *My POIs* screen.

1. From the *Main Menu*, tap **Preferences**.
2. From the *Preferences* screen, tap **My Data**.
3. From the *My Data* screen, tap **My POI**.  
The *My POI* screen will display.
4. To select a POI file, select the POI check box.  
*Note: there may be more than one page of POI types. To view additional pages of POI types, scroll down using the 4-way toggle or press .*
5. Tap **Save**.  
The *Main Menu* screen will display.

## My Data Preferences - Clear Data

1. From the *Main Menu* screen, tap **Preferences**.  
The *Preferences* screen will display.
2. From the *Preferences* screen, tap **My Data**.  
The *My Data* screen will display.
3. From the *My Data* screen, tap **Clear Data**.  
The *Clear Data* screen will display.
4. Complete the following:


If you want to...	Then...
clear recent destinations	select <b>Clear Recent</b> . When the warning dialog-box opens, tap <b>Yes</b> .
clear favorites	select <b>Clear Favorites</b> . When the warning dialog-box opens, tap <b>Yes</b> . <i>Note: This option will not clear My Home.</i>
clear avoid areas	select <b>Clear Avoid Areas</b> . When the warning dialog-box opens, tap <b>Yes</b> .

5. Press  to return to the *Main Menu* screen.

## GPS Status

Signals are transmitted by Global Positioning System (GPS) satellites orbiting the Earth. The *Satellite Signal Strengths* screen provides a visual representation of the information being received. Latitude and longitude are displayed, along with a north-pointing compass, the heading in degrees and ground speed. The strength of each satellite is displayed on a bar chart.

From the *Main Menu* screen, select *Preferences* → *More Preferences* → *GPS status*. The *Satellite Signal Strengths* screen will display.

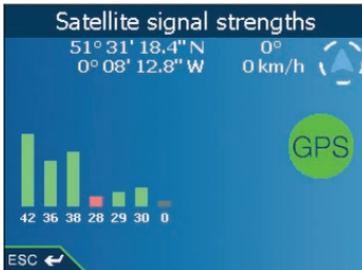

You can also access this screen from the *2D Map* and *3D Map* screens by tapping the **North-oriented compass**.

The circle on the right side of the screen displays green when there is a valid fix (2D or 3D) and red when no fix is available. A fix will be obtained more quickly if the vehicle is stationary than if it is moving.

The satellites available from your current position are shown as grey, red and green colored bars:

Bar Color	Description
Grey	No signal at all.
Red	A valid signal, but not being used to fix your position.
Green	A valid signal being used to fix your position.

## Measurement Preferences

- From the *Main Menu* screen, tap **Preferences**.  
The *Preferences* screen will display.
- From the *Preferences* screen, tap **More Preferences**.  
The second *Preferences* screen will display.
- On the second *Preferences* screen, select **Measurements**.  
The *Measurements* screen will display.
- Complete the following:

If you want to...	Then...
change the <b>Position format</b>	select either the <b>Decimal degrees</b> or the <b>Degrees, minutes, seconds</b> option.
change the local time offset	select the offset from the Coordinated Universal Time (UTC) for your location from the <b>Local time offset</b> box by tapping the left or right arrows or using the left and right sides of the <b>4-way toggle</b> . Next, select either the <b>12 Hour</b> or <b>24 Hour</b> option for time-format.
choose distance units*	select either the <b>kilometers</b> or <b>miles</b> option.

- Tap **Save**.  
The *Main Menu* screen will display.

\* Only available when UK English or US English language is selected.

## Language Preferences


- From the *Main Menu*, tap **Preferences**.
- From the *Preferences* screen, tap **More Preferences**.  
The second *Preferences* screen will display.
- On the second *Preferences* screen, tap **Language**.  
The *Language* screen will display.



- To change your language, including the voice scheme used for voice guidance during navigation, select your preferred voice scheme from the **Language** box by tapping the left or right arrows or using the left and right sides of the **4-way toggle**.
- To enable **Voice guidance instructions** during navigation, select the **Enable** check box.
- Tap **Save**.  
The *Main Menu* screen will display.

## Hardware Preferences - Screen

1. From the *Main Menu* screen, tap **Preferences**.  
The *Preferences* screen will display.
2. From the *Preferences* screen, tap **More Preferences**.  
The second *Preferences* screen will display.
3. On the second *Preferences* screen, tap **Hardware**.  
The *Hardware* screen will display.
4. From the *Hardware* screen, tap **Screen**.  
The *Screen* screen will display.

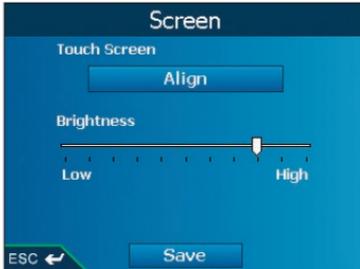


5. Complete the following:

If you want to...	Then...
align the touch screen	tap <b>Align</b> and follow the prompts. <i>Note: The prompts are available in English only.</i>
adjust screen brightness	move the <b>Brightness</b> slider towards <b>High</b> to increase screen brightness. move the <b>Brightness</b> slider towards <b>Low</b> to decrease screen brightness.

6. Tap **Save**.  
The *Main Menu* screen will display.

## Hardware Preferences - Volume


1. From the *Main Menu* screen, tap **Preferences**.  
The *Preferences* screen will display.
2. From the *Preferences* screen, tap **More Preferences**.  
The second *Preferences* screen will display.
3. On the second *Preferences* screen, tap **Hardware**.  
The *Hardware* screen will display.
4. From the *Hardware* screen, tap **Volume**.  
The *Volume* screen will display.

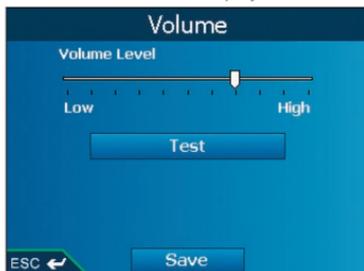

5. To increase volume, move the **Volume Level** slider towards **High**; to decrease volume, move the **Volume Level** slider towards **Low**.
  - Tap **Test** to test the volume.
6. Tap **Save**.  
The *Main Menu* screen will display.

## Hardware Preferences - Power Status

1. From the *Main Menu* screen, tap **Preferences**.  
The *Preferences* screen will display.
2. From the *Preferences* screen, tap **More Preferences**.  
The second *Preferences* screen will display.
3. On the second *Preferences* screen, tap **Hardware**.  
The *Hardware* screen will display.
4. From the *Hardware* screen, tap **Power Status**.  
The *Power Status* screen will display.

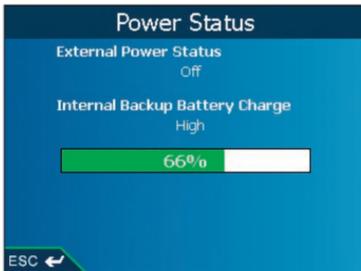

5. Press  to return to the *Main Menu* screen.

## Hardware Preferences - Power Options

1. From the *Main Menu* screen, tap **Preferences**.  
The *Preferences* screen will display.
2. From the *Preferences* screen, tap **More Preferences**.  
The second *Preferences* screen will display.
3. On the second *Preferences* screen, tap **Hardware**.  
The *Hardware* screen will display.
4. From the *Hardware* screen, tap **Power Options**.  
The *Power Options* screen will display.



5. Complete the following:

If you want to...	Then...
change the time to elapse before entering suspended state, when connected to an external power source	<ul style="list-style-type: none"> <li>i select the <b>Go to Power Saving Mode if not used for</b> check box under <b>External Power</b>.</li> <li>ii select the time to elapse when connected to an external power source before entering suspended state by tapping the left or right arrows or using the left and right sides of the <b>4-way toggle</b>.</li> </ul>
change the time to elapse before entering suspended state, when using battery power	<ul style="list-style-type: none"> <li>i select the <b>Go to Power Saving Mode if not used for</b> check box under <b>Internal Backup Battery</b>.</li> <li>ii select the time to elapse when connected to a battery before entering suspended state by tapping the left or right arrows or using the left and right sides of the <b>4-way toggle</b>.</li> </ul>

6. Tap **Save**.  
The *Main Menu* screen will display.

## Startup Preferences

- From the *Main Menu* screen, tap **Preferences**.  
The *Preferences* screen will display.
- From the *Preferences* screen, tap **More Preferences**.  
The second *Preferences* screen will display.
- On the second *Preferences* screen, tap **Startup**.  
The *Startup* screen will display.



4. Complete the following:

If you want to...	Then...
display the <i>Tutorial</i> on startup	select the <b>Tutorial screen</b> check box.
display the <i>Language</i> screen on startup	select the <b>Language selection screen</b> check box.
view the <b>Tutorial</b>	select <b>Show Tutorial</b> . The first <i>Tutorial</i> screen will display. Press  repeatedly to cycle through the <b>Tutorial</b> screens.

5. Tap **Save**.  
The *Main Menu* screen will display.

# 13. SmartST Desktop

SmartST Desktop is used to install maps to your iCN, obtain software updates, manage Custom Points of Interest (POIs) and install Basemaps.


## Microsoft® ActiveSync®

Microsoft ActiveSync is used to establish a connection between your iCN and your computer. ActiveSync 3.7.1 will be installed on your computer (if it is not already installed) as part of the installation of SmartST Desktop.

## Installing SmartST Desktop on your Computer

### Important Notes:

- Ensure that *Internet Explorer 6* or higher is installed on your computer before you install *SmartST Desktop*, even if it is not your default browser.
  - Windows® XP users, ensure that *Windows XP Service Pack 1* has been applied before you install *SmartST Desktop*.
1. Close all open programs on your computer.
  2. Insert the SmartST Application Installer CD into your computer CD drive. The SmartST Desktop installer will start.
    - If your computer does not automatically launch the CD, start the installation manually. *Start → Run.*  
Type **D:\Setup SmartST 2005 Release 2 for iCN550.exe** where "D" is the letter assigned to your CD drive. Click **OK**.
  3. Follow the screen prompts to install SmartST Desktop, including:
    - Select your preferred language for SmartST Desktop when prompted.
    - Review and accept the Licence Agreement for SmartST Desktop and Microsoft ActiveSync (if not already installed on your computer) when prompted.
    - Install Microsoft ActiveSync (if not already installed on your computer) when prompted.
    - Select a destination folder for SmartST Desktop when prompted.
  4. When the installation has finished, click **Finish**. SmartST Desktop will open.

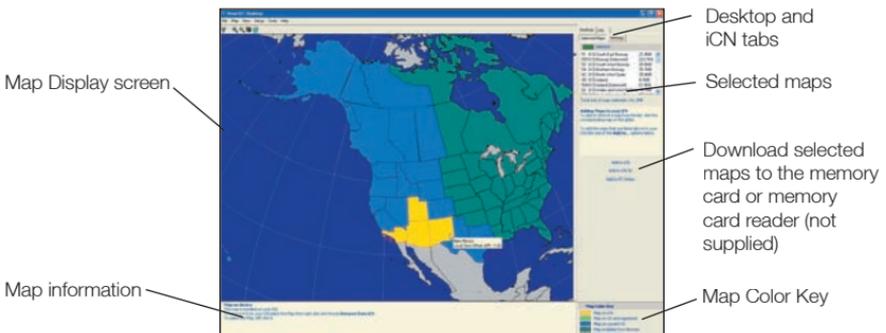

5. If prompted to connect your iCN to your computer, complete the following:

- Plug the large end of the USB cable directly into a USB port on your computer (not a USB hub); plug the small end into the **USB Socket** on the side of your iCN.

 
*Tip: Where possible, plug the USB cable into a USB port at the **back** of your computer.*

- Plug the small end of the AC Power Pack cable into the **Power Socket** on the bottom of your iCN; plug the other end into the mains.

- Press **ⓘ**.

The iCN will turn on.

- When the following screen displays on your iCN, click **Next**.



- Microsoft ActiveSync will synchronise with your iCN.

You are now ready to install maps to your iCN.

## To Open SmartST Desktop

Once SmartST Desktop has been installed, you can access it from the **Start** menu:

*Start → Programs → Navman → SmartST Desktop 2005 Release 2 for iCN550*

## Uninstalling SmartST Desktop from your Computer

We recommend that you use the *Add or Remove Programs* feature in your Windows Control Panel:

1. Open **Add or Remove Programs**:  
*Start → Control Panel → Add or Remove Programs*
2. Uninstall: **SmartST Desktop 2005 Release 2 for iCN550**.

*Note: The name of the program may vary from the above.*

SmartST Desktop has now been uninstalled from your computer.

# 14. Updating your iCN

## Updating your Version of SmartST

We recommend that you regularly use SmartST Desktop to check the Navman website for SmartST software updates:

1. If you connect to the Internet via a dial-up connection, connect to the Internet now.
2. Open SmartST Desktop:  
*Start → Programs → Navman → SmartST Desktop 2005 Release 2 for iCN550*
3. On the **Setup** menu, select **Update software**, then **Check for updates on the web**.  
Your computer will connect to the Internet and display the Navman website.
4. If an update for your region is available, download it to your computer.
5. On the **Setup** menu, select **Update software**, then **Update software on iCN**.  
Follow the prompts to update your iCN software.

## Upgrading from a Previous Version of SmartST

See the *Upgrade Guide* that came with your software upgrade.

# 15. Installing Maps Using SmartST Desktop

NOTE: Your iCN 550 comes with preinstalled maps of the United States and Canada. If you have purchased a software or map upgrade, follow the instructions in your *Upgrade Guide* to install and activate your new software or maps.

## Installing and Activating Maps on your iCN

1. Open SmartST Desktop, if it is not already open:  
*Start → Programs → Navman → SmartST Desktop Release 2 for iCN550*
2. Insert a SmartST Map CD into your computer CD drive, the available maps will display (the default colour for available maps is *cross-hatch blue*).

*Note: If your computer opens Windows Explorer, close the Windows Explorer window.*

3. Click the map you want to install to your iCN.

*Note: You may need to install multiple maps to cover the desired geographical area.*



Maps available on the Map CD in your CD drive are displayed in cross-hatch blue.

4. You will be prompted to enter or update your contact details so Navman can advise you when updates are released.
  - If you are activating a map from a continental region that was not previously installed on your iCN, follow the prompts to activate the new region. The four continental regions are Europe, North America, Australia and New Zealand.
  - When activation has completed, the map will change colour (the default colour for activated maps is *light green*).



The activated map is displayed in light green.

- Click the map to install to your iCN.

The map will change colour to indicate it has been selected (the default colour for selected maps is *dark green*). The map is now listed in the **Selected** section of the **Desktop Selected Maps** tab.



The selected map is displayed in dark green.

- Click the **Add to** button to install all maps listed in the **Selected** section of the **Desktop Selected Maps** tab to your iCN.

SmartST Desktop will install the selected map or maps to your iCN or iCN memory card. When they have been installed, the map or maps will change colour (the default colour for installed maps is *yellow*).

- To use your iCN, disconnect the USB cable from your iCN.

**WARNING:** Do not disconnect the USB cable from the iCN **USB Socket** until the *Map Display* screen has refreshed and the installed map or maps have changed colour (the default colour for installed maps is *yellow*).

## Removing Maps from your iCN

- Open SmartST Desktop:  
*Start → Programs → Navman → SmartST Desktop 2005 for iCN550*
- Open the **Maps on iCN** section:  
*iCN tab → Maps on iCN.*
- Click the map to be removed and select **Remove from iCN** from the pop-up menu.  
The map will be removed from your iCN.

# 16. SmartST Desktop Advanced Features

This section details advanced features of SmartST Desktop. If you have not installed SmartST Desktop, see pages 55-56.

## To Find a City or Town

- From the **Map** menu, click **Find City**.  
The *Find City* window will open.



- Type the name of the city or town in the **City Name** field.  
The list of available cities will reduce to match your search.
- Double-click the name of the city or town.  
The *Map Display* will rotate to center on the selected city or town and  will mark the city or town location.

## Map Colors and Textures

To access the **Desktop Colors** section: *Desktop tab* → *Settings* → *Colors*.

Adjust the settings to change the look of the map type.

Color Settings	Description
	Controls map colors.
	Displays the: <ul style="list-style-type: none"> <li>map border color;</li> <li>map color;</li> <li>map border width.</li> </ul>
	Adjusts the map border width.
	Controls the map display: <ul style="list-style-type: none"> <li>solid color;</li> <li>no color;</li> <li>crosshatch texture.</li> </ul>
<input checked="" type="checkbox"/> Show Globe Texture	Controls geographic features displayed on the map. Features are only visible if the map has no color or crosshatch texture.

## Map Layers


To conserve space on your iCN and memory card, you can choose map layers to install.

The layers you can choose from are:

- Points of Interest (POIs)
- Bodies of water and parks
- Land contours (topography).

To access the **Map Layers** section: *Desktop tab* → *Settings* → *Layers*.

Select or clear each checkbox to indicate the layers to install for each map.

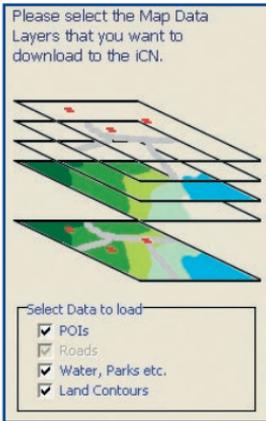

## Points of Interest (POI) Editor

You can create custom Points of Interest (POIs) using the POI Editor in two ways:

- by creating your own POI files, or
- by using compatible POI files downloaded from the Internet.

A maximum of 25 Custom POI files can be saved on your iCN. The Custom POI files are listed on the *My POI* screen.


Custom POIs can be set to enable a warning chime or visual warning when in close proximity at the *Select Active POI* screen.

### Creating a Custom POI File

1. Create a new POI File using the POI Editor.
  - On the SmartST Desktop **Map** menu, click **Points of Interest**. The *POI Editor* window will open.
  - On the *POI Editor* window **File** menu, click **New Text File**. The *POI File Name* window will open.
  - Type a name for the file in the **File Name** box, then click **OK**. The file name can be up to eight characters with no spaces.

2. Add a POI to the POI File.

- On the *POI Editor* window **Edit** menu, click **New**.  
The *POI Details* window will open.

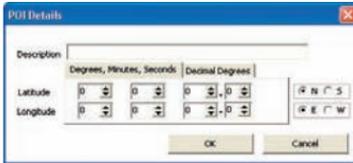


- Type a description for the POI in the **Description** box.
  - On the **Degrees, Minutes, Seconds** tab, type or select the degree, minute and second of the POI latitude in the **Latitude** boxes.
  - On the **Degrees, Minutes, Seconds** tab, type or select the degree, minute and second of the POI longitude in the **Longitude** boxes.
  - To save the POI, click **OK**.
3. Repeat step 2 until all POIs have been added to the POI file.
4. On the **File** menu, click **Save**.  
The POI file is saved.
5. Complete *Saving a Custom POI File to your iCN* below.

## Importing a Custom POI File

1. Download a POI file from the Internet and save it on your computer.
2. Open the POI file using the POI Editor.
  - On the SmartST Desktop **Map** menu, click **Points of Interest**.  
The *POI Editor* window will open.
  - On the *POI Editor* window **File** menu, click **Open Text File**.  
The *Open* dialogue box will open.
  - Select the POI file from your local or network drive, then click **Open**.
3. Complete *Saving a Custom POI File to your iCN* below.

## Saving a Custom POI File to your iCN

1. On the SmartST Desktop **Map** menu, click **Points of Interest**.  
The *POI Editor* window will open.
2. On the *POI Editor* window **File** menu, click **Save to Device**.  
The *POI Options* window will open.

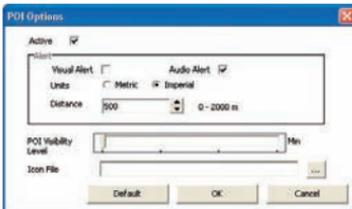

## 3. Modify the POI settings as required:

If you want to...	Then...
activate the POI	select the <b>Active</b> check box. <i>Note: If you do not activate the POI, you will be able to configure only the <b>POI Visibility Level</b> and <b>Icon File</b> settings.</i>
enable a visual warning when the POI is in close proximity	select the <b>Visual Alert</b> check box.
enable a warning chime when the POI is in close proximity	select the <b>Audio Alert</b> check box.
change the units used to measure distance for this POI	select the <b>Metric</b> or <b>Imperial</b> option.
select the distance from the POI at which the visual warning should display or the warning chime should sound	select the distance from the <b>Distance</b> box.
indicate the priority of this POI when one or more additional POIs are in the same locale	move the <b>POI Visibility Level</b> slider left or right.
select a custom POI type icon to display on the map (if you do not select a custom icon, a default icon will display)	Type the path to the icon file to be used to represent the POI type in the <b>Icon File</b> box or select the icon file from your local or network drive by clicking  , locating the file and clicking <b>Open</b> . The file must be a bitmap (.bmp) graphic with a minimum of 6x6 pixels and a maximum of 32x32 pixels.

4. Click **OK** and follow the prompts.

The POI file is saved to the iCN as a Custom POI type.

- If you want to change the file name, edit the file name in the *POI File Name* window *File Name* box, then click **OK**.  
The file name can be up to eight characters and cannot contain spaces.

## Deleting a Custom POI File from your iCN

1. On the **Map** menu, click **Points of Interest**.  
The *POI Editor* window will open.
2. On the **File** menu, click **Manage POI Files**.  
The *Manage POI Files* window will open, displaying a list of custom POI files installed on your iCN.
3. Click the **File Name** or **Size** of the POI file to delete.
4. Click **Delete**.  
The file is removed from the list, but is not yet deleted.
5. To select another file to delete, go back to step 2; otherwise, proceed to step 6.
6. Click **OK** and accept the changes.  
The selected file or files are deleted.

# Backups

You can save backups of all iCN Preferences and Favorites to your computer.

## To Back up your Preferences, Favorites and My Home

1. On the SmartST Desktop **File** menu, click **Backup**.  
The *Backup* window will display.
2. Click **New Backup**.  
The *New Backup* window will display.
3. Click **OK**.  
The *New Backup* window will close. The backup will be listed on the *Backup* window.
4. Close the *Backup* window.

## To Delete a Backup

1. On the SmartST Desktop **File** menu, click **Backup**.  
The *Backup* window will display.
2. Select from the list the backup to delete.
3. Click **Delete**, then click **OK**.  
The backup is deleted.
4. Close the *Backup* window.

## To Restore a Backup

1. On the SmartST Desktop **File** menu, click **Restore**.  
The *Restore* window will display.
2. Select the backup from the list, then click **Restore**.  
The *Restore File Selection* window will display.
3. Select or clear the check boxes to indicate which part of the backup to restore.
4. Click **OK**.  
The *Restore File Selection* window will close and the backup will be restored.
5. Close the *Restore* window.

# 17. Accessories

You can purchase separately almost all items that came with your iCN, including additional mounting kits and in-vehicle power adaptors. Visit your retailer or your regional Navman website for more information. See *page 74 for web addresses*.

The following accessories are also available for your iCN:

## mMCX External Antenna

Required for vehicles with heated or heat-reflective windshields or to boost GPS performance in weak signal areas and in areas with poor or limited visibility of the open sky.

## AC Power Adaptor Kit

AC power cable with adaptor plugs for the following regions:

- Western Europe
- United Kingdom
- United States/Canada.

## Earphones

Earphones for listening to voice instructions in privacy.

## Remote Control

Button functions are the same as the iCN control buttons except that the iCN cannot be turned on using the Remote Control.



# Appendix: Street Types

Country	Street Type	Abbreviation
Canada	ABBÉY	ABBÉY
	ACRES	ACRES
	ALLEE	ALLEE
	ALLEY	ALLEY
	AUTOROUTE	AUT
	AVENUE (English)	AVE
	AVENUE (French)	AV
	BAY	BAT
	BEACH	BEACH
	BEND	BEND
	BOULEVARD (English)	BLVD
	BOULEVARD (French)	BOUL
	BY-PASS	BYPASS
	BYWAY	BYWAY
	CAMPUS	CAMPUS
	CAPE	CAPE
	CARRÉ	CAR
	CARREFOUR	CARREF
	CENTER (English)	CTR
	CENTER (French)	C
	CERCLE	CERCLE
	CHASE	CHASE
	CHEMIN	CH
	CIRCLE	CIR
	CIRCUIT	CIRCT
	CLOSE	CLOSE
	COMMON	COMMON
	CONCESSION	CONC
	CORNERS	CRNRS
	COTE	COTE
	COUR	COUR
	COURT	CRT
	COVE	COVE
	CRESCENT	CRES
	CROISSANT	CROIS
	CROSSING	CROSS
	CUL-DE-SAC	CDS
	DALE	DALE
	DELL	DELL
	DIVERSION	DIVERS
	DRIVE	DR
	ÉCHANGEUR	ECH
	END	END
	ESPLANADE	ESPL
	ESTATES	ESTATE

Country	Street Type	Abbreviation
Canada (continued)	EXPRESSWAY	EXPY
	EXTENSION	EXTEN
	FARM	FARM
	FIELD	FIELD
	FOREST	FOREST
	FREEWAY	FWY
	FRONT	FRONT
	GARDENS	GDNS
	GATE	GATE
	GLADE	GLADE
	GLEN	GLEN
	GREEN	GREEN
	GROUNDS	GRNDS
	GROVE	GROVE
	HARBOUR	HARBR
	HEIGHTS	HTS
	HIGHLANDS	HGHLDs
	HIGHWAY	HWY
	HILL	HILL
	HOLLOW	HOLLOW
	ÎLE	iLE
	IMPASSE	IMP
	ISLAND	ISLAND
	KEY	KEY
	KNOLL	KNOLL
	LANDING	LANDNG
	LANE	LN
	LIMITS	LMTS
	LINE	LINE
	LINK	LINK
	LOOKOUT	LKOUT
	LOOP	LOOP
	MALL	MALL
	MANOR	MANOR
	MAZE	MAZE
	MEADOW	MEADOW
MEWS	MEWS	
MONTEE	MONTEE	
MOOR	MOOR	
MOUNT	MOUNT	
MOUNTAIN	MTN	
ORCHARD	ORCH	
PARADE	PARADE	
PARC	PARC	

Country	Street Type	Abbreviation
Canada (continued)	PARK	PK
	PARKWAY	PKY
	PASSAGE	PASS
	PATH	PATH
	PATHWAY	PTWAY
	PINES	PINES
	PLACE (English)	PL
	PLACE (French)	PLACE
	PLATEAU	PLAT
	PLAZA	PLAZA
	POINT	PT
	PORT	PORT
	PRIVATE	PVT
	PROMENADE	PROM
	QUAY	QUAY
	RANG	RANG
	RANGE	RG
	RIDGE	RIDGE
	RISE	RISE
	ROAD	RD
	ROND POINT	RDPT
	ROUTE	RTE
	ROW	ROW
	RUE	RUE
	RUELLE	RLE
	RUN	RUN
	SENTIER	SENT
	SQUARE	SQ
	STREET	ST - '
	SUBDIVISION	SUBDIV
	TERRACE	TERR
	TERASSE	TSSE
	THICKET	THICK
	TOWERS	TOWERS
	TOWNLIN	TLINE
	TRAIL	TRAIL
	TURNABOUT	TRNABT
	VALE	VALE
	VIA	VIA
	VIEW	VIEW
	VILLAGE	VILLGE
	VISTA	VISTA
	VOIE	VOIE
	WALK	WALK
	WAY	WAY
	WHARF	WHARF
	WOOD	WOOD
	WYND	WYND

Country	Street Type	Abbreviation
United States of America	ALLEY	ALY
	ANNEX	ANX
	ARCADE	ARC
	AVENUE	AVE
	BAYOO	BYU
	BEACH	BCH
	BEND	BND
	BLUFF	BLF
	BLUFFS	BLFS
	BOTTOM	BTM
	BOULEVARD	BLVD
	BRANCH	BR
	BRIDGE	BRG
	BROOK	BRK
	BROOKS	BRKS
	BURG	BG
	BURGS	BGS
	BYPASS	BYP
	CAMP	CP
	CANYON	CYN
	CAPE	CPE
	CAUSEWAY	CSWY
	CENTER	CTR
	CENTERS	CTRS
	CIRCLE	CIR
	CIRCLES	CIRS
	CLIFF	CLF
	CLIFFS	CLFS
	CLUB	CLB
	COMMON	CMN
	CORNER	COR
	CORNERS	CORS
	COURSE	CRSE
	COURT	CT
	COURTS	CTS
	COVE	CV
	COVES	CVS
	CREEK	CRK
	CRESCENT	CRES
	CREST	CRST
	CROSSING	XING
	CROSSROAD	XRD
	CURVE	CURV
	DALE	DL
	DAM	DM
	DIVIDE	DV
	DRIVE	DR
	DRIVES	DRS

Country	Street Type	Abbreviation
United States of America (continued)	ESTATE	EST
	ESTATES	ESTS
	EXPRESSWAY	EXPY
	EXTENSION	EXT
	EXTENSIONS	EXTS
	FALLS	FLS
	FERRY	FRY
	FIELD	FLD
	FIELDS	FLDS
	FLATS	FLTS
	FORD	FRD
	FORDS	FRDS
	FOREST	FRST
	FORGE	FRG
	FORGES	FRGS
	FORK	FRK
	FORKS	FRKS
	FORT	FT
	FREEWAY	FWY
	GARDEN	GDN
	GARDENS	GDNS
	GATEWAY	GTWY
	GLEN	GLN
	GLENS	GLNS
	GREEN	GRN
	GREENS	GRNS
	GROVE	GRV
	GROVES	GRVS
	HARBOR	HBR
	HARBORS	HBRS
	HAVEN	HVN
	HEIGHTS	HTS
	HIGHWAY	HWY
	HILL	HL
	HILLS	HLS
	HOLLOW	HOLW
	HOUSE	HSE
	INLET	INLT
	ISLAND	IS
	ISLANDS	ISS
	ISLE	ISLE
	JUNCTION	JCT
	JUNCTIONS	JCTS
	KEY	KY
	KEYS	KYS
	KNOLL	KNL
	KNOLLS	KNLS

Country	Street Type	Abbreviation
United States of America (continued)	LAKE	LK
	LAKES	LKS
	LANDING	LNDG
	LANE	LN
	LIGHT	LGT
	LIGHTS	LGTS
	LOAF	LF
	LOCK	LCK
	LOCKS	LCKS
	LODGE	LDG
	LOOP	LOOP
	MANOR	MNR
	MANORS	MNRS
	MARKET	MKT
	MEADOW	MDW
	MEADOWS	MDWS
	MILL	ML
	MILLS	MLS
	MISSION	MSN
	Freeway	MTWY
	MOUNT	MT
	MOUNTAIN	MTN
	MOUNTAINS	MTNS
	NECK	NCK
	ORCHARD	ORCH
	OVAL	OVAL
	OVERPASS	OPAS
	PARK	PARK
	PARKS	PARK
	PARKWAY	PKWY
	PARKWAYS	PKWY
	PASS	PASS
	PASSAGE	PSGE
	PATH	PATH
	PIKE	PIKE
	PINE	PNE
	PINES	PNES
	PLACE	PL
	PLAIN	PLN
	PLAINS	PLNS
	PLAZA	PLZ
	POINT	PT
	POINTS	PTS
	PORT	PRT
	PORTS	PRTS
PRAIRIE	PR	
RADIAL	RADL	
RAMP	RAMP	

Country	Street Type	Abbreviation
United States of America (continued)	RANCH	RNCH
	RAPID	RPD
	RAPIDS	RPDS
	REST	RST
	RIDGE	RDG
	RIDGES	RDGS
	RIVER	RIV
	ROAD	RD
	ROADS	RDS
	ROUTE	RTE
	ROW	ROW
	RUE	RUE
	RUN	RUN
	SHOAL	SHL
	SHOALS	SHLS
	SHORE	SHR
	SHORES	SHRS
	SKYWAY	SKWY
	SPRING	SPG
	SPRINGS	SPGS
	SPUR	SPUR
	SPURS	SPUR
	SQUARE	SQ
	SQUARES	SQS
	STATION	STA
	STRAVENUE	STRA
	STREAM	STRM
	STREET	ST
	STREETS	STS
	SUMMIT	SMT
	TERRACE	TER
	THROUGHWAY	TRWY
	TRACE	TRCE
	TRACK	TRAK
	TRAFFICWAY	TRFY
	TRAIL	TRL
	TUNNEL	TUNL
	TURNPIKE	TPKE
	UNDERPASS	UPAS
	UNION	UN
	UNIONS	UNS
VALLEY	VLY	
VALLEYS	VLYS	
VIADUCT	VIA	
VIEW	VW	
VIEWS	VWS	
VILLAGE	VLG	
VILLAGES	VLGS	

Country	Street Type	Abbreviation
<b>United States of America</b> (continued)	VILLE VISTA  WALK WALKS WALL WAY WAYS WELL WELLS	VL VIS  WALK WALK WALL WAY WAYS WL WLS

# Support Information

## Support for Australia:

Navman Australia Pty. Ltd  
PO Box 479  
Gladesville, NSW 2111  
Australia

Support: [support.navman.com](http://support.navman.com)  
Website: [www.navman.com](http://www.navman.com)

## Support for Europe:

Navman Europe Limited  
4G Gatwick House  
Peeks Brook Lane  
Horley, Surrey RH6 9ST  
United Kingdom

Support: [support.navman.com](http://support.navman.com)  
Website: [www.navman-europe.com](http://www.navman-europe.com)

## Support for New Zealand:

Navman NZ Ltd  
PO Box. 68-155  
Newton  
Auckland  
New Zealand

Support: [support.navman.com](http://support.navman.com)  
Website: [www.navman.com](http://www.navman.com)

## Support for US and Canada:

Navman USA, Inc.  
5275 Capital Boulevard  
Raleigh, NC 27616-2925  
United States of America

Phone: 866-9-NAVMAN  
Support: [support.navman.com](http://support.navman.com)  
Website: [www.navmanusa.com](http://www.navmanusa.com)

NAVMAN DISCLAIM ALL LIABILITY FOR ANY USE OF THIS PRODUCT  
IN A WAY THAT MAY CAUSE ACCIDENTS, DAMAGE OR VIOLATE THE LAW.

# Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Copyright

© 2005 Navman NZ Limited. Navman is a registered trademark of Navman NZ Limited. All rights reserved. SmartST, Drive-Away and Back-On-Track are trademarks of Navman NZ Limited. All rights reserved. Microsoft Windows 98 SE, ME, 2000 or XP SP1, Microsoft ActiveSync and Internet Explorer are registered trademarks of Microsoft Corporation. All rights reserved.

Adobe Reader is a registered trademark of Adobe Systems Incorporated. All rights reserved.

All other trademarks and registrations are the property of their respective owners.

Published in New Zealand.













MN000478B