



Owner's Manual

LCD-1700VRZ

1319 Dexter Ave. N., Ste. 020
Seattle, WA 98109
Tel: 206-623-6000 Fax: 206-623-6609
sales@totevision.com www.totevision.com

Table of Content

Operating Instructions

| | |
|----------------------------|---|
| Safety Precautions _____ | 2 |
| Care and Maintenance _____ | 3 |

CHAPTER 1

| | |
|---------------------------------|---|
| Introduction _____ | 4 |
| Factory-Preset Modes _____ | 5 |
| Specification | |
| LCD-1700VRZ Specification _____ | 6 |

CHAPTER 2

| | |
|---|---|
| Installing the Monitor _____ | 8 |
| Follow these steps to install the monitor _____ | 8 |
| Control Function | |
| LCD-1700VRZ Control function _____ | 9 |

CHAPTER 3

| | |
|-----------------------------|----|
| Adjusting the Monitor _____ | 11 |
| VGA OSD Screen _____ | 12 |
| Adjustment Icon _____ | 12 |

CHAPTER 4

| | |
|------------------------|----|
| Video Adjusting _____ | 15 |
| Video OSD Screen _____ | 15 |
| Adjustment Icon _____ | 15 |

APPENDIX

| | |
|-----------------------|----|
| Troubleshooting _____ | 17 |
|-----------------------|----|

Safety Precautions

This monitor is manufactured and tested on the principle that the user's safety comes first. However, improper use or installation may not only damage the monitor but endanger the user as well. As a safety precaution, go over the following WARNINGS carefully before installation, and keep this guide handy.

Warnings:

- This monitor should be operated only at the correct power sources indicated on the label at the rear end of the monitor. If you are unsure of the power supply in your residence, consult your local dealer or Electricity Supplier.
- Do not try to repair the monitor yourself, as it contains no user-serviceable parts. The monitor should only be repaired by a qualified technician.
- Do not remove the monitor cabinet. There are high-voltage parts inside that may cause an electric shock even when the power cord is disconnected.
- Stop using the monitor if the cabinet is damaged. Have it checked by a service technician.
- Put your monitor only in a clean, dry environment. Unplug the monitor immediately if it gets wet, and consult your service technician.
- Always unplug the monitor before cleaning it. Clean the cabinet with a clean, dry cloth. Apply non-ammonia-based cleaner onto the cloth, not directly onto the glass screen.
- Keep the monitor away from magnetic objects, motors, TV sets, and transformers.
- Do not place heavy objects on the cable or power cord.
- For PLUG CABLE EQUIPMENT, the socket outlet should be installed near the equipment and should be easily accessible.

Care and Maintenance

Care

- Avoid exposing your monitor directly to sunlight or other heat sources. Place your monitor away from the sun to reduce glare.
- Put your monitor in a well-ventilated area. Do not place anything heavy on top of your monitor.
- Make certain that your monitor is installed in a clean and moisture-free area.
- Keep your monitor away from magnets, motors, transformers, speakers, and TV sets.

Safety Tips

- If smoke, an abnormal noise or an odor comes out of your monitor, switch off the power immediately and call our service center.
- Never remove the rear cover of your monitor cabinet. The display unit inside contains high-voltage parts and may cause an electric shock.
- Never try to repair the monitor yourself. Always call your service center or a qualified technician to fix it.

Note: This user's manual contains graphics and information that is for reference purposes only and is subject to change without notice.

CHAPTER 1

Introduction

BEFORE INSTALLING YOUR MONITOR

Read this manual cover to cover.

PAY ATTENTION to all WARNING and CAUTIONS

DO NOT use computer components not recommend by the manufacture

Do not attempt to service the monitor your self. If a problem occurs, contact the manufacture's authorized service center

ABOUT YOUR MONITOR

This monitor is a microprocessor-controlled, color monitor that uses a TFT LCD panel. The monitor conforms to EPA Energy Star and VESA DPMS (Display Power Management Signaling) power management standards.

RGB MODE

This monitor is equipped with a microprocessor that identifies your computer 's video mode and allows user to adjust the setting.

VIDEO MODE

This monitor can accept the NTSC or PAL signal to display the video screen automatically. It also implement the video screen on PC function, we called PIP function. We also provide one pair of BNC in/out connector inside.

FACTORY-PRESET MODES

Table 1 shows standard video mode setting that has been pre-adjusted at the factory for accurate video display. These setting are stored in the monitor's memory

Table 1. Factory-Preset Modes

PC mode

| Mode | Resolution | H-Freq.(KHz) | V-Freq(Hz) |
|-----------|------------|--------------|------------|
| NEC | 640x400 | 24.83 | 56.4 |
| VGA | 640x350 | 31.47 | 70 |
| | 720x400 | 31.47 | 70 |
| | 640x480 | 31.47 | 60 |
| | 640x480 | 37.86 | 72 |
| | 640x480 | 37.5 | 75 |
| SVGA | 800x600 | 35.16 | 56.3 |
| | 800x600 | 37.88 | 60.3 |
| | 800x600 | 48.08 | 72.2 |
| | 800x600 | 46.87 | 75 |
| XGA | 1024x768 | 48.36 | 60 |
| | 1024x768 | 56.47 | 70 |
| | 1024x768 | 60 | 75 |
| SXGA | 1280x1024 | 63.98 | 60 |
| | 1280x1024 | 80 | 75 |
| Macintosh | 640x480 | 35 | 66.7 |
| | 832x624 | 49.7 | 74.55 |
| | 1024x768 | 48.78 | 60 |
| | 1024x768 | 60.241 | 74.927 |

Video Mode

- NTSC 525 lines, 60 fields
- PAL 625 lines, 50/60 fields

Specifications

- **LCD-1700VRZ 17" LCD 1U Rack Display Monitor**

| | |
|------------------------------|---|
| Overall Dimension(HxWxD): | 483 x 515 x 43 mm |
| Effective Display area(H/V): | 337.92 x 270.34 mm |
| Display colors: | 16M colors |
| Scan Frequencies: | |
| Horizontal | 31.47K to 80KHz |
| Vertical | 60Hz to 75Hz |
| Number of Pixels: | 1280x1024 pixels |
| Pixel pitch: | 0.264x0.264 mm |
| Picture Tube: | 17" TFT LCD panel |
| Power: | |
| Input | 110-240VAC(auto-sensing) Frequency: 48-62Hz |
| Consumption | 45Watts maximum (on) 3 Watts (Power saving off mode) |
| PC RGB Connector: | 15pin Mini D-sub (Standard) |
| Audio connector | 1 x stereo input |
| Speaker | 2W x 2 |
| RGB Signals: | |
| Video | Analog RGB 0.7Vp-p/75Ω |
| Sync | Separate |
| Display Data Channel: | |
| Compatibility | VESA DDC 1/2B |
| Video connector input | |
| S-connector | x 1 (S-Video In) |
| AV connector | x 3 (one for video Two for audio left/right) |
| Mini D type | x 1 (for YcbCr/Component input) |
| BNC connector | x 1 (Composite Video In) |
| Video connector output | |
| BNC connector | x 1 (Composite Video Out) |

Operations:

User Controls

On/Off Power Button,
+/- and Up/down keys

On Screen Display

Auto adjustment, Brightness, contrast
color temperature, Hue, Tint,
Source select, PIP setup
H-position, V-position, OSD position
Audio volume, bass, treble, mute
Load default

Control Type:

Digital

Compatibility:

IBM and compatible, Apple
Macintosh, NEC

Environmental Limits:

Operating Temp

32° to 103°F (0° to 40°C)

Storage Temp.

-4° to 140°F (-20° to 60°C)

Operating Humidity

10 to 85% without Condensation

Storage Humidity

10 to 95% without Condensation

Chapter 2

PRODUCT PACKAGE


Open the shipping carton and check the contents. If any items are missing or damaged, contact your dealer immediately.

The package should include the following items

- Analog Color TFT LCD Monitor
- Accessory Box:
 1. VGA cable x 1
 2. AC to DC adapter x 1
 3. Power Cord x 1
 4. User's manual/Warranty Card x 1
 5. Audio cable x 1
 6. Mini DIN/RCA cable (for Component Video In use)


INSTALLING THE MONITOR

The monitor is equipped with an auto sensing power supply for voltage ranges from 110~240VAC, 60/50Hz. Confirm the line voltage designation on the rear panel of the monitor.

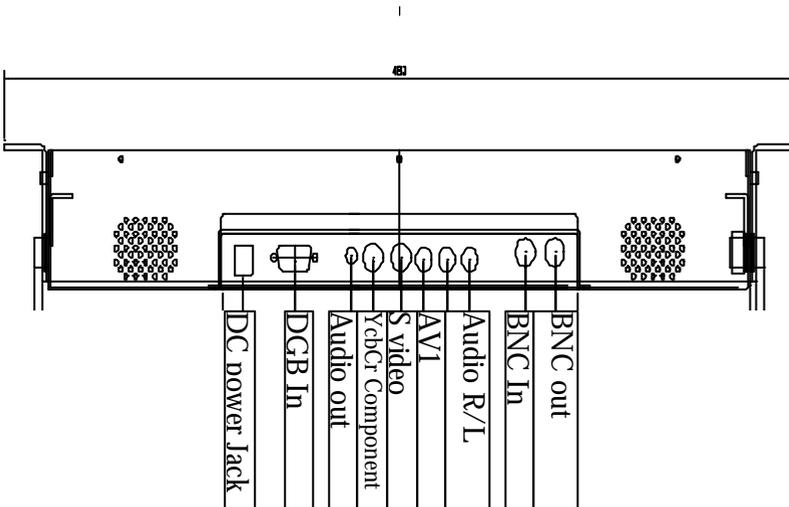

CONTROL FUNCTIONS

The Monitor control functions are located on the right corner of the front view side. They are shown in the figure below and described in the following paragraphs.

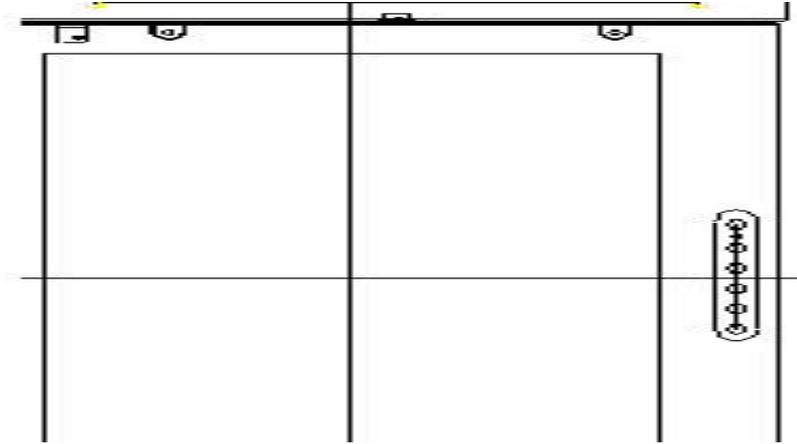

The control key description

1.  : Power Switch
2. - : Decrement
3. + : Increment or source select
4. Ñ : Move to the next item
/ Brightness control
5. D : Move to the previous item
/ Brightness control
6. **MENU** : Activate the on screen display
function

DESCRIPTION

1.  : **Power switch**

Use the power switch to turn ON or OFF power. We recommend turning your system power on first, then the LCD monitor.

2. **- & + : decrement or increment the value**

The two keys are decrement or increment the value or enter into the sub-menu.

Note: The + key can change the source directly when de-activation OSD screen.

3. **Ñ & D : Select key / Brightness Control keys**

The two keys have two functions, controlled by the MENU key. When activating OSD screen, the two keys are used to select the wanted adjustment items. When de-activating OSD screen, these two keys are used to change the Brightness value.


4. **Menu**

Press the Menu key to activate the on screen display screen. It is a toggle key. Press twice to turn off the on screen display screen. After 30 sec idle time, the OSD screen will automatically turn off.

CHAPTER 3

ADJUSTING THE MONITOR

VGA OSD main screen

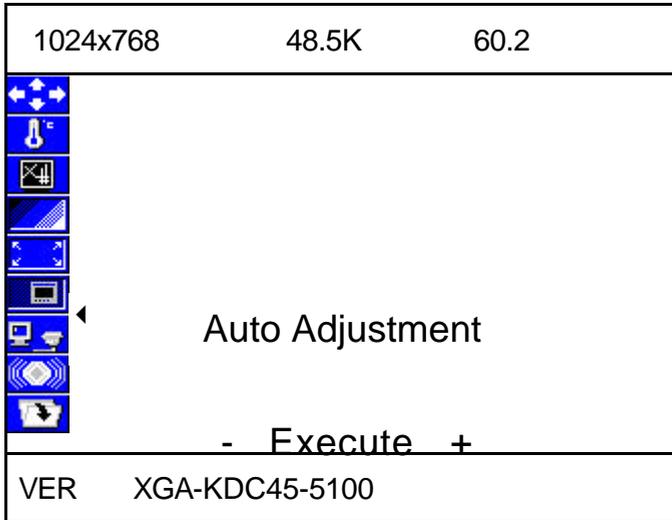

1. Each time, when pressing the menu key, the screen will show as above. You can see the ◀ mark that means the selected item. Then you can change the setting through + or -.key.
2. Pressing the Sel key to move the arrow down or up. If the selected item has many option to choose, press – or + to enter into the sub-menu.
3. Then move the Sel key to item you want to change , the item will be highlighted as red characters, then press – or + to change the value.
4. If you finish the setting, press the MENU to key to return to the main OSD, then repeat the item 2 and 3 to do the changes you want

The VGA main screen



Auto adjustment

- Automatically adjusts the phase and position of the LCD monitor for the best view setting



Color temperature setting

- Provide 9300K, user mode, and 6500K option



Brightness adjustment

- Let user adjust the brightness. The range is from 0 to 99



Contrast setup

- Provide user to separately adjust each R, G and B contrast and intensity value. When Move to this icon, and press - or + key, then the screen will show below

| | | |
|---|--|------|
| 1024x768 | 60KHz | 75Hz |
|           | Color balance Intensity R Intensity G Intensity B Contrast R Contrast G Contrast B - Execute + | |
| VER | XGA-KD841-5100 | |

Color balance: the monitor do the white balance automatically.

Intensity R: Adjust the R color intensity, the range is from 0 to 63

Intensity G: Adjust the G color intensity, the range is from 0 to 63

Intensity B: Adjust the B color intensity, the range is from 0 to 63

Contrast R: Adjust the R color contrast value, the range is from 0 to 63

Contrast G: Adjust the G color contrast value, the range is from 0 to 63

Contrast B: Adjust the B color contrast value, the range is from 0 to 63



Geometry setup

- We provide Pixel Clock, Phase, H Position, V Position, OSD H Position, OSD V Position and Txt/Gft option to change.
- Pixel Clock: Adjust the viewing screen size. The range is from 0 to 99
- Phase: Adjust phase tracking to reduce the display flicker. The range is from 0 to 31
- H Position: Move the whole screen horizontally. The range is from 0 to 120.
- V Position: Move the whole screen vertically. The range is from 0 to 100.
- OSD H Position: Move the OSD horizontally. The range is from 0 to 15
- OSD V Position: Move the OSD screen vertically. The range is from 0 to 15
- Txt/Gfx: Select the display mode as 640x480(graphic mode) or 720x400(text mode).
- VCR mode: To enable or disable the VCR mode. If the video source is come form VCR, the timing is different with DVD or camera. To avoid the screen shaking, you should VCR mode to enable mode. Normally, the default setting is OFF.



PIP setup

- We provide H Position, V Position, PIP H/V ratio, Contrast, Intensity, Tint and Hue option for customer setup the PIP screen.
- H Position: Move the PIP screen Horizontally. The range is from 0 to 15.
- V Position: Move the PIP screen Vertically. The range is from 0 to 15.
- PIP H/V ratio: Provide four option from 1 to 4. When set as 4, it is 1: 1 ratio as original size. Set as 3, it is 1/2 of original one. Set as 2, it is 1/4 of original one. Set as 1, it is 1/8 of original size.
- Contrast: Adjust the contrast value of PIP screen. The range is from 0 to 127.
- Intensity: Adjust the intensity value of PIP screen. The range is from 0 to 255.
- Tint: Adjust the Tine value of PIP screen. The range is from 0 to 255.
- Hue: Adjust the Hue value of PIP screen. The range is from 0 to 255



Source Select

- We provide VGA, Composite, S-video, YCbCr, PIP composite, PIP

S-video, PIP YCbCr and PIP off for user's selection.

Note: The PIP function is only valid on video on VGA screen. We can't support video on video screen



Speaker volume control

- We provide Volume, Bass, Treble, Mute and PIP audio for audio setup.
- Volume: Adjust the speaker volume. The range is from 0 to 32.
- Bass: Adjust the speaker Bass value. The range is from 0 to 10.
- Treble: Adjust the speaker Treble value. The range is from 0 to 10.
- Mute: Enable or disable the Mute function.
- PIP audio: Enable or disable the PIP mute function




Load the factory default setting.

- Restore the factory default setting.

Chapter 4

VIDEO ADJUSTMENT

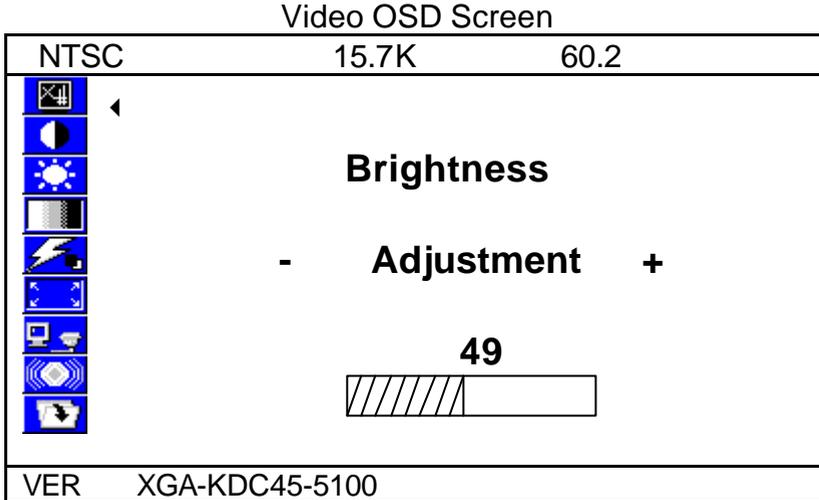

1. Each time, when pressing the menu key, the screen will show as above. You can see the ◀ mark, that means the selected item. Then you can change the setting through + or -.key.
2. Pressing Sel key to move the arrow down or up. If the selected item has many options to choose, press – or + to enter into the sub-menu.
3. Then move Sel key to the item you want to change, the item will be highlighted with red characters, then press – or + to change the value.
4. If you finish the setting, press the MENU key to return to the main OSD, then repeat items 2 and 3.

The OSD Main Screen



Brightness adjustment

- Adjust the screen brightness value. The range is from 0 to 99.



Contrast adjustment

- Adjust the screen contrast value. The range is from 0 to 127



Intensity adjustment

- Adjust the screen intensity value. The range is from 0 to 255



Tint adjustment

- Adjust the screen Tint value. The range is from 0 to 127



Hue adjustment

- Adjust the screen Hue value. The range is from 0 to 255



Geometry setup

- We provide Sharpness, H Position, V Position, OSD H Position, and OSD V position.
- Sharpness: Adjust the screen sharpness level. The range is from 0 to 15
- H position: Move the screen horizontally. The Range is from 0 to 20
- V Position: Move the screen vertically. The range is from 0 to 20
- OSD H Position: Move the OSD horizontally. The range is from 0 to 15
- OSD V Position: Move the OSD screen vertically. The range is from 0 to 15
- VCR mode: To enable or disable the VCR mode. If the video source is come form VCR, the timing is different with DVD or camera. To avoid the screen shaking, you should VCR mode to enable mode. Normally, the default setting is OFF.



Source Select

- we provide VGA, Composite, S-video, YCbCr source for user's selection



Speaker volume control

- We provide Volume, Bass, Treble, Mute and PIP audio for audio setup.
- Volume: Adjust the speaker volume. The range is from 0 to 32
- Bass: Adjust the speaker Bass value. The range is from 0 to 10
- Treble: Adjust the speaker Treble value. The range is from 0 to 10
- Mute: Enable or disable the Mute function
- PIP audio: Enable or disable the PIP mute function



Load the factory default setting.

- Load the factory default setting

Appendix

Troubleshooting Procedures

This LCD Monitor was pre-adjusted in the factory with standard VGA timing. Due to output timing differences among various VGA cards, you may initially experience an unstable or unclear display when a new display mode or new VGA card is selected.



This LCD Monitor Supports Multiple VGA Modes. Refer to the timing table for a listing of factory-preset modes supported by this LCD Monitor.

PROBLEM: There is no LCD Display

If there is no display on the LCD, please perform the following steps:

1. Make sure that the power indicator on the LCD Monitor is lit, all connections are secure, and the system is running on the correct timing. Refer to the Addendum for information on timing.
2. Turn off the LCD Monitor and then turn it back on again. Press the upper Function Control button (refer to Chapter 2) once and then press either the upper or lower Adjustment Control button several times. If there is still no display, press the other Adjustment Control button several times.
3. If step 2 doesn't work, connect your PC system to another external CRT. If your PC System functions properly with a CRT Monitor but it does not function with the LCD Monitor, and the LCD Monitor's power LED is blinking, the output timing of the PC's VGA card may be out of the LCD's synchronous range. Please change to an alternate mode listed in Addendum or replace the VGA card and repeat steps 1 and 2.
4. If the PC doesn't function with the CRT monitor neither, check BIOS to see if there is a dual scan setting under the display mode item. Set the BIOS display mode to *Dual Scan* or *CRT* and try again. If there is still no display, then there may be a problem with your system. Contact technical support.
5. If the power LED is not lit, check to see if the AC power connector is securely connected. Verify that the AC adapter LED is lit. If the AC adapter LED is not lit, please contact your dealer for assistance