

Big Button Amplified 13-Memory Phone




 
43-3241

OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

- | | |
|--|--|
|  — Warning |  — Important |
|  — Caution |  — Hint |
|  — Note | |

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.	
 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	 CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.
 The lightning symbol is intended to alert you to the presence of uninsulated dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.	 The exclamation mark symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

NOTE

FCC Statement


You must not connect your telephone to:

- coin-operated systems
- party-line systems
- most electronic key telephone systems

Connecting the Phone

- The USOC number of the jack to be installed is RJ11C (or RJ11W for a wall plate jack).
- You can set the phone on a flat surface or mount it directly on a wall or a wall plate using the supplied mounting bracket.

FCC STATEMENT

Your telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN (see below) to your telephone company. Both numbers are on the bottom of your phone. 

We have designed your telephone to conform to federal regulations, and you can connect it to most telephone lines. However, each telephone (and each device, such as a telephone or answering machine) that you connect to the telephone line draws power from the telephone line. We refer to this power draw as the device's ringer equivalence number, or REN on the bottom of your phone.

If you use more than one phone or other device on the line, add up all of the RENs. If the total is more than five (three in rural areas), your telephones might not ring. If ringer operation is impaired, remove a device from the line.

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company

notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this telephone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.


LIGHTNING

Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone when storms approach to reduce the possibility of damage.

 
Your phone is ETL listed to UL standards and meets applicable FCC requirements.

CONNECTING THE PHONE

Your telephone connects directly to a modular telephone line jack. If your telephone wiring does not have a modular jack, you can update the wiring yourself using jacks and adapters (available at your local RadioShack store), or have the telephone company update the wiring for you. You must use compatible modular jacks that are compliant with Part 68 of *FCC Rules*. 


Position the supplied mounting bracket so the mounting hole's open end is facing downward, then insert the supplied mounting bracket's two tabs into the matching slots on the bottom of the base, then snap the bracket into place.

To mount the phone directly on a wall, drill two holes $3^{15}/16$ inches (100 mm) apart. Then thread a screw (not

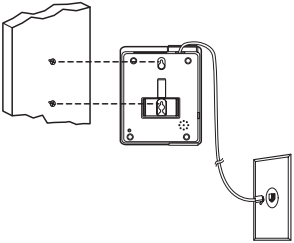


supplied) into each hole, letting the heads extend about $3/16$ inch (5 mm) from the wall. Connect the supplied long modular cord to the phone's line jack. Fit the keyhole slots over the screw heads and slide the phone downward to secure it. Plug the line cord into the telephone line jack.

 To mount the phone on a wall plate, connect the supplied short modular cord as shown. Fit the keyhole slots over the wall plate studs and slide the phone downward to secure it.

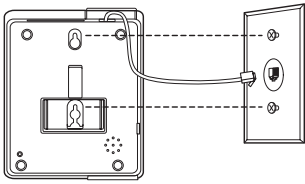


Before you hang up the handset on a wall-mounted phone, slide up the handset holder out of its slot, turn it, and slide it back into its slot.

Plug the handset cord into the jacks on the handset and the base.



NOTE



To redial a stored number in memory, follow the instructions under “Dialing a Stored Number”.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.


This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street,
6th Floor, Fort Worth, TX 76102

12/99

USING THE PHONE

Set to **TONE** or **PULSE** to match the type of service you have. If you have pulse (rotary) service, press ***** during a call to switch from pulse to tone dialing when you want to use tone services.

Press **REDIAL** to dial the last number dialed (up to 32 digits). 

Press **FLASH** to produce a switchhook signal for special services, such as Call Waiting. If you do not have a special phone service, pressing **FLASH** might disconnect the current call.

Adjust **VOLUME HI/MED/LOW** to a comfortable listening level — **HI** (High), **MED** (Medium), or **LOW** (Low).

Set **RINGER HI/LO/OFF** to **HI** for a high-volume ringer or **LO** for a low-volume ringer, or to turn off the ringer. You can make calls with the ringer off, and you can receive calls if you hear another phone on the same line ringing.

Press the switchhook to disconnect a call.

Press **HOLD** to place a call on hold. The indicator lights. To resume the call, press the switchhook or lift the handset. The indicator turns off.

Use a paper clip or other pointed object to lift the plastic cover off the memory index card.

CARE

Keep the phone dry; if it gets wet, wipe it dry immediately. Use and store the phone only in normal temperature environments. Handle the phone carefully; do not drop it.

SERVICE AND REPAIR

If your phone is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the phone’s internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If the trouble is affecting the telephone lines, the phone company can ask you to disconnect your phone until you have resolved the problem.

Then write the phone numbers on the memory index card and replace the cover.

STORING A NUMBER IN MEMORY

Follow these steps to store a number (up to 24 digits) in memory.

1. Lift the handset.
2. Press **STORE**.
3. Enter the telephone number you want to store.
4. To store a number in a priority memory, press **M1**, **M2**, or **M3**. For standard memories, press **MEMORY** or **STORE** then enter one digit number (**0–9**) for the location where you want to store the number.

To store other numbers, repeat Steps 2–4.

To delete a stored number, simply store a new number in its place.

DIALING A STORED NUMBER

To dial a number in a priority memory, lift the handset and press **M1**, **M2**, or **M3**.

To dial a number stored in a standard memory location, lift the handset and press **MEMORY**, then the desired memory location number (**0-9**).

Keep the phone away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.