


Wireless Telephone Quick Reference Guide

Avaya DEFINITY Communication System

8410D Digital Voice Terminal

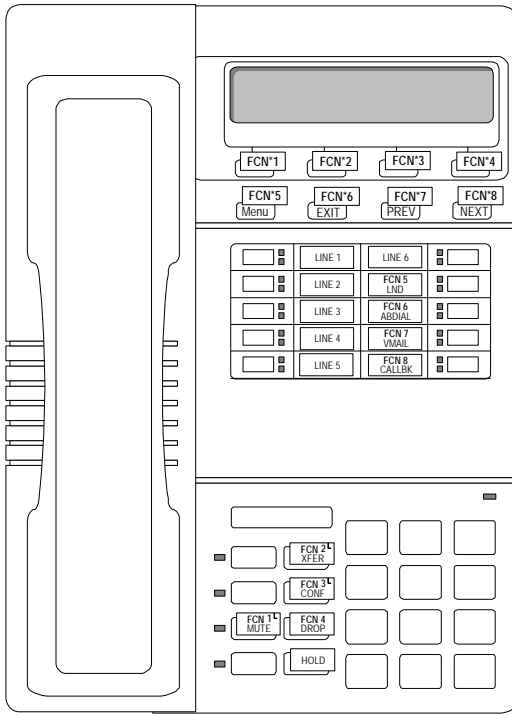


8410D

The diagram above shows how the 8410D keypad corresponds to the Wireless Telephone.

Pressing **LINE** followed by a digit (**1-6**) on the Wireless Telephone is equivalent to pressing one of the line keys on the 8410D.

FCN followed by * and a digit (**1-8**) allows you to access the eight programmable soft keys under the station set display.

| Function Key Strokes | Default Settings | Fill In Your Feature Settings |
|----------------------|------------------|-------------------------------|
| FCN + 1 | MUTE | |
| FCN + 2 | XFER | |
| FCN + 3 | CONF | |
| FCN + 4 | DROP | |
| FCN + 5 | LND | |
| FCN + 6 | ABDIAL | |
| FCN + 7 | VMAIL | |
| FCN + 8 | CALLBK | |
| FCN + 9 | EXIT MENUS | |
| FCN * 1 | | |
| FCN * 2 | | |
| FCN * 3 | | |
| FCN * 4 | | |
| FCN * 5 | | |
| FCN * 6 | | |
| FCN * 7 | | |
| FCN * 8 | | |

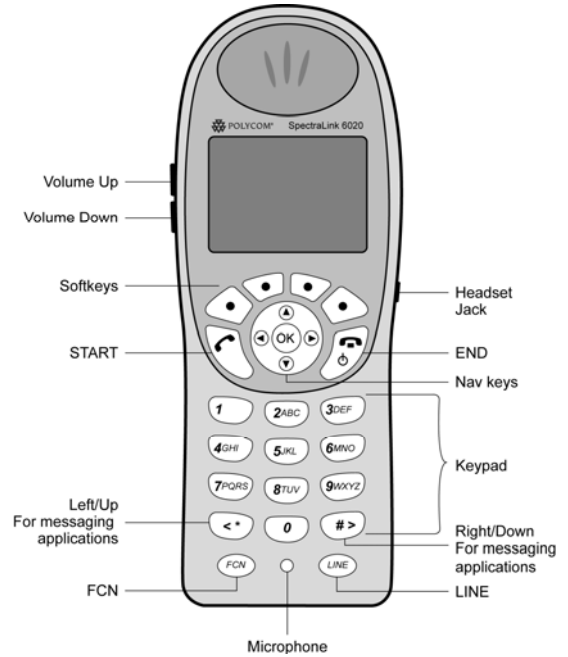

SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off.
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**.
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

