


KAMBROOK

Clock Radio



LOCATION OF CONTROLS

1. Function Selector
2. Alarm : set / stop
3. Sleep: On / set
4. Time : set
5. Snooze: alarm repetition
6. Hour : set
7. Minute: set
8. Band Selector:AM / FM
9. Battery back-up compartment
10. Volume Control
11. FM wire antenna
12. AC Power cord
13. Digital display
14. Alarm On indicator
15. Dial Scale and pointer
16. Tuning Knob

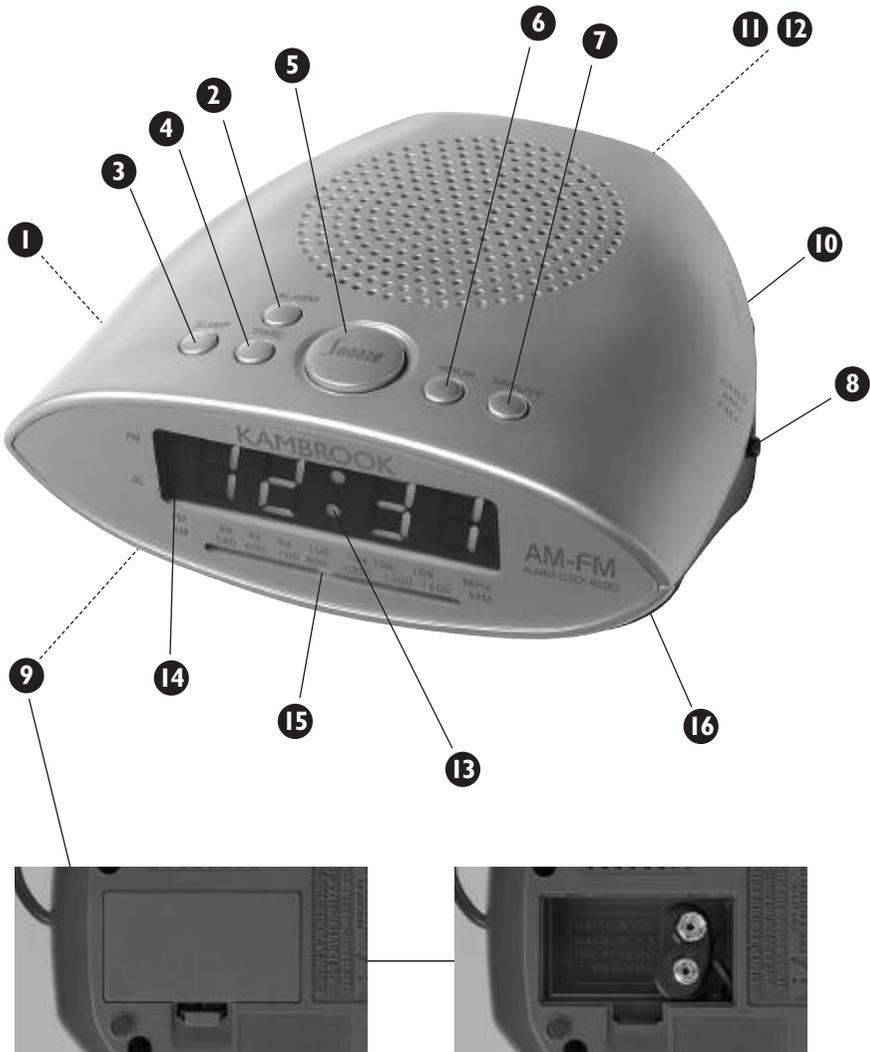

POWER SUPPLY

AC power: 230-240 Volt, 50Hz

DC power: 9 Volt battery type (not provided) for clock back-up system only.

An alkaline type battery is recommended. For optimum performance, this battery should be replaced every 6 months

1. Insert the AC power cord (12) into a convenient AC power outlet. Ensure the switch on the power outlet is in the off position, plug in the power cord, and then switch on at the AC power outlet.
2. Connect the 9V battery inside the compartment at the bottom of the unit (9).

Back-up system: Ensures that the unit will continue to operate as normal during an AC power disruption (in order to preserve the battery life the display will not light). All clock settings will be kept in the memory, however, the clock time may require adjustment for exact accuracy. If this battery is not installed, the display will blink 00:00 to indicate that you have to reset the time and alarm settings.

SETTING THE TIME

1. Press and hold TIME (4) and press (6) or (7) to adjust to your desired time.
2. Release Time (4) to store your settings in memory.

LISTENING TO THE RADIO

1. Switch to AM or FM position with the Band selector (8).
2. For a better reception in FM, extend the antenna (11). For better reception in AM rotate the unit.
3. Switch the function selector to the ON position (1).
4. Adjust the volume (10) to the desired level.
5. Select your desired radio station (15) and (16).
6. To stop listening switch to OFF (1).

SETTING THE ALARM WAKE-UP MODE

- Press and hold the ALARM (2), and press (6) or (7) to adjust your desired alarm time, then release the ALARM (2) to store your setting in memory
- To wake up to the radio follow steps 1 to 3 in “Listening to the Radio”, then select the AUTO position (1). The alarm indicator will alight (14).
- To wake up to the alarm sound, select the BUZZER position (1). The alarm indicator will alight (14).

STOPPING THE ALARM

The alarm is programmed to operate for 59 minutes

1. **SNOOZE (5)**: Press to stop the alarm temporarily, the alarm will ring again after 9 minutes.
2. **ALARM (2)**: The alarm will stop and will sound again 24 hours later.
3. **OFF (1)**: Turns off the alarm permanently, alarm indicator will go off.

SLEEP TO MUSIC

Select AM or FM (8) then press SLEEP (3), the sound will come on for 59 minutes.

To change this sleep time press and hold SLEEP (3) and use (6) to increase the time by 1 hour or (7) to decrease the time by 1 minute intervals. To turn off the music earlier, press SNOOZE (5). The maximum time setting is 1 hour 59 minutes.

CARE AND MAINTENANCE

Use only a clean, dry cloth to clean the external surfaces of the radio only.

Do not attempt to open the case of the radio at anytime, there are no customer serviceable parts inside.

Have the radio serviced by a qualified service agent should the unit require access to internal components.

When not in use, pack the radio in its original box for best protection and store in a cool, clean and dry location.

IMPORTANT

Do not throw batteries in fire!

This radio is designed for indoor use only. Do not immerse in water or allow liquids to come in contact with the radio.



KAMBROOK

12 MONTH WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Mono Place, Ellerslie, Auckland. Phone 0800 253 007, FAX 0800 263 001.

If claiming under this guarantee the product must be returned to freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record unless you are making a claim

KAMBROOK

Kambrook 4 Kingston Town Close Oakleigh, Victoria 3166, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook (New Zealand) Mono Place Ellerslie, Auckland, New Zealand
Customer Service Line/Spare Parts 0800 253 007 Customer Service Fax 0800 263 001

