### THE SHARPER IMAGE°

# Power Mister<sup>™</sup> Personal Fan

OC910 Instructions

INCLUDES IMPORTANT SAFETY INSTRUCTIONS.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

SAVE THESE INSTRUCTIONS.



Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Our goal is that you will be completely satisfied with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

Since 1977, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver outstanding customer service that exceeds your expectations.

Enjoy your purchase!

Call 1-800-344-4444 for ordering and customer service, or visit www.sharperimage.com, our award-winning Website.

# **Important Safety Instructions**

## **A WARNING:**

- CHOKING HAZARD. Contains small parts. Not for children under 3 years of age.
- To reduce the risk of personal injury, the fan should not be used where small children can reach it.
- Do not place the fan near eyes.
- Do not dispose of the batteries in fire because batteries may explode or leak.

## **A CAUTION:**

- Install batteries, observing proper +/– polarities.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), heavy-duty or rechargeable (nickelcadmium) batteries.
- Do not let hair get caught in the fan blades.

# **General Instructions**

### **Installing Batteries**

- 1. For optimum performance, use fresh alkaline batteries (4 AA required).
- 2. To install batteries, lift the latch on the battery compartment door.
- 3. Install batteries, observing proper +/– polarities.
- 4. To close, press the battery compartment door.
- 5. If fan does not operate, make sure the batteries are installed correctly.

### Filling the Fan with Water

- 1. Turn the fan on its side and snap off the plastic cap.
- 2. Fill the bottle with water. Do not freeze water in the bottle.
- 3. To close, snap on the plastic cap.

### **Operating Instructions**

To turn on the fan and mist, press the **ON/OFF** button once. The button is located on the back of the product. To turn the fan off, press the **ON/OFF** button again.

#### **Product Care**

- Before storing the fan, remove the batteries.
- When not in use, remove the water.
- There are no user-serviceable parts in this product. Do not disassemble.
- Packaging should be retained since it contains important information.

### Warranty

#### What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

#### **How Long Coverage Lasts**

This warranty runs for 90 days from the date of original purchase.

#### What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

#### What The Sharper Image Will Do

The Sharper Image warrants this product against defects in materials and workmanship. When repair is not practical, The Sharper Image will have the option to replace the defective product with one that is the same or has similar functionality.

#### How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department 2901-A West 60th Street Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@web.sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

© 2007 Sharper Image Corporation

Sharper Image Corporation 350 The Embarcadero, Sixth Floor San Francisco, CA 94105-1218

Shop online: www.sharperimage.com

Actual product may differ slightly from the product described herein.

V1 01/07