


# JVC

## DIGITAL VIDEO CAMERA

# GR-D750U

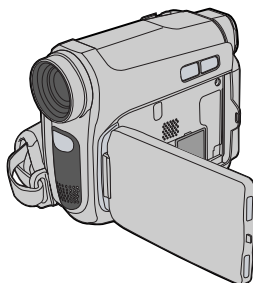

Mini **DV** NTSC

## INSTRUCTIONS

**Dear Customer,**

Thank you for purchasing this digital video camera. Before use, please read the safety information and precautions contained in the pages 3 – 5 to ensure safe use of this product.

**ENGLISH**

**GETTING STARTED 7**

**RECORDING & PLAYBACK 16**

**ADVANCED FEATURES 22**

**REFERENCES 34**

**TERMS 40**

**For Customer Use:**

Enter below the Model No. and Serial No. which is located on the bottom of the camcorder. Retain this information for future reference.

**Model No.** \_\_\_\_\_

**Serial No.** \_\_\_\_\_

To deactivate the demonstration, set "DEMO MODE" to "OFF".

(☞ pg. 22, 24)

**ENGLISH**


LYT1654-001B

## Major Features of this Camcorder

### Wipe/Fader Effects

You can use the Wipe/Fader Effects to make pro-style scene transitions.

(☞ pg. 30)

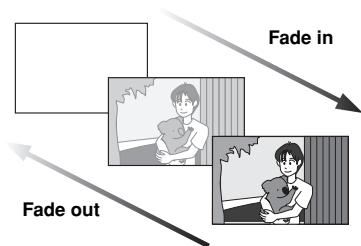

### Program AE, Effects and Shutter Effects

For example, "SPORTS" mode allows fast-moving images to be captured one frame at a time, for vivid, stable slow-motion.


(☞ pg. 30)




### LED Light


You can brighten the subject in the dark place with the LED Light.

(☞ pg. 26)

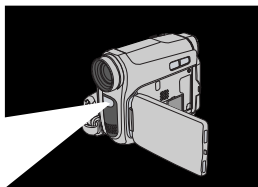




### Backlight Compensation

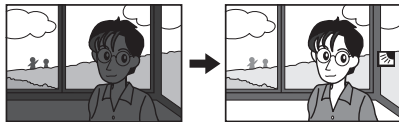Simply pressing the  button brightens the image darkened by backlight. (☞ pg. 28)



### Data Battery

You can check the battery status by simply pressing the **DATA** button. (☞ pg. 13)

BATTERY CONDITION	
LEVEL	MAX TIME
100% 	LCD 110min
50 	FINDER 135min
0 	

### Auto Button

You can change the recording mode between manual setting to the standard mode setting of the camcorder by pressing the **AUTO** button. (☞ pg. 18)

## Read This First!

- **Before recording important video, be sure to make a trial recording.**

Play back your trial recording to make sure the video and audio have been recorded properly.

- **We recommend cleaning your video heads before use.**

If you haven't used your camcorder for awhile, the heads may be dirty. We recommend periodically cleaning the video heads with a cleaning cassette (optional).



- **Be sure to store your cassette tapes and camcorder in the proper environment.**

Video heads can become dirty more easily if your cassette tapes and camcorder are stored in a dusty area. Cassette tapes should be removed from the camcorder and stored in cassette cases. Store the camcorder in a bag or other container.

- **Use SP (Standard) mode for important video recordings.**

LP (Long Play) mode lets you record 50% more video than SP (Standard) mode, but you may experience mosaic-like noise during playback depending on the tape characteristics and the usage environment.

So, for important recordings, we recommend using SP mode.

- **For safety and reliability.**

It is recommended only genuine JVC batteries and accessories are used in this camcorder.

- **This product includes patented and other proprietary technology and will operate only with JVC Data Battery. Use the JVC BN-VF808U/VF815U/VF823U battery packs. Using generic non-JVC batteries can cause damage to the internal charging circuitry.**
- **Remember that this camcorder is not compatible with other digital video formats.**
- **It is recommended that you use JVC brand cassette tapes.**

Your camcorder is compatible with all brands of commercially available cassette tapes complying with the MiniDV standard, but JVC brand cassette tapes are designed and optimized to maximize the performance of your camcorder.

- **Remember that this camcorder is intended for private consumer use only.**


Any commercial use without proper permission is prohibited. (Even if you record an event such as a show, performance or exhibition for personal enjoyment, it is strongly recommended that you obtain permission beforehand.)

- **DO NOT** leave the unit
  - in place of over 50°C (122°F)
  - in place where humidity is extremely low (below 35%) or extremely high (80%).
  - in direct sunlight.
  - in a closed car in summer.
  - near a heater.
- **The LCD monitor is made with high-precision technology. However, black spots or bright spots of light (red, green or blue) may appear constantly on the LCD monitor. These spots are not recorded on the tape. This is not due to any defect of the unit. (Effective dots: more than 99.99%)**
- **Do not leave the battery pack attached when the camcorder is not in use and check the unit regularly whether it is working or not.**

Also read "CAUTIONS" on pages 36 – 38.

- Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh is a registered trademark of Apple Computer, Inc.
- QuickTime is a registered trademark of Apple Computer, Inc.

## SAFETY PRECAUTIONS

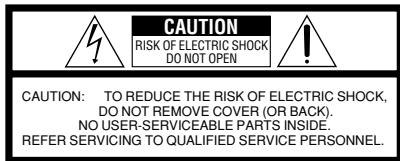

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

### CAUTIONS:

- This camcorder is designed to be used with NTSC-type color television signals. It cannot be used for playback with a television of a different standard. However, live recording and LCD monitor/viewfinder playback are possible anywhere.
- This product includes patented and other proprietary technology and will operate only with JVC Data Battery. Use the JVC BN-VF808U/VF815U/VF823U battery packs and, to recharge them or to supply power to the camcorder from an AC outlet, use the provided multi-voltage AC Adapter. (An appropriate conversion adapter may be necessary to accommodate different designs of AC outlets in different countries.)

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material - special handling may apply.  
See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)

### NOTES:

- The rating plate (serial number plate) and safety caution are on the bottom and/or the back of the main unit.
- The rating information and safety caution of the AC Adapter are on its upper and lower sides.

When the equipment is installed in a cabinet or on a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm (3-15/16") or more on both sides, on top and at the rear).

Do not block the ventilation holes.  
(If the ventilation holes are blocked by a newspaper, or cloth etc. the heat may not be able to get out.)

No naked flame sources, such as lighted candles, should be placed on the apparatus.

When discarding batteries, environmental problems must be considered and the local rules or laws governing the disposal of these batteries must be followed strictly.

The apparatus shall not be exposed to dripping or splashing.

Do not use this equipment in a bathroom or places with water.

Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups etc.) on top of this unit.

(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

Do not point the lens or the viewfinder directly into the sun. This can cause eye injuries, as well as lead to the malfunctioning of internal circuitry. There is also a risk of fire or electric shock.

### CAUTION!

The following notes concern possible physical damage to the camcorder and to the user.

When carrying, be sure to always securely attach and use the provided strap. Carrying or holding the camcorder by the viewfinder and/or the LCD monitor can result in dropping the unit, or in a malfunction.

Take care not to get your finger caught in the cassette holder cover. Do not let children operate the camcorder, as they are particularly susceptible to this type of injury.

Do not use a tripod on unsteady or unlevel surfaces. It could tip over, causing serious damage to the camcorder.

### CAUTION!

Connecting cables (Audio/Video, S-Video, etc.) to the camcorder and leaving it on top of the TV is not recommended, as tripping on the cables will cause the camcorder to fall, resulting in damage.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Cleaning The Camcorder

Before cleaning, turn off the camcorder and remove the battery pack and AC Adapter.

### To clean the exterior

Wipe gently with a soft cloth. Put the cloth in diluted mild soap and wring it well to wipe off heavy dirt. Then wipe again with a dry cloth.

### To clean the LCD monitor

Wipe gently with a soft cloth. Be careful not to damage the monitor. Close the LCD monitor.

### To clean the lens

Blow it with a blower brush, then wipe gently with lens cleaning paper.

### To clean the viewfinder lens

Remove dust from the viewfinder using a blower brush.

### NOTES:

- Avoid using strong cleaning agents such as benzene or alcohol.
- Cleaning should be done only after the battery pack has been removed or other power units have been disconnected.
- Mold may form if the lens is left dirty.
- When using a cleaner or chemically treated cloth refer to the cautions of each product.
- To clean the viewfinder, please consult your nearest JVC dealer.

### ⊗ USE CLEANING CASSETTE


Appears if dirt is detected on the heads during recording. Use an optional cleaning cassette (pg. 3).

## 6 EN CONTENTS

<b>GETTING STARTED</b>	<b>7</b>	<b>ADVANCED FEATURES</b>	<b>22</b>
Regarding This Manual .....	7	<b>MENUS FOR DETAILED ADJUSTMENT</b> .....	<b>22</b>
Provided Accessories .....	7	Changing The Menu Settings.....	22
Index.....	8	Recording Menus .....	23
Grip Adjustment.....	11	Playback Menus .....	25
Power .....	12	<b>FEATURES FOR RECORDING</b> .....	<b>26</b>
Language Settings.....	13	LED Light .....	26
Date/Time Settings .....	14	Snapshot (Record Still Image On Tape) .....	26
Viewfinder Adjustment.....	14	Manual Focus.....	27
Brightness Adjustment Of The Display.....	14	Exposure Control .....	27
Tripod Mounting.....	14	Iris Lock.....	28
Loading/Unloading A Cassette .....	15	Backlight Compensation .....	28
16:9 Wide Mode .....	15	Spot Exposure Control .....	28
<b>RECORDING &amp; PLAYBACK</b>	<b>16</b>	White Balance Adjustment .....	29
<b>VIDEO RECORDING</b> .....	<b>16</b>	Manual White Balance Adjustment .....	29
Basic Recording .....	16	Wipe Or Fader Effects.....	30
Tape Remaining Time.....	16	Program AE, Effects And Shutter Effects....	30
Quick Review.....	16	<b>EDITING</b> .....	<b>31</b>
Zooming.....	17	Dubbing To A VCR.....	31
Journalistic Shooting .....	17	Dubbing To Or From A Video Unit Equipped	
Interface Shooting .....	17	With A DV Connector (Digital Dubbing) ..	32
Time Code.....	18	Connection To A Personal Computer .....	33
Recording From The Middle Of A Tape... 18		<b>REFERENCES</b>	<b>34</b>
Auto/Manual Mode .....	18	<b>TROUBLESHOOTING</b> .....	<b>34</b>
<b>VIDEO PLAYBACK</b> .....	<b>19</b>	<b>CAUTIONS</b> .....	<b>36</b>
Normal Playback .....	19	<b>SPECIFICATIONS</b> .....	<b>39</b>
Still Playback .....	19	<b>TERMS</b> .....	<b>40</b>
Variable Shuttle Search.....	20		
Blank Search .....	20		
Playback Snapshot.....	20		
Connections To A TV Or VCR.....	21		

## Regarding This Manual

### Control Lever

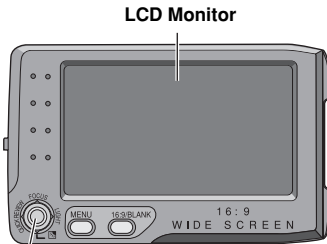

### Control lever

There are two kinds of operation using the control lever: moving the lever towards up/down/left/right, or pressing down the lever. They are described and illustrated as shown below.

1) Move the control lever up/down/left/right (▲/▼/◀/▶) to select:




Operation	To select
▲	▶/   FOCUS Move the control lever up.
▼	■ [Filter icon] Move the control lever down.
▶	▶▶ LIGHT Move the control lever right.
◀	◀◀ QUICK REVIEW Move the control lever left.

2) Press down the control lever to select **SET**:



## Provided Accessories

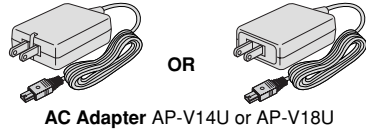


AC Adapter AP-V14U or AP-V18U



Battery Pack  
BN-VF808U

 Audio/Video Cable  
(ø3.5 mini-plug to RCA plug)



Shoulder  
Strap  
(☞ pg. 11)




Lens Cap  
(☞ pg. 11)


### NOTES:

- In order to maintain optimum performance of the camcorder, provided cables may be equipped with one or more core filter. If a cable has only one core filter, the end that is closest to the filter should be connected to the camcorder.
- Make sure to use the provided cables for connections. Do not use any other cables.

## Index

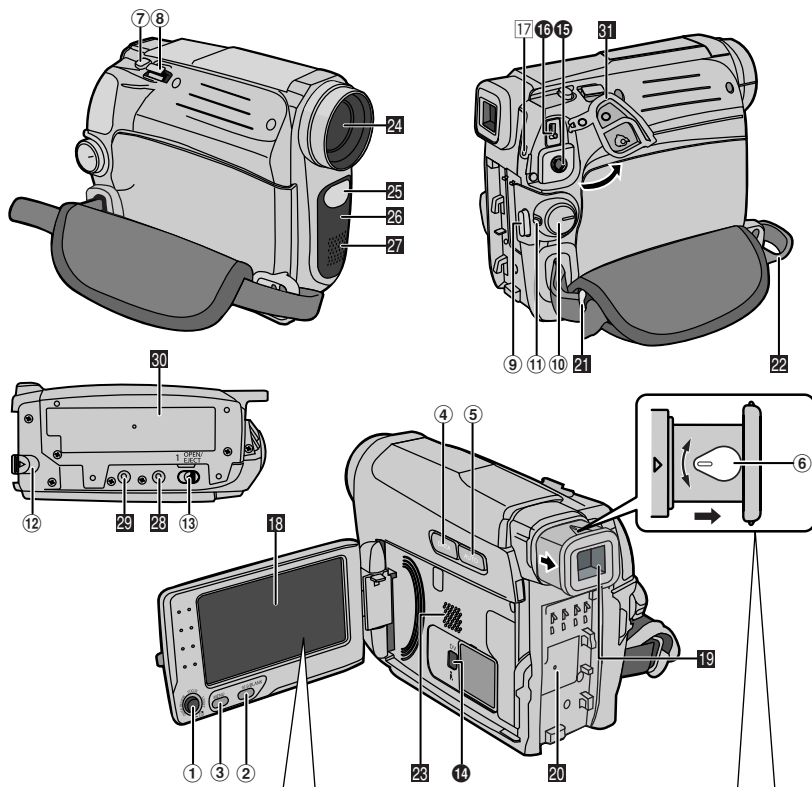**How to open the LCD monitor**

Pull on the end (A) of the LCD monitor.

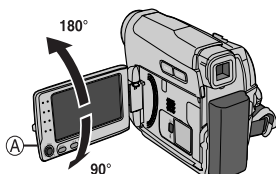

The LCD monitor can rotate 270°.

**Power-linked operation**

When the power switch is set to "REC", you can also turn the camcorder on/off by opening/closing the LCD monitor or pulling out/pushing in the viewfinder.

**NOTES:**


- The image will not appear simultaneously on the LCD monitor and the viewfinder. When the viewfinder is pulled out while the LCD monitor is opened, you can select which one to use. Set "PRIORITY" to the desired mode in SYSTEM Menu. (pg. 24)
- Colored bright spots may appear all over the LCD monitor or the viewfinder. However, this is not a malfunction.



## Controls

- ① < : Left/Rewind (◀) (☞ pg. 19)/  
Quick Review [QUICK REVIEW] (☞ pg. 16)
- > : Right/Fast-Forward (▶) (☞ pg. 19)/  
LED Light [LIGHT] (☞ pg. 26)
- ^ : Up/Play/Pause (▶/||) (☞ pg. 19)/  
Manual Focus [FOCUS] (☞ pg. 27)
- v : Down/Stop (■) (☞ pg. 19)/  
Backlight Compensation [☒] (☞ pg. 28)/  
Spot Exposure (☞ pg. 28)
- Press down : SET
- ② 16:9 Wide Screen Button [16:9] (☞ pg. 15)  
Blank Search [BLANK] (☞ pg. 20)
- ③ Menu Button [MENU] (☞ pg. 22)
- ④ Data Battery Button [DATA] (☞ pg. 13)
- ⑤ Auto Button [AUTO] (☞ pg. 18)
- ⑥ Diopter Adjustment Control (☞ pg. 14)
- ⑦ Snapshot Button [SNAPSHOT] (☞ pg. 26)
- ⑧ Power Zoom Lever [T/W] (☞ pg. 17)  
Speaker Volume Control [VOL. +, -]  
(☞ pg. 19)
- ⑨ Recording Start/Stop Button [START/STOP]  
(☞ pg. 16)
- ⑩ Power Switch [REC, PLAY, OFF]
- ⑪ Lock Button
- ⑫ Battery Release Button [BATT.] (☞ pg. 12)
- ⑬ Cassette Open/Eject Switch [OPEN/EJECT]  
(☞ pg. 15)

## Connectors

- ⑭ Digital Video Connector [DV IN/OUT]  
(i.LINK\*) (☞ pg. 32, 33)
- \* i.LINK refers to the IEEE1394-1995 industry specification and extensions thereof. The  logo is used for products compliant with the i.LINK standard.
- The connectors are located beneath the covers.
- ⑮ Audio/Video Output Connector [AV]  
(☞ pg. 21)
- ⑯ DC Input Connector [DC] (☞ pg. 12)

## Indicators

- ⑰ POWER/CHARGE Lamp (☞ pg. 12)

## Other Parts

- ⑱ LCD Monitor (☞ pg. 8)
- ⑲ Viewfinder (☞ pg. 14)
- ⑳ Battery Pack Mount (☞ pg. 12)
- ㉑ Shoulder Strap Eyelet (☞ pg. 11)
- ㉒ Grip Strap (☞ pg. 11)
- ㉓ Speaker (☞ pg. 19)
- ㉔ Lens
- ㉕ LED Light (☞ pg. 26)
- ㉖ Camera Sensor  
(Be careful not to cover this area, a sensor necessary for shooting is built-in here.)
- ㉗ Stereo Microphone
- ㉘ Stud Hole (☞ pg. 14)
- ㉙ Tripod Mounting Socket (☞ pg. 14)
- ㉚ Cassette Holder Cover (☞ pg. 15)
- ㉛ Connector Cover

### Power Switch Position

#### REC:

To perform recording on the tape.

#### OFF:


To switch off the camcorder.

#### PLAY:

To play back a recording on the tape.

## LCD Monitor/Viewfinder Indications


### During Video Recording

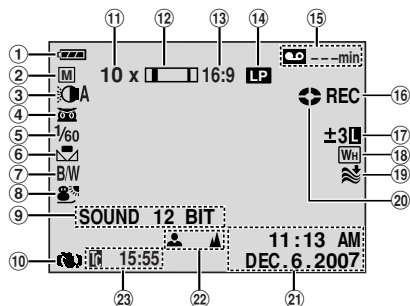

- 1 Battery Remaining Power Indicator
- 2 Operation Mode (☞ pg. 18)  
**A** : Auto Mode  
**M** : Manual Mode
- 3 LED Light Indicator (☞ pg. 26)
- 4 Night-Alive Indicator (☞ pg. 30)  
**NA** : Gain Up Mode (☞ pg. 23)
- 5 Shutter Speed (☞ pg. 31)
- 6 White Balance Indicator (☞ pg. 29)
- 7 Selected Effect Indicator (☞ pg. 31)
- 8 Selected Program AE Indicator (☞ pg. 30)
- 9 SOUND 12BIT/16BIT: Sound Mode Indicator (☞ pg. 24) (Appears for approx. 5 seconds after turning on the camcorder.)
- 10 Digital Image Stabilizer ("DIS") (☞ pg. 23) (only **DIS** indicator is displayed)
- 11 Approximate Zoom Ratio (☞ pg. 17)
- 12 Zoom Indicator (☞ pg. 17)
- 13 Selected Wide Mode Indicator (☞ pg. 15) (only 16:9 indicator is displayed)
- 14 Recording Speed Mode (SP/LP) (☞ pg. 24) (only LP indicator is displayed)
- 15 Tape Remaining Time (☞ pg. 16)
- 16 REC: (Appears during recording.) (☞ pg. 16)  
**PHOTO**: (Appears when taking Snapshot.) (☞ pg. 20, 26)
- 17 **SP**: Spot Exposure Control Indicator (☞ pg. 28)  
**BL**: Backlight Compensation Indicator (☞ pg. 28)  
**±**: Exposure Adjustment Indicator (☞ pg. 27)  
**IL**: Iris Lock Indicator (☞ pg. 28)

- 18 Selected Wipe/Fader Effect Indicator (☞ pg. 30)
- 19 Wind Cut Indicator (☞ pg. 23)
- 20 Tape Running Indicator (Rotates while tape is running.)
- 21 Date/Time (☞ pg. 24)
- 22 Manual Focus Adjustment Indicator (☞ pg. 27)
- 23 Time Code (☞ pg. 24)

### During Video Playback

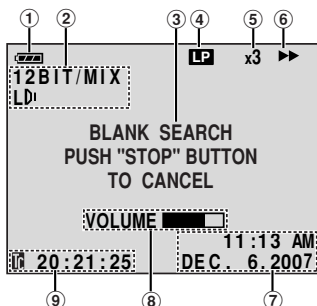


- 1 Battery Remaining Power Indicator
- 2 Sound L/R Indicator (☞ pg. 25)
- 3 Blank Search Indicator (☞ pg. 20)
- 4 Tape Speed (SP/LP) (☞ pg. 25) (only LP indicator is displayed)
- 5 Variable Search Speed Indicator: x-10, x-3, x3 and x10 (☞ pg. 20)
- 6 Playback  
**▶▶**: Fast-Forward/Shuttle Search  
**◀◀**: Rewind/Shuttle Search  
**||**: Pause
- 7 Date/Time (☞ pg. 25)
- 8 VOLUME: Volume Level Indicator (☞ pg. 19)
- 9 Time Code (☞ pg. 25)

## How To Attach The Lens Cap


To protect the lens, attach the provided lens cap to the camcorder as shown in the illustration.

### NOTE:

To confirm the lens cap is on correctly make sure the cap is flush to the camcorder.

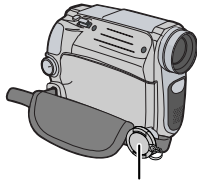


Place here during shooting.

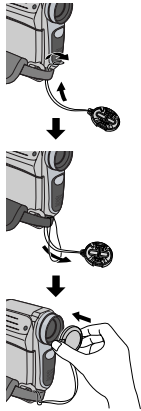

## Grip Adjustment


Open the pad and make grip adjustments.

- Before making the adjustment, remove any security tags that may be attached to the velcro.

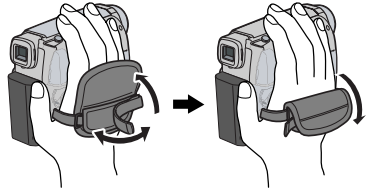


## How To Attach The Shoulder Strap

**1** Peel off the pad and thread the end of the strap through the eyelet.

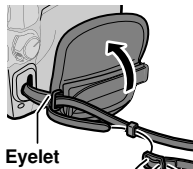

Eyelet

**2** Thread the strap through the buckle, adjust its length, and use the strap guide to fix it in place.

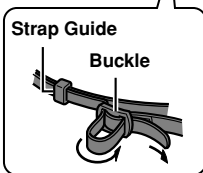


**3** Position the buckle near the eyelet and reattach the pad.



## Power

### Charging The Battery Pack

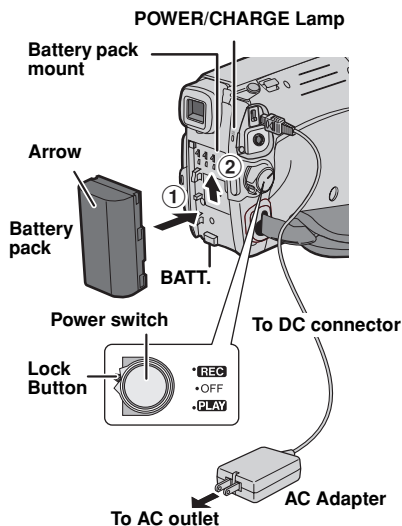

- 1** Set the Power Switch to "OFF".
- 2** With the arrow on the battery pack pointing upward, push the battery pack slightly against the battery pack mount ①.
- 3** Slide up the battery pack until it locks in place ②.
- 4** Plug the AC Adapter into an AC outlet.
- 5** Connect the AC Adapter to the camcorder.
  - The POWER/CHARGE lamp on the camcorder blinks to indicate charging has started.
  - When the POWER/CHARGE lamp goes out, charging is finished. Unplug the AC Adapter from the AC outlet. Disconnect the AC Adapter from the camcorder.

#### To detach the battery pack

Slide the battery pack downward while pressing **BATT.** to detach it.

Battery pack	Charging time
BN-VF808U*	Approx. 1 hr. 30 min.
BN-VF815U	Approx. 2 hrs. 40 min.
BN-VF823U	Approx. 3 hrs. 50 min.

\* Provided

#### NOTES:

- If the protective cap is attached to the battery pack, remove it first.
- During charging, the camcorder cannot be operated.
- Charging is not possible if the wrong type of battery is used.
- When charging the battery pack for the first time or after a long storage period, the POWER/CHARGE lamp may not light. In this case, remove the battery pack from the camcorder, then try charging again.
- If a fully charged battery pack is attached to the unit, POWER/CHARGE lamp will blink for approx. 10 seconds before it turns off.
- If the battery operation time remains extremely short even after having been fully charged, the battery is worn out and needs to be replaced. Please purchase a new one.
- Since the AC Adapter processes electricity internally, it becomes warm during use. Be sure to use it only in well-ventilated areas.
- After 5 minutes have elapsed in Record-Standby mode with the cassette inserted and no operation is performed, the camcorder will automatically turn off its power supplied from the AC adapter. In this case, the battery charge starts if the battery is attached to the camcorder.
- Please do not pull or bend the AC adapter plug and cable. This may damage the AC adapter.

#### About Batteries

**DANGER!** Do not attempt to take the batteries apart, or expose them to flame or excessive heat, as it may cause a fire or explosion.

**WARNING!** Do not allow the battery or its terminals to come in contact with metals, as this can result in a short circuit and possibly start a fire.

#### To restore the accuracy of the battery power indicator

If the battery power indication differs from the actual operating time, fully charge the battery, and then run it down. However this method may not work if the battery was used for a long period of time under extremely high/low temperature condition or charged too many times.

## Using The Battery Pack

Perform steps **2 – 3** in “Charging The Battery Pack” (☞ pg. 12).

### Maximum continuous recording time

Battery pack	LCD monitor on	Viewfinder on
BN-VF808U*	1 hr. 50 min.	2 hrs. 15 min.
BN-VF815U	3 hrs. 40 min.	4 hrs. 30 min.
BN-VF823U	5 hrs. 30 min.	6 hrs. 45 min.

\* Provided

### NOTES:

- Recording time is reduced significantly under the following conditions:
  - Zoom or Record-Standby mode is engaged repeatedly.
  - The LCD monitor is used repeatedly.
  - The playback mode is engaged repeatedly.
  - The LED Light is used.
- Before extended use, it is recommended that you prepare enough battery packs to cover 3 times the planned shooting time.

 


### ATTENTION:

Before detaching the power source, make sure that the camcorder's power is turned off. Failure to do so can result in a camcorder malfunction.

## Data Battery System

You can check the remaining battery power and the recordable time.

When the battery is attached, press **DATA**.

BATTERY CONDITION	
LEVEL	MAX TIME
100% 	LCD 110min
50 	FINDER 135min
0 	

- When the Power Switch is set to “OFF”, it is displayed for approx. 3 seconds if the button is pressed and released quickly, and for approx. 15 seconds if the button is pressed and hold for several seconds.
- When the Power Switch is set to “PLAY” or “REC”, press **DATA** again to return to the normal screen.
- Data battery status cannot be displayed during playback or while recording in progress.

- If “COMMUNICATION ERROR” appears instead of the battery status even though you tried to press **DATA** several times, there may be a problem with your battery. In such a case, consult your nearest JVC dealer.

## Using AC Power

Perform step **4 – 5** in “Charging The Battery Pack” (☞ pg. 12).

### NOTE:


The provided AC Adapter features automatic voltage selection in the AC range from 110 V to 240 V.

### INFORMATION:

The following explanations in this manual supposes the use of LCD monitor in your operation. If you want to use the viewfinder, close the LCD monitor and pull out the viewfinder fully.

## Language Settings


The language on the display can be changed. (☞ pg. 24)

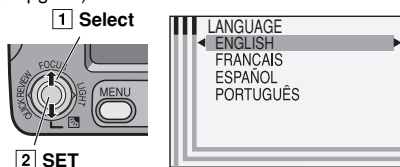

- Open the LCD monitor fully.
- Set the Power Switch to “REC” or “PLAY” while pressing down the Lock Button located on the switch.
  - If set to “REC”, the recording mode should be set to “**M**” (☞ pg. 18).
- Press **MENU**.
- Select “SYSTEM”, press **SET** or **>**.
- Select “LANGUAGE”, press **SET** or **>**.
- Select the desired language, press **SET** or **>**.
- Press **MENU**.

Press **<** whenever you want to return to the previous menu screen.

## Date/Time Settings

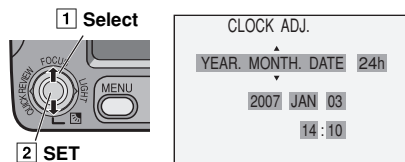

The date/time is recorded onto the tape at all times, but its display can be turned on or off. (⇨ pg. 24, 25)

Perform steps **1 – 3** in “Language Settings” (⇨ pg. 13).


- 1** Select “DISPLAY”, press **SET** or >.
- 2** Select “CLOCK ADJ.”, press **SET** or >.
- 3** Select the desired date display format, press **SET** or >.
  - Repeat this step to input time display format (Select from “24h” or “12h”), month, date, year, hour and minutes.
- 4** Press **MENU**.

Press < whenever you want to return to the previous menu screen/setting.

## Viewfinder Adjustment

- 1** Set the Power Switch to “REC” while pressing down the Lock Button located on the switch.
- 2** Make sure the LCD monitor is closed and locked. Pull out the viewfinder fully.
- 3** Turn the Diopter Adjustment Control until the indications in the viewfinder are clearly focused.

**Example:**

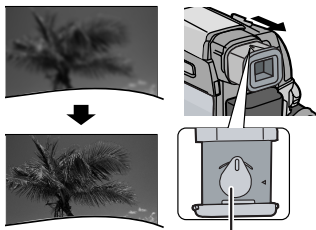


Diopter Adjustment Control

### CAUTION:

When retracting the viewfinder, take care not to pinch your fingers.

## Brightness Adjustment Of The Display

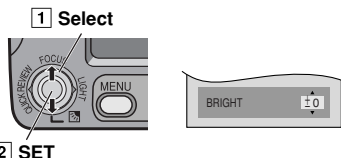

- 1** Select
  - 2** **SET**
- Perform steps **1 – 3** in “Language Settings” (⇨ pg. 13).

- To adjust the brightness of the viewfinder, pull out the viewfinder fully and set “PRIORITY” to “FINDER” (⇨ pg. 24).


- 1** Select “DISPLAY”, press **SET** or >.
- 2** Select “BRIGHT”, press **SET** or >.
- 3** Select the appropriate brightness, press **SET** or >.
- 4** Press **MENU**.

Press < whenever you want to return to the previous menu screen.

## Tripod Mounting


To attach the camcorder to a tripod, align the direction stud and screw to the mounting socket and stud hole on the camcorder. Then tighten the screw clockwise.

- Some tripods are not equipped with studs.

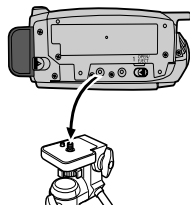

## Loading/Unloading A Cassette

The camcorder needs to be powered up to load or eject a cassette.

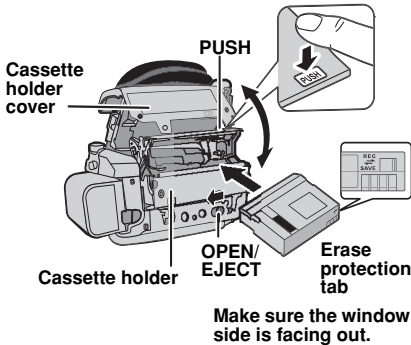

**1** Slide and hold **OPEN/EJECT** in the direction of the arrow, then pull the cassette holder cover open until it locks. The cassette holder opens automatically.

- Do not touch internal components.

**2** Insert or remove a tape and press “PUSH” to close the cassette holder.

- Be sure to press only the section labeled “PUSH” to close the cassette holder; touching other parts may cause your finger to get caught in the cassette holder, resulting in injury or product damage.
- Once the cassette holder is closed, it recedes automatically. Wait until it recedes completely before closing the cassette holder cover.
- When the battery pack's charge is low, you may not be able to close the cassette holder cover. Do not apply force. Replace the battery pack with a fully charged one or use AC power before continuing.

**3** Close the cassette holder cover firmly until it locks into place.

### NOTES:

- If you wait a few seconds and the cassette holder does not open, close the cassette holder cover and try again. If the cassette holder still does not open, turn the camcorder off then on again.
- If the tape does not load properly, open the cassette holder cover fully and remove the cassette. A few minutes later, insert it again.
- When the camcorder is suddenly moved from a cold place to a warm environment, wait a short time before opening the cassette holder cover.



- Appears if a tape is loaded while the Power Switch is set to “REC”.
- Blinks when no tape is loaded.

### TAPE!


Appears if a tape is not loaded when the Recording Start/Stop Button is pressed while the Power Switch is set to “REC”.

### CHECK TAPE'S ERASE PROTECTION TAB

Appears when the erase protection tab is set to “SAVE” while the Power Switch is set to “REC”.


## 16:9 Wide Mode

You can record videos at 4:3 size and 16:9 size. By default, the camera is set to record videos at the 16:9 size.

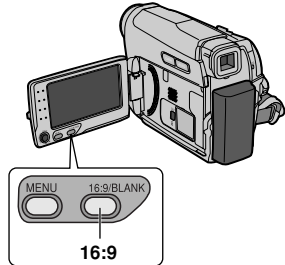


**1** Set the Power Switch to “REC”.

**2** Each press **16:9** switches the screen size. On the LCD monitor:

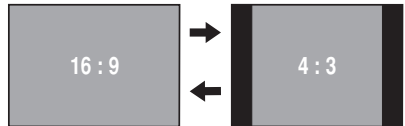

On the viewfinder:

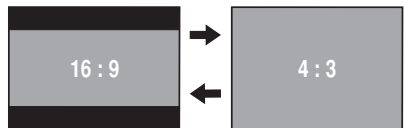

### NOTE:

If you record videos in 16:9 size, the image may appear to be slightly vertically stretched when playing back on TV with the 4:3 screen.


(pg. 24, 25)

## Basic Recording

### NOTE:

Before continuing, perform the procedures listed below:

- Power (☞ pg. 12)
- Loading A Cassette (☞ pg. 15)
- Remove the lens cap. (☞ pg. 11)
- Open the LCD monitor fully.
- Select videos at 4:3 size or 16:9 (wide) size. (☞ pg. 15)

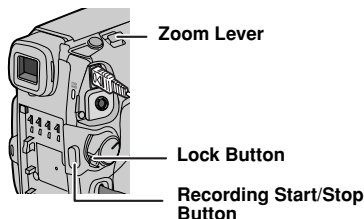

**1** Set the Power Switch to "REC" while pressing down the Lock Button located on the switch.

**2** Press **START/STOP** button to start recording. "REC" appears on the display while recording is in progress. To stop recording, press **START/STOP** again.

### Approximate recording time

 
Tape	Recording mode	
	SP	LP
30 min.	30 min.	45 min.
60 min.	60 min.	90 min.
80 min.	80 min.	120 min.

### NOTES:

- If the Record-Standby mode continues for 5 minutes and no operation is performed, the camcorder's power shuts off automatically. To turn the camcorder on again, push back and pull out the viewfinder again or close and re-open the LCD monitor.
- When a blank portion is left between recorded scenes on the tape, the time code is interrupted and errors may occur when editing the tape. To avoid this, refer to "Recording From The Middle Of A Tape" (☞ pg. 18).
- To record in LP (Long Play) mode, ☞ pg. 24.

## Tape Remaining Time

Approximate tape remaining time appears on the display. "--- min" means the camcorder is calculating the remaining time. When the remaining time reaches 2 minutes, the indication starts blinking.



- The time required to calculate and display the remaining tape length, and the accuracy of the calculation, may vary according to the type of tape used.

## Quick Review

Enables to check the end of the last recording.

- 1) Press **QUICK REVIEW** during the Recording-Standby mode.
- 2) Tape is rewound for about several seconds and played back automatically, then pauses in the Recording-Standby mode for the next shot.




- Distortion may occur at start of playback. This is normal.
- Slide the Power Zoom lever repeatedly to change the sound to on/off.



## Zooming

### While recording

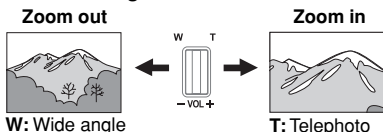


**W:** Wide angle

**T:** Telephoto

- You can zoom in up to 34X by using the optical zoom.
- Zoom magnification over 34X is done through digital image processing, and is therefore called digital zoom. Digital zooming is possible up to 800X. Set (ZOOM) to [68X] or [800X]. (☞ pg. 23)

### Optical zoom (up to 34X)

 


Digital zoom (up to 800X)

### NOTES:

- Macro shooting is possible as close as approx. 5 cm (2") to the subject when the zoom lever is set all the way to W.
- When you zoom into a subject close to the lens, the camera may automatically zoom out depending on the distance to the subject. In this case, set "TELE MACRO" to "ON". (☞ pg. 23)

## Journalistic Shooting

In some situations, different shooting angles may provide more dramatic results. Hold the camcorder in the desired position and tilt the LCD monitor in the most convenient direction. It can rotate 270° (90° downward, 180° upward).

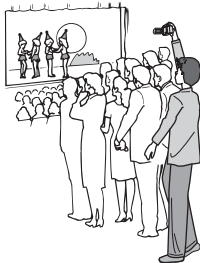

## Interface Shooting

The person you shoot can view himself/herself in the LCD monitor, and you can even shoot yourself while viewing your own image in the LCD monitor.



1) Open the LCD monitor and tilt it upward to 180° so that it faces forward. Then, pull out the viewfinder fully.




2) Point the lens toward the subject (yourself when self-recording) and start recording.

- During Interface Shooting, the monitor image appears inverted as it would when viewing a mirror. However, the actual recorded image does not appear inverted.
- If the Quick Review (☞ pg. 16) is executed during the interface shooting, the LCD monitor will be turned off. In such a case, check the playback picture in the viewfinder.
- To check the playback picture in the LCD monitor, close the viewfinder.

## Time Code

During recording, a time code is recorded on the tape. This code is to confirm the location of the recorded scene on the tape during playback.

### Display

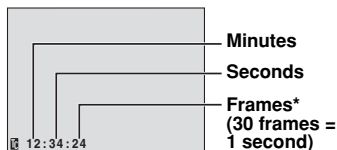

\* Frames are not displayed during recording.

If recording starts from a blank portion, the time code begins counting from "00:00:00" (minute:second:frame). If recording starts from the end of a previously recorded scene, the time code continues from the last time code number. If during recording a blank portion is left partway through the tape, the time code is interrupted. When recording is resumed, the time code starts counting up again from "00:00:00". This means the camcorder may record the same time codes as those existing in a previously recorded scene. To prevent this, perform Recording From The Middle Of A Tape (pg. 18) in the following cases;

- When shooting again after playing back a recorded tape.
- When power shuts off during shooting.
- When a tape is removed and re-inserted during shooting.
- When shooting using a partially recorded tape.
- When shooting on a blank portion located partway through the tape.
- When shooting again after shooting a scene then opening/closing the cassette holder cover.

## NOTES:

- The time code cannot be reset.
- During fast-forwarding and rewinding, the time code indication does not move smoothly.
- The time code is displayed only when "TIME CODE" is set to "ON". (pg. 24)

## Recording From The Middle Of A Tape

- 1) Play back a tape or use Blank Search (pg. 20) to find the spot at which you want to start recording, then engage the Still Playback mode. (pg. 19)
- 2) Set the Power Switch to "REC" while pressing down the Lock Button located on the switch, then start recording.

## Auto/Manual Mode


Press **AUTO** button repeatedly to switch to auto/manual recording mode. When manual mode is selected, the indicator "M" appears on the LCD monitor.

### Auto Mode : **A**


You can record using no special effects or manual adjustments.

### Manual Mode : **M**


Manual recording is possible by setting various functions.

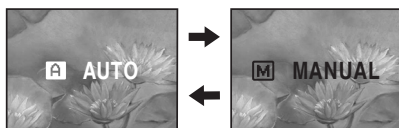

## Normal Playback

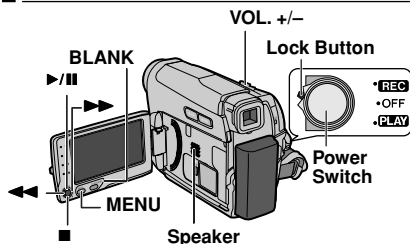

- 1 Load a cassette. (☞ pg. 15)
- 2 Set the Power Switch to "PLAY" while pressing down the Lock Button located on the switch.

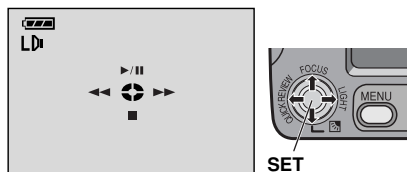

- The above screen (referring to the control lever (☞ pg. 7)) will be displayed for approx. 3 seconds on the LCD Monitor.

Operation	To select
▶/	Move the control lever up.
■	Move the control lever down.
▶▶	Move the control lever right.
◀◀	Move the control lever left.

- 3 To start playback, press ▶/||.
  - 4 To stop playback, press ■.
- During Stop mode, press ◀◀ to rewind, or ▶▶ to fast-forward the tape.
  - Press SET to display the guide operation screen.

### To control the speaker volume

Slide the Power Zoom Lever (VOL. +/-) towards "+" to turn up the volume, or towards "-" to turn down the volume.

## NOTES:

- The playback picture can be viewed in the LCD monitor, viewfinder or on a connected TV. (☞ pg. 21)
- If Stop mode continues for 5 minutes when power is supplied from a battery, the camcorder shuts off automatically. To turn the camcorder on again, push back and pull out the viewfinder again or close and re-open the LCD monitor.
- When a cable is connected to the AV connector, the sound is not heard from the speaker.

## HDV

Appears when pictures recorded in the HDV format are detected. The pictures in the HDV format cannot be played back with this camcorder.

## Still Playback

Pauses during video playback.

- 1) Press ▶/|| during playback.
  - 2) To resume normal playback, press ▶/|| again.
- If still playback continues for more than about 3 minutes, the camcorder's Stop mode is automatically engaged.

## Variable Shuttle Search

Allows variable-speed search in either direction during video playback.

1) During playback, press ►► once or twice for forward search, or ◀◀ once or twice for reverse search.

◀◀		►►	
x-10	x-3	x3	x10

2) To resume normal playback, press ►/II.

- During playback, press and hold ►► or ◀◀. The search continues as long as you hold the button. Once you release the button, normal playback resumes.
- A slight mosaic effect appears on the display during Shuttle Search. This is not a malfunction.

### ATTENTION:

During Shuttle Search, parts of the picture may not be clearly visible, particularly on the left side of the screen.



During Shuttle Search, parts of the picture may not be clearly visible across the screen.



## Blank Search

Helps you find where you should start recording in the middle of a tape to avoid time code interruption. (⇨ pg. 18)

1 Perform steps 1 – 2 in "Normal Playback" (⇨ pg. 19).

2 Press **BLANK**.

- The "BLANK SEARCH" indication appears and the camcorder automatically starts reverse or forward search, then stops at the spot which is about 3 seconds of tape before the beginning of the detected blank portion.
- To cancel Blank Search, press ■ or **BLANK**.

### NOTES:


- Before starting Blank Search, if the current position is at a blank portion, the camcorder searches in the reverse direction. If the current position is at a recorded portion, the camcorder searches in the forward direction.
- If the beginning or end of the tape is reached during Blank Search, the camcorder stops automatically.
- A blank portion which is shorter than 5 seconds of tape may not be detected.
- The detected blank portion may be located between recorded scenes. Before you start recording, make sure there is no recorded scene after the blank portion.

## Playback Snapshot

This camcorder allows you to take snapshots during video playback.

Press **SNAPSHOT**.

## Connections To A TV Or VCR

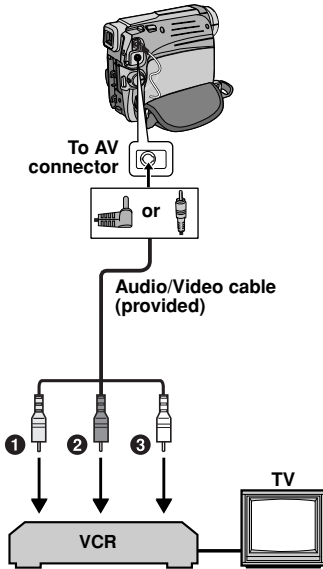

❶ Yellow to VIDEO IN (Connect when your TV/VCR has only A/V input connectors.)

❷ Red to AUDIO R IN\*

❸ White to AUDIO L IN\*

\* Not required for watching still images only.

❶ Make sure all units are turned off.

❷ Connect the camcorder to a TV or VCR as shown in the illustration.

**If using a VCR, go to step 3.**

**If not, go to step 4.**

❸ Connect the VCR output to the TV input, referring to your VCR's instruction manual.

❹ Turn on the camcorder, the VCR and the TV.

❺ Set the VCR to its AUX input mode, and set the TV to its VIDEO mode.

❻ Start playback on the camcorder.

(☞ pg. 19)

● Please set "16:9 OUTPUT" of Playback Menu so that the image may suit your TV (16:9 TV or 4:3 TV). (☞ pg. 24, 25)

### To choose whether or not the following displays appear on the connected TV

● Date/Time

Set "DATE/TIME" to "ON" or "OFF" (☞ pg. 25).

● Time Code

Set "TIME CODE" to "ON" or "OFF" (☞ pg. 25).

● Indications other than date/time and time code  
Set "ON SCREEN" to "OFF", "LCD" or "LCD/TV" (☞ pg. 25).

### NOTES:


● It is recommended to use the AC Adapter as the power supply instead of the battery pack. (☞ pg. 13)

● To monitor the picture and sound from the camcorder without inserting a tape or memory card, set the camcorder's Power Switch to "REC", then set your TV to the appropriate input mode.

● Make sure you adjust the TV sound volume to its minimum level to avoid a sudden burst of sound when the camcorder is turned on.

### Changing The Menu Settings

This camcorder is equipped with an easy-to-use, on-screen menu system that simplifies many of the more detailed camcorder settings. (➡ pg. 22 – 25)

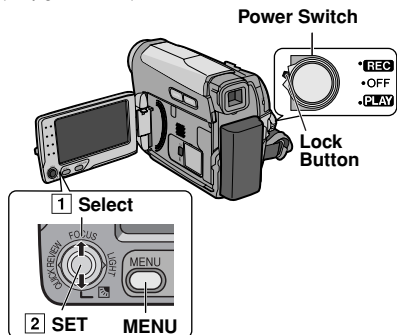

#### 1 For Video Recording Menu:

- Set the Power Switch to "REC" while pressing down the Lock Button located on the switch.
- Set the recording mode to "M". (➡ pg. 18)


#### For Video Playback Menu:

- Set the Power Switch to "PLAY" while pressing down the Lock Button located on the switch.


2 Open the LCD monitor fully. (➡ pg. 8)

3 Press **MENU**. The Menu Screen appears.

#### Screen for Video Recording Menu

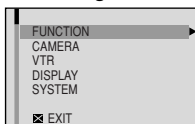


#### Screen for Video Playback Menu

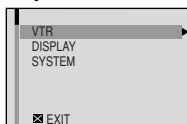

4 Select the desired function, press **SET** or **>**. The selected function menu appears.


Example: FUNCTION menu.

#### Current Setting

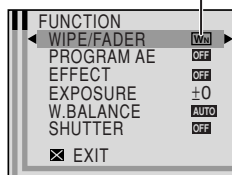

5 Select the desired selection, press **SET** or **>**.

Example: WIPE/FADER menu.

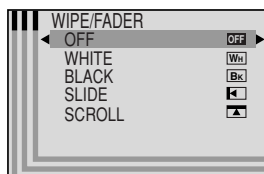

6 Select the desired setting, press **SET** or **>**. Selection is completed.

7 Press **MENU**. The Menu Screen closes.

- Press **<** whenever you want to cancel or return to the previous menu screen.
- Repeat the procedure if you wish to set other function menus.

In the following pages, [ ] refers to Factory preset settings.

## Recording Menus

### FUNCTION

The following menu settings can be changed only when the Power Switch is set to "REC".

#### WIPE/FADER

( pg. 30), "Wipe or Fader Effects"

#### PROGRAM AE

( pg. 30), "Program AE, Effects And Shutter Effects"

#### EFFECT

( pg. 30, 31), "Program AE, Effects And Shutter Effects"

#### EXPOSURE

( pg. 27), "Exposure Control"

#### W. BALANCE

( pg. 29), "White Balance Adjustment"

#### SHUTTER

( pg. 30, 31), "Program AE, Effects And Shutter Effects"

### CAMERA

The following menu settings can be changed only when the Power Switch is set to "REC".

#### ZOOM

**[34X]**: When set to "34X" while using digital zoom, the zoom magnification will reset to 34X since digital zoom will be disengaged.

**68X**: Allows you to use the Digital Zoom. By digitally processing and magnifying images, zooming is possible from 34X (the optical zoom limit), to a maximum of 68X digital magnification.

**800X**: Allows you to use the Digital Zoom. By digitally processing and magnifying images, zooming is possible from 34X (the optical zoom limit), to a maximum of 800X digital magnification.

#### TELE MACRO

**[OFF]**: Disables the function.

**ON**: When the distance to the subject is less than 1 m (3.3 ft), set "TELE MACRO" to "ON". You can shoot a subject as large as possible at a distance of approx. 40 cm (1.4 ft).

Depending on the zoom position, the lens may go out of focus.

#### DIS

**OFF** (): Disables the function. (DIS disable icon appears.)

**[ON]**: To compensate for unstable images caused by camera-shake, particularly at high magnification.

#### NOTES:

- Accurate stabilization may not be possible if hand shake is excessive, or depending on the shooting condition.
- Switch off this mode when recording with the camcorder on a tripod.
- DIS cannot be activated when "NIGHT" in "PROGRAM AE", or "STROBE" in "EFFECT" is selected or when **LIGHT** is set to on, or when **SNAPSHOT** is pressed.

#### GAIN UP

**OFF**: Allows you to shoot dark scenes with no picture brightness adjustment.

**[AGC]**: The overall appearance may be grainy, but the image is bright.

**AUTO** **A**: The shutter speed is automatically adjusted. Shooting a subject in low or poor lighting at slow shutter speed provides a brighter image than in the AGC mode, but the subject's movements are not smooth or natural. The overall appearance may be grainy. While the shutter speed is being automatically adjusted, " **A**" is displayed.

#### WIND CUT

**[OFF]**: Disengages the function.

**ON** : Helps cut down on noise created by wind. The " " indicator appears. The quality of the sound will change. This is normal.

**VTR****REC MODE**

**[SP]\*:** To record in the SP (Standard Play) mode

**LP:** Long Play—more economical, providing 1.5 times the recording time.

\* SP indicator does not appear on the screen.

**NOTES:**

- If the recording mode is switched, the playback picture will be blurred at the switching point.
- During playback of a tape recorded on another camcorder, blocks of noise may appear or there may be momentary pauses in the sound.

**SOUND MODE**

**[12BIT]:** Enables video recording of stereo sound on four separate channels. (Equivalent to the 32 kHz mode of previous models)

**16BIT:** Enables video recording of stereo sound on two separate channels. (Equivalent to the 48 kHz mode of previous models)

**DISPLAY**

The "DISPLAY" settings (except "CLOCK ADJ.", "16:9 OUTPUT" and "BRIGHT") are effective only for shooting.

**ON SCREEN**

**LCD:** Keeps the camcorder's display (except the date, time and time code) from appearing on the connected TV screen.

**[LCD/TV]:** Makes the camcorder's display appear on screen when the camcorder is connected to a TV.

**DATE/TIME**

**[OFF]:** The date/time does not appear.

**ON:** The date/time is always displayed.

**CLOCK ADJ.**

☞ pg. 14, "Date/Time Settings"

**TIME CODE**

**[OFF]:** Time code is not displayed.

**ON:** Time code is displayed on the camcorder and on the connected TV. Frame numbers are not displayed during recording. (☞ pg. 18)

**16:9 OUTPUT**

To enable your tv to display images in 16:9 wide mode, set the tv screen size correctly.

**4:3 TV:** For TV with an aspect ratio of 4:3.

**[16:9 TV]:** For TV with an aspect ratio of 16:9.

**BRIGHT**

☞ pg. 14, "Brightness Adjustment Of The Display"

**SYSTEM**

The "SYSTEM" functions which are set when the Power Switch is set to "REC" are also applied when the Power Switch is set to "PLAY".

**LANGUAGE**

**[ENGLISH] / FRANCAIS / ESPAÑOL / PORTUGUÉS**

The language setting can be changed.

☞ pg. 13)

**MELODY**

**OFF:** Even though not heard while shooting, shutter sound is recorded on the tape.

**[ON]:** A melody sounds when any operation is performed. It also activates the shutter sound effect.

**PRIORITY**

**[LCD]:** The image is displayed on the LCD monitor when the viewfinder is pulled out while the LCD monitor is opened.

**FINDER:** The image is displayed in the viewfinder when the viewfinder is pulled out while the LCD monitor is opened.

**DEMO MODE**

**OFF:** Automatic demonstration will not take place.

**[ON]:** Demonstrates certain functions such as Wipe/Fader and Effects, etc., and can be used to confirm how these functions operate.

Demonstration starts in the following cases:

- When the Menu Screen is closed after "DEMO MODE" is turned "ON".
- With "DEMO MODE" set to "ON", if there is no operation for about 3 minutes after the Power Switch is set to "REC".
- Performing any operation during the demonstration stops the demonstration temporarily. If no operation is performed for more than 3 minutes after that, the demonstration will resume.

**NOTES:**

- If a cassette is in the camcorder, the demonstration cannot be turned on.
- "DEMO MODE" remains "ON" even if the camcorder power is turned off.



**CAM RESET**

**[CANCEL]**: Does not reset all settings to the factory-preset.

**EXECUTE**: Resets all settings to the factory-preset.

**Playback Menus**

**VTR**

The settings below are effective only for video playback except "REC MODE". The parameters (except "SOUND L/R" and "NARRATION" settings) are the same as in the description on page 25.

**SOUND L/R and NARRATION**

During tape playback, the camcorder detects the sound mode in which the recording was made, and plays the sound back. Select the sound to accompany your playback picture.

**REC MODE** [SP]\* / LP

Allows you to set the video recording mode (SP or LP) depending on your preference. It is recommended you use "REC MODE" in VIDEO Menu when using this camcorder as a recorder during dubbing. (pg. 31, 32)

\* SP indicator does not appear on the screen.

**NARRATION**

Although it is not possible to perform audio dubbing with this camcorder, you can hear sound from an audio-dubbed tape during playback using this function.

**[OFF]**: Original sound is output on both "L" and "R" channels in stereo.

**ON**: Dubbed sound is output on both "L" and "R" channels in stereo.

**MIX**: Original and dubbed sounds are combined and output in stereo on both "L" and "R" channels.

**SOUND L/R**

**[STEREO]**: Sound is output on both "L" and "R" channels in stereo.

**SOUND L**: Sound from the "L" channel is output.

**SOUND R**: Sound from the "R" channel is output.

**DISPLAY**

Each setting (except "OFF" in "ON SCREEN", "DATE/TIME" and "TIME CODE") is linked with "DISPLAY", which appears when the Power Switch is set to "REC".

The parameters (except "OFF" in "ON SCREEN" setting) are the same as in the description on pg. 24.

**ON SCREEN** OFF / [LCD] / LCD/TV

When set to "OFF", the camcorder's display disappears.

**DATE/TIME** [OFF] / ON

**CLOCK ADJ.**

pg. 14, "Date/Time Settings"

**TIME CODE** [OFF] / ON

pg. 18, "Time Code"

**16:9 OUTPUT** 4:3 TV / [16:9 TV]

pg. 24, "16:9 OUTPUT"

**BRIGHT**

pg. 14, "Brightness Adjustment Of The Display"

**SYSTEM**

Each setting (except "DEMO MODE") is linked with "SYSTEM", which appears when the Power Switch is set to "REC".

The parameters are the same as in the description on page 24.

## LED Light

LED Light can be used to brighten the subject in the dark place during video recording.




LIGHT



LED Light

**1** Press **LIGHT** repeatedly to change the setting.

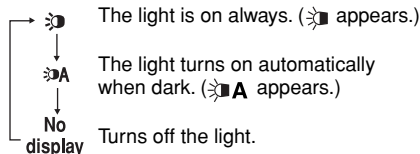

**2** Press the Recording Start/Stop Button to start video recording or **SNAPSHOT** to shoot a still image.

### NOTES:


- Be careful not to point the LED Light directly to eyes.
- If the light does not reach the subject when the LED Light setting is "ON", the Night-Alive function will be activated, and makes it possible to shoot the subject brighter.
- Since subjects are shot at a reduced shutter speed when the LED Light setting is "ON", they will appear slightly blurred.

## Snapshot (Record Still Image On Tape)

This feature lets you record still images that look like photographs onto a tape.

**1** Set the Power Switch to "REC".

**2** Press **SNAPSHOT**.

- The "PHOTO" indication appears and a still image will be recorded for approx. 5 seconds, then the camcorder re-enters the Record-Standby mode.
- You can perform Snapshot also during recording. A still image will be recorded for approx. 5 seconds, then the normal recording resumes.
- If the image taken by snapshot is too dark or too bright, select  (☾ pg. 28) or "SPOTLIGHT" (☾ pg. 30).

## Motor Drive Mode


Keeping **SNAPSHOT** pressed in step **2** provides an effect similar to serial photography. (Interval between still images: approx. 1 second)

## Manual Focus

The camcorder's Full Range AF system offers continuous shooting ability from close-up (as close as approx. 5 cm (2") to the subject) to infinity.

However, correct focus may not be obtained depending on the shooting condition. In this case, use the manual focus mode.

- 1 Set the Power Switch to "REC".

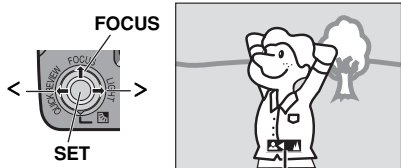

Manual focus indicator

- 2 Set the recording mode to "M". (☞ pg. 18)

- 3 Press **FOCUS**. The manual focus indicator appears.

- 4 Press < or > to focus on a subject.

- When the focus level cannot be adjusted any further or closer, "▲" or "▶" will blink.

- 5 Press **SET**. Focus adjustment is complete.

### To reset to Auto Focus

Press **FOCUS** twice.

### Manual focus is recommended in situations listed below.


- When two subjects overlap in the same scene.
- When illumination is low.\*
- When the subject has no contrast (difference in brightness and darkness), such as a flat, one-color wall, or a clear, blue sky.\*
- When a dark object is barely visible in the LCD monitor or the viewfinder.\*
- When the scene contains minute patterns or identical patterns that are regularly repeated.
- When the scene is affected by sunbeams or light reflecting off the surface of a body of water.
- When shooting a scene with a high-contrast background.

\* The following low-contrast warnings appear blinking: ▲, ◀, ▶ and ▶.

## Exposure Control

Manual exposure control is recommended in the following situations:

- When shooting using reverse lighting or when the background is too bright.
- When shooting on a reflective natural background such as at the beach or when skiing.
- When the background is overly dark or the subject is bright.

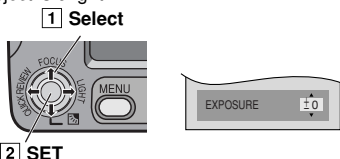

- 1 Open the LCD monitor fully.

- 2 Set the Power Switch to "REC".

- 3 Set the recording mode to "M". (☞ pg. 18)

- 4 Press **MENU**.

- 5 Select "FUNCTION", press **SET** or >.

- 6 Select "EXPOSURE", press **SET** or >.

- 7 Select the appropriate exposure, press **SET** or >.

- To brighten the image, press ▲. To darken the image, press ▼. (maximum +/-6)

- 8 Press **MENU**.

### NOTES:

- If the adjustment does not cause any visible change in brightness, set "GAIN UP" to "AUTO". (☞ pg. 22, 23)
- You cannot use the manual exposure control at the same time when "PROGRAM AE" is set to "SPOTLIGHT" or "SNOW" (☞ pg. 30), or with the backlight compensation.

## Iris Lock

Like the pupil of the human eye, the iris contracts in well-lit environments to keep too much light from entering, and dilates in dim environments to allow in more light.

Use this function in the following situations:

- When shooting a moving subject.
- When the distance to the subject changes (so its size in the LCD monitor or the viewfinder changes), such as when the subject is backing away.
- When shooting on a reflective natural background such as at the beach or when skiing.
- When shooting objects under a spotlight.
- When zooming.

**1** Perform steps **1 - 6** in "Exposure Control" (☞ pg. 27)

**2** Adjust zoom so that the subject fills the LCD monitor or the viewfinder, then press and hold **SET** or **>** for over 2 seconds. The "**L**" indication appears.

**3** Press **SET** or **>**. The iris is locked.

**4** Press **MENU**.



## Backlight Compensation

Backlight compensation brightens the subject quickly.



With simple operation, backlight compensation feature brightens the dark subject portion by increasing the exposure.

**1** Set the Power Switch to "REC".

**2** Set the recording mode to "**M**". (☞ pg. 18)

 
**3** Press  so that the Backlight Compensation indicator "" appears.

### To cancel Backlight Compensation

Press  twice so that the "" indicator disappears.

### NOTE:

Using Backlight Compensation may cause the light around the subject to become too bright and the subject to become white.





## Spot Exposure Control

Selection of a spot metering area enables more precise exposure compensation.

**1** Set the Power Switch to "REC".

**2** Set the recording mode to "**M**". (☞ pg. 18)

**3** Press  twice so that the Spot Exposure Control indicator "" appears.

● A spot metering area frame appears at the center of the LCD monitor/viewfinder.

**4** Press **SET**.



● Spot Exposure Control is engaged.

● Exposure is adjusted to make the brightness of the selected area most appropriate.

### To lock the iris

After step **3**, press and hold **SET** over 2 seconds. The "**L**" indication appears and the iris is locked.

### To cancel Spot Exposure Control

Press  once so that the "" indicator disappears.

### NOTES:

- Depending on the shooting location and condition, optimum result may not be attained.
- "STROBE" in "EFFECT" cannot be used with Spot Exposure Control.

## White Balance Adjustment

The white balance refers to the correctness of color reproduction under various lighting. If the white balance is correct, all other colors will be accurately reproduced.


The white balance is usually adjusted automatically. However, more advanced camcorder operators control this function manually to achieve a more professional color/tint reproduction.


### To change the setting

Set "W. BALANCE" to the desired mode. (☞ pg. 23)


- The selected mode indicator except "AUTO" appears.

**[AUTO]:** White balance is adjusted automatically.

 **MWB:** Adjust the white balance manually when shooting under various types of lighting. (☞ "Manual White Balance Adjustment", pg. 29)


 **FINE:** Outdoors on a sunny day.

 **CLOUD:** Outdoors on a cloudy day.




 **HALOGEN:** A video light or similar type of lighting is used.

## Manual White Balance Adjustment

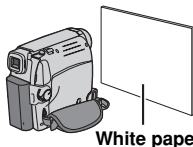Adjust the white balance manually when shooting under various types of lighting.



White paper

- 1 Set the Power Switch to "REC".
- 2 Set the recording mode to "M". (☞ pg. 18)
- 3 Hold a sheet of plain white paper in front of the subject. Adjust zoom or position yourself so that the white paper fills the screen.
- 4 Select "MWB" in "W. BALANCE" menu (☞ pg. 23), then press and hold **SET** or > until  begins blinking.
  - When the setting is completed,  stops blinking.
- 5 Press **SET** or > to engage the setting.
- 6 Press **MENU**. The Menu Screen closes and the Manual White Balance indicator  is displayed.

### NOTES:

- In step 3, it may be difficult to focus on the white paper. In such a case, adjust focus manually. (☞ pg. 27)
- Because the color temperature is different depending on the light source, use this function for a more natural result.
- Once you adjust white balance manually, the setting is retained even if the power is turned off or the battery removed.
- White Balance cannot be activated simultaneously with "TWILIGHT" in "PROGRAM AE" (☞ pg. 30).
- White Balance cannot be activated if the "SEPIA" or "MONOTONE" mode is activated.

## Wipe Or Fader Effects

These effects let you make pro-style scene transitions. Use them to spice up the transition from one scene to the next.

Wipe or Fader works when video recording is started or stopped.


- 1 Set the Power Switch to "REC".
- 2 Set the recording mode to "M". (☞ pg. 18)
- 3 Set "WIPE/FADER" in "FUNCTION" Menu. (☞ pg. 23)
- 4 Press the Recording Start/Stop Button to activate the Fade-in/out or Wipe-in/out.


### NOTE:


You can extend the length of a Wipe or Fader by pressing and holding the Recording Start/Stop Button.


## WIPE/FADER

**OFF:** Disables the function. (Factory-preset)

**WHITE** : Fade in or out with a white screen.

**BLACK** : Fade in or out with a black screen.

**SLIDE** : Wipe in from right to left, or wipe out from left to right.

**SCROLL** : The scene wipes in from the bottom to the top of a black screen, or wipes out from top to bottom, leaving a black screen.

## Program AE, Effects And Shutter Effects

- 1 Set the Power Switch to "REC".
- 2 Set the recording mode to "M". (☞ pg. 18)
- 3 Set "EFFECT", "PROGRAM AE" or "SHUTTER" in "FUNCTION" Menu. (☞ pg. 23)
  - The selected effect will be shown for approx. 2 seconds before the camcorder returns to the menu screen.

### NOTES:


- Shutter Effects cannot be used during "NIGHT".
- When a subject is too bright or reflective, a vertical streak may appear (smear phenomenon). Smear phenomenon tends to occur when "SPORTS" or any mode of "SHUTTER 1/500 – 1/4000" is selected.


## PROGRAM AE


**OFF:** Disables the function. (Factory-preset)


### SPORTS

**(Variable Shutter Speed: 1/250 – 1/4000):** This setting allows fast-moving images to be captured one frame at a time, for vivid, stable slow-motion playback. The faster the shutter speed, the darker the picture becomes. Use the shutter function under good lighting conditions.

**SNOW** : Compensates for subjects that may otherwise appear too dark when shooting in extremely bright surroundings such as in the snow.


**SPOTLIGHT** : Compensates for subjects that may otherwise appear too bright when shooting under extremely strong direct lighting such as spotlights.

**TWILIGHT** : Makes evening scenes look more natural. White Balance (☞ pg. 29) is automatically set to "AUTO". When Twilight is chosen, the camcorder automatically adjusts the focus from approx. 10 m (32 ft) to infinity. From less than 10 m, adjust the focus manually.


**NIGHT** : Makes dark subjects or areas even brighter than they would be under good natural lighting. Although the recorded image is not grainy, it may look as if it is strobing due to the slow shutter speed. During Night-Alive, it may be difficult to bring the camcorder into focus. To prevent this, use of a tripod is recommended.


## EFFECT


**OFF**: Disables the function. (Factory-preset)

**SEPIA** : Recorded scenes have a brownish tint like old photos.

**MONOTONE B/W**: Like classic black and white films, your footage is shot in B/W.

**CLASSIC** : Gives recorded scenes a strobe effect.

**STROBE** : Your recording looks like a series of consecutive snapshots.

**MIRROR** : Creates a mirror image on the left half of the screen, juxtaposed to the normal image on the other half.

## SHUTTER

**OFF**: Disables the function. (Factory-preset)

**1/60 SHUTTER 1/60**: The shutter speed is fixed at 1/60th of a second. Black bands that usually appear when shooting a TV screen become narrower.



**1/100 SHUTTER 1/100**: The shutter speed is fixed at 1/100th of a second. The flickering that occurs when shooting under a fluorescent light or mercury-vapour lamp is reduced.

**SHUTTER 1/500/SHUTTER 1/4000**:





(Refer to PROGRAM AE - **SPORTS**  mode.)

## Dubbing To A VCR

To use this camcorder as a player


- 1** Following the illustration,  pg. 21, "Connections To A TV Or VCR", connect the camcorder and the VCR's input connectors.
- 2** Perform steps **1 - 6** ( pg. 21)
- 3** At the point you want to start dubbing, start recording on the VCR. (Refer to the VCR's instruction manual.)
- 4** To stop dubbing, stop recording on the VCR, then stop playback on the camcorder.

## NOTES:

- It is recommended to use the AC Adapter as the power supply instead of the battery pack. ( pg. 13)
- To choose whether or not the following displays appear on the connected TV
  - Date/time  
Set "DATE/TIME" to "ON" or "OFF"  
( pg. 25).
  - Time code  
Set "TIME CODE" to "OFF" or "ON"  
( pg. 25).
  - Indications other than date/time and time code  
Set "ON SCREEN" to "OFF", "LCD" or "LCD/TV" ( pg. 25).

## Dubbing To Or From A Video Unit Equipped With A DV Connector (Digital Dubbing)

It is also possible to copy recorded scenes from the camcorder onto another video unit equipped with a DV connector. Since a digital signal is sent, there is little, if any, image or sound deterioration.

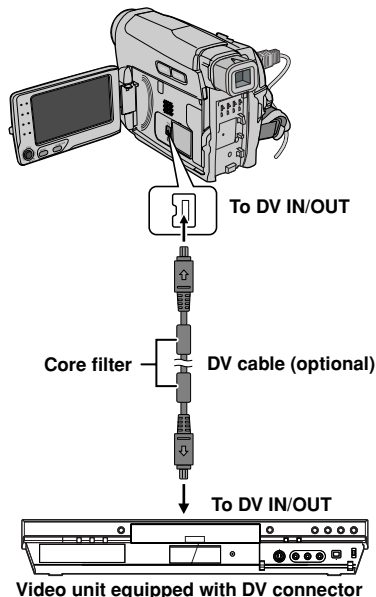

### To use this camcorder as a player

- 1 Make sure all units are turned off.
- 2 Connect this camcorder to a video unit equipped with a DV input connector using a DV cable as shown in the illustration.
- 3 Start playback on the camcorder. (☞ pg. 19)
- 4 At the point you want to start dubbing, start recording on the video unit. (Refer to the video unit's instruction manual.)
- 5 To stop dubbing, stop recording on the video unit, then stop playback on this camcorder.

### NOTES:

- It is recommended to use the AC Adapter as the power supply instead of the battery pack. (☞ pg. 13)
- If a blank portion or disturbed image is played back on the player during dubbing, the dubbing may stop so that an unusual image is not dubbed.
- Even though the DV cable is connected correctly, sometimes the image may not appear in step 4. If this occurs, turn off the power and make connections again.
- If **SNAPSHOT** is pressed during playback, only the original playback image recorded on the tape is output from the DV IN/OUT connector.
- When using a DV cable, be sure to use the optional JVC VC-VDV204U or VC-VDV206U DV cable.

### To use this camcorder as a recorder


- 1 Make sure all units are turned off.
  - 2 Connect this camcorder to a video unit equipped with a DV output connector using a DV cable as shown in the illustration.
  - 3 Set the camcorder's Power Switch to "PLAY".
  - 4 Set "REC MODE" to "SP" or "LP". (☞ pg. 25)
  - 5 Start playback on the player.
  - 6 Press the Recording Start/Stop Button to engage the Record-Pause mode.
    - The "**DV IN**" indication appears on the screen.
  - 7 At the point you want to start dubbing, press the Recording Start/Stop Button to start dubbing. The indication rotates.
  - 8 Press the Recording Start/Stop Button again to stop dubbing. The indication stops rotating.
  - 9 Press to return to the normal playback mode.
- NOTE:**  
Digital Dubbing is performed in the sound mode recorded on the original tape, regardless of the current "SOUND MODE" setting. (☞ pg. 24)

### COPY PROTECTED

Appears if dubbing of copyguarded signals is attempted while this camcorder is being used as a recorder.



## Connection To A Personal Computer

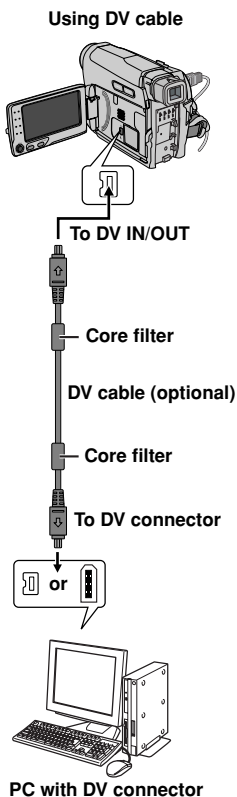

When connecting the camcorder to a PC using a DV cable, make sure to follow the procedure below. Connecting the cable incorrectly may cause malfunctions to the camcorder and/or the PC.

- Connect the DV cable first to the PC, and then to the camcorder.
- Connect the DV cable (plugs) correctly according to the shape of the DV connector.

It is also possible to transfer still/moving images to a PC with a DV connector by using the provided software, software equipped with the PC or commercially available software. If you are using a Windows<sup>®</sup> XP, you can use Windows<sup>®</sup> Messenger to conduct video conferences over the Internet, using a camcorder. For details, refer to the help for the Windows<sup>®</sup> Messenger.

### NOTES:

- It is recommended to use the AC Adapter as the power supply instead of the battery pack. (pg. 13)
- When using a DV cable, be sure to use the optional JVC VC-VDV206U or VC-VDV204U DV cable depending on the type of DV connector (4 or 6 pins) on the PC.
- The date/time information cannot be captured into the PC.
- Refer to the instruction manuals of the PC and Software.
- The still images can also be transferred to a PC with a DV connector-equipped capture board.
- The system may not work properly depending on the PC or capture board you are using.
- If, after connecting a DV cable to the camcorder and it doesn't work, restart the camcorder.

## 34 EN TROUBLESHOOTING

If, after following the steps in the chart below, the problem still exists, please consult your nearest JVC dealer.

### No power is supplied.

- The power is not connected properly.  
→ Connect the AC Adapter securely. (⇨ pg. 12)
- The battery pack is not attached firmly.  
→ Detach the battery pack once again and re-attach it firmly. (⇨ pg. 13)
- The battery is dead.  
→ Replace the dead battery with a fully charged one. (⇨ pg. 12)

### Recording cannot be performed.

- The tape's erase protection tab is set to "SAVE".  
→ Set the tape's erase protection tab to "REC". (⇨ pg. 15)
- "TAPE END" appears.  
→ Replace with new cassette. (⇨ pg. 15)
- The cassette holder cover is open.  
→ Close the cassette holder cover.

### When shooting a subject illuminated by bright light, vertical lines appear.

This is not a malfunction.

### When the screen is under direct sunlight during shooting, the screen becomes red or black for an instant.

This is not a malfunction.

### The LCD monitor or viewfinder indications blink.

- Effects function that cannot be used together are selected at the same time.  
→ Re-read the sections covering Effects. (⇨ pg. 23)

### The tape is moving, but there is no picture.

- Your TV has AV input terminals, but is not set to its VIDEO mode.  
→ Set the TV to the mode or channel appropriate for video playback. (⇨ pg. 21)
- The cassette holder cover is open.  
→ Close the cassette holder cover. (⇨ pg. 15)

### Blocks of noise appear during playback, or there is no playback picture and the screen becomes blue.

- Clean the video heads with an optional cleaning cassette. (⇨ pg. 5)

### The focus does not adjust automatically.

- Focus is set to the Manual mode.  
→ Set Focus to the Auto mode. (⇨ pg. 27)
- The lens is dirty or covered with condensation.  
→ Clean the lens and check the focus again. (⇨ pg. 27)

### The color of Snapshot looks strange.

- The light source or the subject does not include white. Or there are various different light sources behind the subject.  
→ Find a white subject and compose your shot so that it also appears in the frame. (⇨ pg. 26, 29)

### The POWER/CHARGE lamp on the camcorder does not light during charging.

- Charging is difficult in places subject to extremely high/low temperatures.  
→ To protect the battery, it is recommended to charge it in places with a temperature of 10°C to 35°C (50°F to 95°F). (⇨ pg. 36)
- The battery pack is not attached firmly.  
→ Detach the battery pack once again and re-attach it firmly. (⇨ pg. 12)

### The image looks like the shutter speeds is too slow.

- When shooting in the dark, the unit becomes highly sensitive to light when "GAIN UP" is set to "AUTO".  
→ If you want the lighting to look more natural, set "GAIN UP" to "AGC" or "OFF". (⇨ pg. 23)

### Images on the LCD monitor appear dark or whitish.

- In places subject to low temperature, images become dark due to the characteristics of the LCD monitor. This is not a malfunction.  
→ Adjust the brightness and angle of the LCD monitor. (⇨ pg. 8, 14)
- When the LCD monitor's fluorescent light reaches the end of its service life, images on the LCD monitor become dark.  
→ Consult your nearest JVC dealer.

### Picture does not appear on the LCD monitor.

- The viewfinder is pulled out and "PRIORITY" is set to "FINDER".
- Push the viewfinder back in or set "PRIORITY" to "LCD". (☞ pg. 8, 24)
- The LCD monitor's brightness setting is too dark.
- Adjust the brightness of the LCD monitor. (☞ pg. 14)
- If the monitor is tilted upward 180 degrees, open the monitor fully. (☞ pg. 8)

 
### Aspect ratio is strange

If the aspect ratio of the video you are playing is strange, change the setting in "16:9 OUTPUT". (☞ pg. 24, 25)



Displays the battery remaining power.

#### Remaining power level



As the battery power comes close to nil, the battery remaining power indicator blinks. When the battery power is exhausted, power turns off automatically.

### TAPE END

Appears when the tape ends during recording or playback.

### LENS CAP

Appears for 5 seconds after power is turned on if the lens cap is attached or when it is dark.

### SET DATE/TIME!

- Appears when the date/time is not set. (☞ pg. 14).
- The built-in clock battery has run out and the previously set date/time has been erased.
- Consult your nearest JVC dealer for replacement.

### UNIT IN SAFEGUARD MODE REMOVE AND REATTACH BATTERY OR DC PLUG

Error indications 01, 02 or 06.

Remedy: Remove and reattach the power supply or battery.

### UNIT IN SAFEGUARD MODE EJECT AND REINSERT TAPE

Error indications 03 or 04.

Remedy: Eject the cassette and reinsert.

In the above 2 error indications, the camcorder turns off automatically. Eject the cassette once and re-insert it, then check if the indication clears. When it does, you can resume using the camcorder. If the indication remains, consult your nearest JVC dealer.

 
## AC Adapter

### When using the AC Adapter in areas other than the USA

The provided AC Adapter features automatic voltage selection in the AC range from 110 V to 240 V.

### USING HOUSEHOLD AC PLUG ADAPTER

In case of connecting the unit's power cord to an AC wall outlet other than American National Standard C73 series type use an AC plug adapter, called a "Siemens Plug", as shown. For this AC plug adapter, consult your nearest JVC dealer.




## Battery Packs

The supplied battery pack is a lithium-ion battery. Before using the supplied battery pack or an optional battery pack, be sure to read the following cautions:

- **To avoid hazards**
  - ...do not burn.
  - ...do not short-circuit the terminals. When transporting, make sure the provided battery cap is attached to the battery. If the battery cap is misplaced, carry the battery in a plastic bag.
  - ...do not modify or disassemble.
  - ...do not expose the battery to temperatures exceeding 60°C (140°F), as this may cause the battery to overheat, explode or catch fire.
  - ...use only specified chargers.
- **To prevent damage and prolong service life**
  - ...do not subject to unnecessary shock.
  - ...charge in an environment where temperatures are within the tolerances shown in the chart below. This is a chemical reaction type battery — cooler temperatures impede chemical reaction, while warmer temperatures can prevent complete charging.
  - ...store in a cool, dry place. Extended exposure to high temperatures will increase natural discharge and shorten service life.
  - ...fully charge and then fully discharge the battery every 6 months when storing the battery pack over a long period time.
  - ...remove from charger or powered unit when not in use, as some machines use current even when switched off.

 Terminals



### The Benefits Of Lithium-Ion Batteries

Lithium-ion battery packs are small but have a large power capacity. However, when one is exposed to cold temperatures (below 10°C/50°F), its usage time becomes shorter and it may cease to function. If this happens, place the battery pack in your pocket or other warm, protected place for a short time, then re-attach it to the camcorder.

### NOTES:

- It is normal for the battery pack to be warm after charging, or after use.
- **Temperature Range Specifications**
  - Charging: 10°C to 35°C (50°F to 95°F)
  - Operation: 0°C to 40°C (32°F to 104°F)
  - Storage: -20°C to 50°C (-4°F to 122°F)
- The lower the temperature, the longer recharging takes.
- Charging times are for a fully discharged battery pack.

## Cassettes

To properly use and store your cassettes, be sure to read the following cautions:

- **During use**
  - ...make sure the cassette bears the Mini DV mark.
  - ...be aware that recording onto pre-recorded tapes automatically erases the previously recorded video and audio signals.
  - ...make sure the cassette is positioned properly when inserting.
  - ...do not load and unload the cassette repeatedly without allowing the tape to run at all. This slackens the tape and can result in damage.
  - ...do not open the front tape cover. This exposes the tape to fingerprints and dust.
- **Store cassettes**
  - ...away from heaters or other heat sources.
  - ...out of direct sunlight.
  - ...where they won't be subject to unnecessary shock or vibration.
  - ...where they won't be exposed to strong magnetic fields (such as those generated by motors, transformers or magnets).
  - ...vertically, in their original cases.

## LCD Monitor

- **To prevent damage to the LCD monitor, DO NOT**

- ...push it strongly or apply any shocks.
- ...place the camcorder with the LCD monitor on the bottom.

- **To prolong service life**

- ...avoid rubbing it with coarse cloth.

- **Be aware of the following phenomena for LCD monitor use. These are not malfunctions**

- ...While using the camcorder, the surface around the LCD monitor and/or the back of the LCD monitor may heat up.

- ...If you leave power on for a long time, the surface around the LCD monitor becomes hot.

## Main Unit

- **For safety, DO NOT**

- ...open the camcorder's chassis.
- ...disassemble or modify the unit.
- ...short-circuit the terminals of the battery pack. Keep it away from metallic objects when not in use.

- ...allow inflammables, water or metallic objects to enter the unit.

- ...remove the battery pack or disconnect the power supply while the power is on.

- ...leave the battery pack attached when the camcorder is not in use.

- **Avoid using the unit**

- ...in places subject to excessive humidity or dust.

- ...in places subject to soot or steam such as near a cooking stove.

- ...in places subject to excessive shock or vibration.

- ...near a television set.

- ...near appliances generating strong magnetic or electric fields (speakers, broadcasting antennas, etc.).

- ...in places subject to extremely high (over 40°C or 104°F) or extremely low (under 0°C or 32°F) temperatures.

- **DO NOT leave the unit**

- ...in places of over 50°C (122°F).

- ...in places where humidity is extremely low (below 35%) or extremely high (above 80%).

- ...in direct sunlight.

- ...in a closed car in summer.

- ...near a heater.

- **To protect the unit, DO NOT**

- ...allow it to become wet.

- ...drop the unit or strike it against hard objects.

- ...subject it to shock or excessive vibration during transportation.

- ...keep the lens directed at extremely bright objects for long periods.

- ...expose the lens and viewfinder's lens to direct sunlight.

- ...carry it by holding the LCD monitor or the viewfinder.

- ...swing it excessively when using the hand strap or the grip.

- ...swing the soft camera case excessively when the camcorder is inside it.

- **Dirty heads can cause the following problems:**



- ...No picture during playback.

- ...Blocks of noise appear during playback.

- ...During recording or playback, the Head Clog

- Warning indicator "⊗" appears.

- ...Recording cannot be performed properly.

In such cases, use an optional cleaning cassette. Insert it and play back. If the cassette is used more than once consecutively, damage to the video heads may result. After the camcorder plays back for about 20 seconds, it stops automatically. Also refer to the cleaning cassette's instructions.

If, after using the cleaning cassette, the problems still exist, consult your nearest JVC dealer.

Mechanical moving parts used to move the video heads and video tape tend to become dirty and worn out over time. In order to maintain a clear picture at all times, periodic check-ups are recommended after using the unit for about 1,000 hours. For periodic check-ups please consult your nearest JVC dealer.

**About moisture condensation**

- You have observed that pouring a cold liquid into a glass will cause drops of water to form on the glass' outer surface. This same phenomenon occurs on the head drum of a camcorder when it is moved from a cool place to a warm place, after heating a cold room, under extremely humid conditions or in a place directly subjected to the cool air from an air conditioner.
- Moisture on the head drum can cause severe damage to the video tape, and can lead to internal damage to the camcorder itself.

** CONDENSATION, OPERATION PAUSED PLEASE WAIT**

Appears if condensation occurs. When this indication is displayed, wait more than 1 hour until condensation disappears.

**Serious malfunctioning**

If malfunctioning occurs, stop using the unit immediately and consult your local JVC dealer.

The camcorder is a microcomputer-controlled device. External noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such cases, first disconnect its power supply unit (battery pack, AC Adapter, etc.) and wait a few minutes and then re-connect it and proceed as usual from the beginning.

**Declaration of Conformity**

Model Number : GR-D750U  
Trade Name : JVC  
Responsible party : JVC AMERICAS  
CORP.  
Address : 1700 Valley Road  
Wayne, N. J. 07470

Telephone Number : 973-317-5000  
This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not approved by JVC could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**Camcorder****For General****Power supply**

DC 11 V (Using AC Adapter)  
DC 7.2 V (Using battery pack)

**Power consumption**

Approx. 2.2 W (2.3 W\*) (LCD monitor off, viewfinder on)  
Approx. 2.7 W (2.8 W\*) (LCD monitor on, viewfinder off)  
Approx. 7.5 W (Maximum; when charging the battery pack)

\* Using LED Light

**Dimensions (W x H x D)**

61 mm x 94 mm x 114 mm (2-3/8" x 3-11/16" x 4-1/2") (with the LCD monitor closed and the viewfinder pushed back in)

**Weight**

Approx. 410 g (0.90 lbs) (without battery, cassette and lens cap)  
Approx. 480 g (1.06 lbs) (incl. battery, cassette and lens cap)

**Operating temperature**

0°C to 40°C (32°F to 104°F)

**Operating humidity**

35% to 80%

**Storage temperature**

-20°C to 50°C (-4°F to 122°F)

**Pickup**

1/6" CCD

**Lens**

F 2.0, f = 2.3 mm to 78.2 mm, 34:1 power zoom lens

**Filter diameter**

ø27 mm

**LCD monitor**

2.7" diagonally measured, LCD panel/TFT active matrix system

**Viewfinder**

Electronic viewfinder with 0.33" color LCD

**Speaker**

Monaural

**LED Light**

Effective distance: 1.5 m (5 ft)

**For Digital Video Camera****Format**

DV format (SD mode)

**Signal format**

NTSC standard

**Recording/Playback format**

Video: Digital component recording  
Audio: PCM digital recording, 32 kHz 4-channel (12-BIT), 48 kHz 2-channel (16-BIT)

**Cassette**

Mini DV cassette

**Tape speed**

SP: 18.8 mm/s, LP: 12.5 mm/s

**Maximum recording time (using 80 min. cassette)**

SP: 80 min., LP: 120 min.

**For Connectors****AV**

Video output: 1.0 V (p-p), 75 Ω, analog  
Audio output: 300 mV (rms), 1 kΩ, analog, stereo

**DV**

Input/output: 4-pin, IEEE1394 compliant

**AC Adapter****Power requirement**

AC 110 V to 240 V~, 50 Hz/60 Hz

**Output**

DC 11 V  $\overline{\text{---}}$ , 1 A

Specifications shown are for SP mode unless otherwise indicated. E & O.E. Design and specifications subject to change without notice.

<b>A</b>		<b>L</b>		<b>T</b>	
AC Adapter .....	13	Language .....	24	Tape Speed (REC MODE)	24, 25
Auto/Manual Mode .....	18	LCD Monitor and Viewfinder	14	Tele Macro .....	23
<b>B</b>		LED Light .....	26	Telephoto Setting .....	23
Backlight Compensation	28	Loading A Cassette .....	15	Time Code .....	18, 24
Battery Pack .....	12, 13, 36	<b>M</b>		Tripod Mounting .....	14
Blank Search .....	20	Manual Focus .....	27	Troubleshooting .....	34
Bright .....	24, 25	Melody .....	24	<b>W</b>	
<b>C</b>		Motor Drive Mode .....	26	White Balance .....	29
Cam Reset .....	25	<b>N</b>		Wind Cut .....	23
Changing The Menu		Narration .....	25	Wipe Or Fader Effects ...	30
Settings .....	22 – 25	Night Alive .....	30	<b>Z</b>	
Charging The Battery Pack	12	<b>O</b>		Zooming .....	17, 23
Clock Adj. ....	14, 24, 25	On Screen .....	24, 25	16:9 Output .....	24, 25
Connection To A Personal		<b>P</b>			
Computer .....	33	Playback Sound .....	25		
Connections To A TV Or		Power-linked operation ...	8		
VCR .....	21	Priority .....	24		
Control Level .....	7	Program AE .....	30		
<b>D</b>		<b>Q</b>			
Data Battery .....	13	Quick Review .....	16		
Date/Time Settings .....	14	<b>R</b>			
Demonstration Mode .....	24	Rec Mode .....	24, 25		
Digital Image Stabilization		Recording Capacity			
(DIS) .....	23	Tape .....	16		
Dubbing .....	31, 32	<b>S</b>			
<b>E</b>		Shutter Effects .....	30, 31		
Effect .....	31	Snapshot Mode .....	26		
Exposure Control .....	27	Sound L/R .....	25		
<b>G</b>		Sound Mode .....	24		
Gain Up .....	23	Speaker Volume .....	19		
<b>I</b>		Specifications .....	39		
Interface Shooting .....	17	Spot Exposure Control ..	28		
Iris Lock .....	28				
<b>J</b>					
Journalistic Shooting .....	17				

# JVC