


CODE ALARM

Remote Vehicle Control System

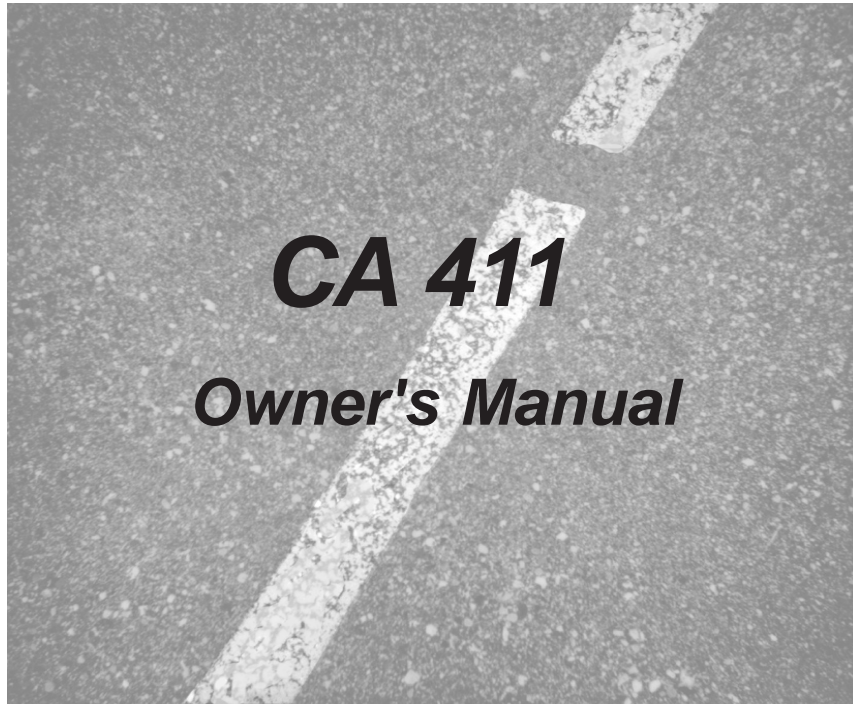

Remote Vehicle Starter

IMPORTANT NOTE: The operation of the Security and Convenience System as described in this manual is applicable to most vehicles. However, due to the configuration of some vehicles, some functions AND/OR SAFETY PRECAUTIONS may not apply. Please see your installing dealer for more information.

This Remote Start Upgrade system can be wired to operate from any unused button(s) from your transmitter. Please check with your installing dealer for which transmitter button is connected to your remote start system, and if you require a single, double, or sequential press of the button(s) to operate your system.

SAFETY (Red Handled) CONTROL SWITCH:

The control switch allows you to temporarily disable the remote starting function of your Remote Start system. To disable the unit, move the red handled control switch to the OFF position.

REMOTE STARTING THE VEHICLE:

The system WILL NOT start the vehicle if any one of the following conditions exist:

1. The vehicle's hood is opened.
2. The gear shift selector is in any gear other than park.
3. The brake is depressed.
4. The safety control switch is in the OFF position.

CAUTION! Be certain that the vehicle is outdoors before using this or any remote vehicle starting device. A running engine produces dangerous carbon monoxide fumes which can be harmful or fatal if prolonged exposure occurs. **DO NOT remote start the vehicle if the car is garaged.**

Remote Starting The Vehicle:

Press and release the proper button or combination of buttons on your transmitter to activate the remote start system. The vehicle will start and remain running for the pre-programmed 10 or 15 minutes. As a visual indication, the parking lights will flash or turn on depending on the programming set up by your installation center.

When you arrive at your vehicle, unlock the vehicle by pressing and releasing the unlock button of your keychain transmitter or by use of the vehicle key. Enter the vehicle and turn the ignition key to the ON position.

CAUTION!

Do not turn the key to the start position. This will cause the starter motor to engage with the running engine which could result in damage. Step on the brake pedal to disengage the remote start unit. The vehicle will continue to run on it's own power.

NOTE: The engine will stop running before the expiration of the pre-programmed

run timer if you complete any of the following:

1. Pressing the proper button or buttons of your transmitter while running under control of the remote start system will turn the vehicle off.
2. Depress the vehicle's brake pedal.
3. Open the hood.
4. Move the red handled control switch to the OFF position.
5. Race the engine to above 4000 RPM.

OPERATING ON AUTOMATIC START TIMER MODE:

The system has the ability to automatically start the vehicle every 2 or 4 hours over a 48 hour period. This feature is especially useful in cold climates where the only means to keep the engine and engine fluids warm is to periodically start the engine.

TO BEGIN THE AUTOMATIC START TIMER:

1. Start the vehicle using the transmitter by pressing and releasing the remote start transmitter button(s).
2. Shut off the vehicle using the transmitter by pressing and releasing the remote start transmitter button(s).
3. Within 10 seconds of step 2, activate the remote start 2 times. The parking lights will flash 4 times indicating the timed start mode is activated.

ADJUSTING THE START TIMER FROM 2 TO 4 HOURS:

The **SAFETY (Red Handled) CONTROL SWITCH** also allows you to select between automatic 2 hour start or 4 hour start when using the automatic start timer mode. The factory preset start up time for this mode is every 4 hours. To select between 2 or 4 hour start timer:

1. Begin with the safety control switch in the ON position.
2. Turn the ignition switch ON then OFF.
3. Within 10 seconds, move the control switch OFF,ON,OFF,ON(2 switch cycles) to select a 2 hour start timer. After 10 seconds expire, the parking lights will flash 2 times confirming that the 2 hour start cycle is set. Or, within 10 seconds move the control switch OFF,ON,OFF,ON,OFF,ON,OFF,ON (4 switch cycles) to select a 4 hour start timer. The parking lights will flash 4 times confirming that the 4 hour start timer is set.

CANCELING THE AUTOMATIC START TIMER:

To cancel the automatic start timer do one of the following:

1. Start the vehicle using the ignition key and depress the brake pedal.
2. Remote start & stop the vehicle using your transmitter.

FUNCTION SETTING CHART

To be completed by installer

Lights	ON <input type="checkbox"/>	Pulse <input type="checkbox"/>
Run Time	10 Min. <input type="checkbox"/>	15 Min. <input type="checkbox"/>

2007 Code Systems, Inc

CODE//ALARM

Code Systems, Inc. Limited Lifetime Warranty

Code Systems Inc. ("CODE") warrants to the ORIGINAL PURCHASER of this CODE vehicle security product (the "Product"), purchased from an authorized CODE dealer, that (except as provided below) should this Product under normal use and conditions, be proven defective in material or workmanship DURING THE LIFETIME OF THE VEHICLE IN WHICH IT WAS ORIGINALLY INSTALLED, such defect(s) will be repaired or replaced (at CODE's option) without charge for parts directly related to repairs of the defect(s).

Switches, indicator lights, and transmitter cases are similarly warranted to the original purchaser for a period of one (1) year from the date of purchase of the Product.

CODE accessories, sold separately, are covered by the applicable warranty accompanying the accessory.

This warranty is non-transferable, non-assignable and is voided when: (1) the Product is removed from the vehicle in which it was originally installed; or (2) the vehicle in which the Product was originally installed is transferred to another party.

This warranty does not apply to any product damaged by accident, physical or electrical abuse, improper installation, alteration, or use contrary to its intended function, fire, flood, or other natural acts.

In order for the Product to be repaired or replaced under the terms of this warranty, the defective Product must be returned to an authorized CODE dealer and accompanied by a copy of the retail sales receipt. The date of purchase and year, make and model of the vehicle in which the Product was originally installed must be clearly indicated on the sales receipt.

This warranty is exclusive and CODE MAKES NO OTHER WARRANTIES EXPRESSED OR IMPLIED. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. IN NO CASE SHALL CODE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

CODE does not warrant that the Product cannot be compromised or circumvented. THE EXTENT OF CODE'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT SHALL CODE'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE ORIGINAL PURCHASER OF THE PRODUCT WITHOUT INSTALLATION LABOR.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Code Systems, Inc.
Customer Service 1-800-421-3209
WWW.CODE-ALARM.COM

FCC COMPLIANCE

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including any interference that may cause undesired operation.

Warning!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.