

***MICRO AUDIO SYSTEM***  
***with CD PLAYER***



***OWNER'S MANUAL***

***MS7608***



Visit our web site at [www.emersonradio.com](http://www.emersonradio.com)





## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;"><b>WARNING</b></p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

## IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions.
- 2.) Keep these instructions.
- 3.) Heed all warnings.
- 4.) Follow all instructions.
- 5.) Do not use this apparatus near water.
- 6.) Clean only with dry cloth.
- 7.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11.) Only use attachments / accessories specified by the manufacturer.
- 12.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14.) This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- 15.) Do not overload wall outlet. Use only power source as indicated.
- 16.) Use replacement parts as specified by the manufacturer.
- 17.) The product may be mounted to a wall only if recommended by the manufacturer.
- 18.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.



## BEFORE WE BEGIN

Thank you.....

 
for purchasing this Emerson audio product. The Emerson brand is your assurance of quality, performance and value, and has been since 1912.

Our engineers have included many useful and convenient features in this product. Please be sure to read this Owner's Manual completely to make sure you are getting the maximum benefit from each feature.

This product was manufactured using the highest quality components and standards of workmanship. It was tested by Emerson inspectors and found to be in perfect working order before it left our factory. However, there is always the chance that some problem may occur because of rough handling during shipment to the retail store or to the final consumer.

If, after reading this Manual, you experience any problems with the operation of this product, please refer to the instructions for obtaining service at the end of this Manual. Emerson and Emerson retailers are committed to your satisfaction.

Once again, thanks for purchasing this Emerson audio product.



For future reference, record the serial number in the space provided.

Model No: MS7608

Serial Number : \_\_\_\_\_





## IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean dry cloth.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the connecting cords and power cord are properly installed.
- Store your CDs in a cool area to avoid damage from heat.
- When moving the set, be sure to first disconnect the power cord and remove cords connected to other equipment.

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT APPAREIL À LASER DE CLASSE 1 PRODUCTO LASER DE CLASE 1	CAUTION INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM	
--	---	--

**This product contains a low power Laser Device.**

### FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



 
## PREPARATION FOR USE

### UNPACKING AND SET-UP

- Carefully remove the unit from the carton and remove all packing material from the unit.
- Remove any labels or stickers which may be on the front or top of the set, but do not remove any labels from the back or bottom.
- We suggest that you retain the original carton and packing materials in case it ever becomes necessary to return your unit for service. This is the only sure way to protect the unit from damage in transit.
- If you do dispose of the carton and packing materials, please do so properly. Emerson cares about our environment.
- Press the CD DOOR OPEN ▲ button and remove the dummy CD transit protection card from the CD mechanism. Discard it.


### POWER SOURCE

This system is designed to operate on 120V 60Hz AC house current . Connecting this system to any other power supply could result in damage to the unit which is not covered by your warranty. You will note that this system is equipped with a polarized AC power plug having one blade wider than the other. This is a safety feature. If this plug does not fit into your existing AC outlet, do not try to defeat this safety feature by filing the wide blade to make it fit into your outlet. If this plug will not fit into your outlet, you probably have an out-dated non-polarized AC outlet. You should have your outlet changed by a qualified licensed electrician.

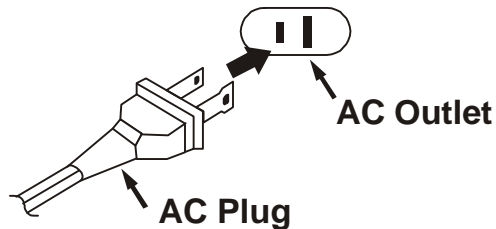

### AC OPERATION

 
- 1.) Unwind the AC Power Cord completely.
- 2.) Insert the plug into any convenient 120V 60Hz AC outlet.

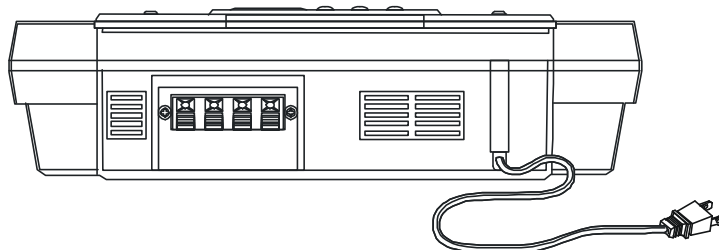




## LOCATION OF CONTROLS AND INDICATORS
 
### TOP PANEL

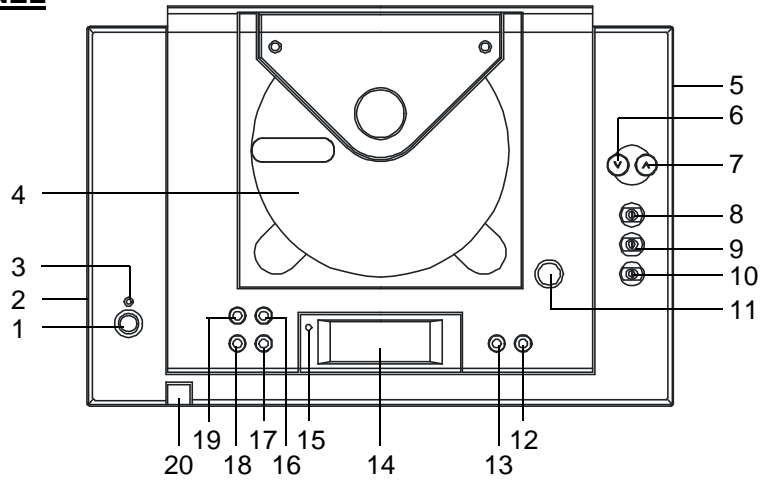

### BACK PANEL

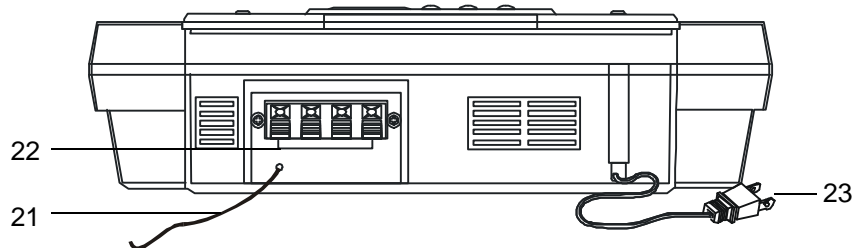 


- |                                 |                                   |
|---------------------------------|-----------------------------------|
| 1.) POWER  On/Off Button.       | 13.) STOP  Button.                |
| 2.) PHONES Jack.                | 14.) Multi Function Display.      |
| 3.) STANDBY LED Indicator.      | 15.) MUTE Indicator.              |
| 4.) CD Compartment.             | 16.) Forward SKIP/SEARCH  Button. |
| 5.) TUNING Control.             | 17.) REPEAT Button.               |
| 6.) VOLUME Down Button.         | 18.) PROGRAM Button.              |
| 7.) VOLUME Up Button.           | 19.) Reverse SKIP/SEARCH  Button. |
| 8.) BASS Boost ON/OFF Selector. | 20.) Remote Control SENSOR.       |
| 9.) AM/FM/FM ST. Selector.      | 21.) FM Wire Antenna.             |
| 10.) CD/RADIO Selector.         | 22.) Speaker Terminals.           |
| 11.) CD DOOR OPEN  Button.      | 23.) AC Power Cord.               |
| 12.) PLAY/PAUSE  Button.        |                                   |




## REMOTE CONTROL

 - 1.) VOLUME ▼ Buttons.
- 2.) MUTE Button.
- 3.) RANDOM Button.
- 4.) REPEAT Button.
- 5.) CD SKIP/SEARCH ◀◀ Button.
- 6.) CD STOP Button.
- 7.) CD PLAY/PAUSE Button.
- 8.) POWER / STANDBY Button.
- 9.) CD SKIP/SEARCH ▶▶ Button.
- 10.) VOLUME ▲ Button.
- 11.) Battery Compartment.

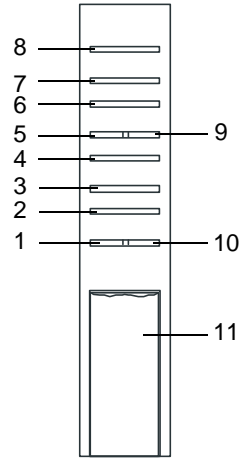

## BATTERY INSTALLATION

 Insert 2 pcs 'AA' size (Alkaline) batteries (not included) into the battery compartment of the remote controller. Be sure to observe the polarity markings which are engraved inside the battery compartment, then close the cover.

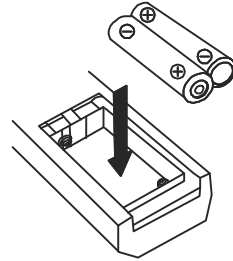

## BATTERY REPLACEMENT

When the batteries become too weak, the operating distance of the remote controller is greatly reduced and you will need to replace the batteries.

## NOTES:

- To maintain the accuracy and long life of the transmitter, do not press two or more buttons simultaneously.
- If the remote control is not to be used for a long time, remove the batteries to prevent possible damage through leaking batteries.
- Do not mix different types of batteries, or old batteries with new ones.

## USING THE REMOTE CONTROLLER CORRECTLY

- Point the remote controller at the Remote Sensor.
- The functions of the buttons on the remote control are the same as the corresponding controls on the main unit.
- When there is a strong ambient light source, the performance of the infrared Remote Sensor may be degraded, causing unreliable operation.
- The maximum effective distance for remote control operation is about 15 feet.



# OPERATING INSTRUCTIONS

 
 
## SPEAKER CONNECTION

Connect each speaker to the corresponding speaker terminals on the back panel of the main unit. Make sure that the left speaker is connected to the left pair of speaker terminals and the right speaker to the right pair of speaker terminals. Also make sure that the speaker wires are correctly connected: that the red wires are connected to the red terminals and the black wires to the black terminals.

Depress the plastic lever to open the terminal, insert the bare end of the speaker wire into the opening and release.

Right Speaker

Left Speaker

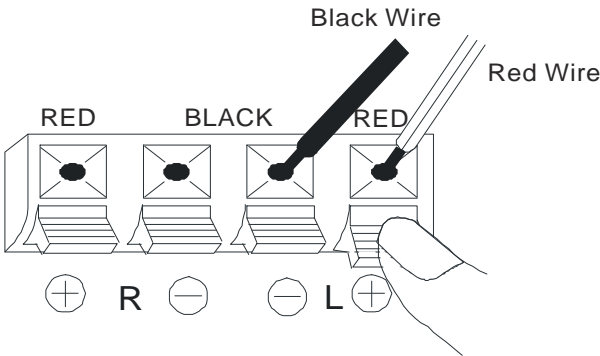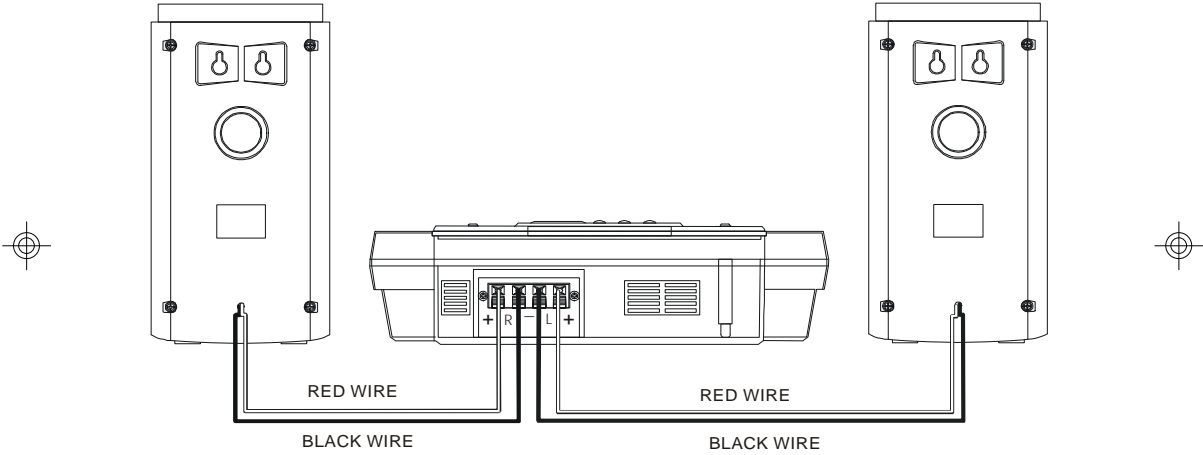





## LISTENING TO RADIO

### TUNER INFORMATION


This system features a normal AM/FM analog tuning system. Unlike a digital tuner it does not automatically lock in on the exact frequency of a station. However instead of a dial scale and a moving dial pointer we have included a digital frequency display to help you tune more accurately. Do not be concerned if you cannot easily tune the display to the exact frequency of your favorite stations, especially on the AM band. Slowly rotate the tuning control until the display approaches the frequency of the desired station and stop when get the strongest, noise free reception - even if the display is not indicating the exact frequency of desired station.

 
### VOLUME AND BASS BOOST CONTROLS

This model features electronic UP/DOWN volume controls on both the main unit and the remote handset. Press the Up ▲ or Down ▼ button to raise or lower the volume.

Slide the BASS boost switch on the main unit to the 'ON' position to provide increased bass response, especially at lower volume levels. If you are listening to music with heavy bass at high volume levels slide the BASS boost switch to the 'OFF' position to prevent distortion.


### OPERATION

- 1.) Press the POWER/STANDBY  button on the main unit or the remote control. The main display lighting comes 'On' and the STANDBY LED indicator goes 'Off'.
- 2.) Select the Radio function by switching the CD/RADIO selector to RADIO position.
- 3.) Select the desired band (AM, FM or FM ST.) with the Band selector switch.

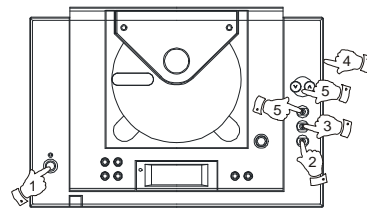



 
- 4.) Rotate the tuning control until the exact frequency of the desired station appears on the display. If you have tuned to an FM Stereo station and the Band selector is set to FM ST, the stereo indicator will appear in the display.

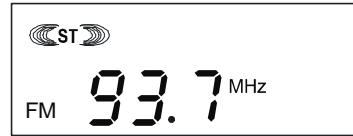

**Note:** If you are listening to a weak or distant FM Stereo station and reception fades or is noisy, setting the Band selector to the FM position will normally provide some improvement. However the sound will no longer be in stereo.

- 5.) Adjust VOLUME level BASS boost control as desired.
- 6.) When you are finished listening press the POWER/STANDBY  button on the main unit or the remote control to turn the power 'Off'. The main display lighting goes 'Off' and the STANDBY LED indicator comes 'On' again.

## ANTENNA

 
### FM

For FM reception there is a built-in FM antenna wire at the rear of the unit. Unravel the wire and move it around to obtain the best reception.



### AM


The AM bar antenna is inside the cabinet. To improve AM reception, you may have to move or slightly rotate the main unit until you obtain the best reception.

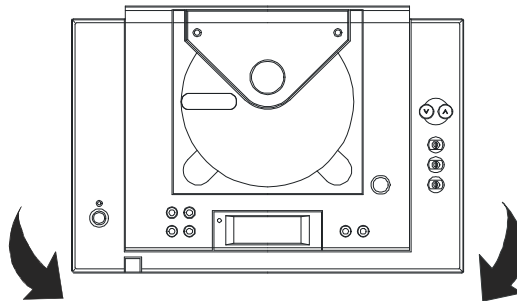




## PLAYING COMPACT DISCS


### Normal Playback

 
- 1.) Press the POWER/STANDBY  button on the main unit or the remote control. The main display lighting comes 'On' and the STANDBY LED indicator goes 'Off'.

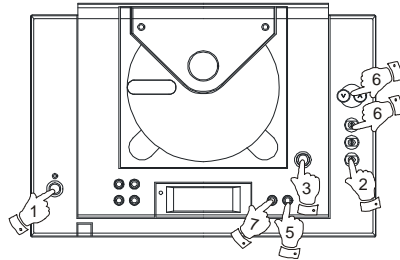

- 2.) Set the CD/RADIO selector to the CD position. Two bars "--" will flash in the display for a few seconds while the player tries to read the disc and then "00" will appear, indicating that there is no disc in the player.



 
- 3.) Press the CD DOOR OPEN  button to open the CD door. Place a CD on the center spindle with the printed label side facing up. Gently press down on the disc near the center hole to make sure that the disc is properly 'seated' on the spindle.

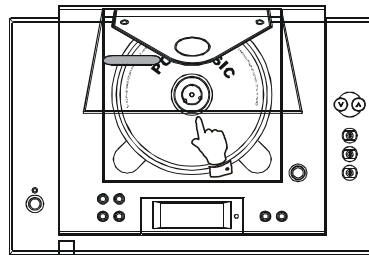


- 4.) Press down on the CD door until it closes completely and locks. The disc will begin to spin for a few seconds while the player reads the table of contents, then the disc will stop and the display will show the total number of tracks on the disc.



- 5.) Press the PLAY/PAUSE  button to begin playback. The PLAY indicator appears in the display and playback begins on track 1.



- 6.) Adjust the VOLUME and BASS boost controls as desired.
- 7.) When the last track has played the disc stops automatically. To stop playback at any time before the disc ends press the STOP  button. The display again shows the total number of tracks on the disc.



## Pause Control

To pause temporarily during playback press the PLAY/PAUSE **▶▶** button again. The sound stops and the Play indicator flashes, but the disc continues to spin. Press the PLAY/PAUSE **▶▶** button once more to cancel pause and resume normal playback. The play indicator stops flashing.



 
## Skip/Search Controls (▶▶ / ◀◀)

To start playback from a specific track insert your disc and wait for the display to show the total number of tracks. Press either the Forward **▶▶** or Reverse **◀◀** SKIP/SEARCH button until the desired track number appears on the display, then press the PLAY/PAUSE **▶▶** button to begin playback on that track.

To skip tracks during playback press either the Forward **▶▶** or Reverse **◀◀** SKIP/SEARCH buttons until the desired track number appears on the display. Playback will begin on the desired track.

During playback, to quickly search within a track for a specific musical passage depress and hold either the Forward **▶▶** or Reverse **◀◀** SKIP/SEARCH buttons. The player will move forward or backward at high speed. When you hear the desired passage release the SKIP/SEARCH buttons. Normal playback will resume at that point.


**Note:** The volume level is reduced automatically during high speed music search.

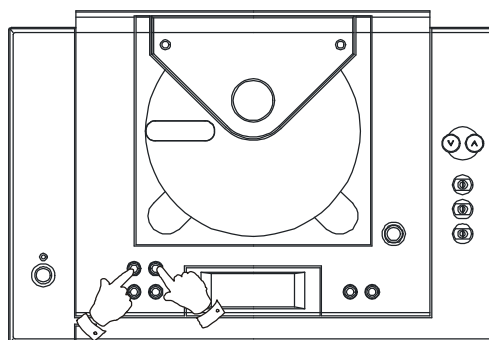



## Repeat Playback

 You can repeat either a single track or the entire disc continuously. Repeat function can be activated while the disc is playing or while the disc is stopped, but there must be a disc in the player.

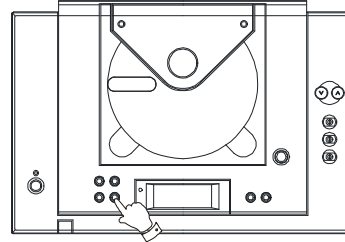

### To Repeat a Single Track:

- Press the SKIP/SEARCH button to select the desired track.
- Press the REPEAT button once. The REPEAT indicator flashes.
- Press the PLAY/PAUSE **▶||** button to begin playback. The selected track will be repeated continuously.




### To Repeat The Entire Disc

- Press the REPEAT button twice. The REPEAT indicator remains 'On'.
- Press the PLAY/PAUSE **▶||** button to begin playback. The entire disc will be repeated continuously.



### To Cancel Repeat Playback


Press the REPEAT button until the REPEAT indicator disappears, or press the STOP **■** button. Repeat function will also be canceled if you open the CD door or switch to the Radio function.

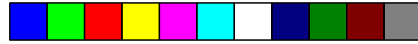

## Random Playback

### Note:

 The RANDOM button is located only on the remote handset. The Random function can be activated while the disc is playing or while the disc is stopped, but there must be a disc in the player.

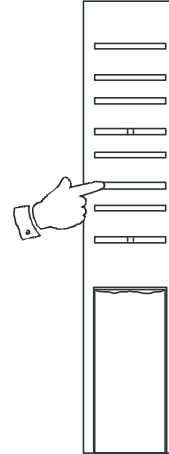

- Load your disc and wait until the total tracks appear on the display.
- Press the RANDOM button on the remote control. The RANDOM indicator appears in the display.



- Press the PLAY/PAUSE ►|| button. The PLAY indicator also appears. The player will select a track at random and begin playback. After all tracks have played in random order the player stops automatically and the display again shows the total tracks.

To cancel Random playback press the RANDOM button until the RANDOM indicator disappears. You may also cancel the Random function by pressing the STOP ■ button twice, or by switching from CD to RADIO function.






## Programmed Playback

 
### Notes:

- You can program up to 20 tracks on a disc to playback in any desired order. The same track number can be programmed to play several times if desired.
- There is no PROGRAM button on the remote control. The PROGRAM button is located on the main unit only.
- The player must be in the Stop mode to enter a program. You cannot enter a program while a disc is playing.

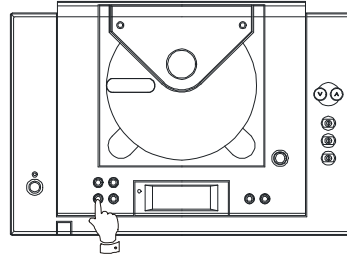

- 1.) Load your disc and wait for the total tracks to appear. If the disc is playing press the STOP ■ button and wait for the total tracks to appear.

 - 2.) Press the PROGRAM button on the main unit. The PROGRAM indicator and program number "01" begin flashing in the display.

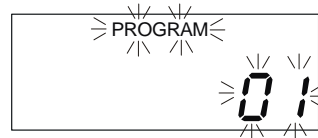

- 3.) Press the ►►/◄◄ SKIP/SEARCH buttons to select the first track to be programmed. (Example: Track Number 7).



- 4.) When the desired track number appears in the display press the PROGRAM button again. The track number disappears and the program number advances to "02".



- 5.) Press the ►►/◄◄ SKIP/SEARCH buttons to select the next track to be programmed. When the desired track number appears in the display press the PROGRAM button to enter that track in the program memory and advance the display to the next program number.



6.) Repeat Step 5 until you have entered up to 20 tracks in the memory.

7.) Press the PLAY/PAUSE **▶||** button to begin programmed playback. The PLAY indicator appears together with the PROGRAM indicator. Playback will begin on the first programmed track and continue until all of the programmed tracks have been played.



**Note:** If the **▶||/◀◀** SKIP/SEARCH button are pressed during programmed playback the player will skip forward or back to the next track in the programmed sequence, not the next track on the disc.

After all of the programmed tracks have been played the player stops and the PLAY indicator disappears. But the PROGRAM indicator remains in the display and the programmed sequence remains in the memory. If you press the PLAY/PAUSE **▶||** button the programmed sequence will play again. To cancel the program from memory press the STOP **■** button again. The PROGRAM indicator disappears.

### Programmed Repeat Playback

To repeat a programmed sequence continuously, first enter the desired tracks in the program memory as described above, then press the REPEAT button



twice so that the PROGRAM and REPEAT indicators both appear in the display, and press the PLAY/PAUSE **▶||** button to begin playback.


### MUTE

To shut off the sound of the radio or the CD temporarily press the MUTE button on the remote control. The speakers shut off and the MUTE LED indicator flashes. Press the MUTE button again to cancel mute and restore the sound. The MUTE LED indicator goes 'Off'.

### STEREO HEADPHONE JACK

For private listening without disturbing others connect a set of stereo headphones (not included) to the PHONES Jack on the left side panel. The built-in speakers automatically shut off when stereo headphones are connected to the headphone jack. When using stereo headphones always start with the volume control set to a low level and gradually increase until you find the desired level.





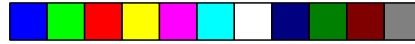



## CARE AND MAINTENANCE

### COMPACT DISC CARE

  - To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.

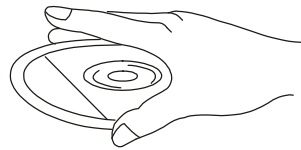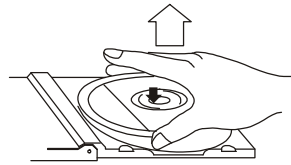

- Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris, so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains will have absolutely no effect on reproduction quality.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- Never write on or affix labels to the surface of compact discs.

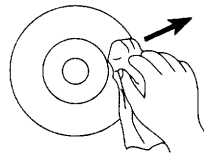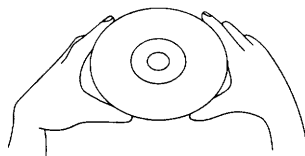  

### CARE OF THE CABINETS

- If the cabinets become dusty wipe them with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinets.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will mar the finish of your unit.

### CAUTION:

Never allow any water or other liquids to get inside the unit while cleaning.



## TROUBLESHOOTING GUIDE

**Should this unit exhibit a problem, check the following before seeking service.**

Symptom	Possible Cause	Solution
<b>Radio</b>		
Noise or sound distorted on AM or FM broadcasts.	Station not tuned properly for AM or FM.	Retune the AM or FM broadcast station.
	FM: Wire antenna is not extended.	Extend FM Wire antenna.
	AM: The Loop antenna is not positioned correctly.	Reposition the Ant. until best reception is obtained.
FM STEREO indicator does not light.	FM station is mono or station signal is weak.	Extend FM Wire antenna. Try other strong stations.
AM or FM, no sound.	Function is not set to RADIO.	Switch CD/RADIO selector to RADIO position.
	Volume at minimum.	Increase Volume.
<b>Compact Disc Player</b>		
CD Player will not play.	Function is not set to CD.	Switch CD/RADIO selector to CD position.
	CD is not installed or installed incorrectly.	Insert CD with label side up.
CD skips while playing.	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.



 
TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE  
PLEASE CALL:  
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:  
Emerson Radio Corp.,  
Consumer Affairs Dept.,  
1901 Diplomat Drive,  
Farmers Branch, TX 75234.





**EMERSON RADIO CORP.  
LIMITED WARRANTY**

**What does this warranty cover ?** Any manufacturing defects in original material, including original parts and workmanship, under normal use and conditions.

**For how long?** For a period of ninety (90) days from the date of original purchase in the U.S.

**What will we do ?** If you need service under this Warranty, and you provide us with the dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion.

**How do you make your warranty claim ?** If it becomes necessary to repair your unit, you can obtain the name and mailing location of a Depot Repair Facility by dialing **1-800-695-0098**. You should pack your unit in a well-padded heavy corrugated box, enclose your check or money order payable to the Depot Repair Facility in the amount of **\$9.00** to cover the return shipping and handling costs, and enclose a copy of your proof of purchase (warranty service will not be provided without a dated proof of purchase). Finally, you should ship the unit prepaid via UPS or parcel post (insured).

**What does your warranty not cover ?** Your warranty does not cover the following :

- Damage from negligence, misuse, abuse, accident, or failure to follow operating instructions.
- Use of product in a commercial application or rentals.
- Changes or repairs by anyone other than an authorized Depot Repair Facility.
- Damage because your unit is improperly connected to the equipment of other manufacturers.
- Unit on which the serial number has been defaced, modified or removed.
- Damage to equipment not properly connected to the product.
- Cost incurred in shipping your unit to and from an authorized Depot Repair Facility.
- Ordinary adjustments which you can perform as outlined in the owner's manual.
- Signal reception problems caused by external antenna or cable systems.
- Products purchased, used, serviced, or damaged outside of the United States.
- Damage to compact discs or cassettes.

**What other limitations apply to your warranty ?**

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

**How does state law apply to your warranty ?**

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

**AU898F**



**EMERSON RADIO CORP.**

**EMERSON**  
**Part No. : 16-2869**  
**206-01**

**Printed in China**