



60-2805

## Shelly Crab

Thank you for purchasing the RadioShack Shelly Crab. This wonderful, interactive toy makes early learning fun and easy. The crab helps your baby learn shapes, colors, textures and songs. Shelly Crab also stimulates your baby's senses while teaching perceptual skills, reasoning skills, motor skills, and learning development.

### using Shelly Crab

1. Open the hook-and-loop tape and remove the battery compartment.
2. Push the ON/OFF switch to ON, reinsert the battery compartment into Shelly and close.
3. After playing, repeat step 1 and then turn off Shelly. Then close the hook-and-loop tape.

Safety mirror provides a reflective surface.

Shelly Crab giggles when you squeeze it's body.

Squeeze any leg and Shelly Crab will randomly say that leg's color, texture or shape.

Squeeze Shelly's left claw to hear one of three randomly played melodies.

Shake Shelly's right claw to hear a rattle sound.

### what's included

Shelly Crab

user's guide


**streetsentz**  
Common Sents Tips For Safer Kidz  
[www.streetsentz.com](http://www.streetsentz.com)



### installing batteries

Shelly Crab requires two AA batteries (not supplied) for power. You can use alkaline, (rechargeable) Ni-Cd or Ni-MH batteries.

1. Part the looptape on the bottom of Shelly Crab and pull out the battery compartment.
2. Remove the battery cover.
3. Insert two AA batteries according to the polarity symbols (+ and -) marked inside.
4. Replace the battery cover, the compartment, and then close the hook-and-loop tape opening.

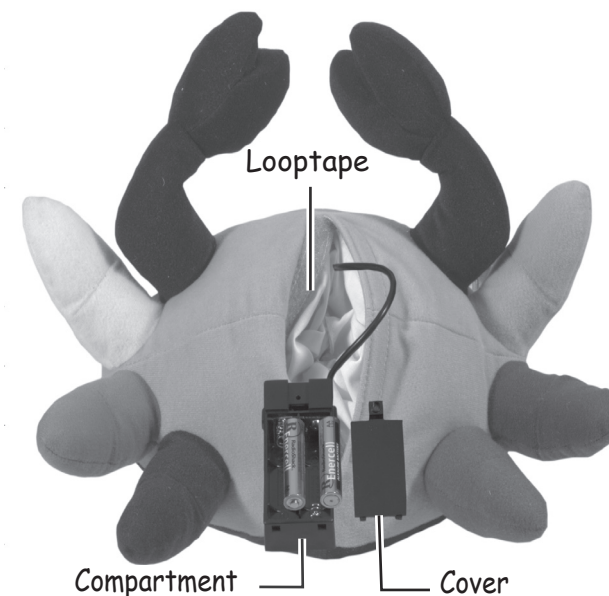

### Battery Notes:

- Only adults should replace the batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix different battery types, capacities, or chemistry.
- If you do not plan to play with the toy for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.