

RD1011  
ND1110

GB	CD-player	4
F	Lecteur de CD	6
NL	CD-speler	8
I	Lettore CD	10



**English.....4**

Illustrations.....28

(GB)

**Français.....10**

Illustrations.....28

(F)

**Nederlands.....16**

Afbeeldingen.....28

(NL)

**Italiano.....22**

Illustrazioni.....28

(I)

# English


GB

## ACCESSORIES

- High quality stereo headphones, fig.3
- Connection cord, fig.4
- AC/DC mains adaptor, fig.5
- Carrying strap, fig.6

## DISPLAY

The display gives information about the functioning of the player:

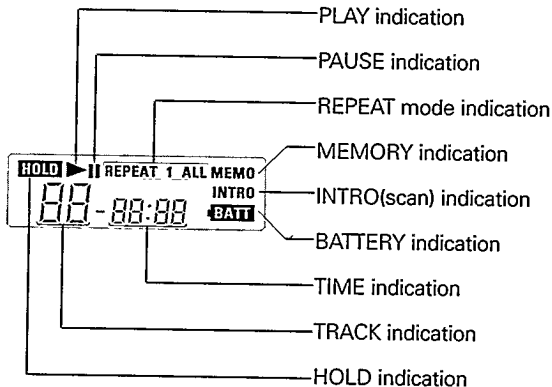

## BATTERIES



- Open the battery door and insert as indicated four (preferably Alkaline) batteries, type R6, UM3 or AA-cells. You may also use rechargeable Nickel-Cadmium batteries.
- Remove the batteries if exhausted or if they are not to be used again for a long period.
- If **BATT** flashes in the display, the batteries are weak.  
If **BATT** lights up continuously, the battery voltage is too low and the CD player will soon shut down.
- The battery supply is switched off when the 6 V DC socket is in use. When changing over to battery supply, pull out the plug from the 6 V DC socket.
- To switch off the set, place the POWER selector to position OFF.

## MAINS ADAPTER

At home, you can use the mains adapter, delivering 6V/550 mA Direct Current,  $\diamond \rightarrow \diamond$ , plus-pole  $\diamond$  to the centre pin.

- Connect the mains adapter to the 6 V DC socket and the wall socket.
- Remove the mains adapter from the wall socket when the CD player is not in use.

## CONNECTIONS

**Headphone socket PHONES:** For headphones (or mini loudspeakers) with 3.5 mm plug.

**LINE OUT socket:** For CD reproduction at home through your stereo system (amplifier, receiver, recorder, etc.):

- Use the connection cord to connect the socket LINE OUT to the input sockets LINE IN, AUX or CD IN of the other set.
- Adjust the sound with the controls of the stereo system.

# English

## HOLD

GB

When carrying the player with you, you can slide the POWER switch to HOLD. While playing a CD, the word **HOLD** appears on the display. The CD-player buttons are then inoperative. The playing of a CD will not now be interrupted when a button is accidentally touched. For normal operation, slide back the HOLD switch. The word **HOLD** disappears.

## PLAYING A CD

- Set the POWER switch to ON. The display shows '0'
- Connect headphones to the PHONES socket.
- Press OPEN to open the CD cover.
- Insert the CD, printed side facing up and close the cover.  
The CD-player scans the contents list of the disc. The display shows the total playing time and the number of tracks on the disc.  
After 5 seconds '0' appears in the display.
- Start playback by pressing PLAY ▷. As soon as playback starts, the display shows the corresponding track number and the elapsed playing time.
- Adjust the sound with the VOLUME control and the BASS BOOST switch.
- For brief interruptions, press PAUSE ⏏; the time starts flashing.  
To continue playback, press PAUSE ⏏ again.
- To stop playback, press STOP □. The display will show '0'.
- The CD player also goes to position STOP:
  - when the end of the CD is reached;
  - when the CD cover is opened;
  - if the batteries run down or if the power supply is interrupted in another way.
- Open the CD cover only if the CD player is in STOP position.
- To switch off the set, place the POWER selector to position OFF.

## Remarks

- If the batteries are exhausted, the CD player will not function normally, e.g. it will not start. Replace the batteries or use the mains adapter.
- If after pressing PLAY ▷, the CD-player does not function, this means that the CD player cannot read the CD. Possible causes are:
  - 1 You inserted the CD upside down;
  - 2 The CD is badly scratched or dirty, see 'Maintenance';
  - 3 The lens ⊗ is steamed up, see 'Maintenance';
  - 4 The batteries are exhausted.

A logo consisting of the letters "GB" inside a circle, which is itself inside a square border.

## PREVIOUS/NEXT

---

### During PLAY: ▷▷ - go to the next title

- You can jump to the next title by briefly pressing SKIP ▷▷ once.
- If you want to skip more than one track, then briefly press SKIP ▷▷ more than once until the display shows the desired track number.

### During PLAY: ◀◀ - go to the previous title

- If you want to repeat the current title from the beginning, briefly press SKIP ◀◀ once.
- If you want to repeat one of the previous titles, briefly press SKIP ◀◀ more than once until the display shows the required track number.

### In STOP mode with a CD inserted

- You can select the title by pressing SKIP ◀◀ and ▷▷ briefly, once or more than once, until the display shows the required track number.

## SEARCH

---

### Search during PLAY

- During PLAY, keep SEARCH ▷▷ for search forwards and SEARCH ◀◀ for search backwards pressed. The CD is played partially and at high speed, however, the sound is still recognizable. Release the button as soon as you recognize the required passage: the CD will be played normally from this passage onwards.

# English

GB

## INTROSCAN / REPEAT

---

By pressing the MODE button several times, all play modes will successively appear in the display:

- 1x MODE; **REPEAT 1** appears - to repeat the actual title continuously.
- 2x MODE; **REPEAT ALL** appears - to repeat the CD continuously.
- 3x MODE; **INTRO** appears - to play the first few seconds of each track.
- 4x MODE (no display indication) - to cancel the INTRO and REPEAT mode.

## PROGRAMMING

---

– You can programme 20 CD tracks into the memory.

- Ensure that the HOLD function is switched off, otherwise the CD player buttons will not operate.

- Connect headphones to the PHONES socket.

- Press OPEN to open the CD cover.

- Insert the CD, printed side facing up and close the cover.

The CD-player scans the contents list of the disc. The display shows the total playing time and the number of tracks on the disc.

After 5 seconds '0' appears in the display.

- Press MEMORY. **MEMO** flashes in the display.

'P - /' appears in the display to indicate that you can program the first title.

- Program the desired track (in position STOP):

1 Select the track to be programmed by pressing the buttons **◀** or **▶**

2 Press MEMORY again to store the track into the memory.

- Repeat these two steps for each track you want to programme.

- Press PLAY **▶** to play the programmed selection.

- Adjust the sound with the VOLUME control and the BASS BOOST switch.

- Press the STOP **□** button 2x to cancel the programme.



## MAINTENANCE

GB

- *Avoid excessive heat (maximum 50 °C), e.g. from the car heating or from direct sunshine, e.g. when parking in the sun.*
- *Do not expose the set, batteries or CD's to rain or moisture.*
- *Keep the set and the CD's away from sand.*
- *The mechanism of the CD player is fitted with self-lubricating bearings and therefore must not be oiled or greased.*
- *Fingerprints, dust and dirt on the apparatus can be removed using a soft, clean and slightly damp leather cloth. Cleaning agents may damage the cabinet.*
- *The lens (X) should never be cleaned.*
- *The lens may steam up when the set is taken from a cold into a warm environment. Playing a CD is then not possible. Do not clean the lens, but let the set acclimatize for a while.*
- *Always pick up the CD by the edge and put it back in its box immediately after use.*
- *To remove dirt from a CD, first breathe on the CD and wipe it off in a straight line from centre to edge using a soft, lint-free cloth. The use of cleaning agents may damage the CD.*

## USE YOUR HEAD WHEN USING HEADPHONES

- **Hearing safety:** Do not play your headphones at a high volume. Hearing experts advise against continuous extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.
- **Traffic safety:** Do not use headphones while driving a vehicle. It may create a traffic hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.

*This product complies with the radio interference requirements of the European Community.*

