



540R AV v3.0 Receiver **Remote Control Codes**

All codes are NEC format

System Code = C0 C0

Key	Command Code	Notes
AUDIO IN TYPE	60	
POWER TOGGLE	0C	
STEREO_MODES	1A	
PLII/NEO MODES	02	
DD_DTS MODES	17	
DSP MODES	09	
DYNAMIC (DRC)	13	
LFE TRIM	20	
SUB_TOGGLE	12	
OSD ON/OFF	11	
MUTE TOGGLE	14	
UP	03	
LEFT	06	
ENTER	21	
RIGHT	15	
DOWN	1F	
AM_FM TOGGLE	1C	
BASS_TREBLE	0A	
DOLBY_6_1	0F	
TUNER_PTY	16	
TUNER_APS	1B	
DISPLAY	04	
TUNER_STEREO	0E	
TUNER_STORE	1D	
TUNER_MODE	1E	
DVD	22	
VIDEO1	23	
VIDEO2	24	
VIDEO3	25	
TAPE_MD_CDR	26	
CD_AUX	27	
INPUT_SELECT	05	Cycles through inputs
ON	40	
OFF (STANDBY)	41	
MUTE_ON	42	
MUTE_OFF	43	
STEREO_ON	44	
STEREO_OFF	45	



SUB_ON	46	
SUB_OFF	47	
FM_MODE	48	
AM_MODE	49	

Note the Discrete Mute On and Off and Power On and Off codes which don't have dedicated buttons on the remote are also actually available from the remote by special procedure, see product manual

Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel free to email us at: support@cambridgeaudio.com

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2008