

# ROBERTS

Enjoy Listening



# Classiclite

DAB / FM RDS digital portable radio




Please read this manual before use

## Contents

<i>Controls</i> .....	2-3	<i>System reset</i> .....	20
<i>Battery operation</i> .....	4	<i>Headphone socket</i> .....	21
<i>Using the AC adaptor</i> .....	5	<i>Auxiliary input socket</i> .....	22
<i>Operating your radio - DAB</i> .....	6	<i>Display backlight</i> .....	23
<i>Selecting a station - DAB</i> .....	7	<i>Dimmer</i> .....	23
<i>Display modes - DAB</i> .....	8	<i>USB socket for software upgrade</i> .....	24
<i>Finding new stations - DAB</i> .....	9	<i>General</i> .....	25
<i>Secondary services - DAB</i> .....	9	<i>Specifications</i> .....	26
<i>Manual tuning - DAB</i> .....	10	<i>Circuit features</i> .....	26
<i>Signal strength display - DAB</i> .....	10	<i>Guarantee</i> .....	<i>Back page</i>
<i>Dynamic range control (DRC) settings - DAB</i> .....	11		
<i>Operating your radio - Search tuning - FM</i> .....	12		
<i>Manual tuning - FM</i> .....	13		
<i>Display modes - FM</i> .....	14		
<i>Favourite button</i> .....	15		
<i>Recalling your favourite station</i> .....	15		
<i>Preset stations DAB and FM</i> .....	16		
<i>FM stereo/mono</i> .....	17		
<i>Scan sensitivity - FM</i> .....	18		
<i>Software version</i> .....	19		

## Controls

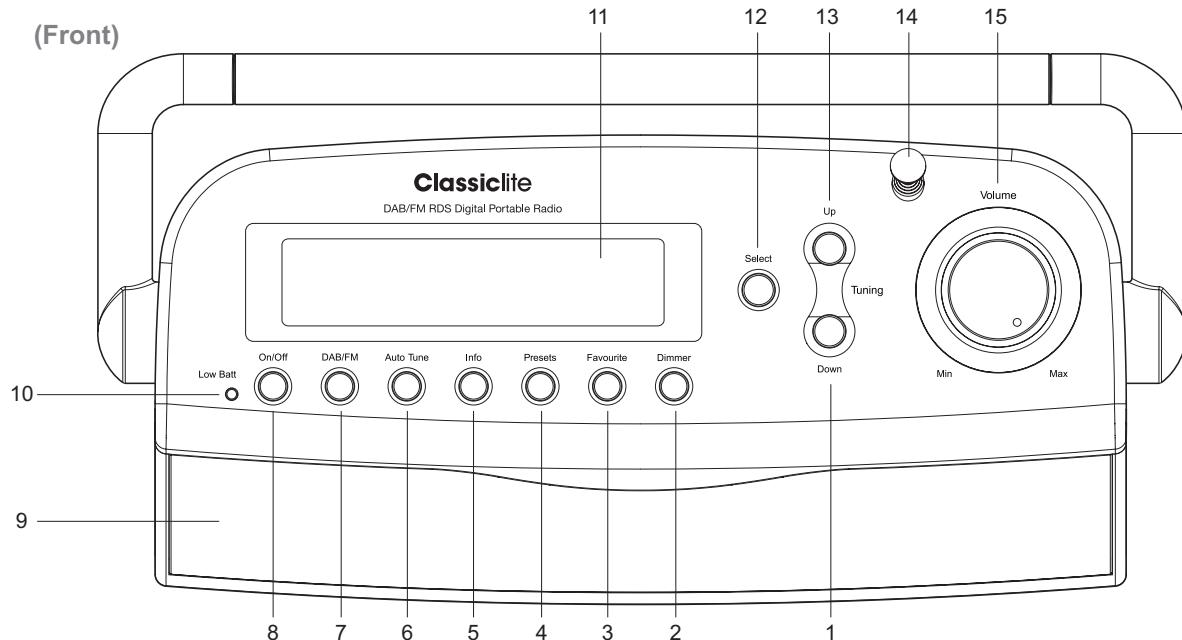


- |                       |                           |                       |
|-----------------------|---------------------------|-----------------------|
| 1. Tuning Down button | 6. Auto Tune button       | 11. LCD display       |
| 2. Dimmer button      | 7. DAB / FM button        | 12. Select button     |
| 3. Favourite button   | 8. On / Off button        | 13. Tuning Up button  |
| 4. Presets button     | 9. Speakers x2            | 14. Telescopic aerial |
| 5. Info button        | 10. Low battery indicator | 15. Volume control    |

If you need any further advice, please call our Technical Helpline on :-  
020 8758 0338 (Mon-Fri)

## Controls

(Rear)

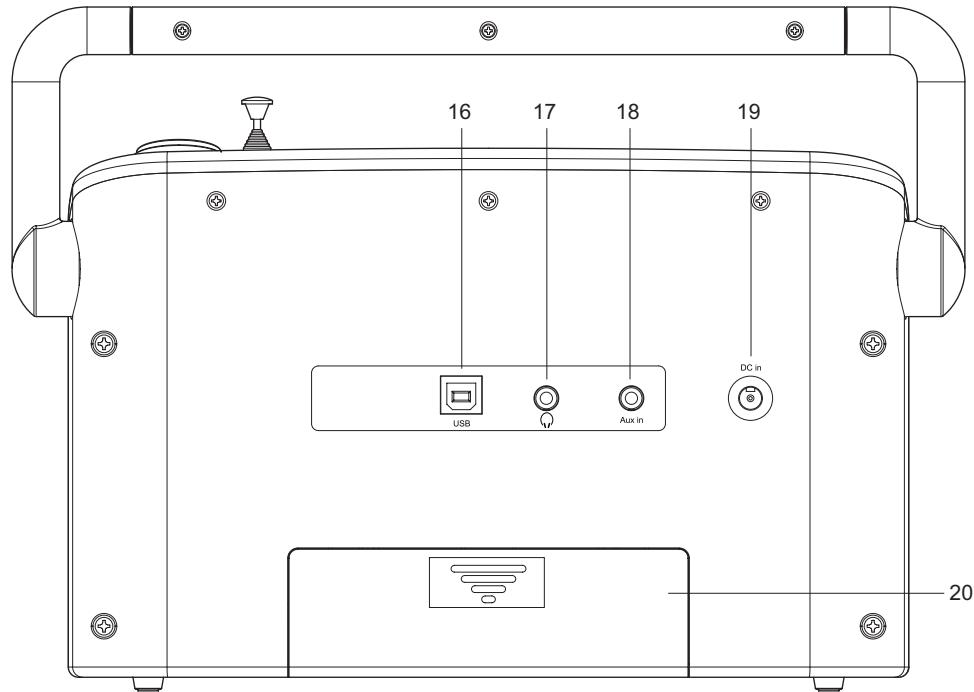

16. USB socket

17. Headphone socket

18. Auxiliary in socket


19. DC in socket

20. Battery compartment

## Battery operation

1. Remove the battery cover on the back of the unit by pushing the battery door in slightly and then downwards in the direction of the arrows in the diagram.
2. Insert six LR14 (C size) alkaline batteries into the spaces in the compartment. Take care to ensure all batteries are inserted with the correct polarity as shown on the back of the radio. Then replace the battery cover.
  - When the batteries are exhausted, the battery light will show red for a short while. The radio will then switch itself off. It may not be possible to switch the radio back on until the batteries are replaced, or until the radio is connected to the mains adaptor.
  - If the radio is not to be used for any extended period of time it is recommended that the batteries are removed from the radio.
  - *We would recommend for economy that the **Classiclite** is used via the AC adaptor whenever possible with battery operation for occasional or stand-by use only.*

**IMPORTANT:** The batteries should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

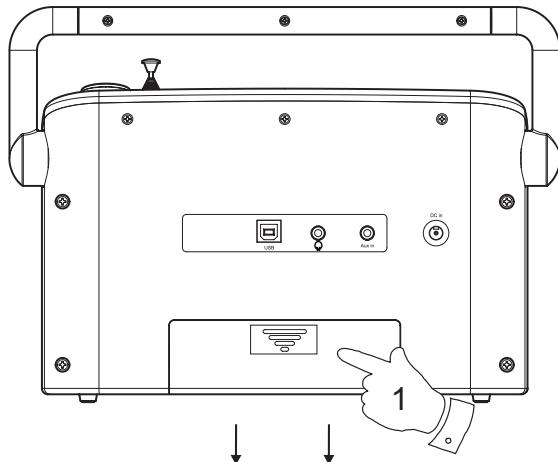


## Using the AC adaptor

1. Insert the adaptor plug into the DC in socket on the rear of your radio marked 'DC in'.
2. Plug the adaptor into a standard 13A mains socket outlet. Whenever the adaptor is plugged in to the radio and switched on at the mains the batteries are automatically disconnected. If the adaptor is plugged in to the radio but not switched on then the radio will run from the batteries if fitted.

*The AC adaptor should be disconnected from the mains supply and the radio when not in use.*

- **IMPORTANT:** The mains adaptor is used as the means of connecting the radio to the mains supply. The mains socket used for the radio must remain accessible during normal use. In order to disconnect the radio from the mains completely, the mains adaptor should be removed from the mains socket outlet completely.

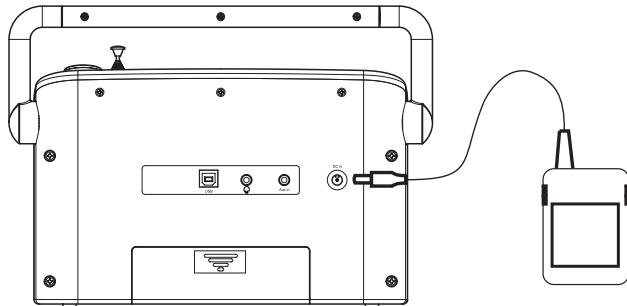

## Operating your radio - DAB

1. Carefully extend the telescopic aerial.
2. Press the **On/Off button** to switch on your radio. The display will show 'Welcome to Roberts'.
3. If this is the first time the radio is used a quick scan of the Band III DAB channels will be carried out. If the radio has been used before the last used station will be selected.
4. During the scanning process, the lower line of the display shows a bar-graph indicating progress of the scan.
5. When the scanning is completed the first station (in numeric-alpha order 0...9...A....Z) will be selected.
6. If the station list is still empty after the scan your radio will display 'Service not available'.
7. If no signals are found it may be necessary to relocate your radio to a position giving better reception. Then, either switch your radio off and on again, or press the **Auto Tune button** to repeat the scan.



Welcome to  
Roberts

Scanning... 24

BBC R7 DAB  
Connecting...

BBC R7 DAB  
I'm sorry I have


Service not  
available

## Selecting a station - DAB


1. The top line of the display shows the name of the station currently selected.
2. Press the **Tuning Up** or **Down buttons** to scroll through the list of available stations on the lower line of the display. Stop pressing the Tuning buttons when you find the station that you wish to hear.
3. Press and release the **Select button** to select the station. The display may show 'Connecting...' while your radio finds the new station.
4. Adjust the **Volume control** to the required setting.

Note: If after selecting a station the display shows 'Service not available' it may be necessary to relocate your radio to a position giving better reception.


The use of radio station presets for selecting your preferred radio stations is described on page 16.

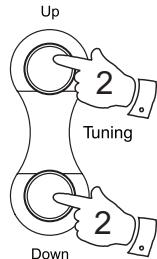

Classic DAB  
Classical Music

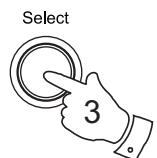

Classic DAB  
BBC 7

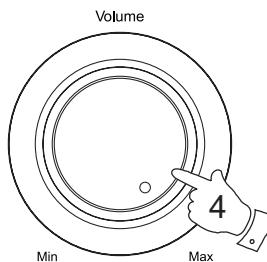

BBC R7 DAB  
Connecting...

## Display modes - DAB

Your radio has a range of display modes:-

1. Press the **Info button** to cycle through the various modes.
- a. Scrolling text      Displays scrolling text messages such as artist/track name, phone in number etc.
- b. Program Type      Displays the type of station being listened to e.g. Pop, Classic, News etc.
- c. Multiplex Name      Displays the name of DAB multiplex to which the current station belongs.
- d. Time and date      Displays the current time and date.
- e. Frequency      Displays the frequency of the DAB multiplex for the station listened to.
- f. Bit rate & audio type      Displays the digital bit rate & audio type for the station being listened to.
- g. Signal Strength      Displays a graph showing the signal strength for the station being received.



- |   |        |  |
|---|--------|--|
| a | BBC R7 | DAB<br>I'm sorry I have  |
| b | BBC R7 | DAB<br>Varied Speech   |
| c | BBC R7 | DAB<br>BBC National DAB  |
| d | BBC R7 | DAB<br>19:17 08-06-2009  |
| e | BBC R7 | DAB<br>12B 225.64MHz   |
| f | BBC R7 | DAB<br>80kbps / MP2  |
| g | BBC 7  | DAB<br>A horizontal bar graph consisting of seven segments. The first six segments are filled black, and the seventh segment is white, indicating the current signal strength level. |

## Finding new radio stations - DAB



As time passes new stations may become available. To find new stations proceed as follows:-

1. Press and release the **Auto Tune button**. The display will show "Scanning..." and your radio will perform a scan of the Band III DAB channels. As new radio stations are found the station counter on the right-hand side of the display will increase and the radio stations will be added to the list stored in the radio.



## Secondary services - DAB


1. Certain radio stations have one or more secondary services associated with them. If a radio station has a secondary service associated with it the display will show ">>" next to the station name on the station list. The secondary service will then appear immediately after the primary service as you press the Tuning Up button.
2. Press and release the **Select button** to select the station.
3. When the secondary service shuts down, your radio will automatically switch back to the main radio station (or primary service) if it is available.

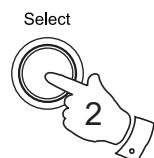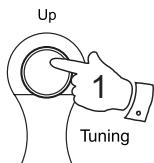

## Manual Tuning - DAB

Manual tuning allows you to tune directly to the various DAB Band III channels. UK DAB stations located in the range 11B to 12D.

1. Press and hold in the **Info button** until the display shows 'Manual tune'. Press and release the **Select button** to select this function.
2. Press the **Tuning Up** or **Down buttons** to select the required DAB channel.
3. Press and release the **Select button** to select the desired channel. The graph will indicate the signal strength, and the lower line will show the name of the DAB Multiplex (group of radio stations). Any stations found will be added to the stored list in the radio.
4. Press and release the **Select button** to return to the normal tuning mode.

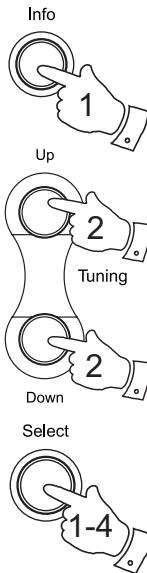

DAB  
•Manual tune •

Manual tune  
•5A 174.928MHz •

11D 222.06 MHz

BBC R7 DAB  
Connecting...



BBC 7 DAB  
███████ █ ██████████

## Signal strength display - DAB

1. Repeatedly press and release the **Info button** until the lower line of the display shows signal strength.
2. Position your radio and try moving the aerial so as to give maximum number of black rectangles on signal strength display. Normally, the best reception will be found with the aerial vertical and fully extended.
3. The clear unfilled rectangle indicates minimum signal level required for satisfactory reception.

If you need any further advice, please call our Technical Helpline on :-




020 8758 0338 (Mon-Fri)

## Dynamic Range Control settings - DAB

Dynamic Range Control (also known as DRC) can make quieter sounds easier to hear when your radio is used in a noisy environment.

1. Press the **On/Off button** to switch on your radio.
2. Press and hold in the **Info button**. The display will show 'Manual tune.'
3. Press the **Tuning Up or Down buttons** until the display shows 'DRC'.
4. Press and release the **Select button** to enter the adjustment mode.
5. Press the **Tuning Up or Down buttons** to select the required DRC setting (the default is 0).
  - DRC 0 - DRC is switched off, Broadcast DRC will be ignored.
  - DRC 1/2 - DRC level is set to 1/2 that sent by broadcaster.
  - DRC 1 - DRC level is used as sent by broadcaster.
6. Press and release the **Select button** to confirm the setting. The chosen setting will be marked with an asterisk. The display will return to normal tuning mode.


Note: Not all DAB broadcasts are able to use the DRC function. If the broadcast does not support DRC, then the DRC setting in the radio will have no effect.

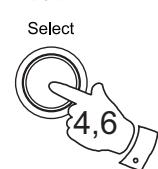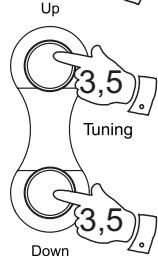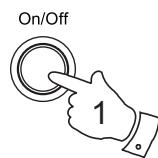

## Operating your radio - Search tuning - FM



1. Carefully extend the telescopic aerial fully.
2. Press the **On/Off button** to switch on your radio.
3. Press the **DAB/FM button** to select the FM band.
4. Press and immediately release the **Auto tune button**, your radio will scan in an upwards direction (low frequency to high frequency) and stop automatically when it finds a station of sufficient strength.
5. After a few seconds the display will update. The display will show the frequency of the signal found. If the signal is strong enough and there is RDS data present then the radio will display the station name.
6. To find other stations, press and release the **Auto tune button** as before.
7. To scan the FM band in a downwards direction (high frequency to low frequency) press and hold down the **Auto tune button** for 0.5 seconds and then release.
8. When the waveband end is reached your radio will recommence tuning from the opposite waveband end.
9. Adjust the **Volume control** to the required setting.

The use of radio station presets for selecting your preferred radio stations is described on page 16.

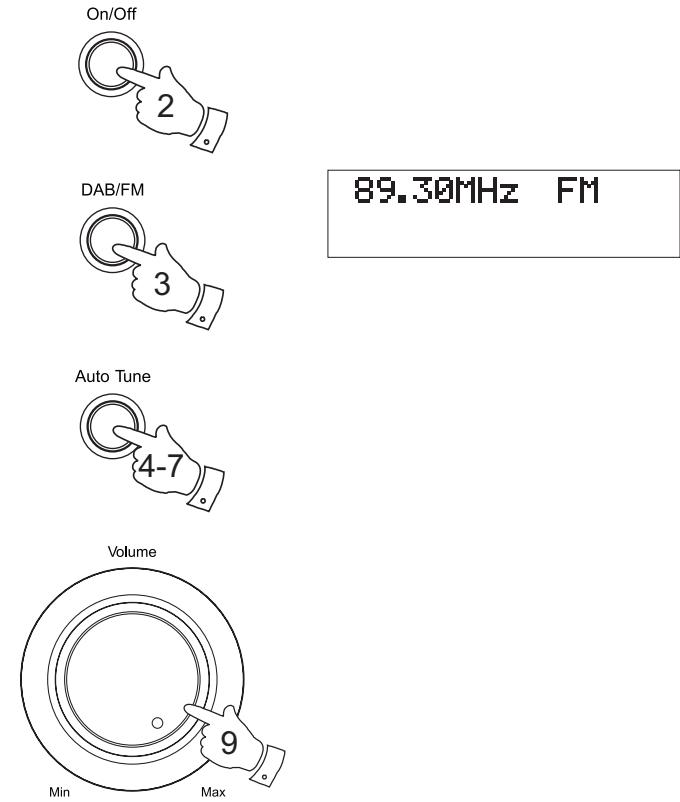

## Manual tuning - FM

1. Press the **On/Off button** to switch on your radio.
2. Press the **DAB/FM button** to select the FM band. Carefully extend the telescopic aerial fully for FM reception.
3. Press the **Tuning Up or Down buttons** to tune to a station. With each press the frequency will change up or down by 50 kHz.
4. When the waveband end is reached the radio will recommence tuning from the opposite waveband end.
5. Set the **Volume control** to the desired settings.
6. To switch off your radio press the **On/Off button**.

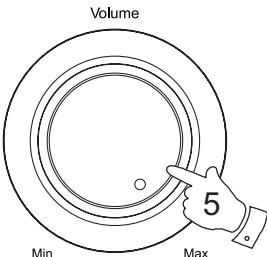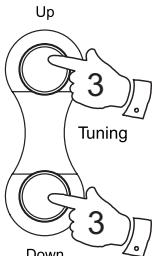

89.30MHz FM

## Display modes - FM

In FM mode the bottom line of the display can be set to any of the following display options:-

1. Press the **Info button** to cycle through each of the options.
- a. Scrolling text      Displays scrolling text messages such as artist/track name, phone in number etc.
- b. Program type      Displays type of station being listened to e.g. Pop, Classic, News, etc.
- c. Time and date      Displays the current time and date.
- d. Frequency      Displays frequency of the station being listened to.
- e. Audio mode      Display shows Auto (stereo) or Mono.



- a **BBC R2 FM**  
**The latest news**
- b **BBC R2 FM**  
**Pop Music**
- c **BBC R2 FM**  
**12:02 16-06-2009**
- d **BBC R2 FM**  
**89.30MHz**
- e **89.30MHz FM**  
**Auto (Stereo)**

Note: Your radio will display "NO RT" on the lower line of the display if there is no scrolling text available and "NO PTY" if there is no programme type information.

## Favourite button

Your radio is fitted with a button which when pressed will automatically select the required waveband and tune to your Favourite radio station. With this button you can store one favourite station from either the DAB or FM wavebands.

To set up your favourite station, follow these steps:

1. Carefully extend the telescopic aerial and switch on your radio.
2. Select the desired waveband (DAB or FM) and tune into the required radio station as described on the preceding pages.
3. Press and hold down the **Favourite button** (for 5 seconds) until the display shows "My Fav. saved".



BBC R7      DAB  
My Fav. saved

---

## Recalling your favourite station

1. Carefully extend the telescopic aerial and switch on your radio.

If your radio is in Auxiliary Input mode, press and release the **DAB/FM button** to select normal radio operation.

2. Momentarily press the **Favourite button**, your radio will automatically select the DAB or FM waveband as needed and then tune to the radio station stored in the favourite memory.



BBC R7      DAB  
I'm sorry I have

## Preset stations - DAB and FM

To make it easier for you to tune your radio to the stations that you prefer, you may store selected radio stations as presets. Your radio holds presets separately for DAB and FM radio modes.



You may set as many or as few presets as you like in each mode.

You can easily switch between displaying all DAB stations (or all FM frequencies) and displaying only those that you have set as presets.

Any station or frequency which has been marked as a preset can easily have the mark cancelled should your preferences or needs change.

Presets are retained when your radio is switched off.

1. To setup your preset stations, tune into the required station.
2. Press and hold down the **Preset button** until the displays shows a tick symbol next to the radio station name or frequency. This indicates that the radio station is marked as a preset. To cancel the preset mark, press and hold the **Preset button** again.
3. Repeat steps 1 and 2 as needed for any other stations that you want as presets.
4. To view only the preset stations for the currently selected waveband when tuning, press and release the **Preset button** so that the heart symbol shows in the display.
5. To listen to one of the preset radio stations, press the **Tuning Up** or **Down buttons** until the required radio station is displayed. Press and release the **Select button** to select and tune to that station.
6. To cancel the preset stations view, press and release the **Preset button** so that the heart symbol disappears from the display. Your radio will then be able to access the full station list using the **Tuning buttons**.

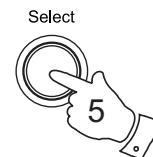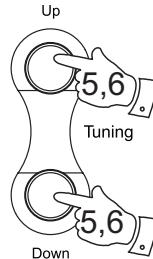

Classic DAB  
Classical Music

Classic DAB   
Classical Music

## FM Stereo/Mono

1. If a station being received is weak some hiss may be audible (especially when listening using headphones). To reduce this, press and release the **Select button** so that the display shows "Switch to Mono". Your radio will switch to mono mode.
  
2. To return to stereo mode press and release the **Select button** so that the display shows "Switch to Auto". Your radio will switch to stereo mode.



89.30MHz FM  
Mono


89.30MHz FM  
Auto (Stereo)

## Scan sensitivity setting - FM

Your radio will normally scan for FM broadcasts which are strong enough to give good reception. However, you may wish the Auto-scan function to also be able to find weaker signals, possibly from more distant radio transmitters. Your radio includes a local / distant option for the Auto-scan function.

1. Press the **On/Off button** to switch on your radio.
2. If needed, press the **DAB/FM button** to select the FM band.
3. Press and hold the **Info button** until the display shows "FM Scan Zone" then press the **Select button** to enter the scan zone selection menu.
4. Press the **Tuning Up or Down buttons** to switch between Local and Distant options on the lower line of the display. The Distant option will allow the radio to find weaker signals when scanning.
5. Press and release the **Select button** to confirm your selection. The current setting will be marked with an asterisk. The radio will then revert to the normal information display. The Local or Distant setting is stored in the radio and remains in force until changed or until a System Reset.

Note: The initial setting (out of the box, or after a System Reset) causes the radio to ignore weaker (or more distant) signals.

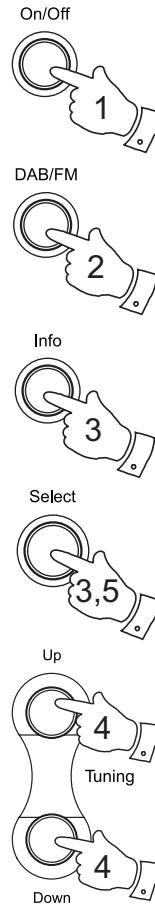

FM  
\*FM Scan Zone \*



FM Scan Zone  
\*Local \*

FM Scan Zone  
\*Distant \*

## Software version

 The software display cannot be altered and is just for your reference.

1. To view the software version on the display, ensure your radio is in DAB mode and press and hold the **Info button** for 2 seconds.
2. Press the **Tuning Up or Down buttons** until 'DAB SW version' appears on the display.
3. Press the **Select button**. The software version will appear on the display.
4. After a few seconds the display will revert to the normal display mode.

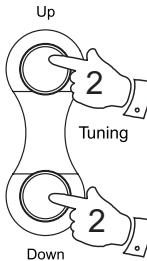

## System reset

If your radio fails to operate correctly, or some digits on the display are missing or incomplete, it may be possible to restore normal operation by carrying out a System Reset operation on your radio. This will restore the radio's settings to their factory defaults. No presets will be stored, and the list of DAB radio stations will be empty.


If you have moved to a different part of the country and you wish to erase local DAB radio stations that are no longer available from the stored list, then you may carry out this procedure. Your radio will automatically re-scan for the DAB stations available at your current location when it restarts.

1. Press and hold down the **Info button** for 2 seconds
2. Press the **Tuning Up or Down buttons** until the display shows 'Factory reset', then press and release the **Select button**.
3. If you wish to perform the reset operation, press and release the **Select button one more time**. A full reset of your radio will be performed. All presets and station lists will be erased.
4. After a system reset a scan of the DAB band will be performed.

In case of malfunction due to electrostatic discharge, reset the product (temporary disconnection of the power adaptor or removal of batteries may be required) to resume normal operation.

If a problem persists our technical staff would be pleased to offer any assistance on operating the radio. Our technical helpline number is 020 8758 0338.

If you need any further advice, please call our Technical Helpline on :-  
020 8758 0338 (Mon-Fri)

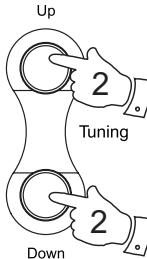

DAB  
♦Factory Reset ♦

Press SELECT to  
confirm reset...


Welcome to  
Roberts

Scanning... 24

## Headphone socket

A 3.5mm **Headphone Socket** located on the rear of your radio is provided for use with either headphones or an earpiece. Inserting a plug automatically mutes the internal loudspeaker.

**IMPORTANT:** Excessive sound pressure from earphones and headphones can cause hearing loss.

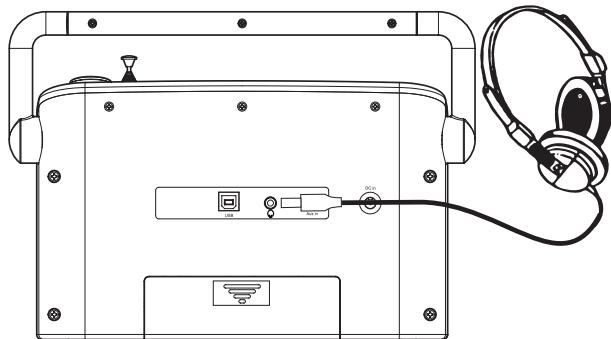


## Auxiliary input socket

1. Connect a stereo or mono audio source (i.e. CD player, MP3 player, etc.) to the **Auxiliary input socket**.
2. Press the **On/Off button** to switch on the radio. Press and release the **DAB/FM button** until the display shows "AUX IN".


Note that the Auxiliary Input mode can only be selected when a plug is inserted in the socket.

3. Adjust the **Volume control** on your player and on the radio for comfortable listening.
4. Remove the cable from the **Auxiliary input socket** or press and release the **DAB/FM button** to cancel Auxiliary Input mode.

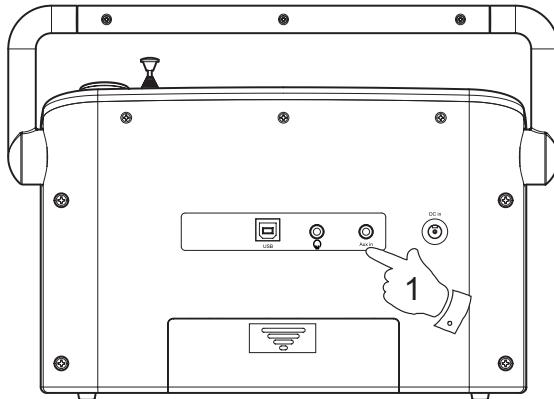

## Display backlight

1. When using the radio powered from batteries, the display backlight will be switched on for approximately 12 seconds when any button is pressed.
2. When your radio is powered by the AC mains using the supplied mains adaptor the display backlight will always be on whenever the radio is switched on.

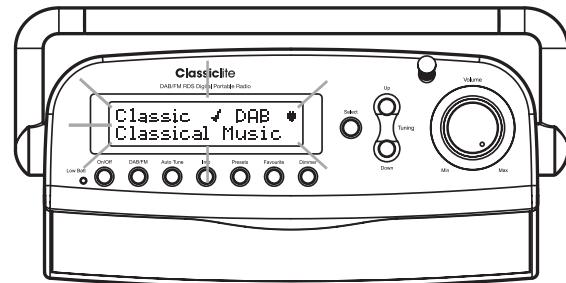

## Display backlight dimmer

1. In order to adapt the intensity of the display to suit the ambient room lighting, press the **Dimmer button** on your radio.
2. There are four dimmer brightness levels available as well as an off setting, should you wish to turn off the dimmer backlight.



## USB socket for software upgrade

Software updates for your **Classiclite** may be available in the future. If you register your product at [www.robertsradio.co.uk/register](http://www.robertsradio.co.uk/register) and include a valid e-mail address you will receive notification of software updates.

As software updates become available software and information on how to update your radio can be found at [www.robertsradio.co.uk/support](http://www.robertsradio.co.uk/support)

## General

Do not allow this radio to be exposed to water, steam or sand. Do not leave your radio where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high. It is recommended that the DAB band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the FM band.

The name plate is located on the rear of your radio.



- Your radio should not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the radio.
- It is recommended to operate the product such that there is a minimum distance (10cm recommended) to adjacent objects in order to ensure good ventilation.
- The ventilation of the product should not be restricted by covering it or its ventilation openings with items such as newspapers, tablecloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the product.
- It is recommended to avoid using or storing the product at extremes of temperature. Avoid leaving the unit in cars, on window sills, in direct sunlight etc.

## Specifications

## Circuit Features

### Power Requirements

Mains AC 100 ~ 240V 50/60Hz (adaptor)  
Batteries 6 x LR14 (C size)

Loudspeaker 76 mm

Output Power 2 x 1.5 Watts

### Battery Life

Up to 100 hours of listening for 4 hours a day  
at normal volume using alkaline cells.

Headphone socket 3.5mm dia.

Auxiliary Input socket 3.5mm dia.

### Frequency Coverage

FM 87.5-108MHz  
DAB 174.928 - 239.200MHz

Aerial System FM Telescopic aerial  
DAB Telescopic aerial

The Company reserves the right to amend the specification without notice.

## Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

N.B. Damaged or broken telescopic aerials will not be replaced under guarantee.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service department for attention. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please contact Roberts Radio Technical Services at the address shown on the rear of this manual.

*These statements do not affect the statutory rights of a consumer.*

### ROBERTS RADIO TECHNICAL SERVICES

97-99 Worton Road  
 Isleworth Middlesex  
 TW7 6EG

Technical Helpline :- 020 8758 0338 (*Mon-Fri during office hours*)



<http://www.robertsradio.co.uk>



© 2009 Roberts Radio Limited