

# **RCA**

## **DVD Player User's Manual**

Changing Entertainment. Again.



# **RC5227P**

# Important Information



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

## WARNING

To reduce the risk of fire or shock hazard, do not expose this DVD player to rain or moisture. No objects filled with liquids, such as vases, shall be placed on the apparatus.

## CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## CAUTION

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

## FCC NOTE (for U.S.A.):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus meets all requirements of the Canadian Interference--Causing Equipment Regulations.

### Note:

This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play the disc. The Region number for this DVD player is Region No 1.

## Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the player.

Model No. RC5227P

Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

### Note:

This device is protected by U.S. patent numbers 4,631,603 and 4,577,216 and 4,819,098 and other intellectual property rights. The use of Macrovision's copy protection technology in the device must be authorized by Macrovision and is intended for home and other limited pay-per-view uses only, unless otherwise authorized in writing by Macrovision. Reverse engineering or disassembly is prohibited.

**CLASS 1  
LASER  
PRODUCT**

## Introduction

Your DVD player is equipped with some special features. The following information summarizes some of these features.

### The On-Screen Information Display

The Info Display is a menu bar that you can bring up to access certain features while discs are playing. Icons in the display represent the different features supported by your DVD player. By selecting different Info Display icons, you can access features including Scene Snip™, Repeat, Audio, Subtitles, Bookmarks and Camera Angle.

### Time Search

The Time Search feature lets you go to a point on a disc by entering the elapsed time in the on-screen time display. For example, if your favorite scene in a movie is one hour and twelve minutes after the beginning of the movie, you can enter 01:12:00 into the time display and go right to that point in the movie.

### The Bookmarks Feature

You can mark a point on a disc that you can go to quickly with the bookmark feature. You can store up to six bookmarks. For example, if you have a favorite scene in a movie, you can bookmark it so you can return to it without having to fast forward or reverse to find the exact scene.

### Ratings Limits and Scene Snip™

Your DVD player allows you to set ratings limits and passwords. For example, you can set the DVD player so that any movie with a PG-13 rating or above requires a password to be entered. You can use Scene Snip to edit out sections of a disc. When this disc is played, you must have the password to view the original version.

Since not all discs contain ratings, you can also decide if you want to allow free access or require a password to view unrated discs.

### Scene Again™

When you are watching a DVD disc, you can replay a scene instantly by pressing the GO BACK•AGAIN button on the remote. The Scene Again™ feature goes back approximately ten seconds and replays both video and audio while turning on the subtitles.

### TruSurround

The TruSurround® option can be used to simulate a six-speaker listening experience through two speakers.

### Voice+™

This feature allows you to adjust the volume of the voices on a disc's soundtrack. For example, the background music might be very loud, so the dialog is difficult to hear. The Voice+™ feature allows you to raise the volume of the voices while keeping the remaining background sounds at a normal level.

SRS/TruSurround and the  symbol are trademarks of SRS Labs, Inc. in the United States and selected foreign countries. TruSurround technology is incorporated under license from SRS Labs, Inc.

# Table of Contents

---

<b>Introduction .....</b>	<b>1</b>
<b>Chapter 1: Connections &amp; Setup</b>	
<b>Things to Consider Before You Connect .....</b>	<b>6</b>
Protect Against Power Surges .....	6
Protect Components from Overheating .....	6
Position Cables Properly to Avoid Audio Interference .....	6
Connection Pictures .....	6
Types of Discs Your DVD Player will Play .....	6
<b>Choose Your Connection .....</b>	<b>7</b>
Cables Needed to Connect Components to Your TV .....	8
DVD Player + TV with Audio/Video Input Jacks .....	9
DVD Player + TV + VCR .....	11
DVD Player + TV + Dolby Digital or DTS Receiver .....	13
DVD Player + TV + Dolby Pro Logic or Stereo Receiver .....	15
DVD Player + TV + 5.1-channel Audio/Video Receiver .....	17
DVD Player + TV + VCR + Satellite Receiver .....	19
<b>The Jacks on the Back of the DVD Player .....</b>	<b>20</b>
<b>Install Batteries in the Remote .....</b>	<b>21</b>
Important Battery Information .....	21
<b>How to Find Your TV's Video Input Channel .....</b>	<b>22</b>
<b>How to Move Around the DVD Player's Menu System .....</b>	<b>23</b>
<b>Set the Menu Language .....</b>	<b>23</b>
<b>Setting Other Options .....</b>	<b>23</b>
<b>A Quick Tour of The Remote .....</b>	<b>24</b>
Component Buttons .....	24
DVD Buttons .....	24
<b>Chapter 2: Playing DVDs</b>	
<b>Regional Coding .....</b>	<b>28</b>
<b>Using Different Menus .....</b>	<b>28</b>
<b>Loading and Playing Discs .....</b>	<b>28</b>
<b>Using a Disc Menu .....</b>	<b>29</b>
<b>Using the On-Screen Info Display .....</b>	<b>31</b>
Time Display .....	32
Selecting a Title .....	32
Selecting a Chapter .....	32
Scene Snip Editing .....	33
Turning Subtitles On and Off .....	35
Changing the Audio Language .....	36
The Repeat Feature .....	37
Using Bookmarks .....	38
Changing the Camera Angle .....	39

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.  
DTS is a registered trademark of Digital Home Theater Systems, Inc.

# Table of Contents

---

<b>Disc Playback Features Using the Remote</b> .....	<b>40</b>
Fast Motion Playback (Picture Scan) .....	40
Freeze Frame and Frame Advance .....	40
Slow Motion Playback .....	40
Chapter Advance .....	40
Scene Again™ .....	41
Subtitles .....	41
Audio Language .....	41
Camera Angle .....	41
Scene Snip™ Edit .....	41
Zoom .....	42

## Chapter 3: Playing Audio CDs

<b>Using the Info Display</b> .....	<b>44</b>
Using the Time Display .....	44
Selecting a Specific Track .....	44
Selecting a Play Mode .....	45
The Repeat Feature .....	46
Using IntroScan™ .....	47
The Bookmark Feature .....	48
Dub Assist .....	49

## Chapter 4: Playing MP3 CDs

<b>What is MP3?</b> .....	<b>52</b>
<b>Using the Info Display</b> .....	<b>53</b>
<b>The MP3 Display</b> .....	<b>53</b>
Using the Time Display .....	53
Selecting a Track .....	54
<b>Selecting a Play Mode</b> .....	<b>54</b>
<b>Using the Program Play Feature</b> .....	<b>55</b>
Creating a Program .....	55
Editing a Program .....	56
Autoplay .....	56
The Repeat Feature .....	57
<b>Using IntroScan</b> .....	<b>57</b>
<b>The MP3 Screen Saver</b> .....	<b>57</b>

## Chapter 5: Playing Video CDs

<b>What is a Video CD?</b> .....	<b>60</b>
<b>The Video CD Disc Menu</b> .....	<b>60</b>
The Video CD Information Display .....	61
Selecting a Specific Track .....	62
Selecting a Specific Index .....	62
The Repeat Feature .....	62
Changing the Audio Channel Output .....	63
<b>Skipping Tracks</b> .....	<b>63</b>
<b>Zoom</b> .....	<b>63</b>

# **Table of Contents**

---

## **Chapter 6: The DVD Player's Menu System**

<b>The DVD Player Menu System</b> .....	<b>66</b>
<b>The Play Mode Menu</b> .....	<b>67</b>
Selecting a Play Mode .....	67
How to Create a Program .....	68
Creating a Program List for a DVD Disc .....	68
Creating a Program List for an Audio CD .....	69
Creating a Program List for an MP3 disc .....	69
Editing a Program .....	70
Autoplay .....	71
Dub Assist .....	71
<b>The Lock Menu</b> .....	<b>72</b>
Locking Your DVD Player .....	72
Changing Your Password .....	72
Editing Your Scene Snip Disc Library .....	73
Setting the Ratings Limits .....	73
Front Tray Lock .....	75
System Test .....	75
<b>The Display Menu</b> .....	<b>76</b>
TV Image .....	76
Front Display .....	77
On-Screen Displays .....	77
<b>The Sound Menu</b> .....	<b>78</b>
Digital Output .....	78
TruSurround .....	79
Speaker Setup .....	79
Enhancements .....	81
<b>The Languages Menu</b> .....	<b>82</b>
Changing the Player Menus Language Preferences .....	82
Changing the Disc Menus Language Preference .....	82
Changing the Audio Language Preference .....	83
Changing the Subtitle Language Preference .....	84
<b>Glossary</b> .....	<b>85</b>
<b>Language Code List</b> .....	<b>86</b>

## **Chapter 7: Other Information**

<b>Troubleshooting</b> .....	<b>90</b>
Handling Cautions .....	93
Maintenance of Cabinet .....	93
<b>Universal Remote</b> .....	<b>94</b>
Test the Remote .....	94
Program the Remote .....	94
Automatic Code Search .....	94
Direct Entry .....	95
Operate Components after Programming the Remote .....	95
<b>Front Panel Controls</b> .....	<b>98</b>
<b>Front Panel Display</b> .....	<b>99</b>
<b>Limited Warranty RCA Digital Video Disc (DVD) Player</b> .....	<b>100</b>
<b>Accessories and Order Form</b> .....	<b>103</b>
<b>Index</b> .....	<b>106</b>

# Connections & Setup

## Chapter Overview:

- Things to Consider Before You Connect
- Choose Your Connection
- The Jacks on the Back of the DVD Player
- Installing Batteries in the Remote
- How to Find Your TV's Video Input Channel
- How to Move Around the DVD Player's Menu System
- Set the Menu Language
- The Remote Control

Changing Entertainment. Again.



# Connections & Setup

---

## Things to Consider Before You Connect

### Protect Against Power Surges

- Connect all components before you plug any of their power cords into the wall outlet.
- Turn off the TV and/or components before you connect or disconnect any cables.
- Make sure all antennas and cables are properly grounded. Refer to the Important Safeguards sheet packed with your DVD player.

### Protect Components from Overheating

- Don't block ventilation holes on any of the components. Arrange the components so that air can circulate freely.
- Don't stack components.
- When you place components in a stand, make sure you allow adequate ventilation.
- If you connect an audio receiver or amplifier, place it on the top shelf so the heated air from it won't flow around other components.

### Position Cables Properly to Avoid Audio Interference

- Insert each cable firmly into the designated jack.
- If you place components above the TV, route all cables down the side of the back of the TV instead of straight down the middle of the back of the TV.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.

### Connection Pictures

Audio/video cables are usually bundled together. For better visibility, the connection pictures in this book show each cable separately (audio left, audio right, and video).

### Types of Discs Your DVD Player will Play



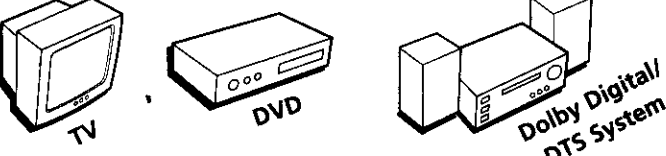
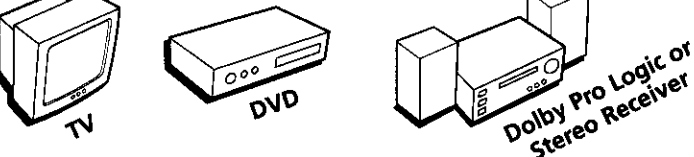
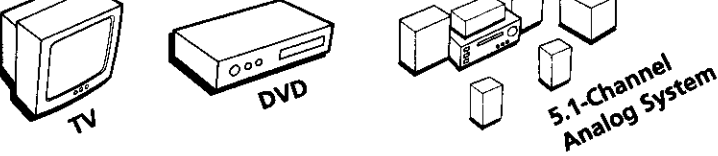
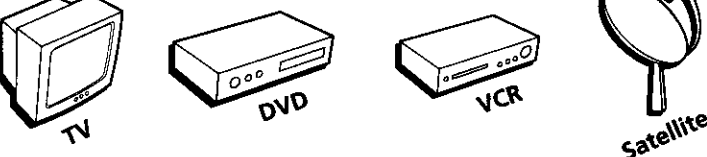
- DVD video discs – DVD video discs contain high quality picture and sound content.
- Audio discs – Audio CDs contain musical or sound content only.
- Video CD discs – Like DVD video discs, Video CDs contain picture and sound content. The difference is the amount of information that can be stored on the disc.
- CD-R – A disc the you can write information to once (for example, download MP3 files).
- CD-RW – A re-writable disc. You can write information onto this type of disc more than once. For example, if you have previously downloaded MP3 files to a CD-RW disc, you can write information to the disc again, but it will erase the previously written information.





## Choose Your Connection

There are several ways to connect your DVD player. Please use the following chart to determine which connection is best for you. Turn to the appropriate page and connect your DVD player.

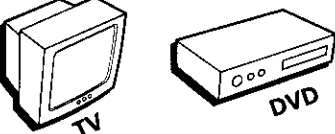Components	Cables Needed	Connection	Go to...
	<ul style="list-style-type: none"> <li>• Coaxial</li> <li>• Audio/video</li> <li>• S-Video</li> <li>• Component video (optional)</li> </ul>	TV + DVD	page 9
	<ul style="list-style-type: none"> <li>• Coaxial</li> <li>• Audio/video</li> <li>• S-Video</li> <li>• Component video (optional)</li> </ul>	TV + DVD + VCR	page 11
	<ul style="list-style-type: none"> <li>• Coaxial</li> <li>• Audio/video</li> <li>• S-Video</li> <li>• Optical Digital</li> <li>• Component video (optional)</li> </ul>	TV + DVD + Dolby Digital	page 13
	<ul style="list-style-type: none"> <li>• Coaxial</li> <li>• Audio/video</li> <li>• S-Video</li> <li>• Component video (optional)</li> </ul>	TV + DVD + Dolby Pro Logic or Stereo Receiver	page 15
	<ul style="list-style-type: none"> <li>• Audio/video</li> <li>• S-Video</li> <li>• Component video (optional)</li> </ul>	TV + DVD + 5.1-Channel Analog	page 17
	<ul style="list-style-type: none"> <li>• Coaxial</li> <li>• Audio/video</li> <li>• S-Video</li> <li>• Component video (optional)</li> </ul>	TV + DVD + VCR + Satellite	page 19


# Connections & Setup

---

## Cables Needed to Connect Components to Your TV

The pictures below show the cables needed for the connections represented in this book.

**Note:** Audio/Video cables (A/V cables for short) are usually sold as a bundled set, but the connection pictures in this book show each cable separately for better visibility.

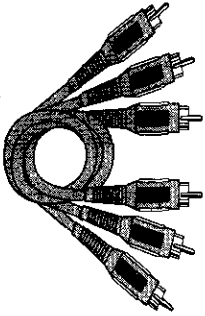

Audio/Video cables  
Component Video cables




RF coaxial cable



S-Video cable



Optical digital audio cable

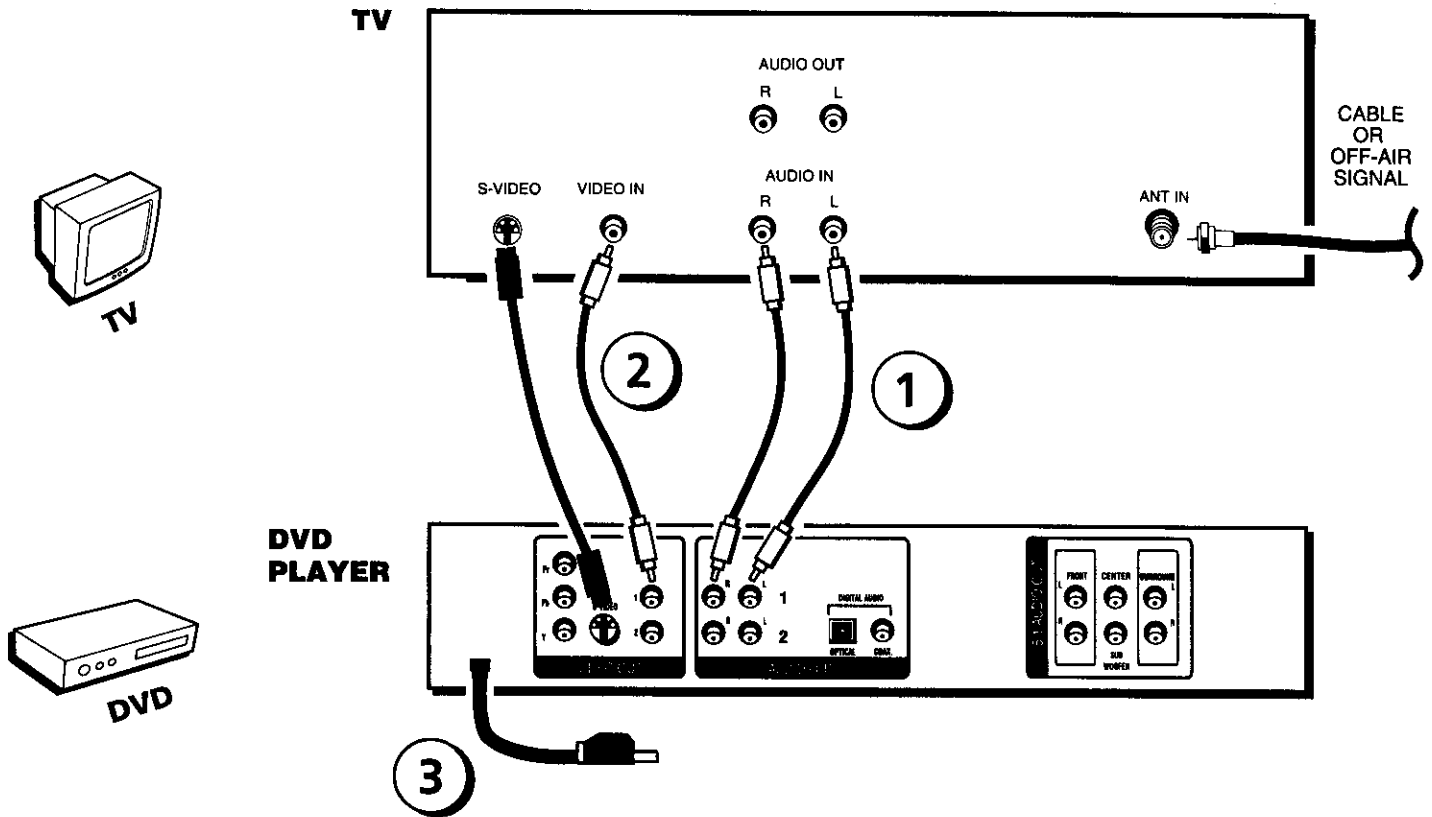

## DVD Player + TV with Audio/Video Input Jacks

1. Connect the audio cables to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player, and to the corresponding Audio Input jacks on your TV.
2. Connect the video cable.
  - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

**OR**

  - **S-Video** – (optional) If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.


**OR**

  - **Component video** (optional) – If your TV has component video (Y, P<sub>B</sub>, and P<sub>R</sub> jacks) use video-grade cables for the Y, P<sub>B</sub>, and P<sub>R</sub> connections. Note that it is essential to match the color-coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
3. Plug in the AC power cord into an AC outlet.

**Note:** Your cable or off-air connection to the television should not be affected by this connection. Connect your cable or off-air antenna to your television as you normally would. You may need to consult your television manual for details.

**Go to page 21**

# Connections & Setup

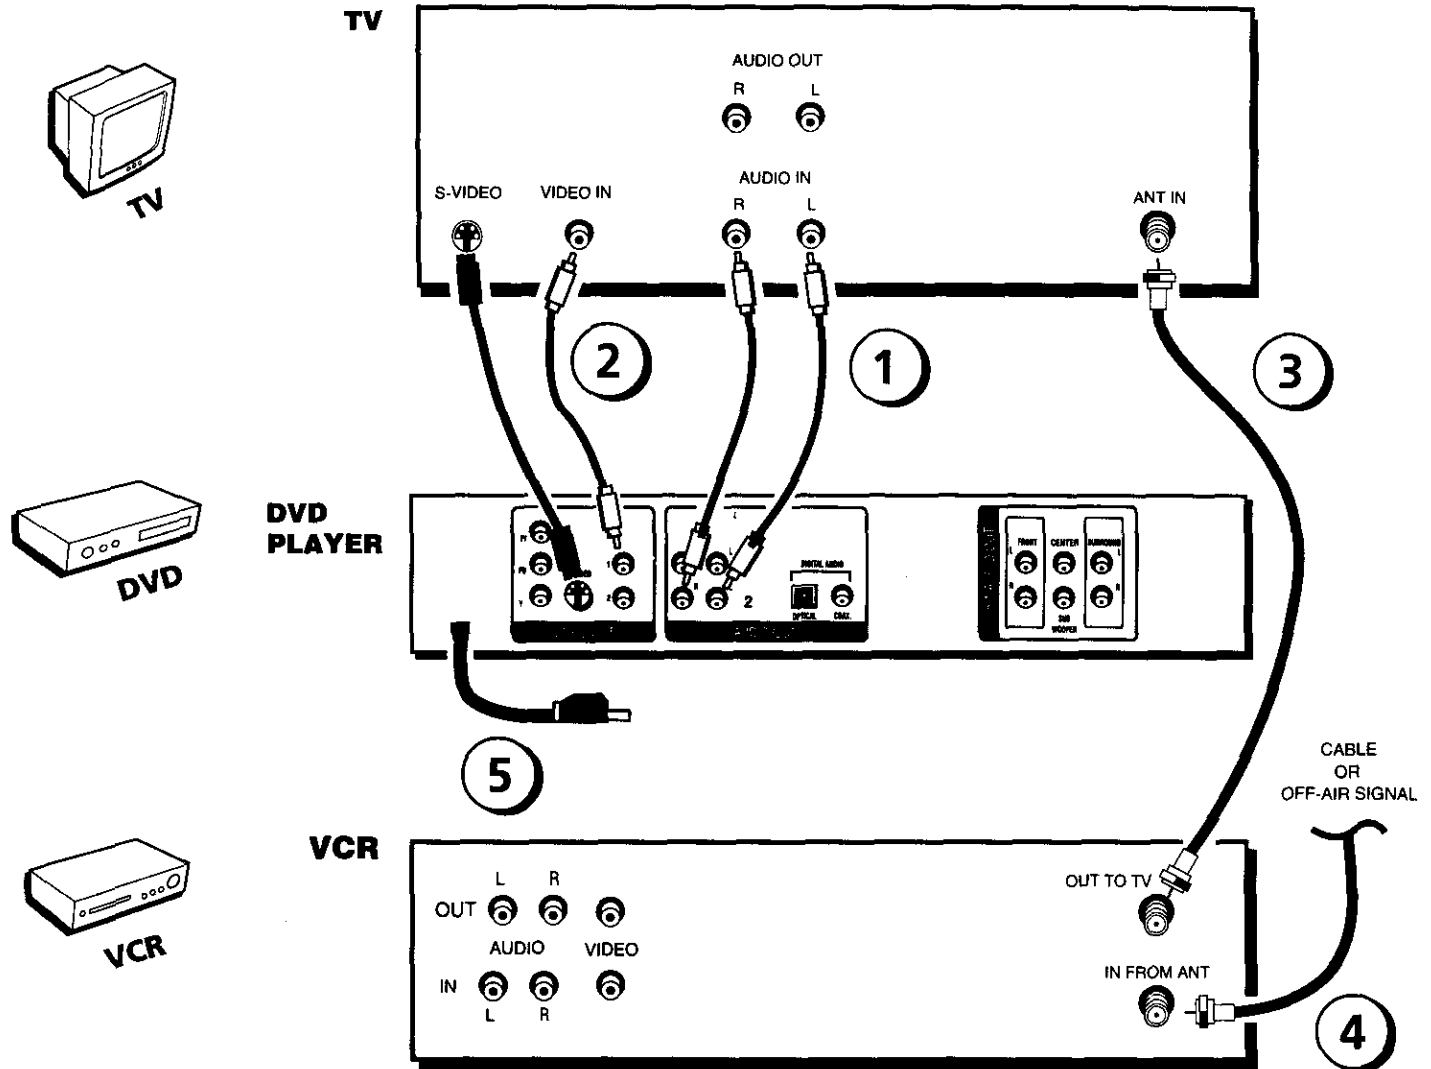

## DVD Player + TV + VCR

1. Connect the audio cables to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player, and to the corresponding Audio Input jacks on your TV.

2. Connect the video cable.

- **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

**OR**

- **S-Video** – (optional) If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

**OR**

- **Component video** (optional) – If your TV has component video (Y, P<sub>B</sub>, and P<sub>R</sub> jacks) use video-grade cables for the Y, P<sub>B</sub>, and P<sub>R</sub> connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.


3. Connect a coaxial cable to the antenna output jack on the VCR and to the antenna input jack on the television.

4. Connect the antenna or cable to the Antenna Input jack on the VCR.

5. Plug in the AC power cord into an AC outlet.

**Go to page 21**

# Connections & Setup

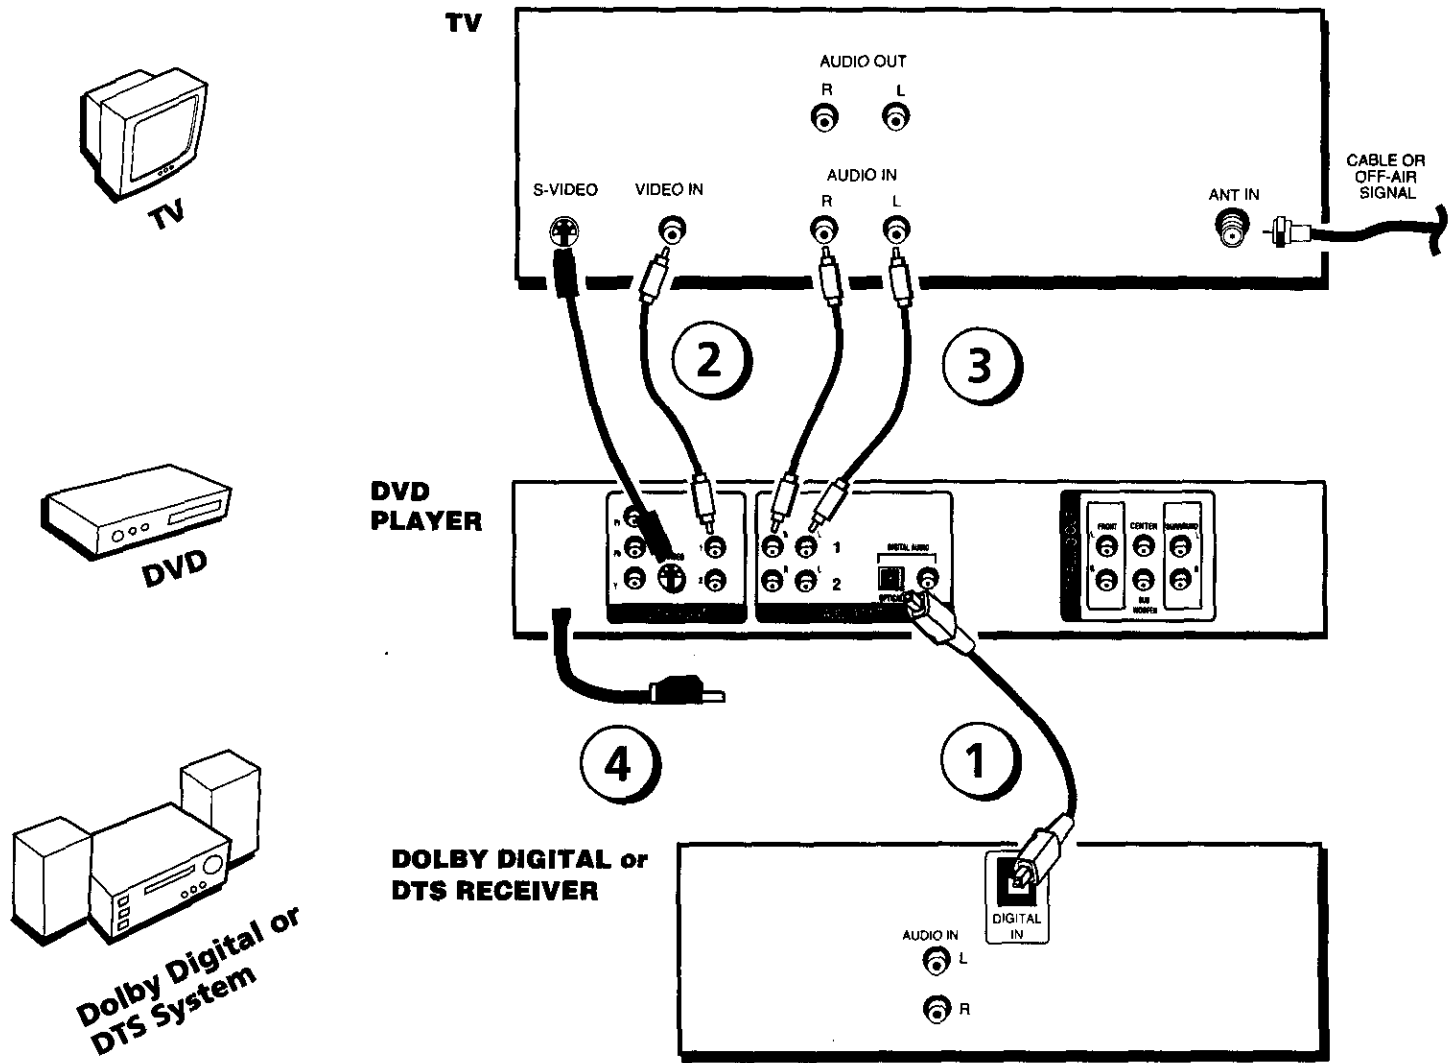

## Dolby Digital® and DTS®

Both Dolby Digital and DTS are audio formats used to record 5.1-channel audio signals onto the digital track of film (while the film is being made). Both of these formats provide up to six separate channels: left, right, center, left rear, right rear, and common subwoofer.

The disc will play 5.1-channel sound only if you've connected a DTS or Dolby Digital receiver or decoder and if the original movie the disc was recorded from was encoded in the Dolby Digital or DTS format.

### Please Read This Before Using the DIGITAL AUDIO OUT Jack!

*This player's digital output jack is designed for a connection to a Dolby Digital or DTS receiver or decoder. This player has two types of DIGITAL AUDIO OUT jacks: optical and coaxial. Use the jack (and the corresponding cable) that matches the type of DIGITAL AUDIO IN jack your receiver or decoder has.*

*Older digital equipment may not be compatible with the Dolby Digital bitstream. Such a connection can create a high level of noise that may be harmful to your ears, and could damage headphones or speakers.*

*It is important to choose the correct Digital Output setting in the DVD Player's Sound menu, especially when you use the DIGITAL AUDIO OUT jack. For more information, see chapter 6.*

## DVD Player + TV + Dolby Digital or DTS Receiver

### To Connect the DVD Player

1. If you have a Dolby Digital or DTS receiver, insert an optical digital cable (not provided) to the DIGITAL AUDIO OUT jack on the DVD player to the Digital Input jack on the back of the receiver. You must also set the Digital Output setting in the Sound menu (see chapter 5).

*Note: The connection illustration on the left shows a digital optical cable. If your receiver has a coaxial AUDIO IN jack, use a shielded (coaxial) video or audio cable with RCA plugs at both ends to connect the coaxial digital audio jacks on the DVD player and the A/V receiver.*

2. Connect the video cable.

- **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

**OR**

- **S-Video** – (optional) If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

**OR**

- **Component video** (optional) – If your TV has component video (Y, P<sub>B</sub>, and P<sub>R</sub> jacks) use video-grade cables for the Y, P<sub>B</sub>, and P<sub>R</sub> connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.


3. **Down Mix Audio** (optional) – Connect the second set of AUDIO OUT jacks on the back of the DVD player to the AUDIO IN jacks on the back of the TV. This allows you to listen to discs without going through the receiver. For example, if it's late at night and you want to listen to a disc without 5.1-channel sound on, you can turn off the receiver and listen to the disc through the TV speakers.
4. Plug in the AC power cord into an AC outlet.

**Go to page 21**

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.

DTS is a registered trademark of Digital Home Theater Systems, Inc.

# Connections & Setup

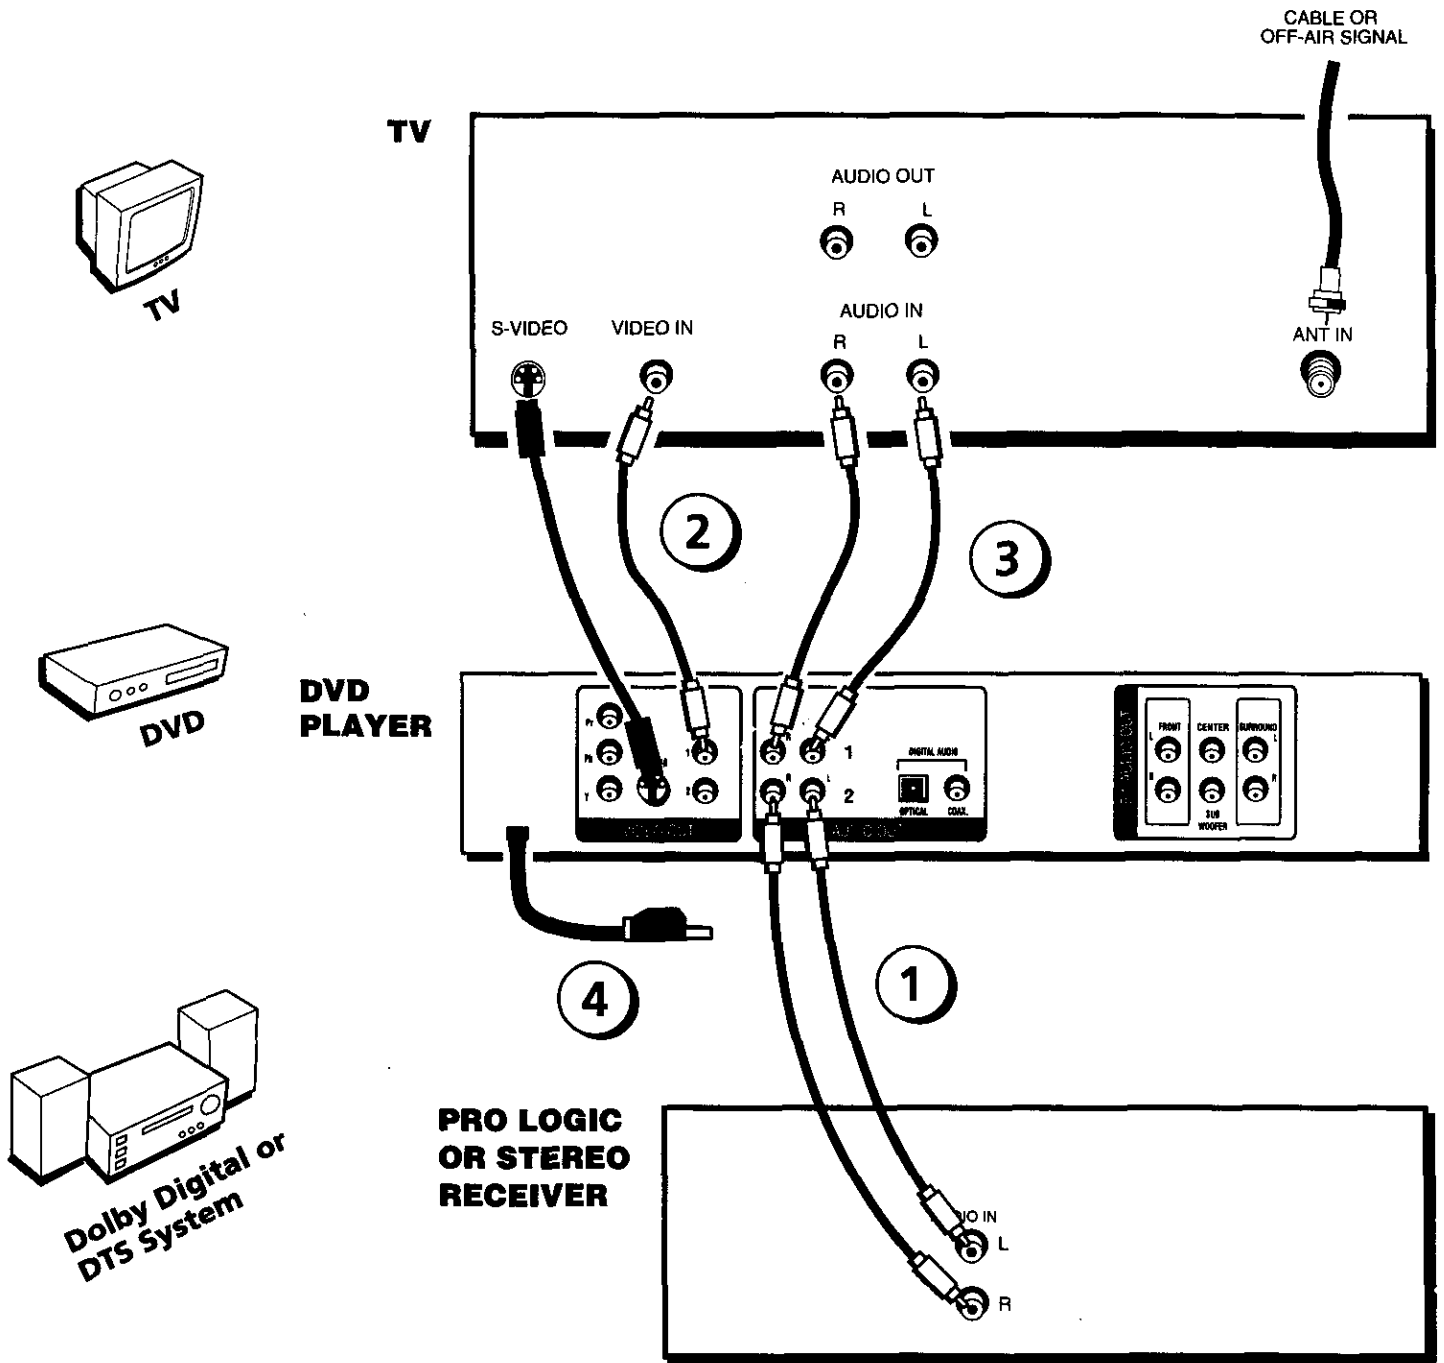





## DVD Player + TV + Dolby Pro Logic or Stereo Receiver

### To Connect the DVD Player

1. Connect the left and right audio cables to your audio/video receiver and to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player.
  2. Connect the video cable.
    - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.
- OR**
- **S-Video** – (optional) If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.
- OR**
- **Component video** (optional) – If your TV has component video (Y, P<sub>B</sub>, and P<sub>R</sub> jacks) use video-grade cables for the Y, P<sub>B</sub>, and P<sub>R</sub> connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
  3. **Down Mix Audio** (optional) – Connect the second set of AUDIO OUT jacks on the back of the DVD player to the AUDIO IN jacks on the back of the TV. This allows you to listen to discs without going through the receiver. For example, if it's late at night and you want to listen to a disc without 5.1-channel sound on, you can turn off the receiver and listen to the disc through the TV speakers.
  4. Plug in the AC power cord into an AC outlet.

**Go to page 21**

# Connections & Setup

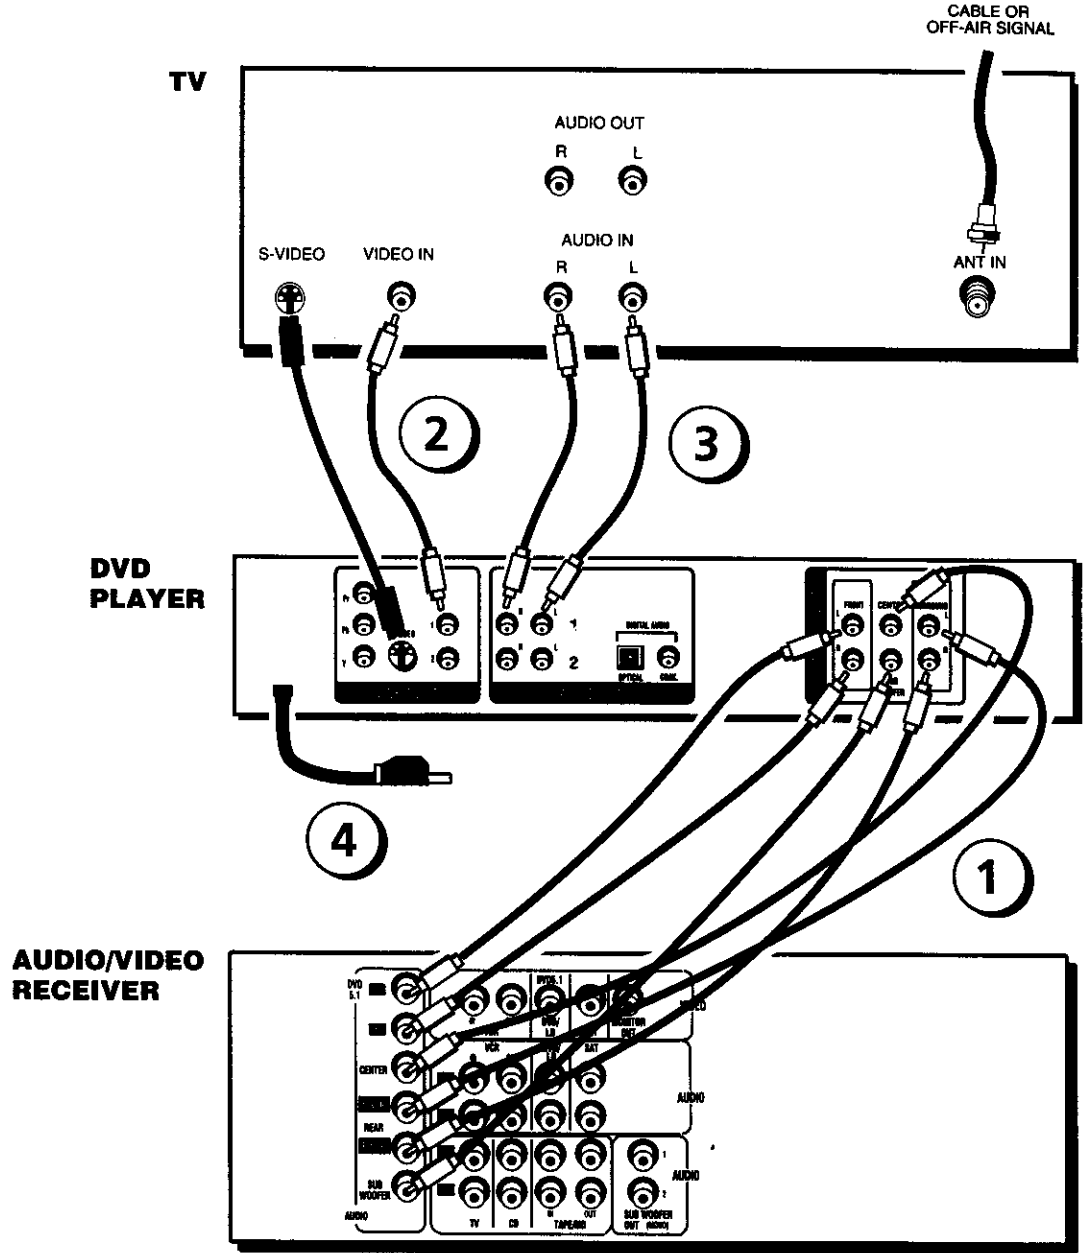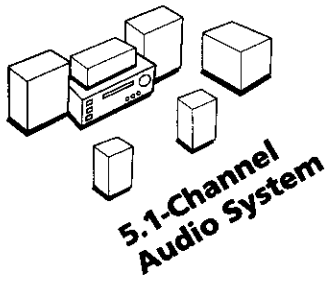

## DVD Player + TV + 5.1-channel Audio/Video Receiver

### To Connect the DVD Player

1. Connect the audio cables from the AUDIO OUT FRONT R and L, SURROUND R and L, SUBWOOFER, and/or CENTER jacks on your DVD player to the corresponding Audio Input jacks on your audio/video receiver. Set up the speakers using the *Speaker* option from the *Sound* menu (see chapter 5).
2. Connect the video cable.
  - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

**OR**


 

  - **S-Video** – (optional) If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

**OR**

  - **Component video** (optional) – If your TV has component video (Y, P<sub>B</sub>, and P<sub>R</sub> jacks) use video-grade cables for the Y, P<sub>B</sub>, and P<sub>R</sub> connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
3. **Down Mix Audio** (optional) – Connect the second set of AUDIO OUT jacks on the back of the DVD player to the AUDIO IN jacks on the back of the TV. This allows you to listen to discs without going through the receiver. For example, if it's late at night and you want to listen to a disc without 5.1-channel sound on, you can turn off the receiver and listen to the disc through the TV speakers.
4. Plug in the AC power cord into an AC outlet.

**Go to page 21**

# Connections & Setup

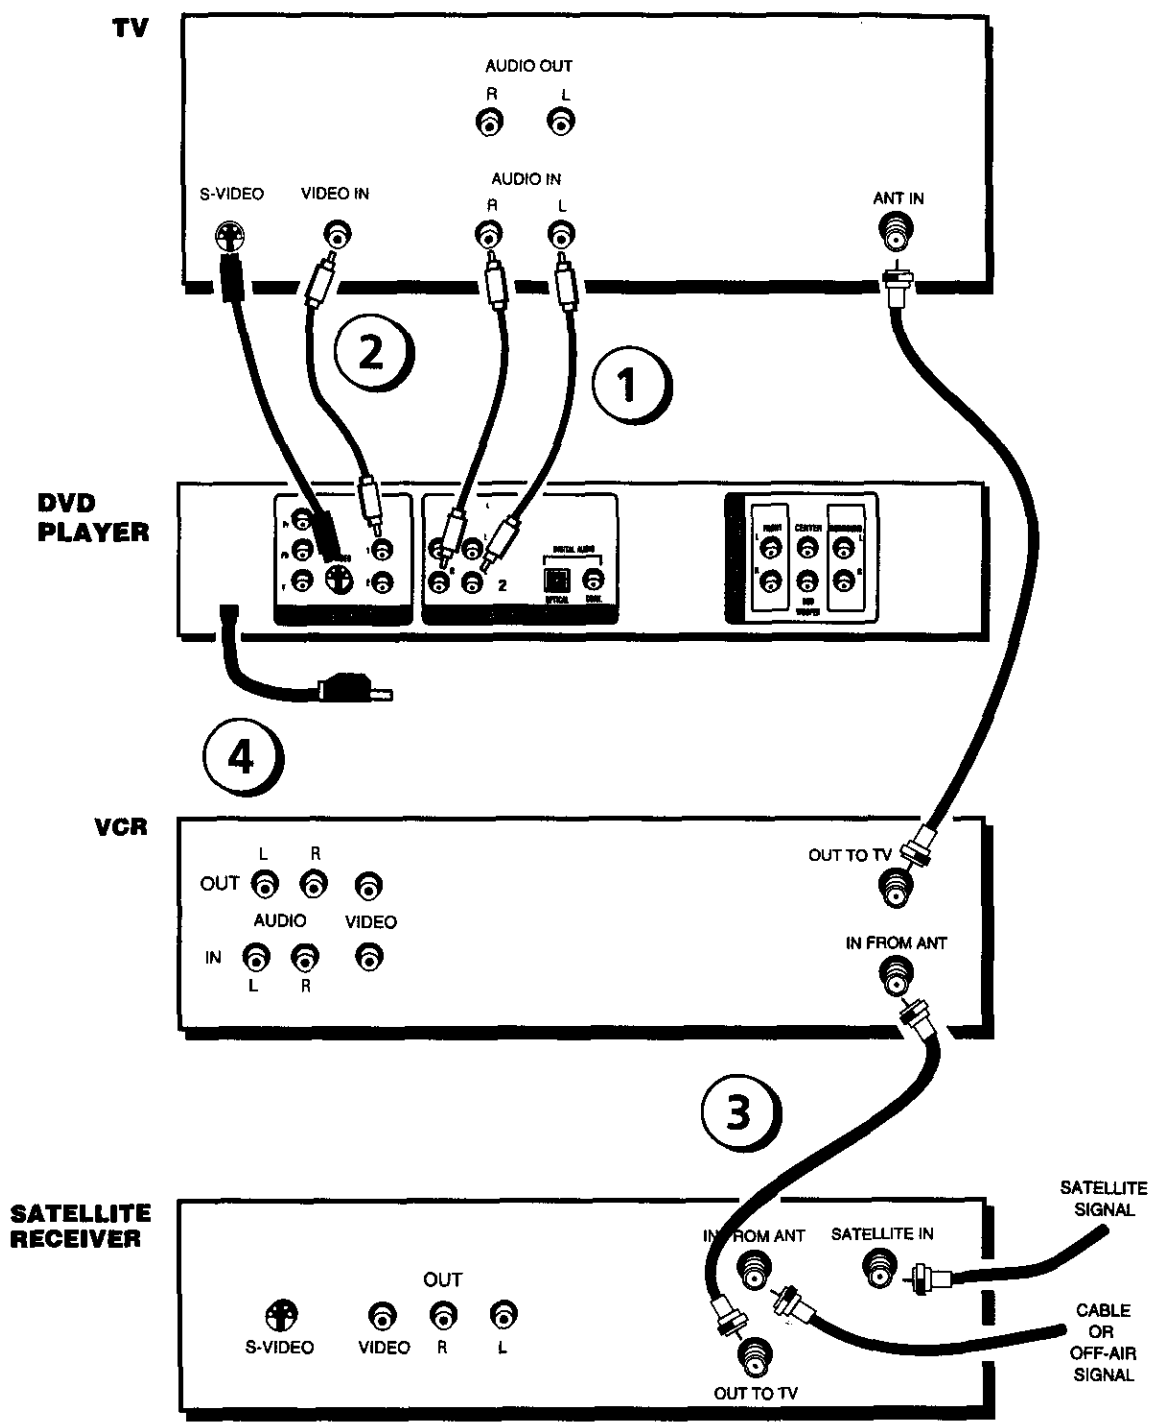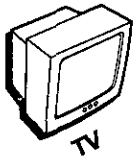

## DVD Player + TV + VCR + Satellite Receiver

1. Connect the audio cables to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player, and to the corresponding Audio Input jacks on your TV.
2. Connect the video cable.
  - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

**OR**

  - **S-Video** – (optional) If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

**OR**


  - **Component video** (optional) – If your TV has component video (Y, P<sub>B</sub>, and P<sub>R</sub> jacks) use video-grade cables for the Y, P<sub>B</sub>, and P<sub>R</sub> connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
3. Use a coaxial cable to connect the antenna output on the satellite receiver to the antenna input on the VCR.
4. Plug in the AC power cord into an AC outlet.


**Go to page 21**

# Connections & Setup

## The Jacks on the Back of the DVD Player

When connecting, make sure you connect Output jacks to Input jacks, Video to Video, Right Audio to Right Audio, etc.

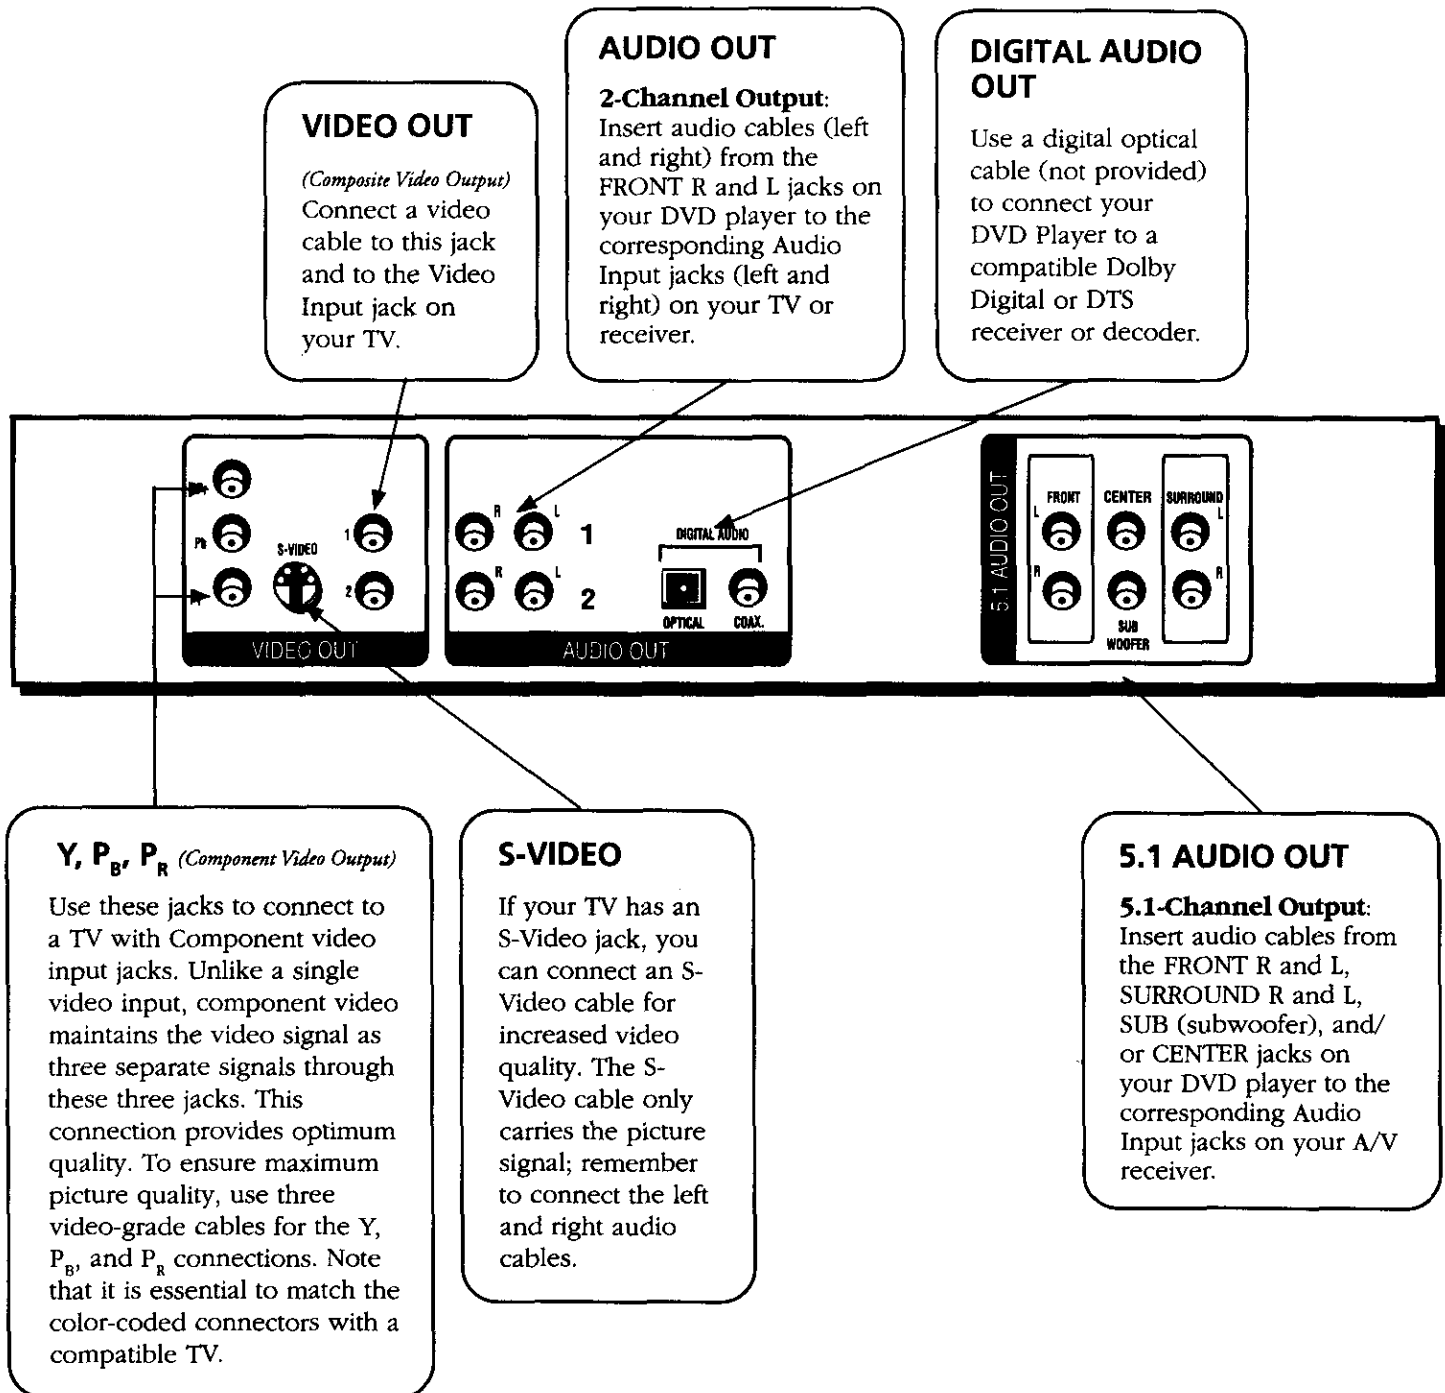

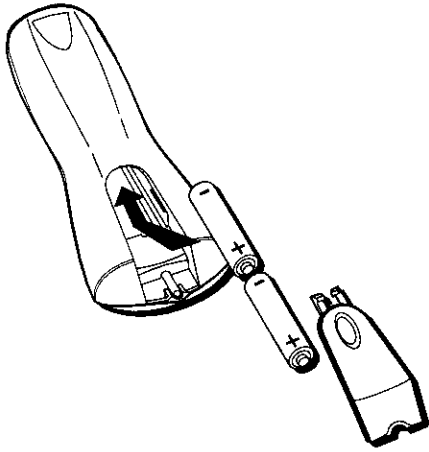

## Installing Batteries in the Remote

1. Remove the battery compartment cover on the back of the remote.
2. Insert new batteries. Match the polarities (+ and -) on the batteries with the diagram on the remote.
3. Put the battery compartment cover back on the remote.

## Important Battery Information

- If you're not going to use the remote for a month or more, be sure to remove the batteries because they can leak and cause damage.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, if all batteries are not replaced at the same time, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

## Point the Remote in the Right Direction

When you want the remote to operate the DVD Player, point the remote at the DVD Player, *not* the TV. The remote has to be pointed in the correct direction and toward the correct component in order for the remote's signal to communicate with the sensor on the component. Make sure there is a clear path between the remote and the component you want to operate so the signal isn't blocked.

## Turn on the TV and DVD Player

1. Turn on your TV and tune to the correct video input channel (see following page).
2. Press the DVD button on the DVD remote or the ON•OFF button on the DVD player.

# Connections & Setup

---

## How to Find Your TV's Video Input Channel

You need to tune your TV to the Video Input Channel (or S-Video Channel if you connected the S-Video cable to your TV and to your DVD Player) to see the DVD Player's menu and to see the content that's on a disc. The video channel on TVs varies for different brands and different models. In order for your DVD remote to work, your TV must be set on the correct video input channel. Below are some things to try.

- If your TV brand is RCA, GE, or PROSCAN, press the TV button on the remote that came with your TV (not the DVD remote). Then press the INPUT button on the remote.
- If you have another brand, consult your TV's Owner's Manual.


If those options don't work, try one of the following options.

- Press a button on the TV remote (see table below).
- Select it from the TV's menu system.
- Tune directly to the DVD input channel by pressing a specific number (see table below).
- Go through all the channels in the channel list by pressing the channel up/down buttons on the TV.

Some common scenarios are listed in the following table:

<b>Video Input Channel Variations</b>		
<b>Button/Switch on the TV</b>	<b>Button on the TV Remote</b>	<b>Channel #</b>
VIDEO	VID 1	00
SIGNAL	LINE	90
VID 1	VID	91
VID 2	VIDEO	92
S-VID	S-VID	93
S-VIDEO	INPUT	VID 1
	S-VIDEO	VID 2
	SOURCE	
	AUX	



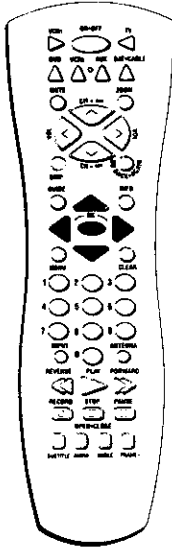


The buttons used for navigation are shown in gray. Use these arrow buttons to highlight an item on the screen. Press the OK button to select a highlighted item.

## How to Move Around the DVD Player's Menu System

The technical term for how you move through the DVD Player's menu system is "Navigation."

This book tells you how to select different menu items, but you can explore the menu system on your own by following a few "navigational rules."

Press the DVD button to put the remote into DVD mode. Then use the arrow buttons on the remote (highlighted in gray on the picture on the left) to highlight different menu items on the screen. (In your DVD Player's menu, a highlighted item appears brighter than the other items on the screen.) To select a menu item, press OK on the remote when the menu item is highlighted.

The invalid symbol  appears on the screen when you press a button that doesn't have any function for that disc.

*Note: Navigational controls are also available on the front of the player.*

## Set the Menu Language


When you turn on your DVD player for the first time, the Automatic Language Selection Screen appears.

By default, the player's on-screen displays are shown in English. If you want the on-screen menus to appear in English, press OK on the remote.

To change the language:

1. Press the down arrow button on the remote until the appropriate language is highlighted.
2. Press OK on the remote.

This screen sets all language preferences for on-screen displays to the same language. You can use the DVD player menu to set individual language preferences (see chapter 6).

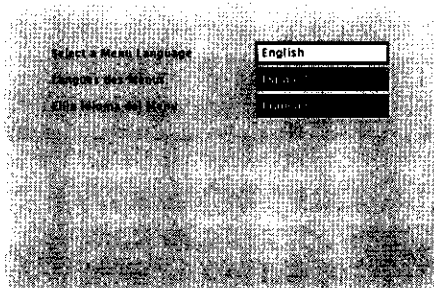


This is the Automatic Language Selection Screen. English is the default language, and automatically appears highlighted when the screen comes up.

## Setting Other Options

The DVD player menu contains many options which can enhance your DVD experience. These options include:

- password control and ratings limits
- language preferences
- audio preferences
- display options

For more information on menu options, see chapter 6.

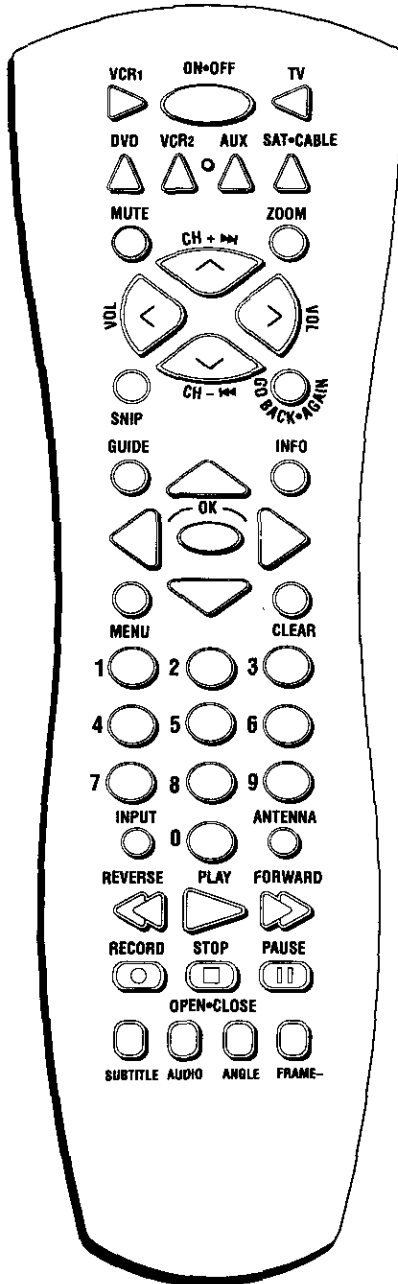

## A Quick Tour of The Remote

You can use this remote to control compatible components. The component buttons are programmed to operate some PROSCAN, RCA and GE components. The buttons must be programmed to operate other brands of components. (See "Programming the Remote" in chapter 7.)

### Component Buttons

(Buttons listed in alphabetical order)

Use these buttons to turn on the component and set the remote to control the selected component.

**AUX** Use this button to turn on a compatible TV, VCR, satellite receiver, or cable box after it has been programmed (see chapter 7). Used with the ON•OFF button to turn on some brands of components.

**DVD** Use this button to turn on the DVD player and set the remote to control the DVD player.

**SAT•CABLE** Use this button to turn on a compatible satellite receiver. Used with the ON•OFF button to turn on some brands of satellite receivers.

**TV** Use this button to turn on a compatible TV and set the remote to control the TV. Used with the ON•OFF button to turn on some brands of TVs.

**VCR1 and VCR2** Use this button to turn on a compatible VCR and set the remote to control the VCR. Used with the ON•OFF button to turn on some brands of VCRs.

### DVD Buttons

(Buttons Listed in Alphabetical Order)

**ANGLE** Use this button to access various camera angles on a DVD disc (if the DVD disc contains multiple camera angles).

**Arrow buttons** Use the arrow buttons (left, right, up, and down) to move through on-screen menus. You highlight a menu item by pressing the arrow buttons. You select a highlighted item by pressing the OK button.

**AUDIO** Use this button to access various audio features while playing a disc.

**CH +** advances to the next chapter, track, index or MP3 title.

**CH -** reverses to the preceding chapter, track, index or MP3 title.

**CLEAR** Allows you to clear information, such as remove the Info display from the screen.

**FORWARD** Allows you to search forward through a disc while it is in play mode (or slow speed search in pause mode). Press repeatedly to increase speed.

**FRAME-** Press this button during playback to reverse the disc one frame at a time.

**GO BACK•AGAIN** When you're using the DVD Player's menu system, press this button to return to the preceding menu screen. When you're watching or listening to a DVD disc, press this button to go back 10 seconds to see/hear missed content.

*Note: The AGAIN feature may not be available for some DVD titles.*

**GUIDE** Allows you to see the titles that are available on the current disc (if the disc contains a guide menu).

**INFO** Press this button while you're playing a disc to see the on-screen Info Display. The Info Display contains various playback features and gives you information about the disc you're playing (press again to remove the Info Display from the screen).

**MENU** Press this button to see the disc's menu when you're playing a disc (press it again to resume playback).

**Number buttons (0-9)** Use the number buttons to input information such as chapter numbers, track numbers, or to make selections on some menu screens.

**OK** Press this button to select a highlighted menu item.

**ON•OFF** Turns on the player when it is in standby mode or puts the player in standby mode when power is on.

**OPEN•CLOSE** When the STOP button is held down, opens and closes the disc tray.

**PAUSE** Pauses disc play. When disc play is paused, press PAUSE again to advance a frame or press FRAME - to go back a frame.

**PLAY** Begins disc play (and closes disc tray if it is open).

**REVERSE** Allows you to search backward through a disc while it is in play mode (or slow speed search in pause mode).

**SNIP** Displays the Scene Snip Info Display so you can edit out selected scenes from the DVD disc.

**STOP** Stops disc play. You can also press STOP to remove the screen saver from the screen to see the DVD Player's main menu. When you hold the STOP button down, it acts as the OPEN•CLOSE button to open and close disc tray.

**SUBTITLE** Use this feature to turn the subtitles off and on. While the subtitle info area is displayed press the arrow up and down buttons on the remote to change subtitle languages (if available).

**ZOOM** Use this button to zoom in on certain areas of the screen.

**This page left intentionally blank.**

# Playing DVDs

### Chapter Overview:

- Regional Coding
- Using Different Menus
- Loading and Playing Discs
- Using a Disc Menu
- Using the On-Screen Info Display
- Disc Playback Features Using the Remote



Changing Entertainment. Again.



# Playing DVDs

---

## Regional Coding

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes don't match, the disc won't play. This player's code is region 1.

## Using Different Menus

Each disc is programmed with different features. There are three separate menu paths that you can use to access features:

- **The Disc menu** – The Disc menu is part of each disc and is separate from the DVD player's menu. The contents of each Disc menu varies according to how the disc was authored and what features are included. The Disc menu is turned on and off (while the disc is playing) with the MENU button on the remote or the front of the player.
- **The DVD player's Info Display** – The Info Display appears as icons across the top of the screen when a disc is playing. It can only be accessed while you are playing a disc. It's turned on and off with the INFO button on the remote or the front of the player.
- **The DVD player menu** – The DVD player's menu system is accessed only when a disc isn't playing. It appears automatically when the STOP button is pressed.

Remember that a feature will only work if the disc was programmed with that feature. For example, if you choose subtitles on the Info Display, the subtitles will only appear if the disc was created with subtitles. If a menu item is "grayed out" it means that item isn't available.

## Loading and Playing Discs

Your DVD player plays DVD discs, Video CD discs, Audio CD discs, CD-R discs and CD-RW discs. Before you load a disc, make sure that it is compatible with the player. The following discs CANNOT be used with this player:

- Laserdiscs
- CD-I, CD-ROM (computer-only discs), DVD-ROM
- Discs recorded using other broadcast standards (i.e. PAL or SECAM)

### Notes:

*If the message "Tray Locked" appears on the screen:*


- *The retail lock feature has been accidentally engaged. To unlock the disc tray you must press and hold a combination of keys simultaneously:  
On the front panel of the DVD Player, at the same time press and hold the SKIP FWD, OPEN•CLOSE, and TS SURROUND buttons for at least 3 seconds.*
- *The Front Tray Lock feature is turned on. From the Lock menu (see chapter 6), highlight **Front Tray Lock**. Press OK to toggle the Front Tray Lock setting Off.*

## To Load and Play a Disc

Turn on the TV and your DVD Player (press ON•OFF on the player or press the DVD button on the remote control).



This is an example of a one-sided disc.

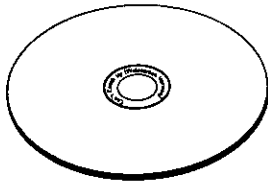

This is an example of a 2-sided disc. The title is in the center.

1. Press the OPEN•CLOSE button on the front of the DVD Player or on the remote. The disc tray opens.
2. Place a disc gently into the tray with the disc's label facing up (double-sided discs have content on both sides, so you can place either side up).
3. Press the OPEN•CLOSE or PLAY button. The disc tray closes.

The DVD Player reads the disc's table of contents, and then one of three things happens depending on how the disc was programmed:


- The disc starts playing.
- The disc menu appears on the screen. One of the options will start disc play. Highlight that option and press OK on the DVD remote.
- The DVD Player's main menu appears on the screen. Highlight the *Play* option and press OK on the DVD remote.

When you stop playing a disc, the DVD player remembers where you stopped. When you start playing the disc again, the player picks up where you left off unless the disc is removed, the player is unplugged, or you pressed the STOP button twice.

## Using a Disc Menu

A disc is capable of having an on-screen menu that is separate from the DVD player's menu system and on-screen Info Display. The disc menu might only contain a list of the titles and chapters, or it may allow you to change features such as language and playback settings.

Although the content and operation of disc menus vary from disc to disc, the following example will give you an idea of what to expect.

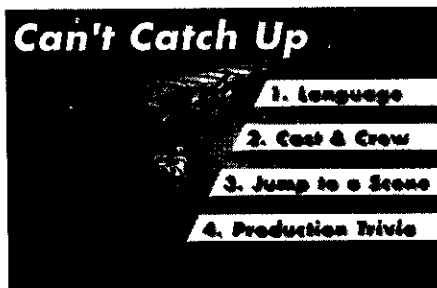

An example of a disc menu. The menus on discs vary because the disc menu is created by the disc's author.


1. While the disc is playing, press the MENU button on the remote or the front of the player. The disc menu appears.

### Tip


Many discs skip the disc menu and start playing automatically. To access the disc menu when you're playing a disc, press MENU on the remote.

# Playing DVDs

---

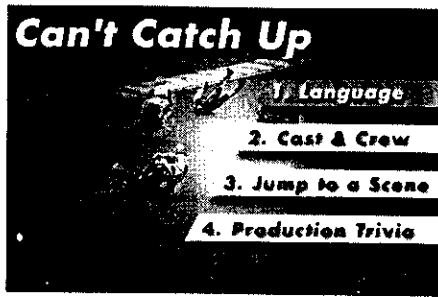

In this example, The *Language* setting is highlighted. To select this option, press OK on the remote.

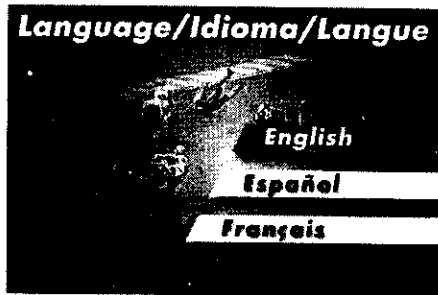

In the example on the left, English is highlighted. Press OK on the remote to play the disc with English dialog.

2. Press the up/down arrow buttons to highlight the section of the disc menu you want to choose, and press OK on the remote. In the example on the left, *Language* has been selected.

3. Press the up/down arrows to select a language, and press OK on the remote.
4. Press MENU on the remote or the front of the player to resume playback.

*Note:* Any settings you change on the disc menu only override the default settings in the DVD Player's menu temporarily. Default settings are the settings that you set up in the DVD Player's menu system. To change the default settings, see Chapter 6.




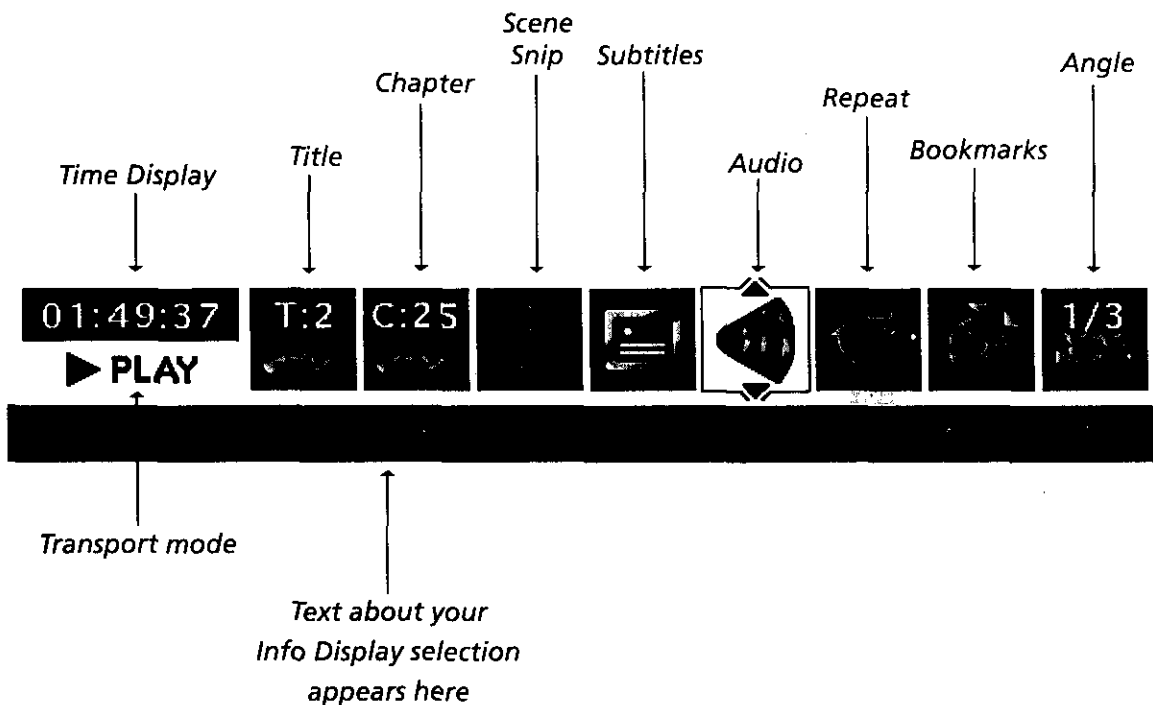
## Using the On-Screen Info Display

The on-screen Info Display contains many playback features. To see the Info Display, press the INFO button on the remote or the front of the player while a disc is playing. The Info Display appears across the top of the screen. Each feature is represented by an icon. Use the left/right arrow buttons on the remote or the front of the player to move through the different icons in the Info Display.

When an icon is highlighted, use the up/down arrow buttons on the remote or the front of the player to scroll through the choices displayed in the text box under the icons.

Remember, you can only access the Info Display when you're playing a disc. Also, the Info Display features are only available if the disc was created with that particular feature (i.e., if you select the Subtitle icon, you won't be able to change the subtitle language unless the author of the disc created the disc with subtitles).

The invalid symbol  appears on the screen when you press a button that doesn't have any function. If one of the icons is "grayed out," that Info Display feature isn't available for the disc you're playing. To make the Info Display disappear from the screen, press INFO on the remote or the front of the player.



The Info Display differs depending on the type of disc that is in the player. The illustration above shows the Info Display for DVD discs.

01:49:37

## Time Display

This feature displays the audio/video time. For DVD discs, the time displayed refers to the current title time. For Audio CDs and MP3 discs, it refers to the current track time.

For DVD video discs, the Time Display also acts as a Time Search feature. This lets you go to a particular scene in a movie by entering the time that scene is played. For example, if you like the dogfight scene in *Top Gun*, you can enter the elapsed time the scene plays and skip right to it. To use Time Search:

1. Press INFO on the remote or the front of player to bring up the Info Display. Highlight the Time Display and enter the elapsed time of the scene you wish to go to. For example, enter 01:12:00 to go to the scene that plays at 1 hour and twelve minutes into the movie.
2. When you've entered the time, Press OK on the remote.



## Selecting a Title

Some discs contain more than one title. For example, there might be four movies on one disc (each movie might be considered a title). Each title is divided into chapters. To select a title:

1. While the disc is playing, press INFO on the remote or the front of the player to bring up the Info Display.
2. If the *Title* icon on the Info Display isn't highlighted, use the left/right arrow buttons to highlight it.
3. Use the number button(s) on the remote to enter the title number or press the up/down arrow buttons to go to the next/previous title.
4. Press OK on the remote when the title you want to play appears in the text window.

**Note:** Some discs only have one title.



## Selecting a Chapter

Because DVD discs use digital technology, a title can be divided into individual chapters (similar to tracks on a CD). You can skip to a specific chapter by using the Chapter feature in the Info Display.

1. While a disc is playing, press INFO on the remote or the front of the player to bring up the Info Display.
2. Press the arrow buttons to highlight the *Chapter* icon.
3. Use the number buttons on the remote to enter the number of the chapter you want to play or press the up/down arrow buttons to go to the next/previous title.
4. Press OK on the remote.

### Notes:

*The Chapter feature won't work if the disc isn't formatted with separate chapters.*

*You can also advance to the next chapter by pressing CH + ► on the remote (SKIP FWD on the front of the player) and go to the preceding chapter by pressing CH - ◀ on the remote (SKIP BACK on the front of the player).*




## Scene Snip Editing

The Scene Snip feature lets you edit out select scenes on a disc. Once you have made edits, the disc's title is stored in the Scene Snip Library so you can play either the edited or unedited version of that disc.

### Editing a Disc

1. While the disc is playing, press SNIP on the remote to bring up the *Scene Snip* Info Display.  
*Note:* You can also press *INFO* on the remote or the front of the player, select the *Scene Snip* icon (scissors) and press *OK*.
2. The *Scene Snip* display appears. An available icon will be highlighted (a scissors icon with the word *Uncut* next to it).

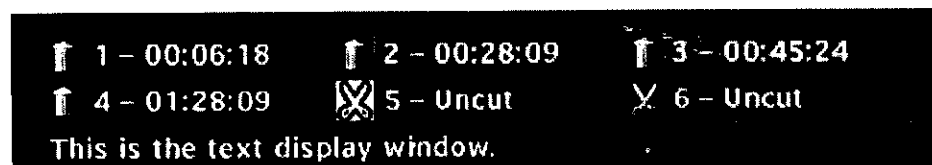

3. When you reach the beginning of the scene you want to edit out, press *OK* on the remote. The number of the cut and a time display appear next to the icon. For example, in the illustration above, the first cut is indicated by the number 1 followed by the time the cut begins - 00:06:18.
4. When you reach the end of the scene you want to edit out, press the *OK* button on the remote. The icon changes to a trash can with the cut number and beginning time displayed next to it. The edited version of the disc is added to the Scene Snip library.
5. Press the *INFO* or *CLEAR* button on the remote to remove the Scene Snip display from the screen.

# Playing DVDs

---

## Using Scene Snip

The DVD Player must be locked to play the edited version of a disc. If you play the disc in an unlocked state, it will play as if there are no edits. The player is locked and unlocked from the DVD player *Lock* menu (see chapter 6).

When the DVD Player is locked, you must enter the password to play the edited disc. To play the edited version of a disc:

1. Make sure the DVD Player is locked.
2. When a disc including Scene Snips is inserted, a message box with two options appears:

*Play Unedited*

*Play Edited*

3. Highlight and select *Play Edited*. The edited version of the disc is played.

If you want to play an unedited version of a disc that has been assigned Scene Snips, you must enter a password.

Each side of a 2-sided disc must be edited separately.


*Note: Random and Program play are not available when Scene Snip is on.*

## Clearing Scene Snips

To clear an edit while the disc is playing:

1. Press SNIP on the remote to bring up the Scene Snip Display. You will be prompted for a password.
3. Enter your password (the Scene Snip Info Display will appear).
4. Highlight the trash can icon next to the edit you want to clear. Press OK.
5. The edit is cleared and the trash can icon changes back to the scissors icon.

If all 6 edits are in use, you can only add a new edit by clearing an existing one.

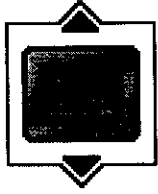

## Turning Subtitles On and Off

By default, subtitles are off. To turn subtitles on:

1. While the disc is playing, press INFO on the remote.
2. Highlight the *Subtitles* icon. The *Subtitles* icon acts as a toggle to turn subtitles on and off. When subtitles are on, the text box below the icons will display the current subtitle language.

You can also turn on subtitles by pressing the SUBTITLE button on the remote control. When the Info Display comes up the *Subtitles* icon will be highlighted. Press the up/down arrow buttons to change the subtitle language (if available on that disc).

## Selecting the Subtitle Language

You can change the subtitle language while you're watching a DVD disc, but only if the disc was created with subtitles.

1. While the disc is playing, press INFO on the remote or the front of the player.
2. Press the arrow buttons to highlight the *Subtitle* icon and, if subtitles are off, press OK to turn them on.
3. Use the up/down arrow buttons to scroll through the subtitle languages that are available on the disc. If subtitles aren't available, the text in the text box will read *Subtitles: Not Available*. If subtitles are available, the language currently showing in the text box is the active selection. The subtitles will be shown in that language.
4. To make the Info Display disappear, press the INFO button on the remote or the front of the player.

### Notes:

*Changing the subtitle language with the Info Display will only affect the disc currently being played. When the disc is removed or the player is turned off, the subtitle language will revert to the language setting specified through the DVD player main menu.*

*The subtitle language can also be changed through the DVD player menu.*

*You can also display the subtitle Info Display by pressing SUBTITLE on the remote. Press SUBTITLE again to toggle subtitles on or off. Use the up/down arrow buttons to select a different subtitle language (if available). Press INFO to remove the Info Display from the screen.*



## Changing the Audio Language

If the disc was created with different language tracks (recorded in different languages), you can use the Info Display to temporarily change the DVD Player's Audio Language setting.

1. While a disc is playing, press INFO on the remote or the front of the player to bring up the Info Display.  
*Note: You can also bring up the info display by pressing the AUDIO button on the remote (the Audio icon will be highlighted).*
2. Highlight the *Audio* icon. The current audio language appears in the text box below the row of icons.
3. Press the up/down arrow buttons to scroll through the audio languages that are available on the disc until the audio language you want to use appears in the text box. Audio will be played in that language.
4. To make the Info Display disappear, press the INFO button on the remote or the front of the player.

### Notes:

*The language feature only works if the disc was created with multiple audio tracks.*

*When you choose an audio language from the Info Display, you only override the audio language setting in the DVD Player's main menu temporarily.*

*The audio language can also be changed through the DVD player menu.*



## The Repeat Feature

The default mode for the Repeat feature is Off. There are four Repeat options:

- Disc – repeats the disc that is playing
- Title – repeats the title that is playing
- Chapter – repeats the chapter that is playing
- A•B – Set the beginning (point A) and the end (point B) of a segment to make this part of the movie play repeatedly.

### To Use Title or Chapter Repeat:

1. While a disc is playing, press INFO on the remote or the front of the player to bring up the Info Display.
2. Highlight the *Repeat* icon. The text in the text box below the icons will read *Repeat Mode: Off*.
3. Press the up/down arrow buttons to scroll through the *Repeat* options until the Title or Chapter Repeat option is displayed in the text box.
4. Press OK. The selected repeat option will loop continually until you turn Repeat off. Repeat is turned off by completing steps 1 through 3 above, and selecting the Off option.

### A•B Repeat


A•B Repeat lets you define a specific segment on the disc that you want to repeat. For example, you might like to watch the dogfight in the movie *Top Gun*. To watch this scene over and over:

1. Find the spot on the disc that is a few seconds **before** the beginning of the scene you want to repeat (this gives you time to access the Info Display and the Repeat feature).
2. Press INFO on the remote and select the *Repeat* icon from the Info Display.
3. Press the up/down arrow buttons until the A•B Repeat option is shown in the text box underneath the icons. The text box reads *Repeat Mode: A-B Press OK to Set A Point*.
4. At the beginning of the scene you want to repeat, press OK to set the A point.
5. When you get to the part of the disc that you want to be the end of the repeated segment (the B point), press OK. The segment will repeat until you turn Repeat off.
6. To make the Info Display disappear from the screen, press the INFO button on the remote or the front of the player.

### How to Cancel Repeat

There are three ways to cancel Repeat:

- Press STOP twice.
- Go to the *Repeat* icon in the Info Display and select *Off*.
- Eject the disc.

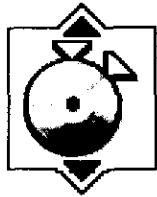


## Using Bookmarks

The bookmark feature lets you mark a point on the disc that you can go to quickly. You can store up to six bookmarks per disc. When you turn the player off or remove the disc, bookmarks are cleared.

### Storing a Bookmark

1. While a disc is playing, press INFO on the remote.
2. Highlight the *Bookmark* icon and press OK.
3. The *Bookmark* Display appears. An available unmarked icon will be highlighted (a disc with two arrows).

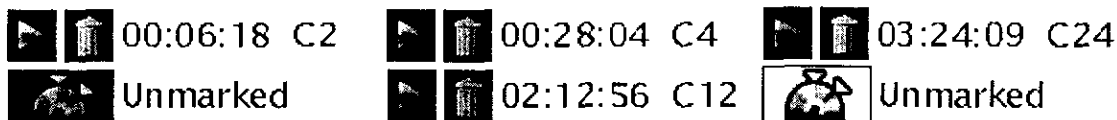

4. When you reach the scene you want to mark, press OK. The unmarked icon changes to two icons (side-by-side):
  - An arrow that is used to activate the bookmark.
  - A trash can that is used to clear the bookmark.Next to the icons, the bookmark start time and chapter are displayed.
5. Press the INFO button on the remote to make the Info Display disappear from the screen.

### Using a Bookmark

1. While you're playing a disc, press INFO on the remote. The Info Display appears.
2. Highlight the *Bookmark* icon and Press OK. The *Bookmark* display appears.
3. Highlight the arrow next to the bookmarked scene you want to activate.
4. Press OK to start playback from the place you bookmarked.
5. To make the Info Display disappear from the screen, press INFO on the remote.

### Clearing a Bookmark

The bookmarks are cleared each time a disc is removed from the player or when the power is turned off. If you want to clear a bookmark while the disc is playing:

1. Press INFO on the remote to bring up the Info Display.
2. Highlight the *Bookmark* icon and press OK.
3. Highlight the trash can icon next to the bookmark you want to clear. Press OK. The bookmark is cleared and the trash can icon changes back to the unmarked disc icon.

If all six bookmarks are in use, you can only mark a new scene by clearing an existing bookmark.






## Changing the Camera Angle

Some discs contain multiple angles of a particular scene or sequence. If the disc only has one angle, this feature won't work. When multiple angles are available, the *Camera Angle* icon appears in the upper right corner of the screen. To change the camera angle:

1. While a disc is playing, press INFO on the remote or the front of the player. The Info Display appears.
2. The *Camera Angle* icon will display the number of angles available. For example, if there are 3 different angles, the icon will read 1 of 3. This means angle 1 is currently being played.
3. The text box beneath the icons displays *Camera Angle: 1*. Use the up/down arrow buttons to scroll through the camera angle choices. The camera angle number displayed in the text window is automatically shown.
4. To make the Info Display disappear, press the INFO button on the remote or the front of the player.


**Note:**

*You can also display the camera angle Info Display by pressing ANGLE on the remote. Use the up/down arrow buttons to switch between different camera angles. Press INFO to remove the Info Display from the screen.*

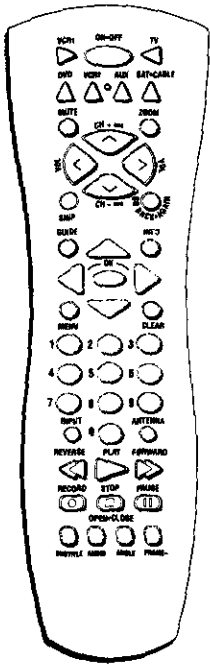

## Disc Playback Features Using the Remote

You can use the remote control to activate disc playback features.

Playback features aren't usually available during the opening credits of a movie. If a playback feature isn't available, the invalid symbol  appears on the screen when you press that button.

### Fast Motion Playback (Picture Scan)

To scan quickly through the disc when you're playing it, use the Picture Scan feature.

1. Press the REVERSE or FORWARD button on the remote when you're playing a disc.
2. Press the button again to scan at a faster speed. Each time you press the button, the scanning speed increases.
3. Press the PLAY button at any time to resume normal playback.

You can also use the Picture Scan feature by rotating the shuttle on the front of the DVD player. Rotate the shuttle clockwise (forward search) or counterclockwise (backward search). The farther you rotate the shuttle, the faster the speed.

*Note: You won't hear the sound (audio) on DVD discs when you're using the picture scan feature.*

### Freeze Frame and Frame Advance

 
 
1. Press PAUSE when a disc is playing to freeze the picture.
2. Each time you press the PAUSE button, the picture advances one frame.
  - Press FRAME - on the remote to advance one frame backwards (frame-by-frame).
3. Press PLAY to resume normal playback.

### Slow Motion Playback (in Freeze Frame Mode)

While the disc is in freeze frame mode, you can use slow motion playback.

1. While the disc is playing, press PAUSE on the remote.
2. Press the REVERSE or the FORWARD button.
3. Press the button again to decrease the slow motion playback speed.
4. Press PLAY to resume normal playback.

### Chapter Advance

While a disc is playing, you can go forward or backward a chapter or track at a time by pressing CH +  or CH -  on the remote.

## Scene Again™

When you're watching or listening to a DVD disc, press the GO BACK•AGAIN button on the remote to go back approximately 10 seconds to see and hear missed content. Subtitles will automatically be displayed until the end of the replayed scene (to select the subtitle options, see chapter 6). This feature only works if the disc is encoded with navigation control.

Multiple presses of the GO BACK•AGAIN button will go back further. For example, if you press the GO BACK button three times in rapid succession, play will go back 30 seconds.

## Subtitles

When a DVD is recorded with subtitles, you can use the Subtitle feature to view the subtitles on-screen.

1. Press the SUBTITLE button on the remote when you're playing a disc to bring up the Info Display.
2. Press the button again to toggle subtitles on or off.
3. Use the up/down arrow buttons on the remote to switch between different languages (if available).
4. Press INFO to remove the Info Display from the screen.

## Audio Language

You can temporarily change the default audio language (if different audio languages are available on that disc).

1. Press AUDIO to bring up the Info Display.
2. Use the up/down arrow buttons to switch between different languages (if available on that disc).
3. Press INFO to remove the Info Display from the screen.

## Camera Angle

Some DVDs are recorded using multiple camera angles (if available on that disc).

1. Press ANGLE to display the *Angle* icon.
2. Use the up/down arrow buttons to switch between different camera angles (if available on that disc).
3. Press INFO to remove the *Angle* icon from the screen.

## Scene Snip Edit

You can edit out sections of a disc.

1. Press SNIP to bring up the *Scene Snip* display.
2. Select the time you want the first edit to start and press OK. Press OK again where you want the edit to end.

- You can edit out up to six sections of a disc.

Press INFO or CLEAR to remove the Info Display from the screen.

# Playing DVDs

---

## Zoom

When playing DVD discs and Video CDs, you can magnify the screen during normal playback. For DVD discs, Zoom has 3 levels (1.5x, 2x, 4x). For video CDs, Zoom has 2 levels (1x, 2x). Zoom magnifies from the center of the screen. Once in Zoom mode, you can pan right, left, up or down by using the arrow buttons.

1. Press ZOOM on the remote control to magnify. (The zoom level will be displayed in the corner of the screen. Press CLEAR to clear the zoom Info Display from the screen.)
2. Press the ZOOM button again to go to the next level of magnification.
3. To turn Zoom off, press the ZOOM button until you cycle through all the levels and return to normal playback.

***Note:** You can use the 1.5x zoom mode to alter a 16x9 letterbox movie (black bars top and bottom) to a 4x3 format. This will eliminate the black bars at the top and bottom and allow you to use left/right arrow keys to pan and scan.*

# Playing Audio CDs

## Chapter Overview:

- Using the Info Display
- Using the Time Display
- Selecting a Specific Track
- Selecting a Play Mode
- The Repeat Feature
- Using IntroScan
- The Bookmark Feature
- Dub Assist



Changing Entertainment. Again.



# Playing Audio CDs

## Using the Info Display


Your DVD player has many of the same features as an audio CD player. The player's on-screen Info Display lets you choose various playback features. This section explains how to play audio CDs in your DVD player and how to use the player's features. For instructions on loading and playing your CDs, see Chapter 2.

To access the Info Display while the CD is playing, press INFO on the remote or the front of the player. The Info Display appears across the top of the screen. Each of the playback features is represented by an icon. To access a feature, use the arrow buttons on the remote to highlight the icon. Each feature that can be accessed from the on-screen Info Display is described on the following pages. To clear the Info Display from the screen, press INFO on the remote control or the front of the player.

### Notes

To see the Info Display while playing audio CDs, you must turn on your TV and tune it to its Video Input Channel. For more information about the TV's Video Input Channel, see Chapter 1.

Some transport modes (reverse and fast forward) are not available for audio CDs.

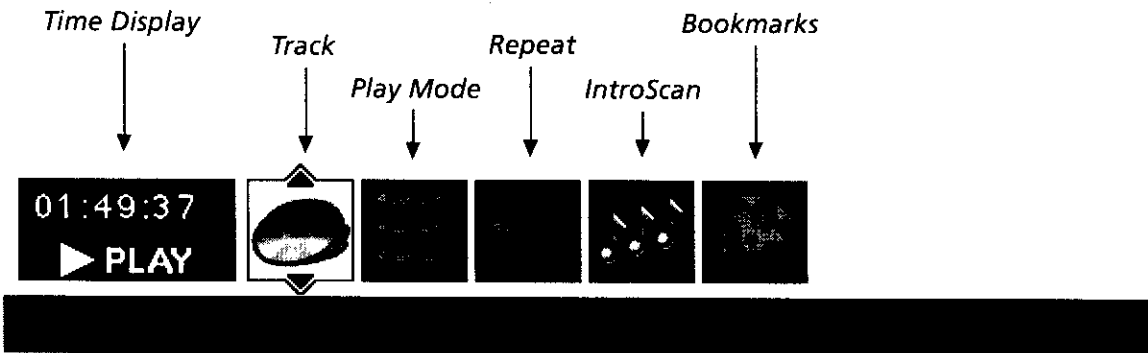

01:49:37


### Using the Time Display

The Clock part of the Info Display shows the current track time. Press INFO to clear the screen.



### Selecting a Specific Track

1. Press INFO on the remote or the front of the player (the Info Display appears).
2. Highlight the *Track* icon.
3. Use the number buttons on the remote to enter the track number you want to play, or use the up/down arrow buttons to scroll through the track numbers. You may need to press the OK button on the remote after you enter a single digit track number.

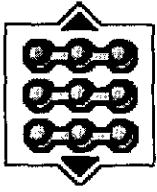

## Selecting a Play Mode

The Play Mode feature lets you set up the order in which you want the tracks on the CD to play. There are three options:

**Standard:** the tracks play in the order listed on the CD (starting with track 1).

**Random:** the tracks on the CD play in random order.

**Program:** the tracks on the CD play in the order you've programmed. You must first create a program list in the *Play Mode* menu of the DVD Player's main menu.

Standard (the order listed on the CD) is the default setting for your player. To change the default setting:


1. Press INFO on the remote or the front of the player while a disc is playing. The Info Display appears.
2. Highlight the *Play Mode* icon. The current play mode appears in the text box underneath the icons. Press the up/down arrow buttons to scroll through the play mode choices until play mode you want appears in the text box. The tracks on the CD will now play in that order.

**Note:** The player defaults to Standard playback whenever you put a new CD into your player.

## Using the Program Play Feature

To use the Program Playback feature, you must enter the order in which you want the tracks on the CD to play by creating a program list. This is done from the DVD player's menu.

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. The *Track* box is highlighted. Use the number buttons on the remote to enter the track you want to play first. The track number you entered appears in the *Track* box and the cursor highlights *Add*.
5. Press OK to add that track to the *Program List*. The cursor jumps to the next spot in the *Program List* section. Make sure the *Track* box is highlighted and enter your next track.
6. Continue adding tracks as explained in steps 4-5 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display. The program will be erased when you remove the disc from the player or the player is turned off.

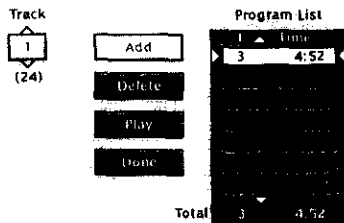

This is where the two lines of context sensitive help will be located.

Use the Edit Program screen to create your own program list.

# Playing Audio CDs

---

## Editing a Playlist

1. If the disc is playing, press STOP to stop playback. The DVD player main menu appears.
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Highlight the item in the playlist you want to delete.
5. Highlight *Delete*, and press OK.
6. When you've rearranged the program list and/or deleted all the tracks necessary, press OK.



## The Repeat Feature

The default mode for the Repeat feature is Off. There are three Repeat options for Audio CDs:

- Disc – repeats the disc that is playing
- Track – repeats the track that is playing
- A•B – Set the beginning (point A) and the end (point B) to make this segment of the CD play repeatedly.

### To Use Disc or Track Repeat:

1. While a disc is playing, press INFO on the remote or the front of the player to bring up the Info Display.
2. Highlight the *Repeat* icon. The text in the text box below the icons will read *Repeat Mode: Off*.
3. Press the up/down arrow buttons to scroll through the *Repeat* options until the Disc or Track Repeat option is displayed in the text box.
4. Press OK. The selected repeat option will loop continually until you turn Repeat off. Repeat is turned off by completing steps 1 through 3 above, and selecting the *Off* option.

### A•B Repeat

A•B Repeat lets you define a specific segment on the disc that you want to repeat:

1. Find the spot on the disc that is a few seconds **before** the beginning of the part you want to repeat (this gives you time to access the Info Display and the Repeat feature).
2. Press INFO on the remote or the front of the player and select the *Repeat* icon from the Info Display.
3. Press the up/down arrow buttons until the A•B Repeat option is shown in the text box underneath the icons. The text box reads *Repeat Mode: A-B Press OK to Set A Point*.
4. At the beginning of the part you want to repeat, press OK to set the A point.
5. When you get to the part of the disc that you want to be the end of the repeated segment (the B point), press OK. The segment will repeat until you turn Repeat off.
6. To make the Info Display disappear from the screen, press the INFO button on the remote or the front of the player.



## How to Cancel Repeat

There are three ways to cancel Repeat:

- Press STOP twice.
- Go to the *Repeat* icon in the Info Display and select *Off*.
- Eject the disc.




## Using IntroScan™

The IntroScan system plays the first ten seconds of each track on the CD (similar to the scan feature that's on many car radios). To use the IntroScan system:

1. Press INFO on the remote or the front of the player (the Info Display appears).
2. Highlight the *IntroScan* icon. Press OK. The first ten seconds of each track will play.
  - After the IntroScan system goes through all of the tracks, it stops.
  - If you want to stop the IntroScan system while it's in progress, press PLAY on the remote. The current track starts playing in its entirety.
  - You can also access the IntroScan system from the *Play Mode* menu in the DVD Player's main menu.

# Playing Audio CDs

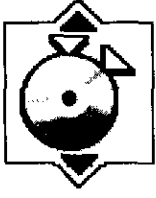


## The Bookmark Feature

The bookmark feature lets you mark a point on the disc that you can go to quickly. You can store up to 6 bookmarks per disc. When you turn the player off or remove the disc, bookmarks are cleared.

### Storing a Bookmark

1. While a disc is playing, press INFO on the remote or the front of the player.
2. Highlight the *Bookmark* icon and press OK.
3. The *Bookmark* Menu appears. An available unmarked icon will be highlighted (a disc with two arrows).

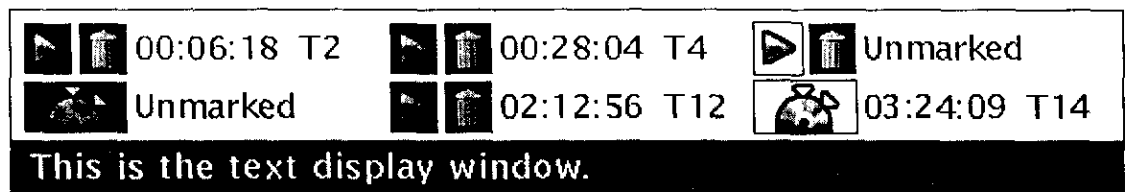

4. When you reach the place you want to mark, press OK. The unmarked icon changes to two icons (side-by-side):
  - An arrow that is used to activate the bookmark.
  - A trash can that is used to clear the bookmark.Next to the icons, the bookmark start time and track are displayed.
5. Press the INFO button on the remote or the front of the player to make the Info Display disappear from the screen.

### Using a Bookmark

1. While you're playing a disc, press INFO on the remote or the front of the player. The Info Display appears.
2. Highlight the *Bookmark* icon and Press OK. The *Bookmark* menu appears.
3. Highlight the arrow next to the bookmark you want to activate.
4. Press OK to activate the bookmark.
5. To make the Info Display disappear from the screen, press INFO on the remote.

## Clearing a Bookmark

The bookmarks are cleared each time a disc is removed from the player or when the power is turned off. If you want to clear a bookmark while the disc is playing:


1. Press INFO on the remote or the front of the player to bring up the Info Display.
2. Highlight the *Bookmark* icon and press OK.
3. Highlight the trash can icon next to the bookmark you want to clear. Press OK.
4. The bookmark is cleared and the trashcan icon changes back to the unmarked disc icon.

If all 6 bookmarks are in use, you can only mark new a scene by clearing an existing bookmark.

## Dub Assist

Dub Assist helps you record a CD onto an audio cassette tape by determining the number of tracks that will fit on one side of the tape so you have time to turn the tape over to record on the other side. Dub Assist does not have an icon on the Info Display bar. It is activated through the DVD player's menu.

To use Dub Assist when you're recording a CD onto an audio cassette:

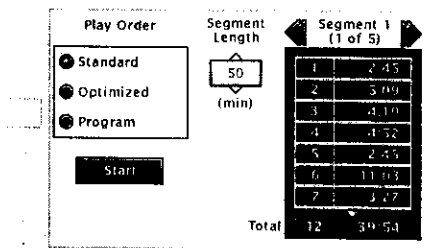

Use the Dub Assist screen to determine how many CD tracks can fit on a cassette.

1. Press STOP if a CD is playing (the DVD Player's main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* options appear).
3. Highlight *Dub Assist* and press OK (the *Dub Assist* screen appears).
4. The highlight should be in the *Play Order* window. Choose *Standard*, *Optimized*, or *Program*.

**Standard:** This is the default mode. The tracks are recorded in the order on the CD (track 1 is recorded first, track 2 second, etc.)

**Optimized:** The tracks are recorded in the order that optimizes the number of tracks that can fit on one side of the audio cassette so you have the least amount of dead space at the end of the tape.

**Program:** The tracks are recorded in the order you program. You must create your program in the *Edit Program* menu that's in the DVD Player's *Play* menu.

5. Use the arrow keys to highlight the *Segment Length* box. When the *Segment Length* box is highlighted, use the up/down arrow buttons to enter the length of one side of the audio cassette.
6. The order the tracks will be recorded in appears in the *Segment* list on the right. Use the arrow keys to highlight the *Start* box and press OK.
7. Follow the instructions on the screen to begin recording.

**This page left intentionally blank.**

# Playing MP3 Files

### Chapter Overview:

- What is MP3?
- Using the Info Display
- The MP3 Display
- Selecting a Play Mode
- \* Using the Program Play Feature
- The Repeat Feature
- Using IntroScan
- The MP3 Screen Saver

Changing Entertainment. Again.



# Playing MP3 Files

---

## What is MP3?

MP3 is a format for storing digital audio. An audio CD-quality song can be compressed into MP3 format with very little loss of quality, while taking up much less space.

CD-R or a CD-RW discs that have been encoded in MP3 format can be played on your DVD player. In this manual, CD-R and CD-RW discs will be referred to as MP3 discs. MP3 files, or songs, are referred to as *titles*.

## Obtaining MP3 files

There are two ways to obtain MP3 files:

- By using computer software to encode MP3 files from an audio CD – You can download the software necessary to encode MP3 files from the internet.

When encoding MP3 files, you can include information such as title, artist, genre, and comments that will be displayed by your DVD player at the time the title is played. This information must be included at the time the file is encoded in order for it to be displayed at the time you play it on the player.

- Downloading MP3 files from the internet – There are many internet sites that allow you to download MP3 files for free, and many sites that require a fee.

## Creating an MP3 Disc on Your Computer

Your DVD player handles MPEG-1, layer III audio. If you encode your own MP3 files from an audio CD, avoid using the features of MPEG-2, such as the 22kHz sampling frequency.

Be sure to make a data CD rather than an audio CD. If you make an audio CD, you will lose the extra features and compression of MP3.

When you burn a CD, take the following steps to get optimal use of the CD for playing in your DVD player.

- In your CD burning software, select ISO-9660 for the file system.

*Note: The Joliet file system is not recommended. Using the Joliet file system may result in shortened file names.*

- The DVD player can support up to 30-character names. Your computer software may let you specify this option as ISO-9660 level 2, ISO-9660 with Rock Ridge extension, or simply as ISO-9660 with long directory or file names. If your computer software doesn't support the above options, name your files and directories using eight characters or less.



### Notes

*For more information regarding MP3 encoding software and MP3 sites, visit <http://www.lyrazone.com>.*

*Some transport modes (reverse and fast forward) are not available for MP3 CDs.*

## Using the Info Display

To access the Info Display while an MP3 disc is playing, press INFO on the remote or the front of the player. The Info Display appears across the top of the screen. Each of the playback features is represented by an icon. To access a feature, use the arrow buttons on the remote to highlight the icon. Each feature that can be accessed from the On-Screen Info Display is described on the following pages. To clear the Info Display from the screen, press INFO on the remote control or the front of the player.

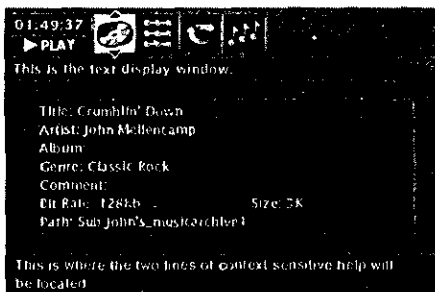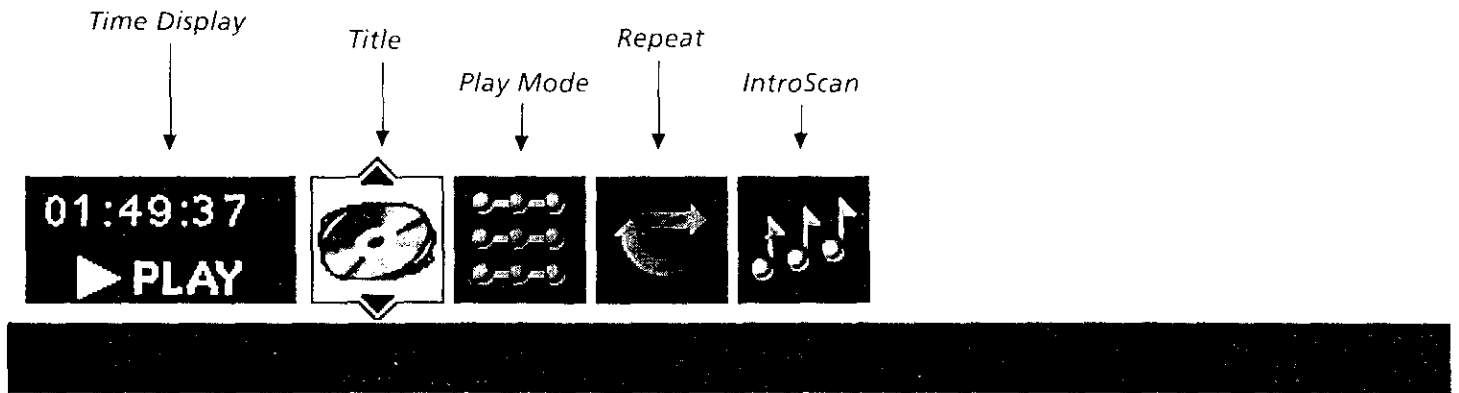

The MP3 display is shown under the Info Display.

## The MP3 Display

When you play an MP3 disc, the MP3 display will appear below the Info Display. MP3 discs contain individual songs, called titles. A disc can hold several titles. Titles can be organized into directories and subdirectories. When you play an MP3 disc, the Info Display text box shows the author of the currently playing title (song) and the current title. The following information appears beneath the Info Display in the MP3 display.

**Title** – Title of currently paying file in playlist.

**Artist** – Artist of the playing file in the playlist.

**Album** – The collection of songs the title comes from.

**Genre** – The type of music the title is classified as (rock, jazz, etc.).

**Comment** – Information added at the time the file was compressed.

**Bit rate** – Bit rate the title is being played at.

**Size** – Size of the currently playing title.

**Path** – Place on the disc where the current title is stored.

01:49:37

## Using the Time Display

The Clock part of the Info Display shows the current title time. Press INFO to clear the screen.

*Note:* To see the Info Display while playing MP3 CDs, you must turn on your TV and tune it to its Video Input Channel. For more information about the TV's Video Input Channel, see Chapter 1.



## Selecting a Title

Press PLAY to begin playback. The player will begin playing the songs (titles) in the order they were burned on the disc (unless you've created a program/playlist (see below)).


1. Highlight and select the Title icon in the Info Display.
2. Use the up/down arrow buttons to highlight the desired title from the title list. As a title is highlighted it will begin to play and the information associated with that title will be displayed in the MP3 screen.

You can also select a title by entering in the number of the title.

After approximately one minute, the screen saver will be displayed instead of the MP3 Info Display and screen. To bring up the MP3 menu again, press INFO on the remote.

## Skipping Titles

Use the CH+ button to move to the next title. Use the CH- button to move to the beginning of the currently playing title. Press CH- again to move to the previous title.

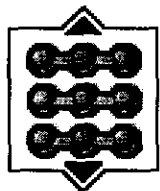

## Selecting a Play Mode

The Play Mode feature lets you set up the order in which you want the titles on the MP3 disc to play. There are three options:

**Standard:** the titles play in the order listed on the disc (starting with title 1).

**Random:** the titles on the disc play in random order.

**Program:** the titles on the disc play in the order you've programmed. You must first create a program list in the *Play* menu of the DVD Player's main menu.

Standard (the order listed on the CD) is the default setting for your player. To change the default setting:

1. Press INFO on the remote or the front of the player while a disc is playing. The Info Display appears.
2. Highlight the *Play Mode* icon. The current play mode appears in the text box underneath the icons. Press the up/down arrow buttons to scroll through the play mode choices until play mode you want appears in the text box. The titles on the CD will now play in that order.


*Note:* The player defaults to Standard playback whenever you put a new disc into your player.



## Using the Program Play Feature

### Creating a Program

To use the *Program Play* option, you must create a program list to set the order in which you want the titles on the disc to play.

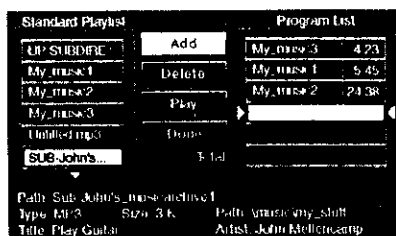

This is where the two lines of context sensitive help will be located.

The Standard Playlist from the disc displays the directories and titles (songs) that are on the disc.

### Creating a Program List for an MP3 Disc

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. On the left side of the screen the standard playlist is displayed. This is a scrollable list of all the directories and filenames on the disc.
  - To open a directory, highlight it and press OK (the directory will open and the contents of the directory will be displayed in the *Standard Playlist*).
  - To close a directory, use the arrow keys to scroll to the top of the playlist until the *UP SUBDIRECTORY* option is highlighted and press OK.
5. Use the arrow keys to highlight the title (song) you want to play first. When you highlight a title the title information will be displayed at the bottom of the screen.
6. Use the left/right arrow buttons to highlight the *Add* box. Press OK to add that title to the *Program List* (the title number and time will appear in the *Program List*).

*Note: If the highlight is on a directory when you use the **Add** option, the entire contents of the directory will be added to the **Program List**.*
7. The highlight will move back to the *Standard Playlist* so you can enter the next directory or title into the *Program List*.
8. Continue adding titles as explained in steps 4-7 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display while the disc is playing. The program will be erased when you remove the disc from the player.


# Playing MP3 Files

## Editing a Program

### Deleting Titles

To delete titles from the playlist:

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Highlight the item in the Program List you want to delete.
5. Highlight *Delete*, and press OK.
6. When you are finished rearranging the playlist, highlight *Done* and press OK.

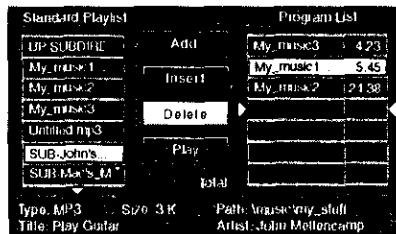

This is where the two lines of context sensitive help will be located.

In the illustration above, the contents of the directory SUB-John's... will be inserted in the Program List before the song My\_music1.

### Inserting Titles

To insert titles into the playlist:

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Use the left/right arrow keys to move the highlight to the Program List. Use the up/down arrow keys to mark the spot in the Program List where you want to insert a title (the inserted title will be placed *before* the highlighted title).
5. Highlight the *Standard Playlist* and use the up/down arrow keys to select the title you want to insert.
6. Highlight *Insert* and press OK.
7. When you are finished rearranging the playlist, highlight *Done* and press OK.

## Autoplay

You can set the Autoplay option to play your disc automatically after you close the disc tray.

1. From the DVD player's main menu (player ON, no disc playing) highlight the *Play Mode* option and press OK.
2. The Play Mode selections appear. Highlight the Autoplay option and press OK to toggle the option on/off.
3. Press the left arrow button to return to the previous menu or press GO BACK • AGAIN to return to the main menu.



## The Repeat Feature

The default mode for the Repeat feature is Off. There are two Repeat options for MP3 discs:

- Disc – repeats the disc or playlist (if you've created one) that is playing
- Title – repeats the title (song) that is playing

### To Use Repeat:

1. While a disc is playing, press INFO on the remote or the front of the player to bring up the Info Display.
2. Highlight the *Repeat* icon. The text in the text box below the icons will read *Repeat Mode: Off*.
3. Press the up/down arrow buttons to scroll through the *Repeat* options until the Repeat option you want is displayed in the text box.
4. Press OK. The selected repeat option will loop continually until you turn Repeat off. Repeat is turned off by completing steps 1 through 3 above, and selecting the Off option.



## Using IntroScan™

The IntroScan system plays the first ten seconds of each title (song) on the disc (similar to the scan feature that's on many car radios). To use the IntroScan system:

1. Press INFO on the remote or the front of the player (the Info Display appears).
2. Highlight the *IntroScan* icon. Press OK. The first ten seconds of each title will play.
  - After the IntroScan system goes through all of the titles, it stops.
  - If you want to stop the IntroScan system while it's in progress, press PLAY on the remote. The current title starts playing in its entirety.
  - You can also access the IntroScan system from the *Play Mode* menu in the DVD Player's main menu.

## The MP3 Screen Saver

The MP3 screen saver appears when an MP3 disc is in the player. Once you begin playback, the screen saver disappears and the MP3 Info Display and screen appear. After one minute of no user input, the Info Display and screen will disappear. Press any key to bring up the display again.

Press CLEAR or INFO to remove the Info Display and bring up the MP3 screen saver.

**This page intentionally left blank.**

# Playing Video CDs

## Chapter Overview:

- What is Video CD?
- The Video CD Disc menu
- The Video CD Info Display
- Selecting a Specific Track
- Selecting a Specific Index
- The Repeat Feature
- Skipping Tracks



Changing Entertainment. Again.



## What is a Video CD?

Like DVD video discs, Video CDs contain picture and sound content. Video CDs (VCDs) are encoded in a different format. VCDs don't hold as much information as DVD discs and the picture quality is not as high.



VCDs are divided into tracks, and each track is divided into indexes. A track is similar to a title and an index is similar to a chapter.

## The Video CD Disc Menu

A Video CD disc is capable of having an on-screen menu that is separate from the DVD player's menu system and on-screen Info Display. If the disc has a menu, the menu will appear after the disc is loaded into the player.

The content and operation of disc menus varies from disc to disc. Check the instructions that accompany the Video CD for more information on how to use the playback control function for that specific disc.

If a disc menu appears:


1. Use the number buttons on the remote to select a track (similar to a title).
2. Press OK or PLAY on the remote to begin playback of the selected track.
3. Press CH +  or CH -  on the remote (SKIP FWD or SKIP BACK on the player) to scroll through the tracks.
4. Press MENU to stop playback and return to the disc menu or press STOP to stop playback and return to the DVD player menu.

To bring up the disc menu during disc play, press the MENU button on the remote.

## Video CD Information Display


Your DVD player gives you several options when playing Video CDs, including skipping tracks and repeat play. You can access these features through the Info Display.

The on-screen Info Display contains many playback features. The Info Display appears across the top of the screen when you press the INFO button on the remote or the front of the player (while a disc is playing). Each feature is represented by an icon. Use the arrow buttons to move through the different icons in the Info Display.

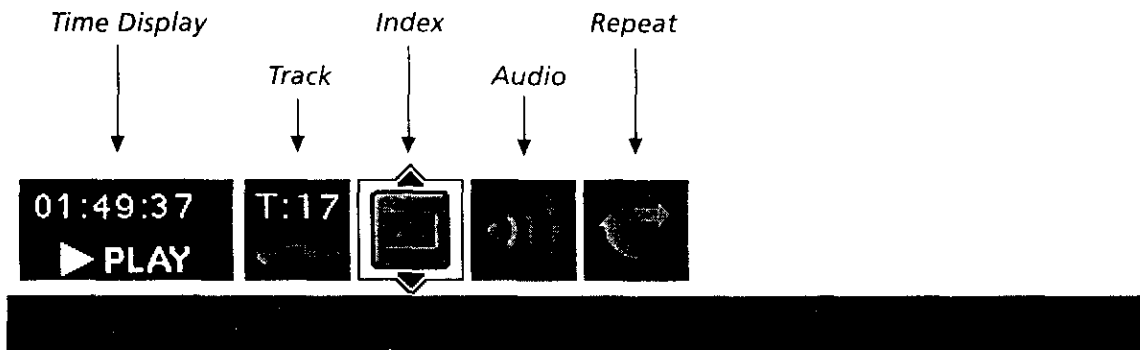

When an icon is highlighted, use the up/down arrow buttons to scroll through choices displayed in the text box.

Remember, you can only access the Info Display when you're playing a disc.


The invalid symbol  appears on the screen when you press a button that doesn't have any function. If one of the icons is "grayed out," that feature isn't available for the disc you're playing. To bring up the Info Display:

1. Press INFO on the remote. The Video CD Info Display appears across the top of the screen.
2. Press INFO a second time to turn the Info Display off.



## Selecting a Specific Track

1. Press INFO on the remote to bring up the Info Display.
2. Use the arrow buttons on the remote to highlight the *Track* icon from the Info Display.
3. Use the number button(s) on the remote to enter the track number you want to play, or use the up/down arrow buttons to scroll through the track numbers. When a new track number is entered, that track will begin playing.

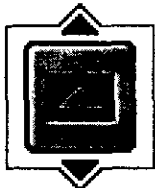

## Selecting a Specific Index

1. Press INFO on the remote to bring up the Info Display.
2. Highlight the *Index* icon from the Info Display.
3. Use the number button(s) on the remote to enter the index number you want to play, or use the up/down arrow buttons to scroll through the index numbers. When a new index number is entered, that index will begin playing.



## The Repeat Feature

You can tell the player to repeat the entire disc, a track, or an index. The default mode for the Repeat feature is Off. There are three Repeat options:

- Disc – repeats the disc that is playing
- Track – repeats the track that is playing
- Index – repeats the index that is playing

### To Use Repeat:

1. While a disc is playing, press INFO on the remote to bring up the Info Display.
2. Highlight the *Repeat* icon. The text in the text box below the icons will read *Repeat Mode: Off*.
3. Press the up/down arrow buttons to scroll through the *Repeat* options until the Repeat option you want is displayed in the text box.
4. The selected repeat option will begin immediately and loop continually until you turn Repeat off. Repeat is turned off by completing steps 1 through 3 above, and selecting the Off option.

### How to Cancel Repeat

There are three ways to cancel Repeat:

- Press STOP twice.
- Go to the *Repeat* icon in the Info Display and select *Off*.
- Eject the disc.

#### Note:

*Your repeat settings are erased each time you remove a Video CD from the player.*





## Changing the Audio Channel Output

If you are playing a stereo Video CD, you can change the channel output from the player.

1. Press AUDIO (or INFO) on the remote to bring up the Info Display.
2. Highlight the *Audio Channel* icon on the Info Display.
3. The audio channel choices appear in the text box. Use the up/down arrow keys to scroll through the choices: *Stereo*, *Left*, *Right* or *Mono*. Whatever choice is displayed becomes the active choice.

## Skipping Tracks

- To skip forward to the beginning of the next track on a VCD, press CH + ► on the remote (SKIP FWD on the front of the player). Press the button again to go to the beginning of the next track.
- To skip backward to the beginning of the track that is playing on a Video CD, press CH + ◀ on the remote (SKIP BACK on the front of the player). Press the button again to go to the beginning of the preceding track.

*Note: If the VCD disc was authored with Playback Control (indicated by the PBC light on the front panel of the DVD player) navigating with CH + ► or CH - ◀ buttons may not work.*

## Zoom

When playing Video CDs, you can magnify the screen during normal playback. Zoom has 2 levels (1x, 2x). Zoom magnifies from the center of the screen. Once in Zoom mode, you can pan right, left, up or down by using the arrow buttons.

1. Press ZOOM on the remote control to magnify. (The zoom level will be displayed in the corner of the screen. Press CLEAR to clear the zoom Info Display from the screen.)
2. Press the ZOOM button again to go to the next level of magnification.
3. To turn Zoom off, press the ZOOM button until you cycle through all the levels and return to normal playback.

*Note: You can use the 1.5x zoom mode to alter a 16x9 letterbox movie (black bars top and bottom) to a 4x3 format. This will eliminate the black bars at the top and bottom and allow you to use left/right arrow keys to pan and scan.*

**This page intentionally left blank.**

# Using the DVD Player's Menu System

### Chapter Overview:

- The DVD Player Menu System
- The Play Mode Menu
- The Lock Menu
- The Display Menu
- The Sound Menu
- The Languages Menu
- The Glossary


Changing Entertainment. Again.




# Using the DVD Player's Menu System

## The DVD Player Menu System


The DVD player menu system is not the same as the disc menu or the Info Display. The DVD player menu comes up when there is no disc playing. If you are playing a disc, press STOP on the remote control to stop playback and bring up the DVD player menu.

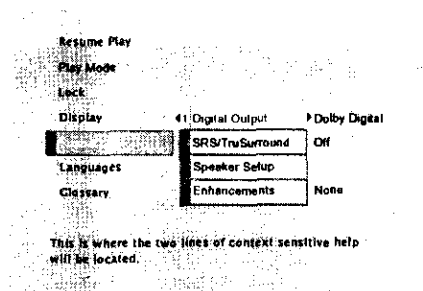

The Sound menu is an example of a path menu item.

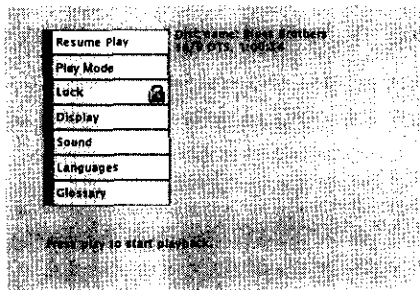

The Play option is an example of an action menu item.

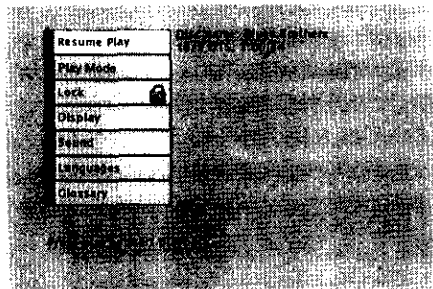

Press OK to clear the screen and resume play.

## Two Types of Menu Items: Path and Action

### Path Items

A path menu item has an arrow on the right side to let you know this item is a path to MORE options. To see the path menu options, highlight the path menu item and press OK. The next set of menu choices appears to the right of the menu item.

The *Sound* menu is an example of a path menu item— when the *Sound* menu is highlighted, press OK. The Sound options appear on the screen.

### Action Items

Action menu items are used in two ways:

With an action menu item, what you see is what you get. When an action menu item is highlighted, press OK and that action is taken. *Resume Play* on your player's menu system is an example of an action menu item. Press OK when *Resume Play* is highlighted; the menu disappears and playback is resumed.

Sometimes an action menu item is used as a "toggle." You highlight the action menu item, press OK, and the selection (shown to the right of the menu item) changes from one choice to another. *SRS/TruSurround* in the *Sound* menu is an example of an action menu item that is a toggle. If you highlight *SRS/TruSurround* and press OK, the selection changes from *On* to *Off* and vice versa, each time you press OK. To return to the previous screen, press the left arrow button.

## The Play/Resume Play Option

To get to the DVD Player menu, press STOP on the remote control. The DVD Player menu will appear whenever a disc stops playing. The first item in the main menu is the *Play/Resume Play* option. If there isn't a disc in the player, the option reads *Play* with the prompt *Insert Disc* to the right. If there is a disc in the player and it was previously playing, the option reads *Resume Play* and the name of the disc is displayed on the right.

Any time you stop playback, you will be returned to the DVD player menu, and the *Play* option will read *Resume Play*. To resume play, highlight the option and press OK, or press the PLAY button on the remote.

## The Play Mode Menu

The DVD Player's *Play Mode* menu lets you choose different ways to play the disc. To see *Play Mode* menu options, a disc must be in the DVD player.


### Selecting a Play Mode

The first three options in the *Play Mode* menu determine in what order the titles or tracks will play on a disc:

**Standard Play:** plays the disc's titles, chapters, indexes, or tracks (depending on the type of disc in the player) in their default order (i.e., chapter 1 of Title 1 plays first, then chapter 2 of Title 1, etc.)

**Random Play:** plays the chapters of each title in random order.

**Program Play:** Plays the chapters on the disc in the order you have programmed (you must select *Edit Program* and set up the order in which you want the tracks on the disc to play).

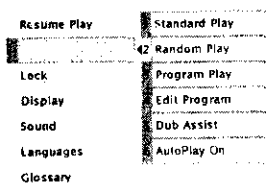

This is where the two lines of context sensitive help will be located.


Selecting *Random Play* plays the disc's tracks in random order.

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight the *Play Mode* menu option
3. Press OK. The *Play Mode* menu items appear.
4. Highlight the desired option and press OK. *Program Play* will not work unless you have created a program list.

# Using the DVD Player's Menu System

## How to Create a Program

To use the *Program Play* option, you must create a program list to set the order in which you want the tracks (or titles and chapters on a DVD video disc and titles on an MP3 disc) on the disc to play. The Program Play screen varies depending on the type of disc (DVD, CD, or MP3) you are playing.

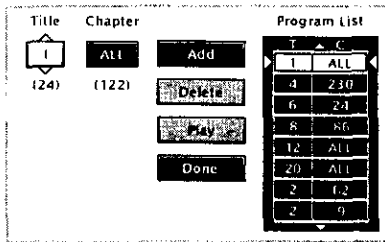

When the Title box is highlighted, enter the title number you want to place in the list.


### Creating a Program List for a DVD Video Disc

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. The *Title* box is highlighted. Use the up/down arrows or the number buttons on the remote to enter the title you want to play first. The title number you entered appears in the *Title* box. The number of chapters available appears under the *Chapter* box.
5. Highlight the *Chapter* box and use the up/down arrows or the number buttons on the remote to enter the chapter you want to play first and press OK. The highlight jumps to the *Add* button.
6. Press OK to add that chapter to the Program List. The highlight jumps back to the *Title* box so you can add more titles and/or chapters. Make sure the *Title* box is highlighted and enter your next title and/or chapter.
7. Continue adding titles/chapters as explained in steps 4-6 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display while the disc is playing. The program will be erased when you remove the disc from the player.

# Using the DVD Player's Menu System

## Creating a Program List for an Audio CD

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. The *Track* box is highlighted. Use the up/down arrows or the number buttons on the remote to enter the track you want to play first. Press OK.
5. The highlight will move to the *Add* box. Press OK to add that track to the *Program List* (the track number and time will appear in the *Program List*).
6. The highlight will move back to the *Track* box so you can enter the next track into the *Program List*. Make sure the *Track* box is highlighted and enter your next track.
7. Continue adding titles as explained in steps 4-5 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display while the disc is playing. The program will be erased when you remove the disc from the player.

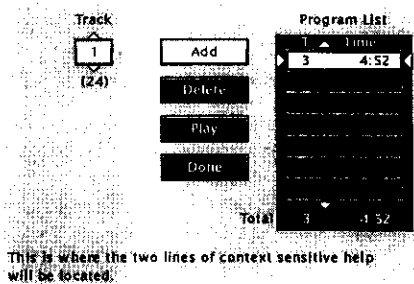

When the *Track* box is highlighted, enter the track number you want to place in the list.

## Creating a Program List for an MP3 Disc

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. On the left side of the screen the standard playlist is displayed. This is a scrollable list of all the directories and filenames. To open a directory, highlight it and Press OK.
5. Highlight the title (song) you want to play first. When you highlight a title the title information is displayed at the bottom of the screen.
6. Use the left/right arrow buttons to highlight the *Add* box. Press OK to add that title to the *Program List* (the title number and time will appear in the *Program List*).

Note: If the highlight is on a directory when you use the **Add** option, the entire contents of the directory will be added to the playlist.

7. The highlight will move back to the *Standard Playlist* so you can enter the next title into the *Program List*. Highlight and enter your next title.
8. Continue adding titles as explained in steps 4-7 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display while the disc is playing. The program will be erased when you remove the disc from the player.


# Using the DVD Player's Menu System

## Editing a Program

### Deleting Items from the Playlist

To delete items from the playlist:

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Highlight the item in the Program List you want to delete.
5. Highlight *Delete*, and press OK.
6. When you are finished rearranging the Program List, highlight *Done* and press OK.

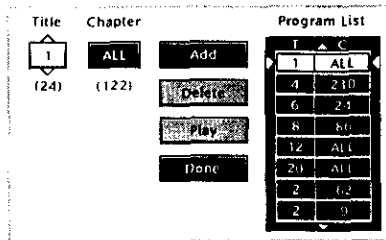

To delete an entry from the Program List, highlight it, then highlight Delete and press OK.

### Inserting Items in the Program List

To insert items into the Program List:

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Use the left/right arrow keys to move the highlight to the program list. Use the up/down arrow keys to mark the spot in the Program List where you want to insert an item (the inserted item will be placed *before* the highlighted item).
5. Highlight the *Chapter* /Track/Standard Playlist box and use the up/down arrows or the number buttons on the remote to enter the item you want to play first.
6. Highlight *Insert* and press OK.
7. When you are finished rearranging the Program List, highlight *Done* and press OK.



# Using the DVD Player's Menu System

## Autoplay


You can set the Autoplay option to play your disc automatically after you close the disc tray.

1. From the DVD player's main menu (player ON, no disc playing) highlight the *Play Mode* option and press OK.
2. The Play Mode selections appear. Highlight the Autoplay option and press OK to toggle the option on/off.
3. Press the left arrow button to return to the previous menu or press GO BACK•AGAIN to return to the main menu.

## Dub Assist

Dub Assist helps you record an Audio CD onto an audio cassette tape by determining the number of tracks that will fit on one side of the tape so you have time to turn the tape over to record on the other side.

To use Dub Assist when you're recording an Audio CD onto an audio cassette:

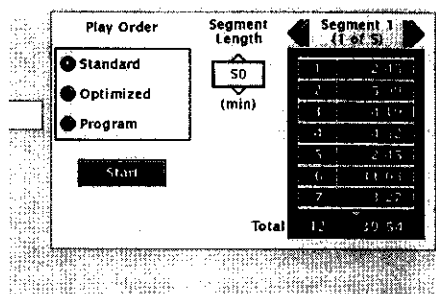

The Dub Assist Screen.

1. Press STOP if a CD is playing (the DVD Player's main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* options appear).
3. Highlight *Dub Assist* and press OK (the *Dub Assist* screen appears).
4. The highlight should be in the *Play Order* window. Choose *Standard*, *Optimized*, or *Program*.

**Standard:** This is the default mode. The tracks are recorded in the order on the CD (track 1 is recorded first, track 2 second, etc.)

**Optimized:** The tracks are recorded in the order that optimizes the number of tracks that can fit on one side of the audio cassette so you have the least amount of dead space at the end of the tape.


**Program:** The tracks are recorded in the order you program. You must create your program in the *Edit Program* menu that's in the DVD Player's *Play* menu.


5. Use the arrow keys to highlight the *Segment Length* box. When the *Segment Length* box is highlighted, use the up/down arrow buttons to enter the length of one side of the audio cassette.
6. The order the tracks will be recorded in appears in the *Segment* list. Use the arrow keys to highlight the *Start* box and press OK.
7. Follow the instructions on the screen to begin recording.


# Using the DVD Player's Menu System

## The Lock Menu

The padlock icon on the front of your DVD player shows whether your player is locked or unlocked.

 **Locked:** A password is needed in order to play discs that aren't included in the rating limits you have set. When the player is locked, no one can access the *Lock* Menu items without entering the password.

 **Unlocked:** A password isn't required to play discs.

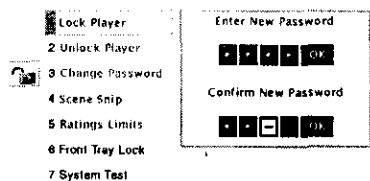

Use the numbers on the remote to enter a password.

## Locking Your DVD Player

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK (the *Lock* menu items appear).
3. Highlight *Lock Player* and press OK. The *Enter New Password* screen appears.
4. Press the number keys on the remote to enter the password you want to use (similar to entering your PIN when you use a bank machine).
5. After you've entered the last number in the password, press OK. *Confirm Password* appears.
6. Enter the numbers you entered the first time and press OK when you're finished. You are returned to the main menu.

## Unlocking Your DVD Player

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK.
3. The *Enter Password* box appears. Enter your password and press OK (the *Lock* menu options appear).
4. Highlight *Unlock Player* and press OK. The locked icon changes to unlocked.

## Changing Your Password


The player must be locked to change the password.

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK. *Enter Password* appears on the screen. Enter your password.
3. Highlight *Change Password* and press OK. *Enter New Password* appears.
4. Press the number buttons on the remote to enter the new password you want to use and press OK. *Confirm Password* appears.
5. Press the number keys to enter the password again and press OK when you're finished.

# Using the DVD Player's Menu System

## Editing Your Scene Snip Disc Library

The Disc Library consists of a numbered list of titles that have been edited. If no disc title is available, the title will be DVD. If you play a disc from the disc library the player must be locked in order for the edits to take effect.

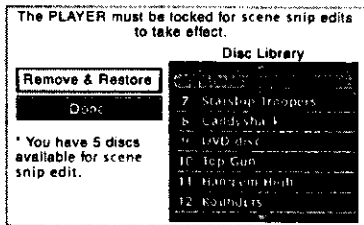

This is where the two lines of context sensitive help will be located.

Select a title and highlight **Remove & Restore** to remove all edits and restore the disc to its original version.

### How to Edit the Disc Library

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK (the *Lock* menu appears).
3. Highlight *Scene Snip Edit* and press OK (the Scene Snip Disc Library screen appears).

**Note:** You must edit a movie before it appears in the Disc Library. Movies you have not edited will not appear in the Library (see chapter 2).

4. Highlight the title of the movie you want to remove from the list. Highlight **Remove & Restore** and press OK.
  - A message appears asking if you are sure you want to remove all the edits and restore the disc to the original version.
5. Highlight *Yes* and press OK. The disc will be restored to its original version and removed from the Disc Library.
6. Press the left arrow key to return to the main menu.

## Setting the Ratings Limits

The Ratings Limits feature is a rating limit system, sort of like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVDs that your family watches.

**Note:** The player alerts you when you try to play a movie with a rating that exceeds the limit you've set. Some discs include a rating override feature. When you play a disc with this feature, the message **Override Limit or Cancel Selection** appears on the screen. If you choose to override the rating limit, you will need to enter your password to begin playback.

## Changing to a Different Country's Rating System

Some countries use different rating systems. The default for this DVD player is the United States. You can change to a different country's rating system through the *Lock* menu.

1. If the disc is playing, press STOP (the DVD Player's main menu is displayed).
2. From the main menu, highlight the *Lock* option and press OK (the *Lock* menu appears).
3. Highlight *Ratings Limits* and press OK (the *Ratings Limits* menu appears).
4. Highlight *Country* and press OK (a list of countries appears).
5. Highlight the country you want to change to and press OK (the country you selected appears next to the *Country* path menu).
6. Press the left arrow key to return to the main menu.

# Using the DVD Player's Menu System


## Rated Titles

The Rated Titles option lets you determine how your player will react to discs that contain movies that are rated (in the U.S.A., the Motion Pictures Association of America (MPAA) rates movies as G, PG, PG-13, etc.).

You decide which ratings require a password and which ones don't. This system ranks the ratings 1 through 8 in order to accommodate different countries' ratings systems (1 is considered a movie title with the least offensive material).

In order for the Rating Level feature to work, the disc must be encoded with rating information. If the author of the disc did not encode rating information, then this feature will not work for that disc.

The DVD Player must be locked in order for it to enforce the settings in the *Ratings Limits* part of the *Lock* menu.

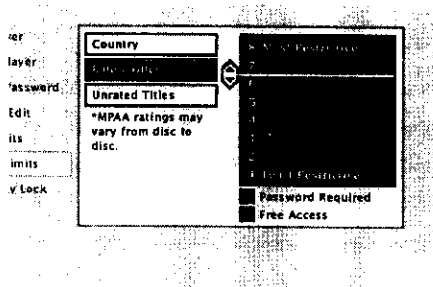


The Rated Titles screen lets you set the Rating Limit

1. From the *Lock* menu, highlight *Ratings Limits* and press OK (the *Ratings Limits* menu is displayed).
2. Highlight *Rated Titles* and press OK (the 8-level rating limits list appears).
3. To change the rating limit, press the up or down arrow button.
  - The ratings that don't require a password (free access) appear under the bar, in the green part of the block.
  - The ratings that require a password appear above the bar, in the red part of the block.
4. When you have moved the bar to the desired setting, press OK. You are returned to the *Rated Titles* screen and the setting appears to the right of the *Rated Titles* option. For example, if you set 3 as the highest rating for Free Access (green), then the *Rated Titles* selection appears as 3 (that's the player's number for PG in the 8-level system) for the movie studio's rating. This means when the player is locked, it will require you to enter the password to play any discs that are rated higher than 3 (i.e., PG-13 or NC-17).
5. Press the left arrow button to return to the main screen.

# Using the DVD Player's Menu System

## Unrated Titles

Some titles (movies) aren't rated, but may contain material that is unsuitable for children. You decide how you want the *Ratings Limits* feature of your player to handle these discs: free access or password required. To set the *Unrated Titles* option:

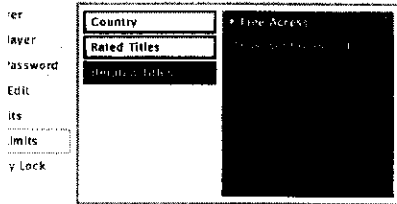

Choose Unrated Titles to set free access or require a password for unrated titles.

1. From the Lock Menu, highlight *Ratings Limits* and press OK.
2. Highlight *Unrated Titles* and press OK. The *Unrated Titles* options appear.
3. Use the up/down arrow buttons to highlight your choice: *Free Access* or *Password Required*. Press OK. You are returned to the previous screen, and the option you chose is displayed next to the *Unrated Titles* option.
4. Press the left arrow key to return to the main menu.

## Front Tray Lock

You can lock the front tray of the DVD player so it can't be opened.

1. From the *Lock* menu, highlight *Front Tray Lock*. Press OK to toggle the *Front Tray Lock* setting *On* or *Off*.
  - "Tray is locked" appears when the player is locked (the Front Tray Lock feature is turned on) and you try to open the front tray of the DVD player.
2. Press the left arrow key to return to the main menu.

*Note: If the player is locked, you will be prompted for the password before you can access the Tray Lock option from the Lock menu.*

## System Test

1. Highlight *System Test* within the *Lock* menu.
2. Press OK to display the *System Test Results* screen.
3. Press the left arrow key to return to the main menu.


# Using the DVD Player's Menu System

## The Display Menu

The Display menu contains the settings that affect how disc content looks on your TV and how the front display panel of the DVD player looks.

### TV Image

The TV Image menu adjusts the way a movie appears on your TV. Standard TVs are 4 x 3 format. Depending on the type of television you have, you may want to adjust the screen setting (also called the aspect ratio).

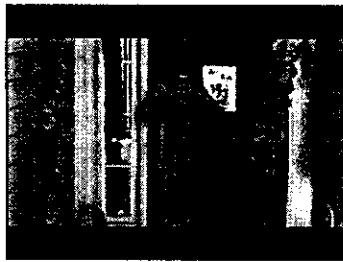

4x3 Letterbox



4x3 Standard



16x9 Widescreen

1. From the DVD Player's main menu (player ON, no disc playing), highlight *Display* and press OK (the *Display* options appear).
2. Highlight *TV Image*. Press OK. The *TV Image* options appear.
  - **4 x 3 Letterbox** – Choose this setting if you want to see movies in their original aspect ratio (height-to-width ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.

- **4 x 3 Standard** – Choose this setting if you want the movie to fill the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.  
Most discs produced in a widescreen format can't be cropped in this fashion. This means the black bars will appear at the top and the bottom of the screen.

- **16 x 9 Widescreen** – Choose this setting if your DVD Player is connected to a widescreen TV. If you choose this setting and you don't have a widescreen TV, the images on the screen may appear distorted due to vertical compression.

If you play a disc recorded in 4 x 3 format on a widescreen TV, the left and right side of the screen will appear black.

Some movies are actually slightly wider than 16 x 9. In this case, black bars will appear at the top and bottom of the screen even in Widescreen mode.

*Note: Some discs are already formatted with black bars so the entire image can be seen on a standard TV screen. If you have a widescreen TV and you are playing this type of disc, you will need to set your TV to expand the image. See your TV User's Manual.*

# Using the DVD Player's Menu System

## Front Display

This feature lets you choose how the front display panel on your DVD Player appears.

1. From the DVD Player's main menu (player ON, no disc playing), highlight *Display* and press OK (the *Display* menu appears).
2. Highlight *Front Display* and press OK. You can choose from 5 settings:
  - Dim for Movies (dims when disc is playing)
  - Off for Movies (no display when disc is playing)
  - Always Bright
  - Always Dim

The default is Dim for Movies.


3. Highlight the setting you want to use and press OK. Press the left arrow button to return to the previous menu. Your selection is displayed next to the *Front Display* path menu.
4. Press the left arrow button to go back to the main menu.

## On-Screen Displays

This feature lets you select whether you want certain on-screen displays to appear on the screen. It contains three choices with check boxes next to them:

- Information Display – When turned on, displays time transport information when you are fast forwarding or reversing playback.
- Angle Indicator – When turned on, displays camera angle icon if more than one camera angle is available.
- Scene Again Text – When turned on, displays subtitles when you use the Scene Again feature.

The default is to show all on-screen displays. To turn one of the options on or off:

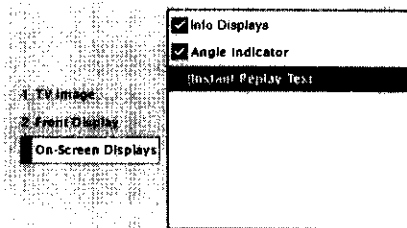

1. From the main menu, highlight the *Display* option and press OK (the *Display* menu appears).
2. Highlight the *On-Screen Displays* option and press OK (the three on-screen display options appear on the right).
3. Highlight an option and press OK. This toggles the option on or off.
4. Press the left arrow key to return to the main menu.

**The On-Screen Displays option lets you choose which on-screen display items appear on your TV screen.**

# Using the DVD Player's Menu System

## The Sound Menu


The Sound menu lets you select different sound settings to match the equipment you have connected to your DVD Player.

### Digital Output

Digital output lets you choose which type of digital audio is output from your DVD player. If you've used an optical cable to connect a Dolby Pro Logic, Dolby Digital, or DTS receiver, you must select a digital output with this setting. There are two options:

- Dolby Digital: Choose this setting if you connected a Dolby Digital receiver.
- DTS: Choose this setting if you connected a DTS receiver or decoder to your DVD Player.

You can check both options if your receiver is capable of decompressing both types of audio. The default is Dolby Digital. To change the digital output:

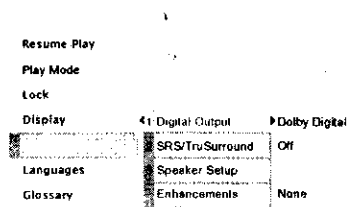

This is where the two lines of context sensitive help will be located.

Select the Digital Output option from the Sound menu.

1. From the main menu, highlight and select the *Sound* option and press OK (the *Sound* menu is displayed).
2. Highlight the *Digital Output* option and press OK.
3. Highlight the desired output and press OK.
4. Press the left arrow key to return to the main menu.

#### Notes:

If you set *Digital Output* to *DTS*, you must have your DVD Player connected to a receiver or decoder with the *DTS* feature and the disc you play must support the *DTS* audio format. If you choose *DTS* and your receiver or decoder doesn't support *DTS*, you won't hear any audio.



# Using the DVD Player's Menu System

## TruSurround®


The TruSurround® option can be used to simulate a six-speaker listening experience through two speakers. It can be turned on or off. The default is off. To turn the TruSurround® option on:

1. From the *Sound* menu, highlight the *TruSurround* option and press OK.
2. Highlight *On* and press OK.
3. Press the left arrow key to return to the previous menu.

### Notes:

*The TruSurround® option should not be turned on if you are using a Dolby Digital or DTS receiver. Your receiver provides optimum sound quality.*


*The TS Surround button on the Front Panel of the DVD Player can be also be used to change the TruSurround® setting. Each press of the button toggles the setting between on and off.*

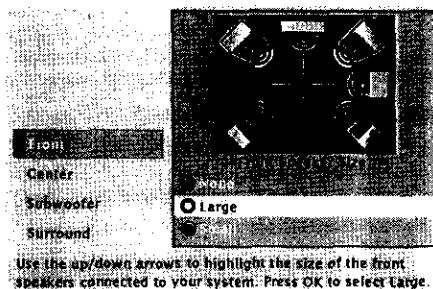

**Use this Speakers menu to select and set up your attached speakers.**

## Speaker Setup


1. From the *Sound* menu, highlight the *Speaker Setup* option and press OK (the *Speaker Setup* menu is displayed).
2. Highlight the *Speakers* option and press OK. (The *Speaker Size* screen will be displayed. Representations of different types of speakers will be displayed on the right side of the screen.)
3. Highlight *Front*, *Center*, *Subwoofer* or *Surround*. The highlighted choice will also be highlighted in the graphic to the right of the list.
4. Use the right arrow button to move to the *Speaker Size* list (underneath the graphic on the right). Select the size of your speakers (or *None* if you don't have that type of speaker hooked up) and press OK.
5. Use the left arrow button to return to the speaker list and select the next type of speaker, repeating the process above.

TruSurround and the  symbol are trademarks of SRS Labs, Inc. in the United States and selected foreign countries. TruSurround technology is incorporated under license from SRS Labs, Inc.

# Using the DVD Player's Menu System

## Set the Distance of the Attached Speakers

Use the *Distance* option to set the distance of the attached speakers. By setting the distance, you are letting the speakers know how far the sound has to travel to reach your set listening point. This allows the sound from each speaker to reach the listener at the same time.

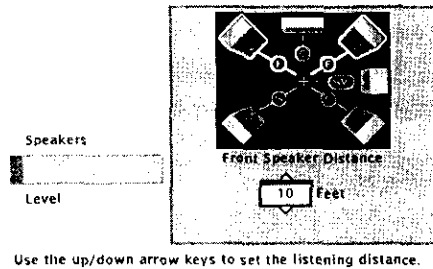

### Adjust the Distance and Level of the speakers.

1. From the *Sound* menu, highlight the *Speaker Setup* option and press OK (the *Speaker Setup* menu is displayed).
2. Highlight the *Distance* option and press OK. (The *Distance* screen will be displayed. Representations of different types of speakers will be displayed on the right side of the screen.)
3. Highlight *Front*, *Center*, *Subwoofer* or *Surround*. The highlighted choice will also be highlighted in the graphic to the right of the list. The + symbol in the middle of the graphic represents the distance from the speaker to the listening point.

*Note: Representations of different types of speakers are displayed in a graphic on the right side of the screen. Speakers that you have **not** hooked up will appear grayed out.)*

4. Use the right arrow button to move to the *Feet* box displayed underneath the graphic. Use the up/down arrow keys to adjust the distance for the highlighted speakers. Press OK.
5. Use the left arrow button to return to the speaker list and select the next type of speaker, repeating the process above.

*Note: If you don't want to make any changes, press CLEAR to return to the main menu or GO BACK to return to the Speaker Setup menu.*

## Set the Level of the Attached Speakers

Use the *Level* option to set the volume of the attached speakers. You can set the volume level of each speaker individually.

1. From the *Sound* menu, highlight the *Speaker Setup* option and press OK (the *Speaker Setup* menu is displayed).
2. Highlight the *Level* option and press OK (The *Level* screen will appear).

*Note: Representations of different types of speakers are displayed in a graphic on the right side of the screen. Speakers that you have **not** hooked up will appear grayed out.)*

3. The highlight will be on the left front speaker, and the text beneath the graphic will display "left front speaker" with the setting for that speaker displayed under the text.

A test tone is emitted, beginning with the highlighted graphic. The tone rotates around the speakers, playing through each speaker for approximately 2.5 seconds. If you highlight a speaker or change the setting on a speaker the test tone moves to that speaker.

4. Use the down arrow button to move to the *Settings* box. The setting is measured in decibels. Use the up/down arrows to change the level setting for the highlighted speaker. Press OK to return the speaker graphic.
5. Use the left/right arrow buttons to navigate to the next speaker. As each speaker is highlighted, the text changes to indicate which speaker it is. Repeat steps 3 and 4 to set the level for each speaker you have hooked up.

*Note: If you don't want to make any changes, press CLEAR to return to the main menu or GO BACK to return to the Speaker Setup menu.*


# Using the DVD Player's Menu System

## Enhancements

The Enhancements feature compresses the dynamic range (quietest sound to loudest sound) of a disc's soundtrack. For example, action scenes might be very loud, while whispered dialog is quiet. The Enhancements feature evens out the range of the volume by making loud sounds quieter and soft sounds louder. The Enhancements feature has three options.

- None – No change to the range. Sound is played as it was recorded on the disc.
- Compressed – The range between loud and soft is smaller.
- Voice+™ – Increases the volume of voices.

To change the Enhancement:

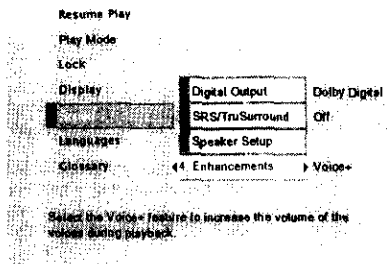

Select the Sound Logic option from the Sound menu and press OK to toggle Sound Logic on or off.

1. From the DVD Player's main menu, highlight *Sound* and press OK (the *Sound* menu appears).
2. Highlight the *Enhancements* option and press OK (the Enhancements options will appear).
3. Press the up/down arrow buttons to select the desired option.
4. Press the left arrow button to return to the Sound menu.

**Note:** The performance of the Enhancements feature varies depending on the type of equipment you have connected to your DVD Player and the audio format of the disc you're playing.

# Using the DVD Player's Menu System

---

## The Languages Menu

The *Languages* menu enables you to choose different language options for audio, subtitles, Disc Menu items and DVD player menu items. The default for all language menu items is English.

### Changing the Player Menus Language Preferences

You can choose one of three languages for the text that appears within the on-screen menu system. The default is English. If you change the Player Menu language, the entire player menu system will be displayed in the selected language.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Player Menus* and press OK (the language choices for the DVD Player's menu are displayed).
3. Highlight the language you want to use for the menu items and press OK. The menu appears with your selection shown next to *Player Menus*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

### Changing the Disc Menus Language Preference

The *Disc Menus* option enables you to choose which language you want to use to display the disc menus.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Disc Menus* and press OK (the *Disc Menus* language options are displayed).
3. Highlight the language you want to use for the disc menus and press OK. Press the left arrow to return to the previous screen. The menu appears with your selection shown next to *Disc Menus*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu screen.

### How to Set *Other* as an Disc Menus Language Option

If the language you want to use isn't listed, you can use the *Other* option to select the language of your choice.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Disc Menus* and press OK (the *Disc Menus* language options are displayed).
3. Highlight *Other* and press OK.
4. Enter the code from the Language Codes list at the end of this chapter and press OK (the previous menu appears with your selection shown next to the *Disc Menus* path menu).
5. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu screen.

**NOTE:** Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

## Changing the Audio Language Preference

The Audio Language menu enables you to choose which language you want to listen to the movie in.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Audio* and press OK (the audio language options are displayed).
3. Highlight the language you want to use for the audio portion of the discs and press OK. Press the left arrow button. The menu appears with your selection shown next to *Audio*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu screen.

## How to Set *Other* as an Audio Language Option

If the language you want to use isn't listed, you can use the *Other* option to select the language of your choice.


1. From the *Languages* menu, highlight and select the *Audio* option (the *Audio* menu is displayed).
2. From the *Audio* menu, highlight *Other* and press OK.
3. Enter the code from the Language Codes list at the end of this chapter and press OK. The menu appears with your selection shown next to *Audio*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

**NOTE:** Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

# Using the DVD Player's Menu System

## Changing the Subtitle Language Preference

The *Subtitles* menu lets you choose a preferred language for the subtitles. The default is *Auto*. The *Auto* preference defaults to the same language that has been set as the audio language preference. To change the subtitle language preference:

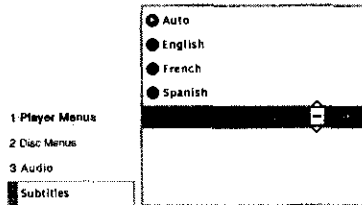

Select *Other* and enter the appropriate language code.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. From the *Languages* menu, highlight *Subtitles* and press OK (the *Subtitle* menu is displayed).
3. Highlight the language you want to use for subtitles and press OK. Press the left arrow button. The menu appears with your selection shown next to *Subtitles*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

**Note:** Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

## How to Set *Other* as the Subtitle Language Preference

If the language you want to use isn't listed, you can use the *Other* option to select the language of your choice.


1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight and select the *Subtitles* option (the *Subtitles* menu is displayed).
3. From the *Subtitles* menu, highlight *Other* and press OK.
4. Enter the code from the Language Codes list at the end of the chapter and press OK (the previous menu appears with your selection shown next to the *Audio* path menu).
5. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

**NOTE:** Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

# Using the DVD Player's Menu System

## Glossary

The glossary contains definitions and information about the features and controls on your DVD Player.

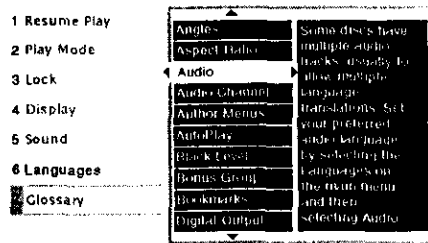

The Glossary explains terms used regarding your DVD player and discs.

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Glossary* and press OK (the Glossary appears).
3. Use the arrow buttons on your remote to highlight different terms. The definitions appear on the right side of the screen.

Some glossary definitions are more than one page. The scroll icon appears in the definition box to let you know when there's a second page.

To see the rest of the definition:

- a. Press the right arrow button. The glossary definition is highlighted.
  - b. Press the down arrow button. The second page of the definition appears.
  - c. Press the up arrow button to return to the first page of the definition or press GO BACK • AGAIN to return to the main menu.
4. Press the left arrow button to return to the DVD Player's main menu.

# Code List

Don't forget to press the OK button after you enter the code.

Language	Code	Language	Code	Language	Code
Abkhazian .....	6566	Dutch .....	7876	Japanese .....	7465
Afar .....	6565	English .....	6978	Javanese .....	7487
Afrikaans .....	6570	Esperanto .....	6979	Kannada .....	7578
Albanian .....	8381	Estonian .....	6984	Kashmiri .....	7583
Ameharic .....	6577	Faroese .....	7079	Kazakh .....	7575
Arabic .....	6582	Fiji .....	7074	Kinyarwanda .....	8287
Armenian .....	7289	Finnish .....	7073	Kirghiz .....	7589
Assamese .....	6583	French .....	7082	Kirundi .....	8278
Aymara .....	6588	Frisian .....	7089	Korean .....	7579
Azerbaijani .....	6590	Galician .....	7176	Kurdish .....	7585
Bashkir .....	6665	Georgian .....	7565	Laothian .....	7679
Basque .....	6985	German .....	6869	Latin .....	7665
Bengali; Bangla .....	6678	Greek .....	6976	Latvian, Lettish .....	7686
Bhutani .....	6890	Greenlandic .....	7576	Lingala .....	7678
Bihari .....	6672	Guarani .....	7178	Lithuanian .....	7684
Bislama .....	6673	Gujarati .....	7185	Macedonian .....	7775
Breton .....	6682	Hausa .....	7265	Malagsy .....	7771
Bulgarian .....	6671	Hebrew .....	7387	Malay .....	7783
Burmese .....	7789	Hindi .....	7273	Malayalam .....	7776
Byelorussian .....	6669	Hungarian .....	7285	Maltese .....	7784
Cambodian .....	7577	Icelandic .....	7383	Maori .....	7773
Catalan .....	6765	Indonesian .....	7378	Marathi .....	7782
Chinese .....	9072	Interlingua .....	7365	Moldavian .....	7779
Corsican .....	6779	Interlingue .....	7369	Mongolian .....	7778
Croatian .....	7282	Inupiak .....	7375	Naru .....	7865
Czech .....	6783	Irish .....	7165	Nepali .....	7869
Danish .....	6865	Italian .....	7384	Norwegian .....	7879



**Don't forget to press the OK button after you enter the code.**

Language	Code	Language	Code	Language	Code
Occitan .....	7967	Sesotho .....	8384	Thai .....	8472
Oriya .....	7982	Setswana .....	8478	Tibetan .....	6679
Oromo (Afan) .....	7977	Shona .....	8378	Tigrinya .....	8473
Panjabi .....	8065	Sindhi .....	8368	Tonga .....	8479
Pashto, Pushto .....	8083	Singhalese .....	8373	Tsonga .....	8483
Persian .....	7065	Siswati .....	8383	Turkish .....	8482
Polish .....	8076	Slovak .....	8375	Turkmen .....	8475
Portuguese .....	8084	Slovenian .....	8376	Twi .....	8487
Quechua .....	8185	Somali .....	8379	Ukrainian .....	8575
Rhaero-Romance .....	8277	Spanish .....	6983	Urdu .....	8582
Romanian .....	8279	Sundanese .....	8385	Uzbek .....	8590
Russian .....	8285	Swahili .....	8387	Vietnamese .....	8673
Samoan .....	8377	Swedish .....	8386	Volapük .....	8679
Sangho .....	8371	Tagalog .....	8476	Welsh .....	6789
Sanskrit .....	8365	Tajik .....	8471	Wolof .....	8779
Scots Gaelic .....	7168	Tamil .....	8465	Xhosa .....	8872
Serbian .....	8382	Tatar .....	8484	Yiddish .....	7473
Servo-Croatian .....	8372	Telugu .....	8469	Yoruba .....	8979
				Zulu .....	9085

**This page left intentionally blank.**

## Other Information

### Chapter Overview:

- Troubleshooting
- Care and Maintenance
- The Universal Remote
- Front Panel Controls
- Front Panel Display
- Limited Warranty
- Accessory Ordering Information

Changing Entertainment. Again.



# Other Information

---

## Troubleshooting

If you are experiencing product operation problems, please review the troubleshooting section before you call for service. Refer to the Limited Warranty for information on how to obtain repair service.

### Player won't work

- Reset the DVD Player by unplugging the AC power cord and plugging it back in.

### No Power

- Plug in the DVD Player. Make sure both ends of the AC power cord are securely plugged into the player and into an AC outlet.

### Disc won't play

- Insert a disc with the label side facing up.
- Check the type of disc you put into the player. This player only plays DVD video discs, Video CDs, audio CDs, CD-R discs and CD-RW discs.
- If the disc is a DTS music CD, it requires a DTS decoder. If you have a DTS receiver hooked up to your DVD player and you are still not getting sound, make sure the Trusurround® option is turned off.
- Both the player and the disc are coded by region. If the regional codes don't match, the disc can't be played. This player is Region No. 1.

### Play starts, but then stops immediately

- The disc is dirty. Clean it.
- Condensation has formed. Allow player to dry out.

### No picture

- Turn your TV to its Video Input Channel (see chapter 1).
- Turn on the TV.
- Make sure your player is connected properly. Make sure all cables are securely inserted into the appropriate jacks.

### No sound or distorted sound

- Make sure your player is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
- You may need to readjust the *Digital Output* or *Analog Output* settings from the *Sound* menu (see chapter 6).
- Turn your TV to its Video Input Channel (see chapter 1).
- Sound is muted during still, frame advance, or slow-motion play.
- If you connected an audio or audio/video receiver to your DVD Player, make sure you chose the correct input setting on the receiver.
- If you are NOT using a stereo TV for your sound source, turn off the *TruSurround®* option (from the *Analog Output* menu or TS SURROUND button on front of DVD player).
- Make sure you have checked the Dolby Digital and DTS boxes in the Digital Output menu.
- If you are playing an audio CD with DTS set as your digital output, Trusurround must be off.

### Player skips over songs on my MP3 disc

- Be sure that you have encoded the file as MPEG-1 layer III.
- Increase the bit rate (quality) the next time you create a CD.

### The ID3 information is not displayed for some files

- When creating a disc, use ID3 version 1 tags.

## Troubleshooting

### Remote control won't work

- If you are using a universal remote, you might be in the wrong mode. To operate your DVD Player, press DVD on the remote before you press any other buttons. If you're operating the TV, press the TV button first, etc.
- Insert new batteries in the remote.
- Operate the remote control at a distance of no more than 20 feet.
- Remove any obstacles between the remote and the DVD Player or other component. If your DVD Player is in an entertainment cabinet, the glass doors may be obstructing the remote control from operating the unit. Open the doors.
- Reset the remote. Remove batteries and hold down one or more buttons for about one minute to drain the microprocessor inside the remote to reset it. Reinstall batteries and try the remote again.

### Can't advance through a movie

- You can't advance through the opening credits and warning information that appear at the beginning of movies because the disc is programmed to prohibit that action.

### The icon appears on screen

- The feature or action cannot be completed at this time because:
  1. The disc's software restricts it.
  2. The disc's software doesn't support that feature (e.g., angles).
  3. The feature is not available at the moment.
  4. You've requested a title or chapter number that doesn't exist.

### The picture is distorted

- Did you connect your VCR to the DVD Player? Disconnect it. See chapter 1 for the correct setup and connection.
- The disc might be damaged. Try another disc.

### Picture is distorted during forward and reverse scan

- It is normal for some distortion to appear while scanning.

### A screen saver appears on the TV

- Your player is equipped with a screen saver that appears on the TV after your player has been idle for several minutes. Press STOP or GO BACK•AGAIN on the remote to make the screen saver disappear from the screen and return to the player's main menu.

### Subtitle and/or audio language is not the one selected from the initial setting

- If the subtitle and/or audio language you've chosen as the default does not exist on the disc, the initial settings will not be seen/heard. The disc's priority language is selected instead. Set the subtitle and/or audio language manually through the Info Display or the player menu.

### The menu is displayed in a foreign language

- The Menu Language preference is set to that language. From the DVD player's main menu, select the *Languages option* (In Spanish, shown as *Idiomas*; in French, as *Langues*). From the Languages menu, select the *Player Menus* option (In Spanish, shown as *Menús del Lector*; in French, as *Menus Lecteur*). Highlight the language you prefer and press OK.

### Play doesn't begin

- The rating of the title on the disc exceeds the rating limit set in the *Ratings Limits* when you press PLAY. Unlock the player or change the rating limit in those menus.

# Other Information

---

## Troubleshooting

### No forward or reverse scan

- Some discs have sections that prohibit rapid scanning, or title and chapter skip.
- If you're trying to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.

### Camera angle cannot be changed

- Some discs don't have the multi-camera angles, and some discs only have it in certain parts of the movie.

### Picture is too tall and thin

- Change the aspect ratio using the *TV Image* setting in the Display menu (see chapter 6).

### Picture is too short and wide

- Change the aspect ratio using the *TV Image* setting in the Display menu (see chapter 6).

### Cannot copy discs to video tape

- You can't record DVD discs onto videocassettes because the discs are encoded with anti-copy protection.

### Disc tray won't open

- Disengage the retail lock feature. Press and hold a combination of buttons on the front panel at the same time. Press and hold SKIP FWD, OPEN•CLOSE, and TS SURROUND for at least three seconds.
- Front Tray Lock feature is turned on. Unlock the player from the Lock menu or turn Tray Lock feature off (see chapter 6).

### Full Version of Disc Does Not Play

- If the DVD player is locked, the disc may have been edited using the Scene Snip feature. Unlock the player (see chapter 2).

### Disc won't eject

- When you put a disc into the player, the player may take up to 15 seconds to read the disc. You won't be able to eject the disc during this time. Wait 15 seconds and try again.

### Forgot password

- Point the remote at the DVD player. Press and hold the STOP button on the front of the DVD Player and the STOP button on the remote control at the same time (hold both buttons down at the same time for at least 3 seconds). The player will unlock. Follow the instructions for locking your player and changing the password in Chapter 5.

## Handling Cautions

- Before connecting other components to this player, be sure to turn all components off.
- Don't move the player while a disc is being played. The disc may get scratched or broken, and the player's internal parts may be damaged.
- Don't put any container filled with liquid or any small metal objects on the player.
- Be careful not to put your hand into the disc tray.
- Don't place anything other than the disc in the disc tray.
- Exterior influences such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the ON•OFF button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- Be sure to remove the disc and turn off the player after use.

## Maintenance of Cabinet

For safety reasons, when cleaning the cabinet be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

## Formation of Condensation


- Due to sharp changes in temperature and humidity, condensation may form if warm air comes in contact with any cold parts inside the player.
- When condensation forms inside the player, the player may not operate correctly. If this occurs, leave the player at room temperature until the inside of the player becomes dry and operational.
- If condensation forms on a disc, wipe the disc with a soft, dry cloth by moving the cloth from the center hole toward the outer edge.

## Handling Discs

- Don't touch the disc's signal surfaces. Hold by the edges or by one edge and the hole in the center.
- Don't affix labels or adhesive tape to label surfaces. Don't scratch or damage the label.
- Do not use damaged (cracked or warped) discs.

## Cleaning Discs

- Dirty discs can cause reduced video and audio performance. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes very dirty, wet a soft cloth in water, wring it out well. Wipe the dirt away gently, and remove any water drops with a dry cloth.
- Do not use record-cleaning sprays or anti-static agents on discs. Also, never clean the discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

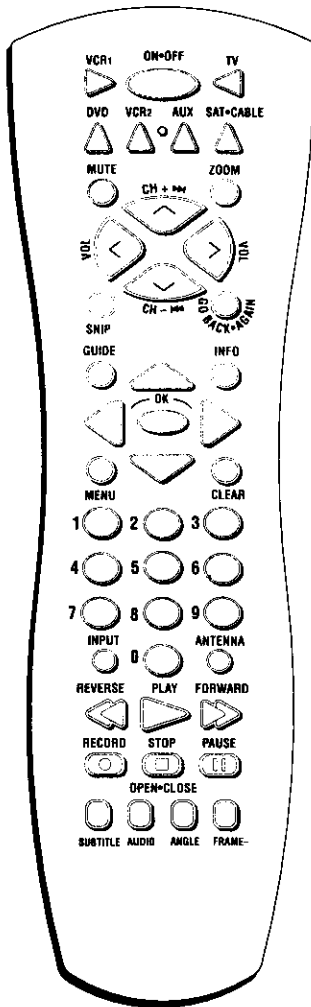

The remote may not operate all models of all brands.

## Universal Remote

The universal remote can be programmed to control most brands of remote controllable TVs, VCRs, satellite receivers and cable boxes. The remote is already programmed to control most RCA, PROSCAN, and GE TVs, VCRs, and satellite receivers.

The AUX button can be programmed to control most brands of an additional remote controllable TV, VCR, satellite receiver, or cable box.

## Test the Remote

To determine whether the universal remote needs to be programmed, turn a device ON, such as a VCR. Point the remote at the VCR, and press the VCR1 button. Then press ON•OFF or CH + (channel up) or CH - (channel down) to see if the VCR responds to the remote commands. If the component does not respond, the remote needs to be programmed.

## Program the Remote

There are two ways to program the remote control:

- automatic code search
- direct entry

## Automatic Code Search

The following instructions can be used to program the remote to operate each of the components connected to your DVD Player. If you want to exit the automatic code search without programming any of your components, press CLEAR until the red light on the remote turns off.

1. Turn on the component you want to operate (VCR, TV, etc.)
2. Press and hold the component button you want to program (VCR1, VCR2, etc.). While holding the component button, press and hold ON•OFF until the red light on the remote turns on, then release both buttons.
3. Point the remote at the component. Press and release PLAY, then wait 5 seconds or until the red light on the remote stops flashing.

At this point the remote is searching for the correct code to program. If, after 5 seconds, the component you want to operate does not turn off, press PLAY again to tell the remote to search the next set of codes.

Continue pressing PLAY until the component turns off or you have searched through all of the codes. There are 20 total sets of codes. If the component does not turn off after pressing PLAY 20 times, then the remote cannot be programmed to operate that component.



If the component you want to control *does* turn off:

1. Press and release REVERSE, then wait 2 seconds. Repeat this step until the device turns back ON.
2. To finish, press and hold STOP until the red light on the remote turns off.

## Direct Entry

1. Turn on the component to be programmed.
2. Look up the brand and code number(s) for the component on the code list in this section.
3. Point the DVD Player's remote at the component.
4. Press and hold the component button on the remote you want to program.
5. Enter the code from the Remote Control code list on the following pages.
6. Release the component button, and then press ON•OFF to see if the component responds to the command. If it doesn't, try pressing the component button and then ON•OFF again.
7. If you get no response, repeat these steps using the next code listed for your brand, until the component responds to the remote commands.

### **Important Tips!**

*You must continue pressing the component button while you enter the code.*

---

*Let's say you have a Zenith TV. To program the universal remote to operate the TV you would:*

*Press and hold the TV button while you enter the first code listed for Zenith in the TV Codes column.*

*Release the TV button. Press ON•OFF to see if the TV responds. If it doesn't, follow the same steps, but enter the second code instead of the first.*

---

## Operate Components after Programming the Remote

Because this universal remote can control several different components (TV, DVD, VCR, satellite receiver, etc.) it uses operational modes triggered by the component buttons. For example if you want the remote to control the TV, you would press the TV button to put the remote into TV mode before you could control the TV.

1. Press the appropriate component button (DVD, TV, VCR1, VCR2, SAT•CABLE, or AUX) to set the remote to control the component.
2. Press ON•OFF to turn the component ON or OFF.
3. Use the remote buttons that apply to that component.

**Note:** *This remote may not be compatible with all brands and models of components.*

# Code List

## TV Codes

Abex	1172
Admiral	1001, 1173
Adventura	1174
Aiko	1016
Alleron	1046
Amtron	1038
Akai	1002
Anam National	1003, 1038
AOC	1004, 1005, 1006, 1007, 1175, 1176
Audiovox	1038
Belcor	1004
Bell & Howell	1001, 1083, 1162
Bradford	1038
Brokwood	1004
Candle	1004, 1006, 1008, 1174
Capehart	1175
Celebrity	1002
Centurion	1009
Citizen	1004, 1006, 1008, 1016, 1038, 1105, 1171, 1174, 1177
Clairtone	1176
Colortyme	1004, 1006
Concerto	1004, 1006
Contec/Cony	1012, 1013, 1014, 1038, 1176
Craig	1038
Crown	1038, 1171
Curtis Mathes	1000, 1004, 1006, 1015, 1105, 1162, 1171
CXC	1038
Daewoo	1004, 1005, 1006, 1016, 1017, 1018, 1127, 1171
Daytron	1004, 1006, 1171
Dimensia	1000
Dumont	1004, 1151
Dynatech	1178
Electroband	1002, 1176
Electrohome	1003, 1004, 1006, 1019, 1022
Emerson	1004, 1006, 1012, 1014, 1023, 1024, 1025, 1026, 1027, 1028, 1029, 1030, 1031, 1032, 1033, 1034, 1035, 1036, 1037, 1038, 1039, 1041, 1042, 1043, 1044, 1046, 1047, 1123, 1124, 1162, 1171, 1176, 1177, 1179, 1191
Envision	1004, 1006
Fisher	1048, 1049, 1050, 1051, 1162, 1180
Fujitso	1046
Funai	1038, 1046
Futuretec	1038
GE	1000, 1003, 1004, 1006, 1022, 1052, 1054, 1055, 1087, 1164, 1165, 1166, 1167, 1168, 1181
Gibraltar	1004, 1151
Goldstar	1004, 1005, 1006, 1012, 1019, 1056, 1057, 1058, 1155, 1156, 1171, 1172
Grundy	1038, 1046, 1171
Hallmark	1004, 1006
Harvard	1038
Hitachi	1004, 1006, 1012, 1013, 1059, 1060, 1061, 1135, 1136, 1137, 1138, 1139, 1140, 1141, 1142, 1143, 1144, 1145, 1146, 1148, 1150, 1179
IMA	1038
Infinity	1062
Janeil	1174
JBL	1062
JCB	1002
JC Penny	1000, 1004, 1005, 1006, 1008, 1022, 1052, 1054, 1058, 1063, 1064, 1072, 1087, 1105, 1128, 1171, 1172, 1181
Jensen	1004, 1006
JVC	1012, 1013, 1054, 1060, 1065, 1066, 1067, 1089, 1157, 1158, 1159, 1182
Kawasho	1002, 1004, 1006
Kaypani	1175
Kenwood	1004, 1006, 1019
Kloss Novabeam	1068, 1069, 1174, 1183

KTV	1038, 1070, 1171, 1176, 1177
Loewe	1062
Logik	1083
Luxman	1004, 1006
Lxi	1000, 1006, 1049, 1062, 1071, 1072, 1073, 1162, 1181
Magnavox	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1089, 1130, 1131, 1132, 1133, 1134, 1183, 1184
Majestic	1083
Marantz	1062
Marantz	1004, 1006, 1062, 1078
Megatron	1006, 1059
Mei	1176
Memorex	1001, 1006, 1082, 1083, 1162
MGA	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1082
Midland	1054, 1151, 1171, 1172, 1181
Minutz	1052
Mitsubishi	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1081, 1082, 1125
Montgomery Ward	1083
Motorola	1003, 1173
MTC	1004, 1005, 1006, 1105, 1176, 1178
Multitech	1038, 1178
Multivision	1084
NAD	1006, 1071, 1072, 1185
NEC	1003, 1004, 1005, 1006, 1089
Nikko	1006, 1016
NTC	1016
Onwa	1038
Optimus	1185
Optonica	1095, 1173
Orion	1035, 1191
Panasonic	1003, 1054, 1062, 1170
Philco	1003, 1004, 1005, 1006, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1077, 1183, 1184
Philips	1003, 1004, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1086, 1087, 1088, 1089
Pilot	1004, 1171
Pioneer	1004, 1006, 1090, 1091, 1092, 1179, 1185
Portland	1004, 1005, 1006, 1016, 1171
Price Club	1105
Prism	1054
PROSCAN	1000, 1181
Proton	1004, 1006, 1012, 1093, 1175
Pulsar	1151
Pulser	1004
Quasar	1003, 1054, 1070, 1094
Radio Shack/Realistic	1000, 1004, 1006, 1012, 1038, 1049, 1095, 1162, 1171, 1172
RCA	1000, 1003, 1004, 1005, 1006, 1007, 1019, 1096, 1098, 1099, 1100, 1101, 1102, 1103, 1129, 1179, 1181, 1187
Rhapsody	1176
Runco	1151
Sampo	1004, 1006, 1171, 1172, 1175
Samsung	1004, 1005, 1006, 1012, 1015, 1019, 1104, 1105, 1106, 1171, 1172
Samsux	1171
Sansui	1191
Sanyo	1004, 1048, 1049, 1050, 1080, 1107, 1108, 1162, 1169, 1180
Scotch	1006
Scott	1004, 1006, 1012, 1024, 1035, 1038, 1046
Sears	1000, 1004, 1006, 1013, 1019, 1046, 1048, 1049, 1050, 1051, 1066, 1071, 1072, 1109, 1110, 1162, 1180, 1181, 1189
Sharp	1004, 1006, 1012, 1029, 1111, 1112, 1113, 1122, 1171, 1173
Shogun	1004
Signature	1001, 1083, 1115
Simpson	1008

Sonic	1176
Sony	1002
Soundesign	1004, 1006, 1008, 1038, 1046
Squareview	1189
SSS	1004, 1038
Starlite	1038
Supre-macy	1174
Supreme	1002
Sylvania	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1116, 1161, 1183, 1184
Symphonic	1033, 1038, 1189
Tandy	1173
Tatung	1003, 1178
Technics	1054
Techwood	1004, 1006, 1054
Teknika	1004, 1005, 1006, 1008, 1012, 1013, 1016, 1038, 1046, 1076, 1082, 1083, 1105, 1170, 1171
Telecaption	1117
TMK	1004, 1006
Toshiba	1049, 1071, 1072, 1089, 1105, 1109, 1117, 1118, 1160, 1162
Totevision	1171
Universal	1052, 1087
Victor	1066, 1182
Vidtech	1004, 1005, 1006
Viking	1174
Wards	1000, 1001, 1004, 1005, 1006, 1019, 1024, 1033, 1046, 1052, 1062, 1068, 1069, 1074, 1075, 1076, 1083, 1087, 1088, 1095, 1119, 1120, 1184
Yamaha	1004, 1005, 1006, 1019
Zenith	1004, 1083, 1151, 1152, 1153, 1154

## VCR Codes

Admiral	2131
Adventura	2026
Aiko	2027
Aiwa	2002, 2026
Akai	2003, 2004, 2005, 2007, 2008, 2111, 2112, 2113
American High	2021
Asha	2013
Audio Dynamics	2009, 2010
Audiovox	2014
Bell & Howell	2011
Beaumarck	2013
Broksonic	2012, 2025
Calix	2014
Candle	2013, 2014, 2015, 2016, 2017, 2018, 2019
Canon	2021, 2022, 2114
Capehart	2020, 2110
Carver	2062
CCE	2027, 2061
Citizen	2013, 2014, 2015, 2016, 2017, 2018, 2019, 2027
Colortyme	2009
Colt	2061
Craig	2013, 2014, 2023, 2061
Curtis-Mathes	2000, 2002, 2009, 2013, 2016, 2018, 2021, 2022, 2024, 2115
Cybernex	2013
Daewoo	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110
Daytron	2110
DBX	2009, 2010
Dimensia	2000
Dynatech	2002, 2026
Electrohome	2014, 2029
Electrohome	2014

## VCR Codes

Emerson	2002, 2012, 2014, 2015, 2021, 2024, 2025, 2026, 2029, 2030, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
Fisher	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
Fuji	2021, 2119
Funai	2002, 2026
Garrard	2026
GE	2000, 2001, 2013, 2021, 2022, 2053, 2115, 2120
Goldstar	2009, 2014, 2018, 2054, 2121
Gradiente	2026
Harley Davidson	2026
Harman Kardon	2009
Harwood	2061
Headquarter	2011
Hitachi	2002, 2055, 2056, 2057, 2107, 2111, 2120, 2122
Hi-Q	2023
Instant Replay	2021
JCL	2021
JC Penney	2009, 2010, 2011, 2013, 2014, 2021, 2022, 2055, 2056, 2058, 2059, 2060, 2107, 2118
Jensen	2055, 2056, 2111
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
Kenwood	2009, 2010, 2011, 2016, 2018, 2058, 2111, 2123
KLH	2061
Kodak	2014, 2021
Lloyd	2002, 2026
Logik	2061
LXI	2014
Magnavox	2021, 2022, 2062, 2063, 2104, 2108, 2124
Magnin	2013
Marantz	2009, 2010, 2011, 2016, 2018, 2021, 2058, 2062, 2064
Marta	2014
Masushita	2021
Mei	2021
Memorex	2002, 2011, 2013, 2014, 2021, 2023, 2026, 2104, 2131
MGA	2029, 2065, 2113
MGN Technology	2013
Midland	2053
Minolta	2055, 2056, 2107
Mitsubishi	2029, 2055, 2056, 2065, 2066, 2067, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123
Montgomery Ward	2075, 2131
Motorola	2021, 2131
MTC	2002, 2013, 2026
Multitech	2002, 2013, 2016, 2026, 2053, 2061
NEC	2009, 2010, 2011, 2016, 2018, 2058, 2064, 2076, 2078, 2079, 2111, 2123
Nikko	2014
Noblex	2013
Olympus	2021
Optimus	2014, 2131
Optonica	2096
Orion	2035
Panasonic	2021, 2022, 2109, 2125, 2126, 2127
Pentax	2016, 2055, 2056, 2107, 2120
Pentax Research	2018
Philco	2021, 2022, 2062, 2063
Philips	2021, 2062, 2096, 2124
Pilot	2014
Pioneer	2010, 2055, 2080, 2081, 2123
Portland	2016, 2017, 2019, 2110
PROSCAN	2000, 2001
Protec	2061
Pulsar	2104

Quarter	2011
Quartz	2011
Quasar	2021, 2022, 2125
RCA	2000, 2001, 2003, 2013, 2021, 2055, 2056, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125
Radioshack/Realistic	2002, 2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2131
Radix	2014
Randex	2014
Ricoh	2128
Runco	2104
Samsung	2005, 2013, 2015, 2033, 2053, 2112
Sanky	2104, 2131
Sansui	2010, 2092, 2111, 2123
Sanyo	2011, 2013, 2023
Scott	2012, 2015, 2025, 2032, 2035, 2038, 2065, 2093, 2116
Sears	2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
Sharp	2002, 2017, 2029, 2094, 2095, 2096, 2131
Shintom	2004, 2056, 2061, 2098
Shogun	2013
Signature	2002, 2131
Singer	2021, 2061, 2128
Sony	2002, 2004, 2098, 2099, 2119, 2128
STS	2021, 2107
Sylvania	2002, 2021, 2022, 2026, 2062, 2063, 2065, 2124
Symphonic	2002, 2026
Tandy	2002, 2011
Tashiko	2014
Tatung	2058, 2111
TEAC	2002, 2026, 2058, 2085, 2111
Technics	2021, 2109
Teknika	2002, 2014, 2021, 2026, 2100, 2129
TMK	2013, 2024, 2047
Toshiba	2015, 2049, 2051, 2055, 2065, 2093, 2116
Totevision	2013, 2014
Unitech	2013
Vector Research	2009, 2010, 2015, 2016
Victor	2010
Video Concepts	2009, 2010, 2015, 2016, 2113
Videasonic	2013
Wards	2002, 2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2131
XR-1000	2021, 2026, 2061
Yamaha	2009, 2010, 2011, 2018, 2058, 2111
Zenith	2004, 2098, 2104, 2119, 2128

Memorex	5026
Movie Time	5002, 5027, 5028
NSC	5002, 5027, 5028
Oak	5002, 5016, 5029
Panasonic	5048, 5052
Paragon	5026
Philips	5011, 5012, 5013, 5019, 5025, 5030, 5031, 5032
Pioneer	5033, 5034
Pulsar	5026
RCA	5047, 5049, 5052
Realistic	5009, 5049
Regal	5022, 5035
Regency	5017
Rembrandt	5003
Runco	5026
Samsung	5014, 5034
Scientific Atlanta	5006, 5036, 5037, 5038
Signal	5014, 5018
Signature	5003
SI Marx	5014
Sprucer	5052
Starcom	5007, 5018, 5053
Stargate	5014, 5018
Starquest	5018
Tandy	5040
Television	5014
Tocom	5004, 5023, 5041
Toshiba	5026
Tusa	5018
TV86	5027
Unika	5008, 5009, 5011
United Artists	5002
United Cable	5053
Universal	5008, 5009, 5010, 5011
Videoway	5044
Viewstar	5015, 5025, 5027, 5040
Zenith	5026, 5050, 5051

## Satellite Receiver Codes

Chapparral	5006, 5057
Drake	5058, 5059
GE	5000, 5001
General Instruments	5060, 5061, 5062
Panasonic	5075
Primestar	5076
PROSCAN	5000, 5001
RCA	5000, 5001
Realistic	5063
Sony	5072
STS1	5064
STS2	5065
STS3	5066
STS4	5067
Toshiba	5068, 5073
Uniden	5069

## Audio Codes


RCA and Dimensia	
AM/FM	4003
AUX	4004
Phono	4005
Tape	4006
CD	4007
Sony	4266
Kenwood	4264
Aiwa	4261

## Cable Boxes

ABC	5002, 5003, 5004, 5005, 5006, 5007, 5053
Antronix	5008, 5009
Archer	5008, 5009, 5010, 5011
Cabletenna	5008
Cableview	5008
Century	5011
Citizen	5011
Colour Voice	5012, 5013
Comtronics	5014, 5015
Contec	5016
Eastern	5017
Garrard	5011
GE Electronics	5009
Gemini	5018, 5019, 5049
General Instrument	5003
Hamlin	5020, 5021, 5022, 5035, 5045
Hitachi	5003
Hytex	5002
Jasco	5011
Jerrold	5003, 5005, 5007, 5018, 5023, 5024, 5046, 5053
Magnavox	5025

# Other Information

## Front Panel Controls

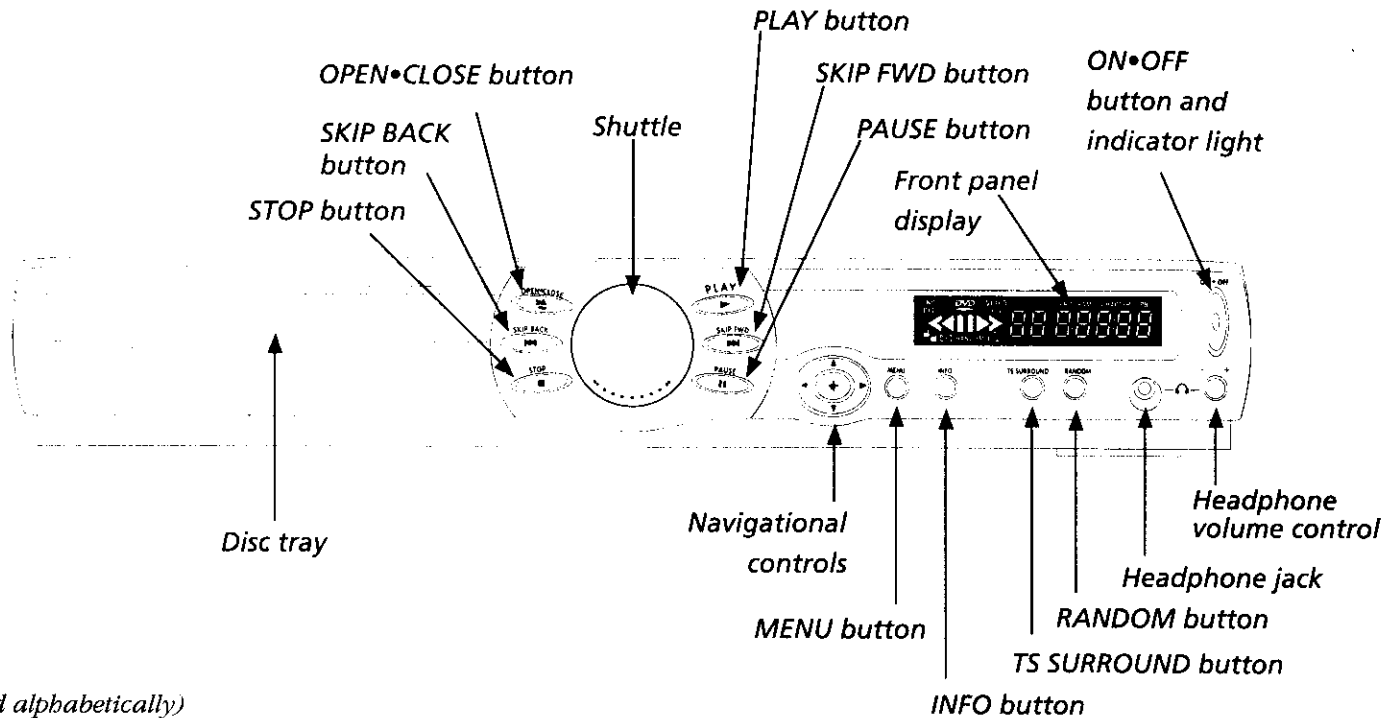

(listed alphabetically)

**Disc tray** Press OPEN•CLOSE to open and close the disc tray.

**Front panel display** (See following page for details.)

**Headphone jack** Plug in headphones here.

**Headphone volume control** Controls volume to headphones.

**INFO** Brings up the Info Display.

**MENU** Brings up the DVD disc menu.

**Navigation controls** Use to navigate through Info Display or menus.

**ON•OFF button and ON•OFF indicator light** Turns the player on and off. The ON•OFF indicator lights when the player is on.

**OPEN•CLOSE** Press to open and close the disc tray.

**PAUSE** Pauses disc play. Advances playback one frame at a time during pause mode.

**PLAY** Begins disc play (and closes disc tray if it's open).

**RANDOM** Changes Play Mode to Random (plays disc tracks, chapters or MP3 titles in random order).

**Shuttle** Rotate clockwise to search forward through a disc. Rotate counterclockwise to search backward through a disc. The farther you turn the shuttle, the faster the speed of the search.


**SKIP BACK** Allows you to move to the beginning of the preceding title, chapter, track or MP3 title on a disc (in effect, "skipping" the title, chapter, track or MP3 title).

**SKIP FWD** Allows you to move to the beginning of the next title, chapter, track or MP3 title on a disc (in effect, "skipping" the title, chapter, track or MP3 title).

**STOP** Stops disc play.

**TS SURROUND** Use the TS SURROUND button to simulate surround sound. Each press of the button toggles the setting between on and off.

## Front Panel Display

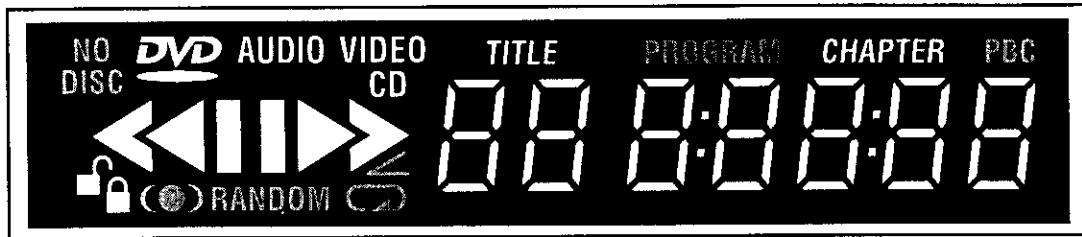

Display lights listed from left to right (top row first)

1. **NO DISC** There isn't a disc in the disc tray.
2. **DVD** Lights when you play a DVD disc.
3. **AUDIO** Lights when you play an MP3 disc.
4. **VIDEO** Lights when you play a video CD.
5. **CD** Lights when you play an audio CD or a video CD.
6. **TITLE** Indicates the number of the title that is playing.
7. **PROGRAM** The disc is playing the chapters, tracks, indexes or MP3 titles in the order you programmed.
8. **CHAPTER** Indicates the chapter that is playing.
9. **PBC** Lights when the Video CD disc currently in the player has playback control.
10. **Play direction** Indicates whether the disc is paused, moving forward, or backward.
11. **Display Messages** The display messages are:
  - OFF** Displayed when you turn off the player.
  - HELLO** Displayed when you first turn on the player.
12. **Unlocked** Indicates the player is unlocked (no password required to play discs).
13. **Locked** Player is locked. You must enter your password to play discs with rating limits higher than those you entered in the *Ratings Limits* menu.
14. **TruSurround®** Lights when SRS TruSurround® is on.
15. **RANDOM** The disc is playing the chapters, tracks, indexes or MP3 titles in random order.
16. **Angle** Indicates that the camera angle feature is available.
17. **Repeat** Indicates that the Repeat feature has been activated.

# Other Information

---

## Limited Warranty RCA Digital Video Disc (DVD) Player

### What your warranty covers:

- Any defect in materials or workmanship.

### For how long after your purchase:

- 90 days - Unit exchange, which includes parts and labor.
- 91 days to 1 year - Unit exchange, which includes parts only; you pay the labor.
- The warranty for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

### What we will do:

#### During the initial 90 days:

Exchange the DVD unit with a new or, at our option, refurbished unit.

#### After the 90 days and within one year:

Exchange the DVD unit with a new or, at our option, refurbished unit. We will bill you a flat exchange charge to replace a defective unit. This charge covers the labor cost for its repair.

### How you get service:

- Call 1-800-311-9263 and have your unit's date of purchase and model/serial number ready. The model/serial number information is on the back of your unit.
- A representative will troubleshoot your problem over the phone.
- If the representative determines that you should receive a replacement unit you will be provided with a Return Authorization (RA) number and the location of a nearby exchange point if one exists. No returns will be accepted without the RA number.

### To receive a replacement unit before you return yours:

#### Option I:

1. Provide your Discover, Mastercard or Visa account number and expiration date to your phone representative. This is for security purposes only and your account will not be charged at this time.
2. We will send you a replacement unit.
3. If you return the unit to us within 14 days from the date you were provided a RA number, only items not covered by warranty will be charged to your account. If your unit is not received within 14 days, the suggested retail value of the receiver will be charged to your credit card. This amount will be credited, less a \$10 handling fee, if the unit is subsequently received.
4. Ship your defective unit back to us using the replacement unit's carton. Shipping instructions will be included on the carton along with your RA number which will allow you to easily ship the unit back to us. Make sure you insure your shipment in case of damage or loss. Include with the shipment:
  - Evidence of purchase date such as a bill of sale.
  - A brief note describing your unit's problem.
  - Your name, address and phone number.

## Option II:

1. We will send a replacement unit to our exchange point.
2. The exchange location will notify you of its arrival.
3. Take your unit and evidence of purchase date, such as a bill of sale, to the exchange location and you will be provided the new or refurbished unit. Please retain all accessories such as the remote control hand unit.
4. If the repairs are covered by your warranty, you will not be billed.

**Thomson assumes no responsibility for warranty shipments from the customer to the factory if not shipped in the manner prescribed by Thomson.**

**Return transportation, storage, handling and insurance costs are your responsibility. We accept no responsibility in case of damage or loss.**

## To receive a replacement unit after we have received your unit:

- Write the RA number on the outside of the carton used to return the unit. Make sure you insure your shipment in case of damage or loss.
- Carefully pack the unit using the original box and packing material if possible. Please retain all accessories that were included with your unit such as the remote control hand unit.
- Include with the shipment:
  1. Evidence of purchase date, such as a bill of sale, to verify your unit's warranty eligibility.
  2. A brief note describing your unit's problem.
  3. Your name, address and phone number.
- The representative will advise the address to mail a cashier's check or money order for payment if there are any out of warranty labor or parts charges, and you elect not to use your credit card.
- After we receive your product, a new or refurbished unit will be shipped to you.

## What your warranty does not cover:

- Acts of God, such as but not limited to lightning damage.
- Adjustment of customer controls.
- Damage from misuse or neglect.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Batteries.
- Units purchased or serviced outside the U.S.A.
- Shipping damage if the unit was not packed and shipped in the manner prescribed by Thomson.
- Storage fees may be charged by the exchange point if you fail to pickup the replacement unit in a timely manner.

## Product Registration:

- Please complete and mail the Product Registration Card packed with your DVD product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

## How state law relates to warranty:

- This warranty gives you specific legal rights and you may have other rights that vary from state to state.

## If you purchased your product outside the United States:

- This warranty does not apply. See your dealer for warranty information.

**This page left intentionally blank.**



 
## Accessories and Order Form




Optical Plug to Optical Plug DV3 (3 ft.) DV6 (6 ft.)



Optical Plug to Mini Plug DV3M (3 ft.) DV6M (6 ft.)



Surge Protector (SCTV160)

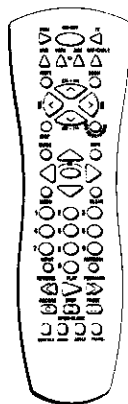

Remote Control (CRK76DG1)

## Accessory Order Form for Your DVD Player

Description	Part No.	Price	Qty
Optical Plug to Optical Plug (3 ft.)	DV3	\$15.95	
Optical Plug to Optical Plug (6 ft.)	DV6	\$19.95	
Optical Plug to Mini Plug (3 ft.)	DV3M	\$15.95	
Optical Plug to Mini Plug (6 ft.)	DV6M	\$19.95	
Remote Control (CRK76DG1)	246773	\$19.95	
Surge Protector	SCTV160	\$49.95	

Total Merchandise .....	\$
Sales Tax .....	\$
We are required by law to collect the appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent.	
Shipping and Handling .....	\$ 5.00
Total Amount Enclosed .....	\$
Use VISA or MasterCard preferably. Money order or check must be in U.S. currency only. No COD or CASH.	

Prices are subject to change without notice.

All accessories are subject to availability.

Please complete other side also.



Detach Here

# Other Information

Charge your order on your VISA, MasterCard, or Discover Card by filling in below

## USE YOUR CREDIT CARD

**IMPORTANT:** Copy complete account number from your VISA card



My card expires:

**IMPORTANT:** Copy complete account number from your MasterCard



Copy Number above your name on MasterCard

My card expires:

**IMPORTANT:** Copy complete account number from your Discover Card



My card expires:

**AUTHORIZED SIGNATURE**  
(Credit card order will not be processed without signature)

Print or type your name and address clearly.



A complete and correct order will save you days of waiting.

Name: \_\_\_\_\_  
Street: \_\_\_\_\_  
Apt. \_\_\_\_\_  
City: \_\_\_\_\_  
State: \_\_\_\_\_ Zip: \_\_\_\_\_  
Daytime Telephone No.: \_\_\_\_\_

Please make sure that both sides of this form have been filled out completely.

- Allow 4-6 weeks for delivery.
- All accessories are subject to availability.
- Prices are subject to change.

## To Place an Order

To place your order by phone, have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below.

Use this number only to place an order for accessory items listed on this order form.

**1-800-338-0376**

To place your order by mail, detach and mail the completed order form with credit card information, money order or check in US currency (made payable to Thomson Consumer Electronics, Inc.) to the following address:

**Video Accessories**  
**PO Box 8419**  
**Ronks, PA 17573**

**This page left intentionally blank.**

## Index

## Symbols

- 16 x 9 Widescreen 77
- 2-channel stereo 80
- 4 x 3 Letterbox 77
- 4 x 3 Standard 77
- 5.1-Channel out audio 16, 20, 80

## A

- A•B Repeat 37, 46, 57
- AC IN jack 20
- Accessories 103
- Analog Output
  - 2-channel 80
  - 5.1-channel 16, 20, 80
- Angle, camera 39
- Angle icon 99
- Arrow buttons 24
- Aspect ratio 77
- Audio
  - Dolby Digital 12
- AUDIO button 24
- Audio CD
  - creating a program 68
  - Playing 44, 52
  - using Dub Assist 49
- audio CD
  - using Dub Assist 56
- Audio channel output
  - changing, video CD 63
- Audio equipment
  - Dolby Digital 12
  - DTS 12
- Audio language 36, 41, 83
- Automatic code search 94
- AutoPlay 56, 70, 71

## B

- Batteries, remote 21
- Bookmarks
  - clearing 38, 49
  - recalling 38, 48
  - storing 38, 48
  - using 38, 48
- Buttons
  - ANGLE 24
  - arrow buttons 24
  - AUDIO 24
  - CH + and CH - 24
  - CLEAR 24
  - component 24
  - DVD 21
  - FORWARD 24

- Buttons
  - FRAME - 24
  - GO BACK•AGAIN 25, 41
  - GUIDE 25
  - INFO 25
  - MENU 25
  - Numbers (0-9) 25
  - OK 25
  - ON•OFF 21, 98
  - OPEN•CLOSE 25, 98
  - PAUSE 25, 98
  - PLAY 25, 98
  - RANDOM 98
  - REVERSE 25
  - SAT•CABLE 24
  - Shuttle control 98
  - SKIP FWD 98
  - SKIP REV 98
  - SNIP 25, 33, 41
  - STOP 25
  - SUBTITLE 25, 41
  - TS SURROUND 98
  - TV 24
  - VCR1 24
  - VCR2 24
  - ZOOM 25, 42

## C

- Cable box codes 96, 97
- Camera angle 39, 41
- Cancelling repeat feature 37, 47, 57, 62
- CH + and CH - 24
- Changing the audio Language Preference 85
- Changing the Disc Menus Language 84
- Changing the Menu Language 84
- Chapter advance 40
- Chapter, selecting 32
- Cleaning discs 93
- CLEAR button 25
- Clearing a bookmark 38, 49
- Codes
  - cable box 96
  - Language 86
  - TV 96
  - VCR 97
- Codes for remote
  - cable box 97
  - satellite receiver 97
  - TV 96
  - VCR 97
- Connections
  - 5.1 channel digital audio 13
  - 6-Channel Audio Out 17
  - Dolby Digital 13
  - DTS receiver 13
  - DVD Player + TV 9
  - DVD Player + TV + VCR 11

- DVD player + TV + VCR + Satellite Receiver 19
- Connections, types of 7
- Controls
  - front panel 98
  - remote 24
- Country rating systems 74

## D

- DIGITAL AUDIO OUT jack 12, 20
- Digital Output 78
  - Dolby Digital 13, 78
  - DTS 13, 79
- Direct entry 95
- Disc Menu 29, 77
- Disc Menus language 84
- Discs
  - cleaning 93
  - digital video discs 29
  - handling 93
  - menu 29
  - Parental Edit library 74
  - tray 98
- Display
  - front panel 99
- Display menu 76
- Distance
  - Speakers 80
- Dolby Pro Logic 13, 15
- DTS 12
- DTS Receiver 13
- Dub Assist 49, 71
- Dub Assist menu 71
- DVD buttons 24
- DVD disc
  - programming 70
- DVD Limits Menu
  - unrated titles 76
- DVD Limits menu
  - rated Titles 75

## E

- Edit Program menu 67
- Enhancements 81
- Enter New Password 73

## F

- Fast motion playback 40
- FORWARD button 24, 25
- FRAME - button 25
- Frame advance 40
- Freeze frame (pause) 40
- Front Display menu 77
- Front panel controls 98

Front panel display 99  
 Front panel icons  
   angle 99  
   locked 99  
   play direction 99  
   repeat 99  
   unlocked 99  
 Front tray lock feature 75

## G

Glossary 85  
 GO BACK•AGAIN button 25, 41  
 Grayed out 31, 61  
 GUIDE button 25

## H

Handling  
   cautions 93  
   discs 93  
   DVD Player 93  
 How to find your TV's video input channel  
   23

## I

Icons 31, 61  
 Image  
   4x3 letterbox 76  
   4x3 standard 76  
   16x9 widescreen 76  
 Index  
   selecting, video CD 62  
 INFO button 25  
 Info Display  
   Audio CD 44, 52  
   using 31  
   video CD 61  
 IntroScan  
   Audio CDs 47  
   MP3 discs 58  
 Installing batteries 21  
 Invalid icon 23, 31, 40, 61

## J

Jacks  
   6-channel out 20  
   AC IN 20  
   AUDIO OUT CENTER 20  
   AUDIO OUT FRONT R L 20  
   AUDIO OUT SUB 20  
   AUDIO OUT SURROUND R L 20  
   DIGITAL AUDIO OUT 20  
   S-VIDEO 20  
   VIDEO OUT 20

## L

Language  
   changing the menu 82  
   subtitles 84  
 Languages menu 82  
 Language preference 82  
 Level, speakers 80  
 Lock Menu 72  
 Locked icon 99

## M

Main menu items  
   Display menu 77  
   Glossary 86  
   Language 84  
   Lock 73  
   Play 66  
   Play Mode 67  
   Sound menu 79  
 Maintenance 93  
 MENU button 25  
 Menu Language 23  
 Menu system 23, 66  
 Menus  
   action 66  
   path 66  
   types 66  
 Modes, remote control 95  
 Motion Pictures Association of America 75  
 MP3 52  
   Discs, creating 52  
   files, obtaining 52  
   Info Display 53  
   Introscan 57  
   MP3 Display 53  
   repeat 57  
   screen saver 57  
   selecting a title 54  
   selecting a Play Mode 54

## N

Navigation 23  
 Number buttons 25

## O

OK button 25  
 ON•OFF button 24, 98  
 On-screen info display 31, 44, 52, 77  
 OPEN•CLOSE button 25, 98  
 Operate components  
   after programming remote 95  
 Order form, accessories 103

## P

Parental edit 41  
   disc library 74  
   storing 33  
 Password 72  
 Path menu item 66  
 PAUSE button 25, 98  
 Picture scan 40  
 PLAY button 25, 98  
 Play direction icon 99  
 Playlist  
   Audio CD 46  
 Play Menu  
   program play 67  
   random play 67  
   standard play 66  
 Playmode  
   Menu 66  
   Standard 45, 54, 67  
   Random 45, 54, 67  
   selecting 45, 54, 67  
 Playback features  
   audio language 36, 41  
   bookmarks 38, 48  
   camera angle 39, 41  
   chapter advance 40  
   fast motion 40  
   parental edit 41  
   repeat 37, 46, 57, 62  
   scene again 41  
   selecting a chapter 32  
   slow motion 40  
   subtitles 41  
   using remote 40  
 Playing  
   audio CD 44, 52  
   digital video discs 28  
   Video CD 61  
   Play/Resume option 66  
 Playlist  
   inserting items 56, 71  
   MP3 69  
 Program  
   creating audio CD 68  
   creating MP3 55  
   creating DVD disc 70  
   editing 56, 70  
   Program List 55, 69, 70  
   Program Play 45, 54  
   Program the remote 94  
 R  
 RANDOM button 98  
 Random Play 54

# Index

---

- Rated Titles 74
- Rating Limits 73
- Recalling bookmarks 38, 48
- Regional Coding 28
- Remote 24
  - cable box codes 97
  - component buttons 24, 94
  - direct entry 95
  - DVD buttons 24
  - installing batteries 21
  - pointing 21
  - program 94
  - satellite receiver codes 97
  - test 94
  - tour 24
  - TV codes 96
  - VCR codes 97
- Repeat 37, 46, 57, 62
  - A•B 37, 46, 57, 62
  - Chapter 37, 46, 57, 62
  - Title 37, 46, 57, 62
  - cancelling 37, 47, 57, 62
- Repeat icon 99
- REVERSE button 25
- S**
  - S-VIDEO jack 20
  - SAT•CABLE button 24
  - Satellite receiver codes 97
  - Scene Again 41
  - Scene Snip 33
    - clearing 34
    - editing 73
    - using 34
  - Selecting a chapter 32
  - Selecting a track
    - video CD 58
  - Setting Ratings Limits 74
  - Shuttle control 40, 98
  - SKIP FWD button 98
  - SKIP REV button 98
  - Skipping tracks
    - video CD 63
    - Skipping titles 54
  - Slow motion playback 40
  - SNIP button 25, 33, 41
  - Sound menu 78
  - Speaker setup 79, 80
  - Standard Play 54
  - STOP button 25, 98
  - Storing bookmarks 38, 48
  - Storing edits 33
  - SUBTITLE button 25, 41
  - Subtitle language 84
  - Subtitles 35, 41
  - Surround sound, simulated 98
  - System test 75
- T**
  - Time Display 44, 53
  - Titles
    - MP3 titles
      - deleting 56
      - inserting 56
      - selecting 32
    - Rated 75
    - Unrated 76
  - Track
    - selection, video CD 58
    - skipping, video CD 63
    - MP3 54
  - Trashcan icon 38
  - Troubleshooting 90, 91, 92
  - TruSurround® sound 79
  - TS SURROUND button 98
  - TV buttons 24
  - TV codes 96
  - TV Image menu 76
  - TV's Video Input Channel 22
  - Types of Discs the Player Can Play 21
- U**
  - Universal remote 94
    - programming to control other brands of components 95
  - Unlocked icon 99
  - Unrated titles 75
  - Using bookmarks 38, 48
- V**
  - VCR codes 97
  - VCR1 button 24
  - VCR2 button 24
  - Video CD
    - description 60
    - Disc Menu 60
    - Info display 61
    - Playing 61
    - Repeat 62
    - selecting a track 62
    - selecting an index 62
  - Video Input Channel 22
  - VIDEO OUT jack 20
  - Voice+ 81
- W**
  - Warranty 100
- Z**
  - ZOOM button 25, 42, 63
  - Zoom feature 42, 63

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**  
10330 North Meridian Street  
Indianapolis, IN 46290

©2000 Thomson Consumer Electronics, Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Printed in USA  
TOCOM 15535920