


Installation Instructions PBM-501L



Step 1

Invert the projector and place it on a flat surface. Align the mounting bracket to the mounting holes on the bottom and back of the projector. The hinge pin slot opening on the bracket must face the lens of the projector. Secure the bracket using the (4) **4mmx8mm Knurl knobs** (supplied). See detail.


1. Toshiba Projector
2. PBB-501L
3. (4) 4mmx8mm Knurl Knob

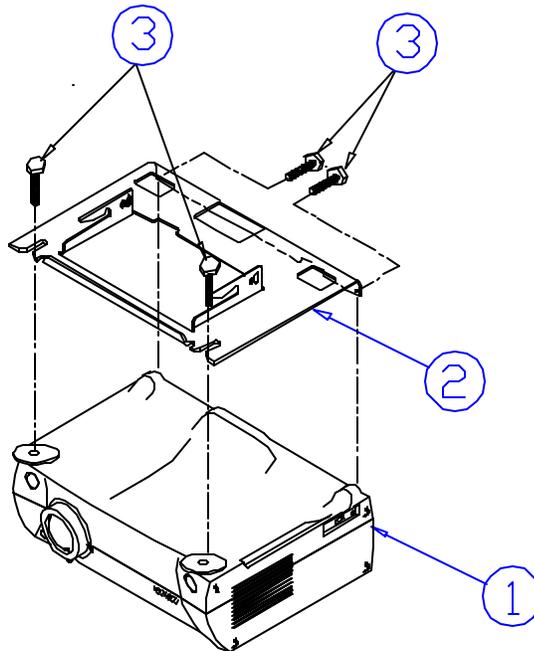

Step 2

Install the base box securely to the ceiling structure in accordance with proper commercial standards. Use (commercially available) suitable hardware depending on the installation requirements.

1. Bolts
2. Ceiling
3. Washer
4. Base Box
5. Nut Bolts
6. ASA-2446 lower tube

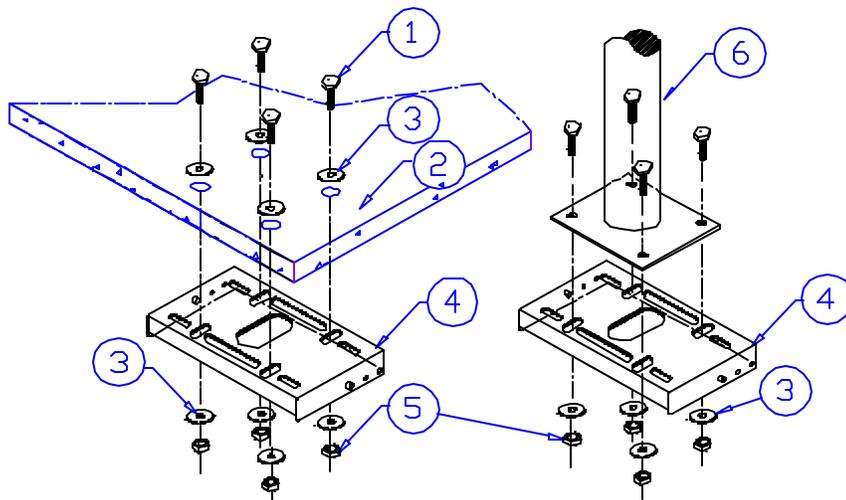

NOTE: If ASA-2446 adjustable height suspension adapter is a part of the installation, securely install the adapter to the ceiling at this time (see detail above)

Progressive Marketing Products, Inc.


2980 Enterprise Street, Brea, Ca 92821 / Ph.(800)368-9700 Fax (800)832-4888

E-Mail: pmpi@pmpi.com:<http://www.pmpi.com/>

12/97

Step 3

Raise the projector with the mounting bracket attached and slip through the hinge pin slot openings On the bracket into the base box. Install the two hinge pin bolts loosely and four angle locking bolts. Adjust the angle and lock it, Then tighten the hinge pin bolts. (see detail below).

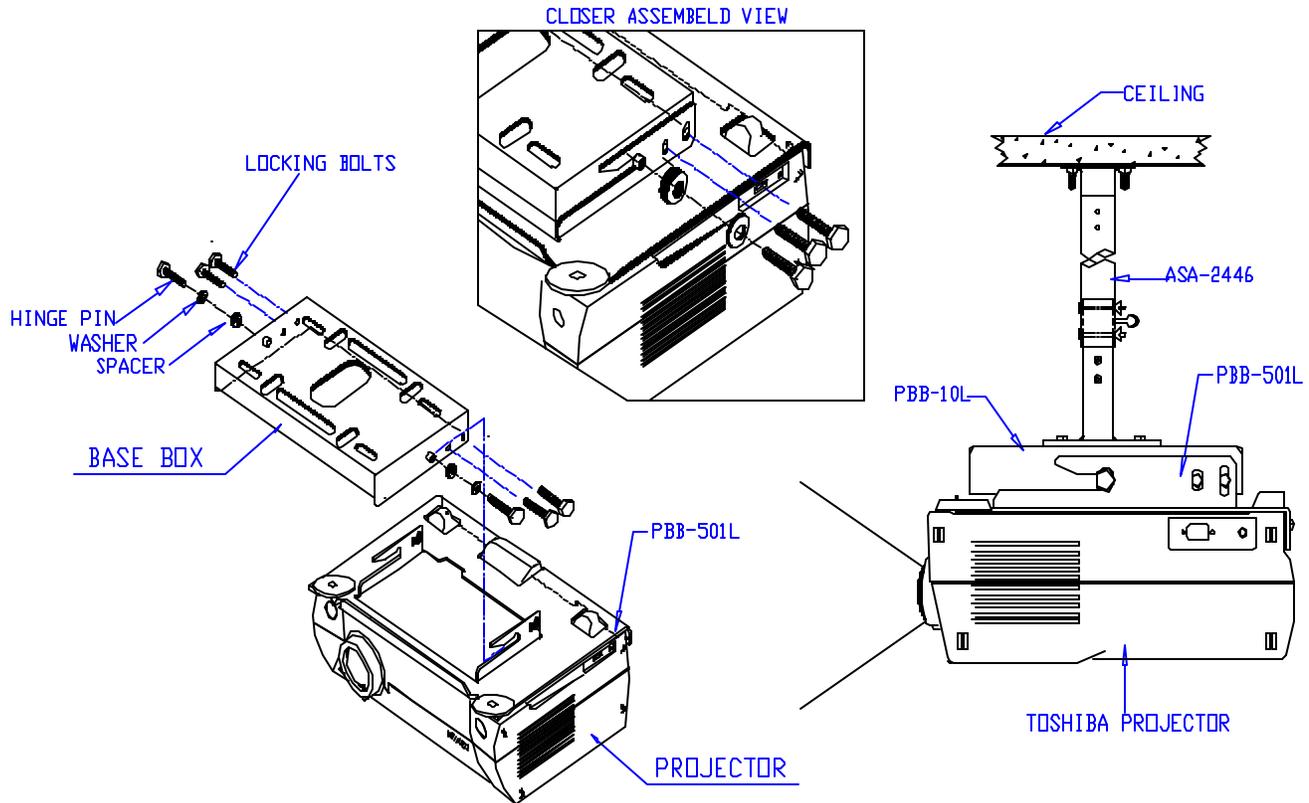

Step 4

Check all the hardware for proper tightness and security.

WARNING!

The ceiling should be capable of supporting a weight of at least five times the projector or monitor weight. If it cannot, the ceiling must be reinforced. Proper installation procedure by qualified personnel as outline. In the installation instructions must be adhered to. Failure to do so could result in serious personal injury.

For further information or ordering assistance contact us at the address shown on the front of this page.