
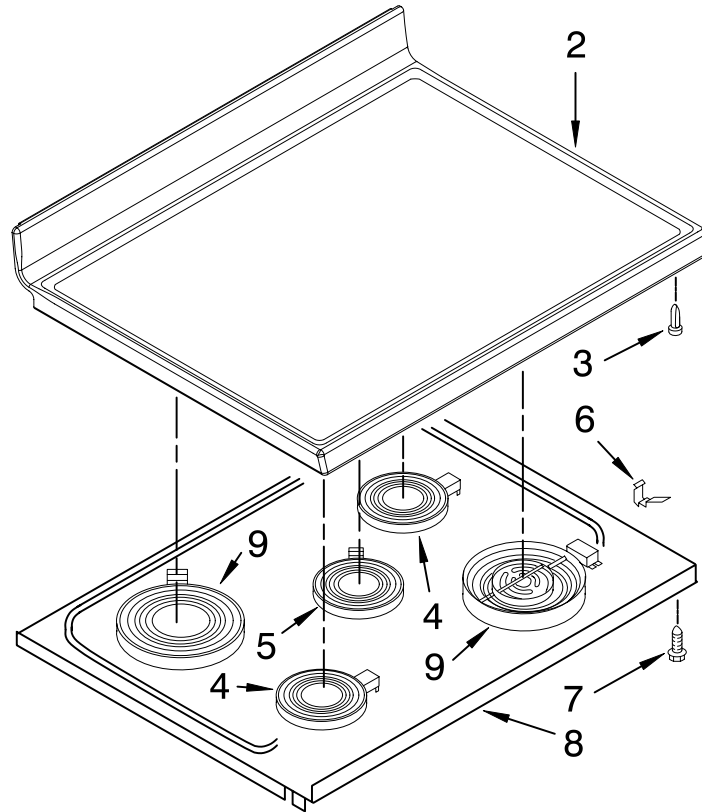


For Models: KERS205TWH3, KERS205TBL3, KERS205TSS3, KERS205TBT3
(White) (Black) (S.Steel) (Biscuit)

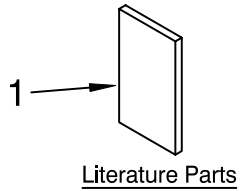


Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10168033	Use & Care Guide
	W10167997	Wiring Diagram
	W10185365	Installation Instructions
2		Cooktop
	W10160619	White
	W10160621	Black
	W10160620	Biscuit
3	8010P149-60	Spacer Snap-In (4)
4	7406P365-60	Element LF/RR (2)
5	9762851	Element, Warm
6	7803P087-60	Spring, Element
7	3196165	Screw
8	4011F497-51	Bottom, Burner Box
9	4453909	Element LR/RF (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KERS205TWH3, KERS205TBL3, KERS205TSS3, KERS205TBT3
 (White) (Black) (S.Steel) (Biscuit)

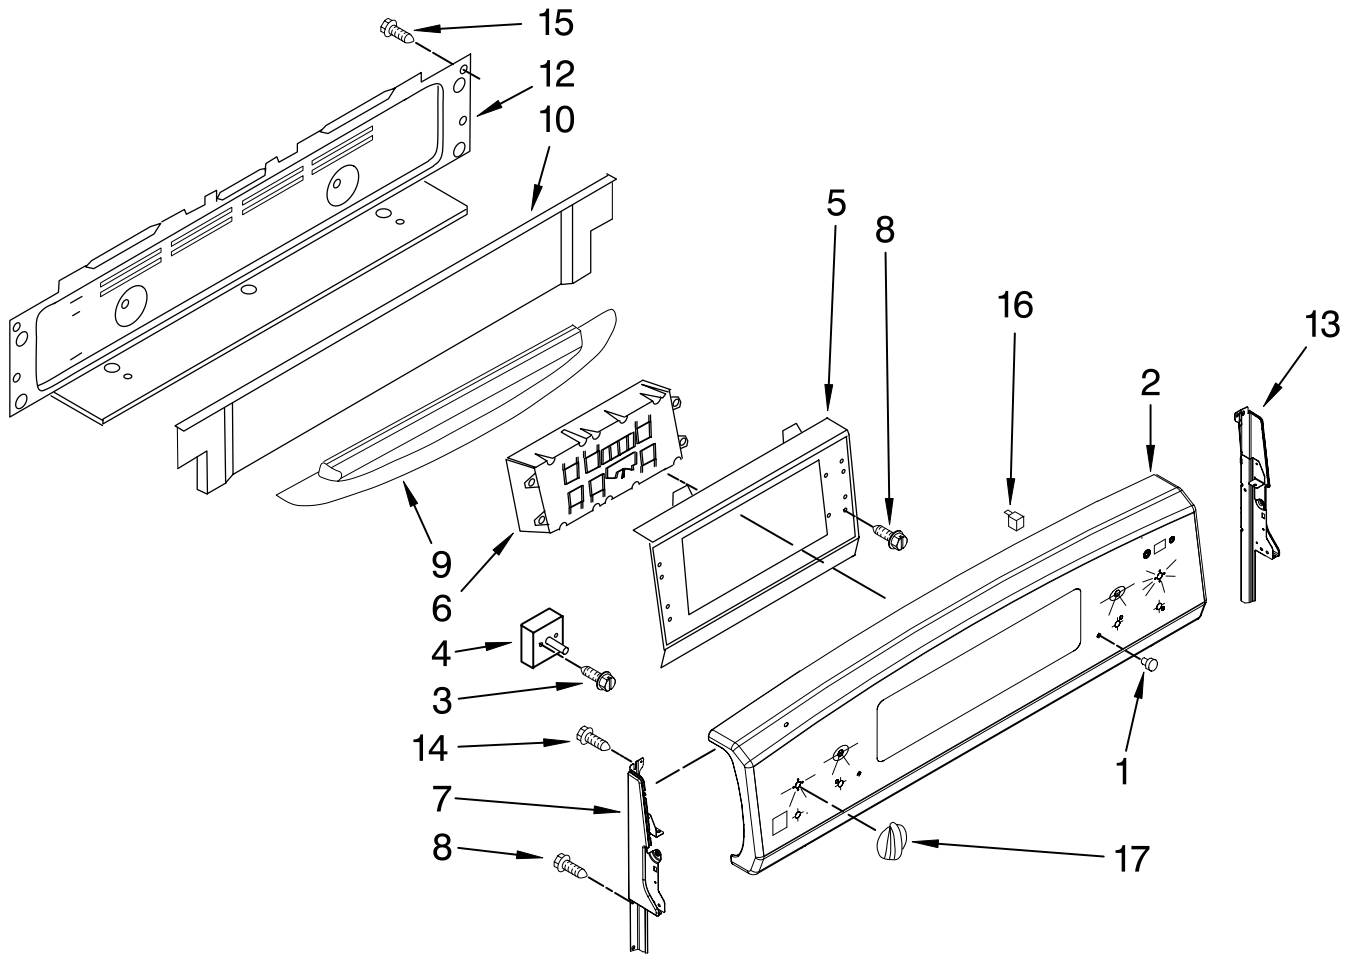

Illus. No.	Part No.	DESCRIPTION
1	3196068	Lens
2		Panel, Backguard & Switch Assy
	W10182778	Black
	W10167671	White
	W10183576	Biscuit
	W10182779	Stainless Steel
3	3400882	Screw, Switch (10)
4		Switch, Infinte
	7450P011-60	Dual RF/LR (2)
	7403P373-60	LF/RR (2)
5	3801F945-51	Bracket, Control
6	8507P331-60	Control


Illus. No.	Part No.	DESCRIPTION
7		End Cap, Left
	3807F703-70	Black
	3807F703-61	White
	3807F703-78	Biscuit
8	3196178	Screw
9		Shield, Heat Visor
	3604F382-09	Black
	3604F382-81	White
	3604F382-88	Biscuit
10	3604F381-19	Shield, Vent
12	4005F804-51	Cover, Rear Wire

Illus. No.	Part No.	DESCRIPTION
13		End Cap, Right
	3807F702-70	Black
	3807F702-61	White
	3807F702-78	Biscuit
14	7101P376-60	Screw
15	3196178	Screw
16	7407P136-60	Light, Indicator
17		Knob (4)
	W10160370	Black
	W10160371	S.Steel
	W10160368	White
	W10160369	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: KERS205TWH3, KERS205TBL3, KERS205TSS3, KERS205TBT3
 (White) (Black) (S.Steel) (Biscuit)

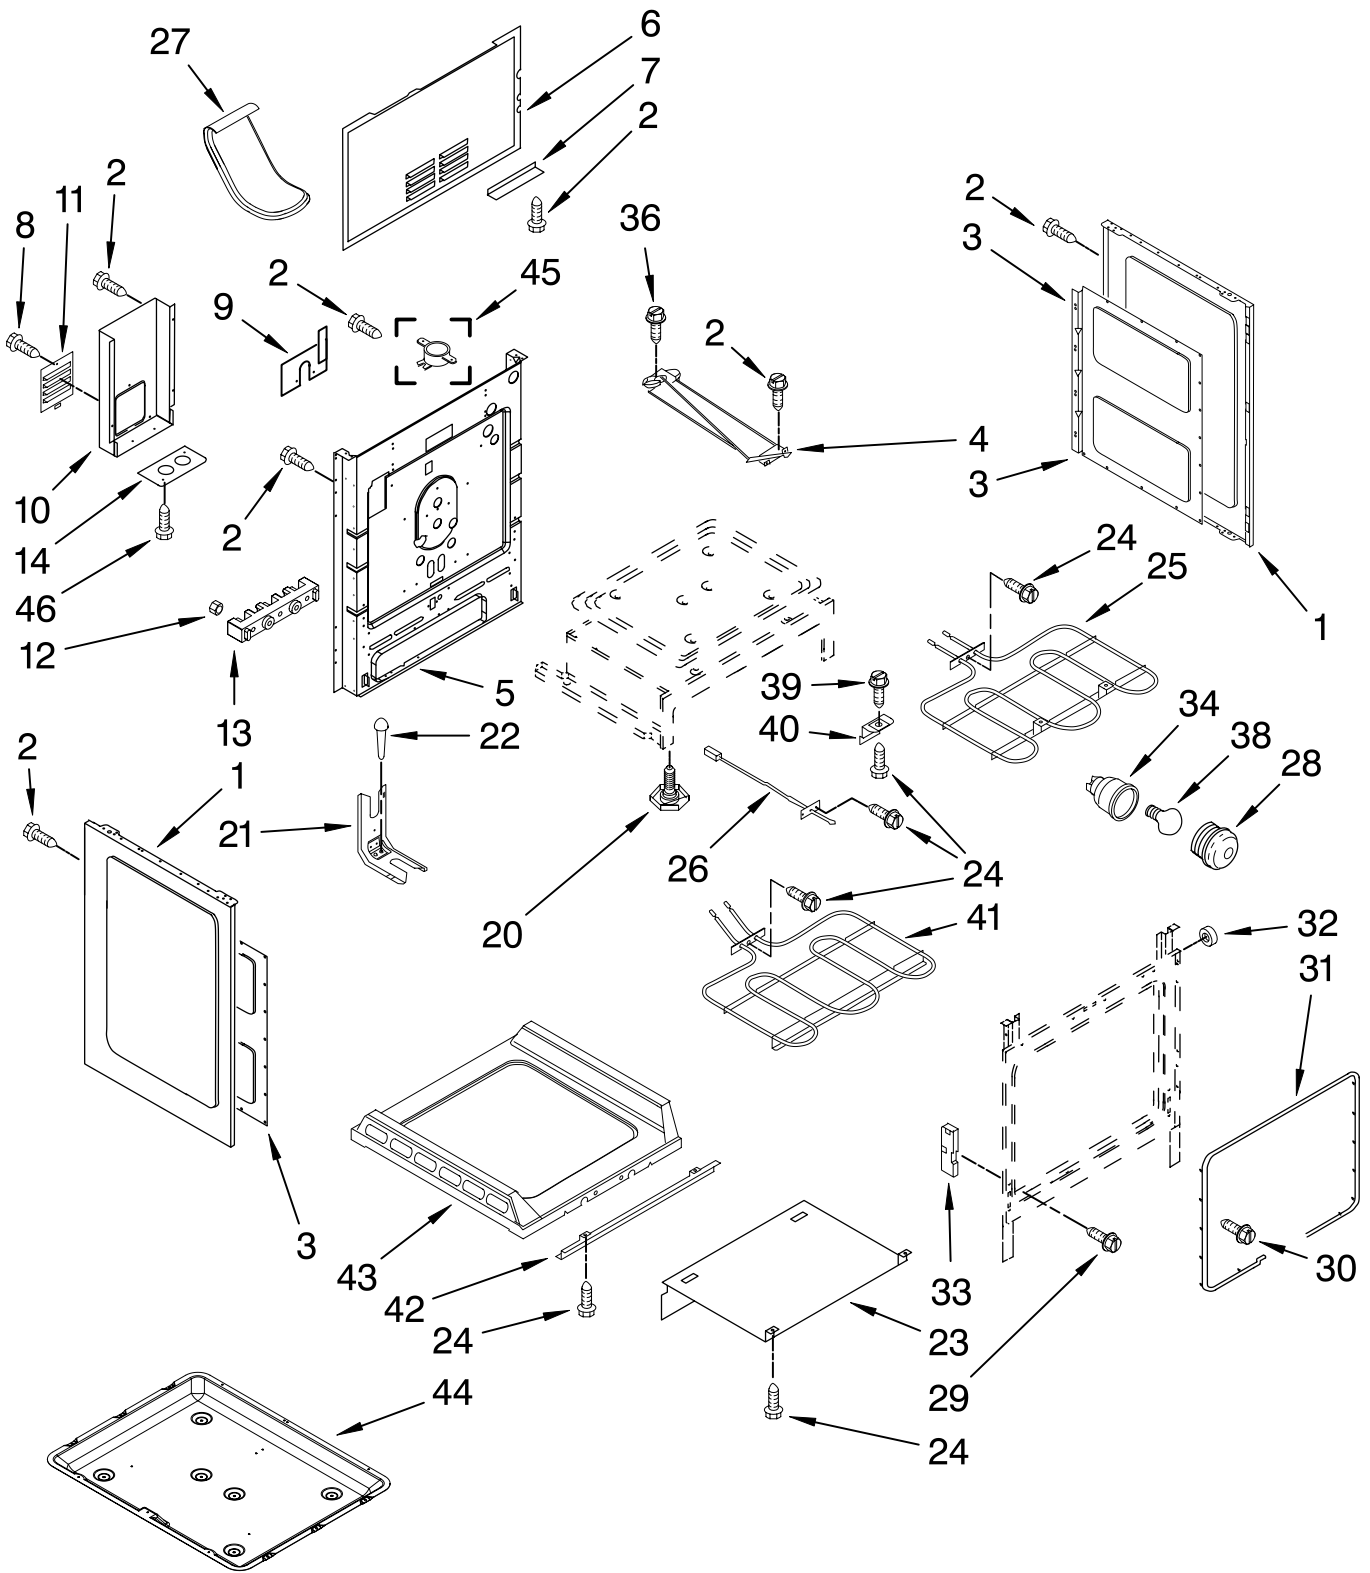

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: KERS205TWH3, KERS205TBL3, KERS205TSS3, KERS205TBT3
 (White) (Black) (S.Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Panel, Side
	2618F172-58	White
	2618F172-69	Black
	2618F172-57	Biscuit
2	3196165	Screw
3	3804F311-51	Retainer, Side
4	8002P104-60	Latch Assembly
5	4002F347-51	Main Back
6	4005F754-51	Cover, Main Wire
7	4005F712-51	Bottom Wire Cover
8	3196178	Screw
9	7003P145-60	Insulator, Cord
10	4005P703-51	Cover, Wire (LWR)
11	4005P704-51	Panel, Access
12	7103P027-60	Nut, Term.Block
13	7401P039-60	Block, Terminal
14	3605P146-51	Plate, Conduit
20	7101P507-60	Leg, Leveling
21	3801F656-51	Bracket, Anti-Tip
22	7101P485-60	Screw, Anti-Tip
23	3604F371-51	Shield, Heat
24	7101P376-60	Screw, 8AB 1/2 (4)
25	7406P493-60	Element, Broil
26	7430P042-60	Sensor, Oven
27	8026P081-60	Vent, Oven
28	898020-001	Lens, Bulb
29	7101P282-60	Screw (4)
30	7101P618-60	Screw, Shoulder(6)
31	W10162385	Gasket
32	8010P148-60	Spacer, Side Pnl.
33	7106P125-60	Receiver, Hinge
34	7407P181-60	Light Assembly
36	7101P375-60	Screw (Black) (2)
38	7407P103-60	Bulb, Oven
39	7101P500-60	Screw, Shoulder
40	3801P822-45	Support, Ov BTM
41	7406P451-60	Element, Bake
42	3807P680-45	Support, Oven
43	2205F053-19	Bottom, Oven
44	3401F084-45	Pan, Bake Brnr
45	7403P857-60	Switch, Terminal
46	7101P336-60	Screw (2)


INSULATION

7002P362-60	Insulation, Wrap
7002P492-60	Insulation, Back
7002P494-60	Insulation, Side
3804F316-51	Retainer, Insulation

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KERS205TWH3, KERS205TBL3, KERS205TSS3, KERS205TBT3
 (White) (Black) (S.Steel) (Biscuit)

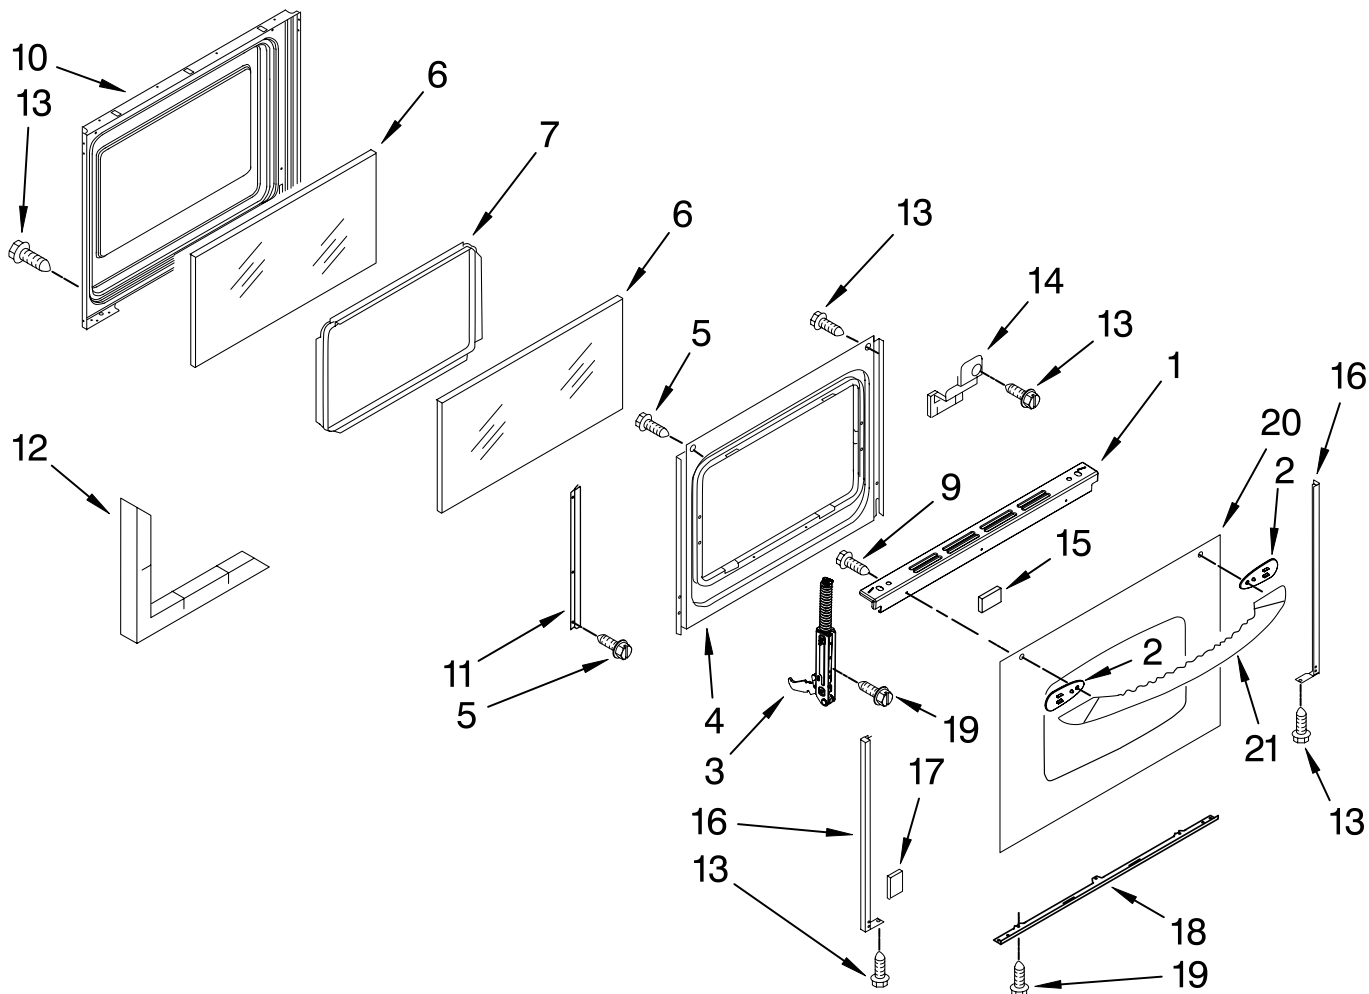

Illus. No.	Part No.	DESCRIPTION
1	3608F139-70	Trim, Door Top
	3608F139-71	Black
	3608F139-71	White
	3608F139-78	Biscuit
2	W10169552	Spacer, Handle
	W10169553	White
	W10169554	Biscuit
3	7106P124-60	Hinge, Door (2)
4	3601F380-51	Baffel, Retainer
5	7101P376-60	Screw (6)
6	7902P436-60	Glass, Inner (2)
7	3801F886-51	Frame, Glass Inner
9	W10176584	Screw


Illus. No.	Part No.	DESCRIPTION
10	2402W297-19	Lining, Door
11	3801F886-51	Bracket, Glass (2)
12	7002P246-60	Insulation, Door
13	7101P427-60	Screw (8)
14	3801P858-45	Left
	3801P857-45	Right
15	W10208309	Tape, White
16	W10208309	Trim, Door Side
	3608F126-70	Black
	3608F126-71	White
17	3608F126-78	Biscuit
	W10208308	Tape, Double Sided
	W10208307	White
	W10208307	Black

Illus. No.	Part No.	DESCRIPTION
18	3608F092-71	Trim, Door Bottom
	3804F236-51	White
	3804F236-51	Black
	3608F092-78	Biscuit
19	7101P282-60	Screw 10-24x5/16
	20	Glass, Door
	w10160906	White
20	W10160908	Black
	W10160907	Biscuit
		(Order Item #15 When Replacing Door Glass)
21	W10153013	Handle, Door
	W10153016	White
	W10153016	S.Steel
	W10153015	Black
	W10153014	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER AND RACK PARTS

For Models: KERS205TWH3, KERS205TBL3, KERS205TSS3, KERS205TBT3
 (White) (Black) (S.Steel) (Biscuit)

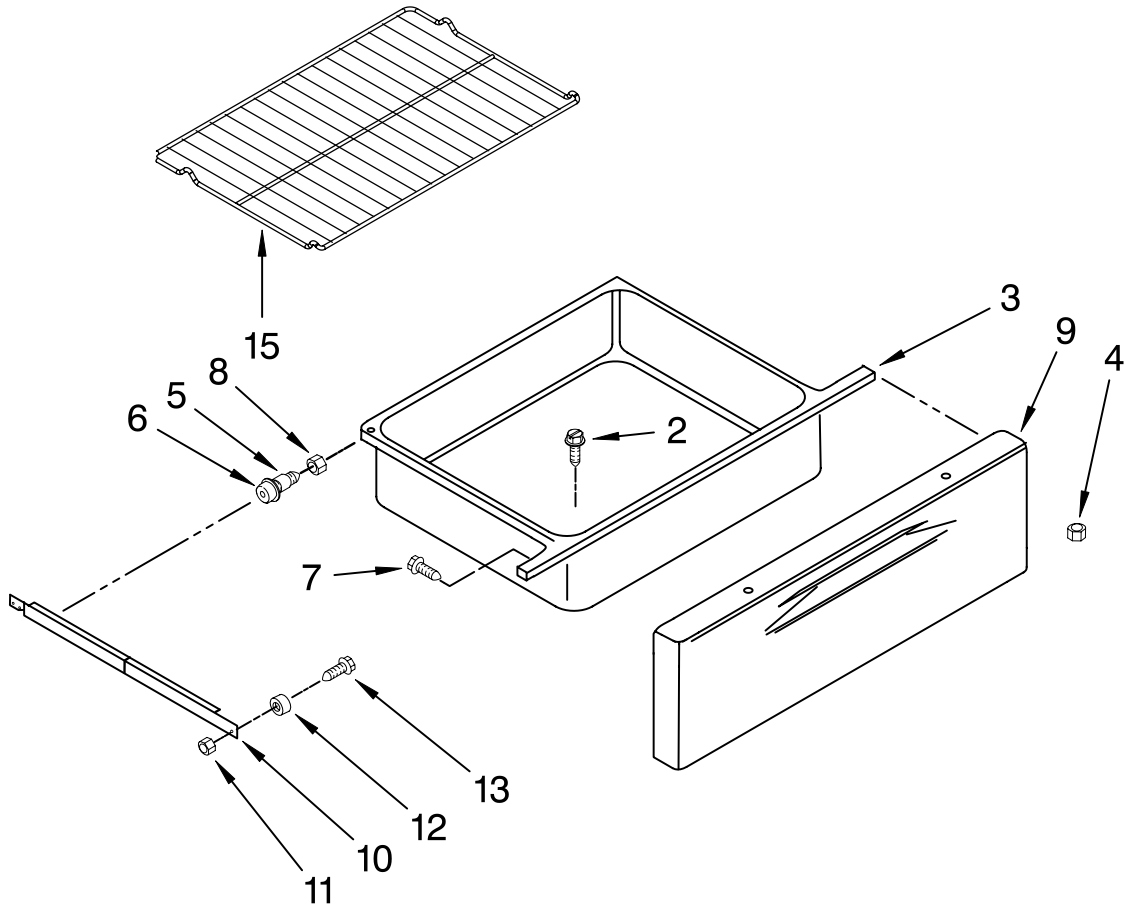

Illus. No.	Part No.	DESCRIPTION
	2	3196165 Screw (2)
	3	3405W035-19 Drawer, Storage
	4	7103P139-60 Nut, Lock
	5	8010P130-60 Spacer, Rubber
	6	7118P032-60 Shaft, Roller
	7	3196165 Screw
	8	7103P082-60 Nut
	9	Panel, Drawer
		W10163040 White
		W10163038 Black
		W10163041 Biscuit
	10	8016P024-60 Runner, Drawer
	11	7103P190-60 Nut, Lock
	12	8014P022-60 Roller, Drawer
	13	7118P032-60 Shaft, Roller
	15	w10179196 Rack, Oven

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: KERS205TWH3, KERS205TBL3, KERS205TSS3, KERS205TBT3
 (White) (Black) (S.Steel) (Biscuit)

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)	<p><u>PAINT, TOUCH-UP (1/2oz.)</u></p> <p style="padding-left: 20px;">72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.)</p> <p><u>PAINT, PRESSURIZED SPRAY</u> <u>(12 oz.)</u></p> <p style="padding-left: 20px;">350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)</p> <p><u>PAINT, BULK (1 qt.)</u></p> <p style="padding-left: 20px;">799344 White (Uncut) 4392900 Biscuit(Uncut)</p>	<p><u>ACCESSORY PARTS</u></p> <p style="padding-left: 20px;">241430 Foil, Aluminum Oven (18" x 25') 3191048 Cleaner, Glass</p> <p><u>WIRING HARNESS PARTS</u></p> <p style="padding-left: 20px;">W10169936 Harness, Wire (Cooktop Right) 5171P791-60 Harness, Wire (Cooktop Left) W10167991 Harness, Wire (Burner Box) W10160684 Harness, Wire (Main) 8019P013-60 Clip, Wire 7101P027-60 Screw, Ground</p>
<p><u>REFINISHING MATERIAL</u></p> <p style="padding-left: 20px;">799832 Kit, Porcelain Repair (White) 242756 Touch-Up Self-Clean(1/2 Pt) 261582 Grease</p> <p><u>INSULATION</u></p> <p style="padding-left: 20px;">261514 Insulation, Fiberglass (1-1/2" x 24" x 120") 240132 Insulation, Fiberglass (2-1/2" x 22" x 120")</p>		

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST