


Operating instructions

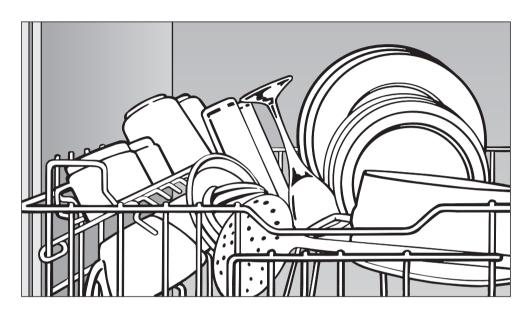

Touchtronic Premier Plus

To prevent accidents and machine damage, read these instructions

before

installation or use.





M.-Nr. 05 431 301

Contents

CONSIGNES DE SÉCURITÉ IMPORTANTES Caring for the environment Guide to the dishwasher	10 11 11 12 13
Guide to the dishwasher	11 11 12 13
Guide to the dishwasher	11 11 12 13
	12 13
Wash cabinet	13
Control panel	
Before using for the first time	10
To open the door	13
To close the door	13
Child Safety Lock	13
Water softener	
Salt indicator	
Rinse aid	
Adding rinse aid	
Adjusting the dosage	
Rinse aid indicator	
Loading the dishwasher	
Items not recommended for dishwashing	
Cutlery tray (SC units)	
Upper basket	
Adjusting the upper basket	
Adjustable cup racks	
Coffee bar	
Lower basket	
Lower basket inserts	
Removing an insert	
Inserting an insert	
Foldable spike insert	
Tall Glassware Insert for lower basket	
Vase / Bottle holder	
Basket accessories	

Contents

Operation
Adding detergent
Running the dishwasher
Program sequence indicator (14)
Time display (18)
At the end of a program
Interrupting a program
Changing a program
Program guide
Additional features
"Top Solo" (20)35
Delay Start (19)
Extended drying
Frequently asked questions
After sales service
Transport
User Maintenance Instructions
Cleaning and Care
"Filter" indicator light
Cleaning the filter in the wash cabinet
Cleaning the spray arms
Cleaning the wash cabinet51
Cleaning the door and door seal
Cleaning the exterior
Cleaning the water inlet filter
Cleaning the drain nump and non-return valve

IMPORTANT SAFETY INSTRUCTIONS

WARNING –

When using your dishwasher, follow basic precautions, including the following:

Read all instructions before installation or use of the dishwasher to prevent injury and machine damage.

The manufacturer cannot be held responsible for damage or injury caused by improper use of this appliance.

Use the dishwasher only for its intended purpose. This appliance is intended for residential use only.

Keep these operating instructions in a safe place and pass them on to any future user.

Electrical safety

Before installation make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt.

Before installation or service, disconnect the power supply to the work area by unplugging the unit, "tripping" the circuit breaker or removing the fuse.

Do not use an extension cord to connect this appliance to electricity. Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating).

Be certain your appliance is properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer cannot be held responsible for damages caused by the lack, or inadequacy, of an effective grounding system.

Installation

Installation and repair work should be performed by a Miele authorized service technician. Work by unqualified persons could be dangerous and could void the warranty.

A WARNING - Fire hazard Do not cover or crush the plug of an electric appliance. Ensure that the cabinet opening for the dishwasher provides ample space for the plug. Installing the dishwasher in a tight space may crimp the power cord or put pressure on the plug which may cause overheating.

IMPORTANT SAFETY INSTRUCTIONS

- This equipment is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft. However, under certain conditions it may be possible for an installation in these applications. Please contact the nearest Miele dealer or the Miele Technical Service Department with specific requirements.
- Inspect the dishwasher for shipping damage. Do not install or operate a damaged unit. Contact the place of purchase.
- Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation!
- This dishwasher should only be installed under a continuous countertop secured to adjacent cabinetry.
- Do not install this dishwasher beneath a cooking surface, oven or any appliance that radiates heat. High temperatures from these units may damage the dishwasher.
- Do not, under any circumstances cut the intake hose or submerge in liquid. This hose contains electrical components that could cause injury or property damage if cut or submerged.

Use

- Only use the dishwasher if all panels are properly in place.
- Do not tamper with the controls.
- To reduce the risk of injury, do not allow children to play in, on, or near the dishwasher.
 - Do not damage, sit, or stand on the door or baskets of the dishwasher.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher. This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time.
- Do not wash plastic items unless they are labeled "dishwasher safe" or the equivalent. For items not labeled, check the manufacturer's recommendations.

IMPORTANT SAFETY INSTRUCTIONS

- When loading tableware, place sharp items away from the door seal to prevent damage to the seal. Load knives pointing downwards to prevent injuries.
- Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children.
- Do not drink water from the dishwasher! Harmful residues could be present.

For dishwashers with a visible heating element

Do not touch the heating element during or immediately after use.

Disposal of an appliance

If the appliance is removed from its installation and will not be used, the door to the wash cabinet should be removed to prevent children from being locked in the machine. When discarding an old dishwasher, unplug it from the power outlet, remove the door to the wash cabinet and cut off the power cord.

SAVE THESE INSTRUCTIONS

CONSIGNES DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT –

Lorsque vous utilisez votre lave-vaisselle, veuillez prendre des précautions essentielles, y compris ce qui suit.

Lisez attentivement l'ensemble des consignes avant d'installer ou d'utiliser le lave-vaisselle afin de prévenir les blessures et éviter d'endommager l'appareil.

Le fabricant ne peut être tenu responsable des dommages ou blessures causés par une utilisation inappropriée de l'appareil.

Utilisez le lave-vaisselle uniquement aux fins auxquelles il a été conçu. Cet appareil est destiné à un usage domestique uniquement.

Conservez ces instructions dans un lieu sûr et transmettez-les à tout utilisateur ultérieur.

Sécurité électrique

Avant l'installation, assurez-vous que la tension et la fréquence indiquées sur la plaque signalétique correspondent bien à celles de l'alimentation électrique de la résidence afin de prévenir les blessures et d'éviter d'endommager l'appareil. Dans le doute, consultez un électricien qualifié.

Avant de procéder à l'installation ou à des travaux d'entretien, coupez l'alimentation électrique, soit en débranchant l'appareil, soit en faisant basculer le disjoncteur, soit en enlevant le fusible.

N'utilisez pas de rallonge pour brancher l'appareil à la source d'alimentation électrique. Les rallonges ne garantissent pas la sécurité requise pour l'appareil - si vous utilisez une rallonge, cela peut causer une surchauffe.

Assurez-vous que votre appareil est installé correctement et mis à la terre par un technicien qualifié. Pour garantir la sécurité électrique de l'appareil, il faut le raccorder à une installation de mise à la terre appropriée. Il est essentiel de respecter cette exigence de sécurité élémentaire. Dans le doute, faites vérifier l'installation électrique de la résidence par un électricien qualifié. Le fabricant ne peut être tenu responsable de dommages causés par l'absence d'une installation de mise à la terre ou une installation déficiente.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Installation

L'installation et les réparations devraient être effectuées uniquement par un technicien de service autorisé Miele. Les travaux effectués par des personnes non qualifiées peuvent s'avérer dangereux et annuler la garantie.

<u>∧</u> ∧ ATTENTION - Risque d'incendie

Ne recouvrez et n'écrasez jamais la fiche d'un appareil électrique. Assurez-vous que dans l'espace occupé par le lave-vaisselle, il y a suffisamment d'espace pour la fiche. Si vous installez le lave-vaisselle dans un espace trop petit, le cordon d'alimentation pourrrait être comprimé ou une pression pourrait être exercée sur la fiche, ce qui risque de causer une surchauffe.

Cet appareil n'est pas conçu pour être utilisé sur un bateau ou dans des engins mobiles, comme des avions ou des véhicules récréatifs. Toutefois, son installation est possible dans certaines circonstances. Veuillez communiquer vos exigences particulières au détaillant Miele le plus près de chez vous ou au Service technique.

- Vérifiez si votre lave-vaisselle n'a pas subi de dommage lors du transport. N'installez pas et n'utilisez pas un appareil endommagé. Communiquez avec le point de vente où yous l'avez acheté.
- Assurez-vous de vous débarrasser correctement des emballages, sacs, matières plastiques et autres et de les tenir hors la portée de bébés et d'enfants. Risque de suffocation!
- Le lave-vaisselle doit être installé uniquement sous un comptoir continu fixé à des armoires adjacentes.
- N'installez pas ce modèle de lave-vaisselle sous une surface de cuisson, un four ou tout autre appareil qui diffuse de la chaleur.
 Les hautes températures émanant de ces appareils pourraient endommager

le lave-vaisselle.

En aucun cas, vous ne devez couper le tuyau d'arrivée d'eau ou l'immerger, car il contient des composants électriques qui pourraient causer des blessures ou des dommages matériels.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Utilisation

- N'utilisez le lave-vaisselle que lorsque tous les panneaux sont bien en place.
- Ne jouez pas avec les commandes.
- Afin de diminuer le risque de blessures, ne laissez pas les enfants jouer près de l'appareil ni monter dedans ou dessus.
- Évitez de malmener la porte ou les paniers du lave-vaisselle ou de vous y appuyer ou asseoir.
- Dans certaines circonstances, un système d'eau chaude qui n'a pas servi durant deux semaines ou davantage peut produire de l'hydrogène. L'HYDROGÈNE EST UN GAZ EXPLOSIF. Si le système d'eau chaude n'a pas servi durant une telle période, ouvrez tous les robinets d'eau chaude et laissez l'eau couler plusieurs minutes avant d'utiliser le lave-vaisselle. Cette action libérera l'hydrogène qui aura pu s'y accumuler. Entre-temps, abstenez-vous de fumer et n'utilisez pas de flamme nue.
- Ne lavez pas des articles en plastique qui ne portent pas la mention "va au lave-vaisselle" ou une formulation équivalente. Consultez les recommandations du fabricant pour les articles qui ne portent aucune mention à cet égard.

- Au moment de charger la vaisselle, ne disposez pas les articles coupants à proximité du joint d'étanchéité de la porte afin d'éviter de l'endommager. Placez les couteaux avec la pointe vers le bas afin d'éviter les blessures
- Utilisez seulement les détergents et les produits de rinçage recommandés pour les lave-vaisselle à usage domestique. Conservez tous ces produits hors de la portée d'enfants.
- Ne consommez pas l'eau du lave-vaisselle! Elle peut contenir des résidus dangereux.

Lave-vaisselle munis d'un élément chauffant visible

Ne touchez pas l'élément chauffant pendant ou immédiatement après l'utilisation.

Mise au rebut de l'appareil

Si vous désinstallez l'appareil et comptez ne plus vous en servir, détachez-en la porte pour éviter que des enfants s'y retrouvent enfermés. Lorsque vous mettez un lave-vaisselle au rebut, débranchez-le de la source d'alimentation électrique, détachez-en la porte et coupez le cordon d'alimentation.

CONSERVEZ CES CONSIGNES


Caring for the environment

Energy saving washing

This dishwasher is exceptionally economical in the use of water and electricity. For best results follow these tips:

- For lowest energy consumption and the gentlest washing of china and crystal, connect the dishwasher to a cold water source.
- For fastest possible wash times, yet higher energy consumption, connect the dishwasher to a hot water source.
- Make full use of the baskets without overloading for the most economical washing.
- Choose a program that best suits the degree of soiling and the type of dishes being washed.
- For small loads: Select the "Top Solo" feature (see "Additional options").
- If baskets are only half full, select the "Economy" program.
- Use the correct amounts of detergent and rinse aid.

Wash cabinet

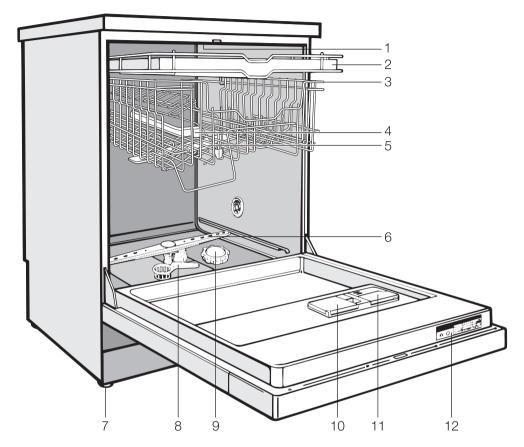


- 1 Upper spray arm (not visible)
- 2 Cutlery tray
- 3 Upper basket
- 4 Water feed for the middle spray arm
- 5 Middle spray arm
- 6 Lower spray arm

- 7 Four height adjustable feet
- 8 Triple Filter System
- 9 Salt reservoir
- 10 Detergent dispenser
- 11 Rinse aid reservoir (with dosage selector)
- 12 Data plate

Guide to the dishwasher

Control panel

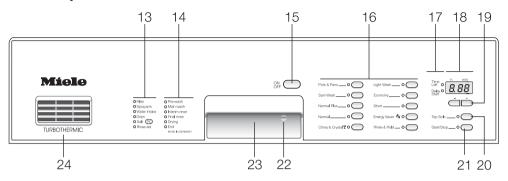


- 13 Check/Refill indicators
- 14 Program sequence display
- 15 "On/Off" button
- 16 Program list / indicators
- 17 "Time left"/"Delay Start" indicators
- 18 Time display

- 19 Plus / Minus time buttons
- 20 "Top solo" button
- 21 "Start/Stop" button
- 22 Child Safety Lock
- 23 Door release
- 24 Drying vent

Every dishwasher is tested before leaving the factory. Any water remaining in the machine is from these tests and does not indicate that the machine has been used.

To open the door

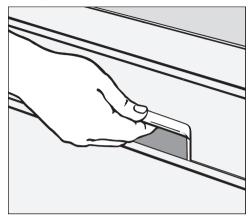

■ Press the release catch inside the door grip.


If the door is opened during operation, the dishwasher will stop running. Once the door is closed the program will restart.

To close the door

- Push the baskets in.
- Lift the door and push until it clicks into position.

Child Safety Lock

The yellow key for the Child Safety Lock is shipped on one of the spikes at the front of the upper basket. Remove the key before using the dishwasher.

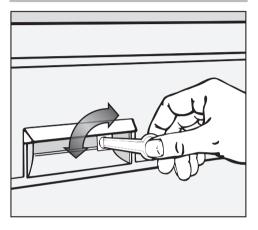

The Child Safety Lock is designed to prevent children from opening the dishwasher.

■ Use the provided key to lock or unlock the dishwasher.



Horizontal: the door is locked



Vertical: the door can be opened

Water softener

To achieve good cleaning results, the dishwasher needs soft water. Hard water results in calcium deposits on dishware and in the dishwasher. If your tap water hardness is above 8 gr/gal (140 ppm), the water should be softened. This takes place automatically in the unit's integrated water softener.

- Your local water authority will be able to advise you of the water hardness level in your area.
- The water softener must be filled with dishwasher salt for reactivation.

If your water hardness is **lower than** 8 gr/gal (140 ppm), you do not need to add dishwasher salt.

If there is a fault, it will help the service technician to know the hardness of your local water supply.

■ Enter the water hardness below:

gr/gal (ppm)

Settings

gr/gal*	ppm	Value shown in the time display			
1 2 3 4** 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31	20 40 50 70 90 110 130 140 160 180 200 220 230 250 270 290 310 320 340 360 380 400 410 430 450 470 490 500 520 540 560	1 2 3 4 5 6 7 8 8 9 10 11 12 13 14 115 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31			
32 33	580 590	32 33			
34 35	610	34 35			
36-70	630 650-1260	35 36			

^{*} US gallons

^{** 4} gr/gal (70 ppm) is factory preset

Filling the salt reservoir

If your water hardness level is greater than 8 gr/gal, the salt reservoir should be filled before the first use and when the "Salt" indicator lights.


Only use water softener salt (1 - 4 mm) grain size; other salts may contain insoluble additives which can impair the water softener.

Inadvertently filling the salt reservoir with dishwashing detergent will damage the water softener.

To fill the salt reservoir:

- Remove the lower basket.
- Unscrew and remove the salt reservoir cap.
- Place the provided funnel over the salt reservoir.


Only before adding salt for the first time, fill the reservoir with approximately 2 quarts (2 l) of water.

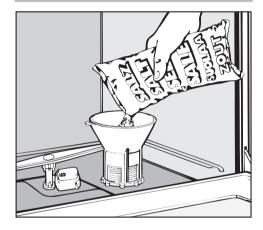

- Carefully fill with salt, grain size of 1 4 mm. The salt reservoir holds approximately 4.5 lbs (2 kg) of salt. As it is filled, water will run out.
- Clean any excess salt from the threads of the reservoir opening.
- Screw the cap on firmly.
- If the dishwasher will not be used immediately, run the "Rinse & Hold" program. This will remove any traces of salt from inside the wash cabinet.

Salt indicator

When the salt reservoir is empty, the "Salt-PC" indicator will light, indicating that it should be refilled with reactivation salt.

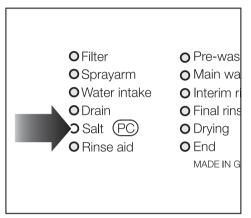


After the reservoir has been filled, the water softener is automatically reactivated the next time the dishwasher is started. The "Salt" indicator will light during this process.

Bypassing the salt indicator

If your water is soft (below 8 gr/gal) the salt reservoir should not be filled with salt. The indicator will remain lit and should be disregarded or bypassed.

■ Remove the salt reservoir cap.

Looking into the salt reservoir, you will see the top of the float chamber on the right hand side, \bigcirc .

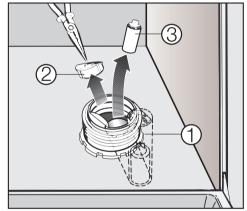


- Using a screwdriver, carefully pivot the float chamber towards the center of the reservoir.
- Using needle nose pliers, first pull the cap, ②, off of the float chamber, then remove the float. ③.
- Replace the float chamber cap, push the chamber back into its upright position, and replace the salt reservoir cap. The indicator should not light.

Rinse aid


Rinse aid is recommended to prevent spotting on dishes and glassware.

Filling the rinse aid reservoir with detergent will damage the reservoir. Only pour rinse aid formulated **for residential dishwashers** into the reservoir.

Adding rinse aid

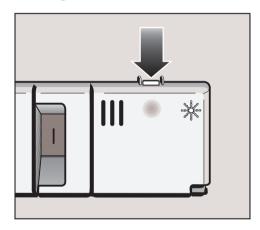


- Add rinse aid before the first use and whenever the "Rise aid" indicator lights.
- Press the button in the direction of the arrow until the flap springs open.

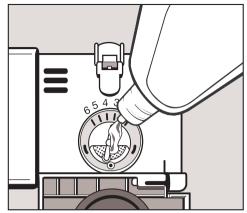

- Pour liquid rinse aid into the reservoir until it is visible on the surface of the screen.
- Press on the flap until you hear it click shut. Failure to close it all the way will allow water to enter the reservoir during the wash program.
- Wipe up any spilled rinse aid. The flap will remain closed during normal operation.

Adjusting the dosage

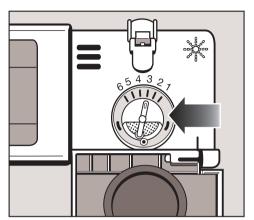


The dosage selector is preset to 3. This dispenses approximately 3 ml of rinse aid per program. It can be adjusted from 1 to 6.

- Use a higher setting if spots appear on dry glassware.
- Use a lower setting if streaking appears on dishes or glasses.

Rinse aid indicator

The rinse aid indicator on the control panel will light when the rinse aid reservoir needs refilling.

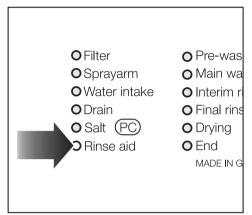

When the indicator first comes on, there will be enough rinse aid left for 2 - 3 washes.

⚠ Do not wash items soiled with ash, sand, wax, grease or paint in the dishwasher.

Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher.

Wax, grease and paint will cause permanent discoloration or damage to the dishwasher.

- Scrape food from dishes before placing in the dishwasher.
 Do not rinse dishes.
- Load dishes so that water can reach all surfaces. Do not place dishes and cutlery inside other pieces.
- Hollow items such as cups and glasses should be placed upside down in the upper basket.
- Concave based items, such as mugs or bowls, should be placed at an angle so that water does not pool.
- To ensure good water coverage tall, narrow, hollow pieces, such as a vase, should be placed in the center of the basket, rather than in the corners.
- Small cups and glasses should be placed on the cup racks. Taller mugs and glasses can be placed beneath the rack.
- Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet.

- The spray arms must not be blocked by items that are too tall or hang through the baskets. Check clearance by manually rotating the spray arms.
- Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms.

Items not recommended for dishwashing

- Cutlery with wooden handles.
- Wooden cutting boards.
- Glued items such as old knives with handles glued together around the shank of the blade.
- Hand made craft items, antique, metal trimmed or decorative glassware.
- Lead crystal.
- Copper, brass, tin or pewter.
- Plastic items that are not heat resistant.
- Dishes with color painted over the glaze. These dishes may fade over time.
- Cast iron pots and pans.


Glassware:

- There are no standard guidelines for washing glassware but, when in doubt wash by hand.
- Wash delicate glassware with a low temperature program and without the extended drying feature to reduce the risk of clouding. See the "Program guide".
- If crystal or delicate glasses will be washed frequently, connect the dishwasher to cold, rather than hot water.
- Clouding or etching may occur on glasses after frequent washing.
- When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe.

Silver and aluminum:

- Silver or aluminum items may tarnish.
- Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish. This can be rubbed off with a soft, dry cloth. Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish.
- If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades.
- Silverware may tarnish or pit if washed next to stainless steel.
 Leave space between these metals.

Cutlery tray (SC units)

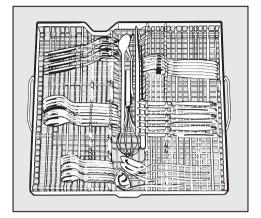


The removable cutlery tray makes unloading flatware easy. Simply carry the cutlery tray to where the flatware is stored and put the entire basket away in one trip.


For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc.

Place knives with the cutting edge and forks with the prongs between the holders. Spoons should be placed in the opposite direction with the handles between the holders.

Longer items such as soup ladles, cake slices, mixing spoons and long knives should be placed lengthwise in the indentation of the cutlery tray.

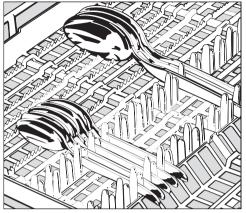

Spoon heads should be placed in contact with at least one of the serrated retainers of the cutlery tray to ensure that water runs off freely.

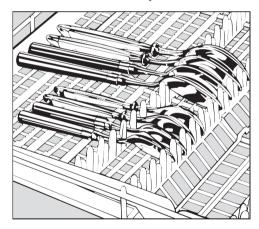


Spoons with thick handles may have to be placed as knives and forks with their heads in the holders

Upper basket

Adjusting the upper basket


On select models, the upper basket can be raised or lowered to accommodate tall items.

■ Slide out the upper basket.

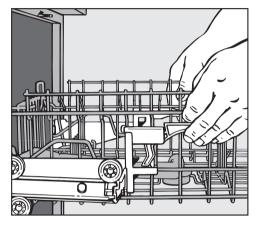

- Pull up the levers at the sides of the upper basket and adjust the basket height.
- Release the levers and the basket will lock in place.


The basket can also be angled to fit tall items in both, the lower and upper baskets. The angles should not be set to opposite extremes. This will block the middle spray arm. Take care when sliding the basket in and out in this position.

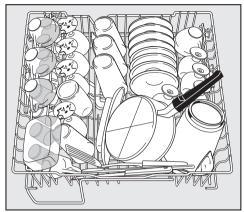

Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls and flat pans.


Long items such as soup ladles, mixing spoons and knives can be set across the front of the upper basket.

Adjustable cup racks

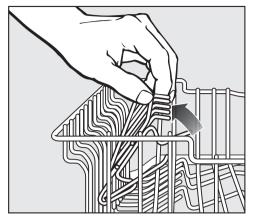


Raise the rack to make room for tall glasses. Lower it to double stack smaller pieces.

Coffee bar

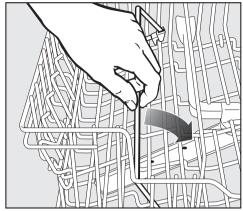

To allow water to run off the bottom of coffee mugs, place slanted on top of the coffee bar. The bar can also be used to separate two rows of glasses. To stack wide items, flip the bar to the right.


Lower basket

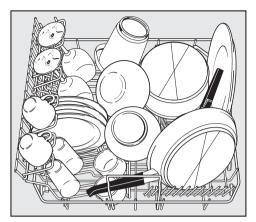

For larger and heavier items such as plates, serving platters, sauce pans, bowls.

Stemmed glassware can also be placed in the lower basket when secured with the StemGuard.

Height limit

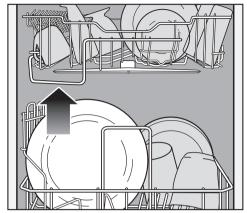


The guide at the front of the upper basket determines the maximum height for items placed in the lower basket so that the middle spray arm is not blocked.

Various removable inserts are available for the lower basket to accommodate special items to be washed.


Removing an insert

■ To remove an insert, gently pull up on the handle.

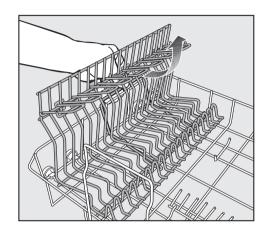

Inserting an insert


■ Slid the hitches of the insert under the vertical struts of the lower basket.

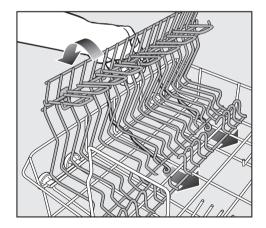

Foldable spike insert

A highly flexible design holds tableware securely. It can be folded out of the way for pots, pans and other large items.


This insert secures plates and platters.

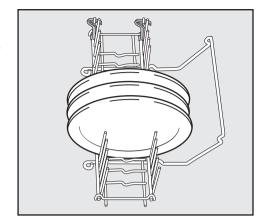


Foldable spikes

Two rows of spikes can be folded down to create more room for larger dishware e.g. pots, pans and bowls.

■ Press on the yellow levers, ①, to fold down the spikes, ②.

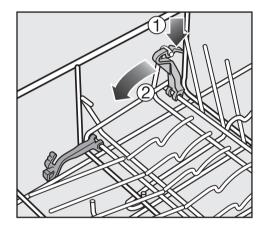


■ Hook the foldable spike insert into the back right corner of the lower basket, the area marked in white.

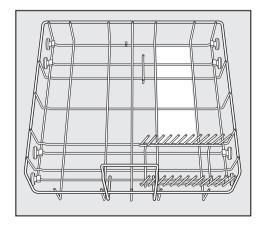


Plateguard Plus with StemGuard

This special attachment cradles delicate stemware. It can also hold teacups.


Place stems of glasses into the slots. Cups can be placed on top of the StemGuard. Never place items on top of glassware.

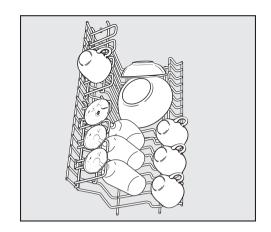

■ Lower the rack to place cups on top. Raise the rack to make room for tall items.

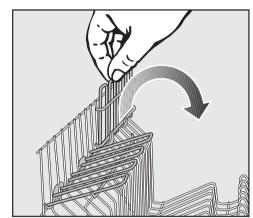


■ Hook the Plateguard Plus with StemGuard insert into the left half of the lower basket, the area marked in white.

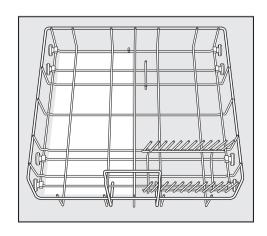


Tall Glassware Insert for lower basket

(select models)

This insert for tall glasses holds glasses securely with the vertical supports.

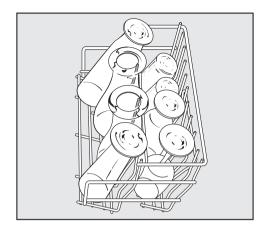


■ Hook the glassware insert into the left or right rear of the lower basket, the areas marked in white.

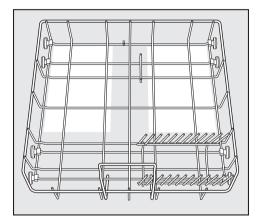

Vase / Bottle holder

The bottle holder e.g. for milk or baby bottles, can be inserted into the bottom basket in more than one place. Position in any area marked white in the illustration. Do not place the insert in the corners of the lower basket, water cannot properly cover bottles in these areas.

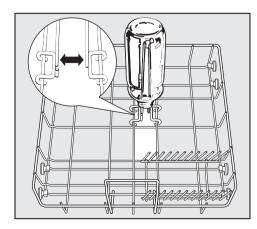

Basket accessories

Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or the Miele Technical Service Department.

Lower Basket Cup Insert	to wash a large number of cups attaches to the lower basket
Large Diameter Plate Insert	to wash plates with a diameter up to 12 ½" (32 cm) attaches to the lower basket
Mini Cutlery Basket	to wash additional cutlery for units with cutlery tray attaches to the lower basket
Upper Basket Glassware Insert	to wash long stemmed glassware attaches to the upper basket


Operation

Adding detergent


Dishwasher detergents contain irritant and corrosive ingredients. Keep children away from detergent. Do not fill the detergent dispenser until you are ready to start the dishwasher.

Only use **powder** detergents or **tablets** formulated for residential dishwashers. The use of gel or liquid detergent is not recommended. Never fill the detergent dispenser to capacity.

Do not use more than the recommended amount of detergent. Continued use of too much detergent may cause machine damage.

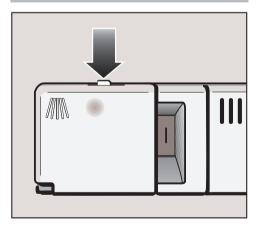

■ To open, press the latch on the detergent dispenser.

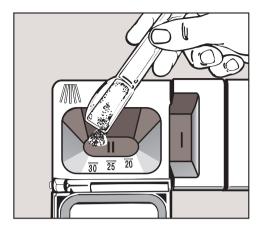


The horizontal marks in Compartment II indicate levels of approximately 1 $^{1}/_{4}$, 1 $^{3}/_{4}$ and 2 tablespoons (20, 25 and 30 ml) respectively.

- With the dishwasher door fully open fill compartment II with 2 tablespoons (30 ml) of powder detergent or one detergent tablet.
- Close the cover. The cover will always open at the end of a wash program except in "Rinse & Hold".

2 tablespoons (30 ml) of detergent is enough for most normally soiled loads. For heavily soiled loads, or if food has dried on the dishes, a program containing a pre-wash cycle should be selected. Add an extra tablespoon (15 ml) of detergent to compartment I.

Less detergent is needed in homes with very soft water and when washing lightly soiled dishes.

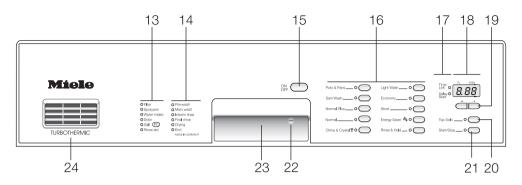

Running the dishwasher

- Make sure the spray arms are not blocked.
- Close the door.
- Turn on the dishwasher.

All progam indicators will light and the "Start/Stop" indicator will flash.

- Select a wash program using the program selection buttons (16). The selected program indicator will light and the "Start/Stop" indicator will flash.
- Refer to the "Program guide" for details.

The run time of the program selected will appear in the time display (18) in hours and minutes. The "Time left" indicator will light.

- Select "Delay Start" or "Top Solo" if desired, See "Additional features".
- Press the "Start/Stop" button (21).

The wash program will begin.

Do not end a program prematurely! Important program steps could be omitted (e. g. reactivating the water softener).

Operation

Waterproof System

All Miele dishwashers are specially designed to shut off the water intake and drain the wash cabinet in the rare event of an internal water valve failure.

For this feature to be active, the machine must be "On" (not necessarily running), and the door must be closed.

Program sequence indicator (14)

The current step of a wash program is indicated by a program sequence indicator (14).

Time display (18)

The run time of a program is shown in hours and minutes in the time display before a program starts. The "Time left" indicator will be lit.

The time displayed may vary with the same program. This is due to the water inlet temperature at each intake, the load size and degree of soiling of dishware being washed.

Each time a program is selected the electronic unit takes into account the new conditions and calculates the time required. This figure is shown in the time display.

At the end of a program

The "End" indicator will light and θ will appear in the time display (18).

- Turn off the dishwasher.
- Open the dishwasher door slightly to allow the dishes to cool before unloading.

It is advisable to turn off the water supply if the dishwasher will not be used for a period of time (e.g. while vacationing).

Interrupting a program

A program is interrupted as soon as the door is opened.

If the door is closed, the program will continue from where it was interrupted.

Mater in the dishwasher may be hot. There is a danger of being burned! Only open the door if absolutely necessary.

Changing a program

If the selected program has not yet started:

- Press the "Start/Stop" button (21) for at least one second.
- Press the program button (16) of the desired program.
- Select "Delay start" or "Top Solo" if needed (see "Additional features").
- Press the "Start/Stop" button (21).

The new program will begin.

If a program is already running, or if the selected delay start period has started counting down:

■ Press the "Start/Stop" button (21) for at least one second.

All program indicators will light and the "Start/Stop" indicator will flash.

- Press the program button (16) of the desired program.
- Select "Delay start" or "Top Solo" if needed (see "Additional features").
- Press the "Start/Stop" button (21).

The new program will begin.

Operation

Program guide

Program	When to use		Program cycle						
			re- ash 2			se	Final rinse	Dry- ing	
Pots & Pans	for heavily soiled pots and pans with dried on food Main wash temperature 170 °F (75 °C) Run-time 128 min	X	Χ	Х	X	-	Х	Х	
Sani Wash	extended wash time, for sanitizing normally soiled dishware with dried on food Main wash temperature 150 °F (65 °C) Run-time 142 min	-	X	X	X	X	X	X	
Normal Plus	higher wash temperature helps to clean normally soiled dishware with stubborn dried on food or greasy residues Main wash temperature 150 °F (65 °C) Run-time 135 min	X	X	X	X	-	X	X	
Normal 1)	for normal soiled dishware Main wash temperature 130 °F (55 °C) Run-time 130 min	X	Χ	X	X	-	X	X	
China & Crystal ♀	"Gentle program" for lightly soiled and heat sensitive tableware Main wash temperature 115 °F (45 °C) Run-time 72 min	-	X	X	X	-	X	X	
Light Wash	shortened wash time, for light to normally soiled dishware without dried food Main wash temperature 130 °F (55 °C) Run-time 113 min	-	-	X	X	-	X	Х	
Economy	energy saving program, for normally soiled dishware Main wash temperature 130 °F (55 °C) Run-time 85 min	-	-	X	X	-	Х	Х	
Short	"Quick program" for slightly soiled dishware , e.g. party dishware Main wash temperature 115 ° F (45 ° C) Run-time 34 min	-	-	X	X	-	X	-	
Energy Saver	for light to normally soiled dishware , only use, if the dishwasher is connected to hot water Run-time 65 min	X	Χ	X	X	-	X	Х	
Rinse & Hold	for rinsing dishes when a complete cycle is not needed Run-time 11 min	-	Χ	-	-	-	-	-	

¹⁾ Standard for Energy Label

When washing a full load in Pots & Pans, Sani Wash and the Normal programs use at least 2 tablespoons (30 ml) of detergent.


For the Pots & Pans program add an additional teaspoon (5 ml) to compartment I.

If "Top Solo" is selected, reduce the amount of detergent to 1 $^{1}/_{4}$ tablespoons (20 ml).

Program times are based on a hot water connection. If the unit is connected to cold water, program times will increase by approximately 25 minutes.

Usage: Electric 0.06 - 2.4 (kWh), Water 1.3 - 6.3 US gallons (5 - 24 L)

Additional features

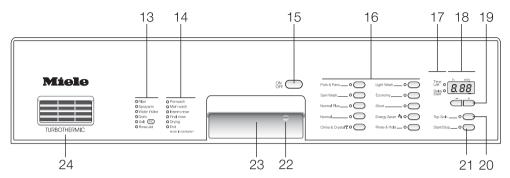

"Top Solo" (20)

Using "Top Solo" will save water and energy.

This program is recommended when there is only a small load to clean. "Top Solo" can be selected with all programs.

With this feature water is directed only to the top and middle spray arms in the dishwasher. This means that the water jets are only aimed at items in the upper basket and the cutlery tray.

The middle spray arm also directs water downwards, so lightly soiled plates or platters can be placed in the lower basket.

When using this program, do not place bowls or other hollow containers in the lower basket.

Because a smaller load is being washed the amount of detergent recommended can be reduced to 1 $^{1}/_{4}$ tablespoons.

■ Turn the dishwasher on using the "On/Off" button (15).

All program indicators will light and the "Start/Stop" indicator will flash.

■ Select a program with the program selection buttons (16).

The run time of the selected program will appear in the time display (18) in hours and minutes, and the "Time left" indicator will light.

■ Press the "Top Solo" (20) button.

The "Top Solo" (20) indicator will light.


The run time shown in the time display (18) will be adjusted by the electronic.

"Delay Start" can now be selected (see next page).

■ Press the "Start/Stop" button (21).

The wash program will begin.

Operation

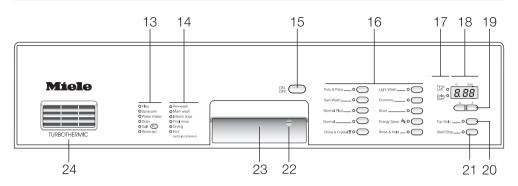

Delay Start (19)

The start time of a program can be delayed from 30 minutes to 24 hours.

A delay start time between 30 minutes and 9 hours and 30 minutes is set in 30 minute intervals. For 10 hours or more it is set in one hour periods.

When using delay start, make sure the detergent compartment is dry before adding detergent. Wipe dry if necessary.

- Turn on the dishwasher with the "On/Off" button (15).
- Select a program with the selection buttons (16).

The indicator of the selected program will light and the "Start/Stop" indicator will flash.

The run time of the selected program will appear in the time display (18).

■ Press the → or → (19) buttons until the desired delayed start time appears in the time display.

The "Time left" and "Delay Start" indicators will light and the "Start/Stop" indicator will flash.

The "Top Solo" feature may also be selected now (see previous page).

■ Press the "Start/Stop" button (21).

The "Start/Stop" indicator will light.

The delay time counts down: above 10 hours in 1 hour steps, below 10 hours in minute-steps.

Once the "Delay start" period has elapsed, the selected program will begin automatically. The time display shows the time left for a program to run, the "Delay start" indicator goes out and the "Time left" indicator will light.

How the delay start time is displayed:

up to 59 minutes example - 30 minutes = 30

between 1 hour and 9 hours 30 minutes example - 5 hours = **5.00**

10 hours and over example 15 hours = 15h

To start a program before the delay start period has elapsed:

■ Press the "Start/Stop" button (21) for at least one second.

All program indicators light and the "Start/Stop" indicator flashes.

- Press the button of the desired program.
- Select "Top Solo", if needed.
- Press the "Start/Stop" button (21).

The "Start/Stop" indicator lights. The program starts.

Operation

Extended drying

If desired drying results are not consistently achieved, the turbothermic cooling fan can be programmed to run an extra 14 minutes at the end of each program.

The "Extended drying" feature can also be activated to prevent condensation from collecting on the steam deflector.

Turning extended drying on/off

- Turn off the dishwasher
- Press and hold the → (19) and "Start/Stop" (21) buttons and at the same time turn the dishwasher on using the "On/Off" button. Release all buttons.

The time display will show *P* and two figures. The "Salt" indicator will flash and the "Energy Saver" and "Sani Wash" indicators will light.

If this is not the case, the above steps must be repeated.

■ Press the "Economy" program button.

One of the following will appear in the time display:

- 90: extended drying is off.
- 91: extended drying is on.
- Press the "Top Solo" button to change the selection.
- Press the "Start/Stop" button.

5P for "Save" will appear in the time display.

■ Press the "Start/Stop" button again.

The changed extended drying feature will be stored.

All program indicators will light and the "Start/Stop" indicator will flash.

■ Turn off the dishwasher.

With the aid of the following guide, minor problems can be fixed without a service call.

Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage.

What if	Possible fault	Fix
the program does not start?	The door is not properly closed.	Close the door firmly.
	The machine is not plugged in.	Insert the plug.
	The fuse is defective or the breaker has tripped.	Reset the circuit breaker. Make sure it is a 15 A breaker.
the dishwasher stops during a program?	The fuse has tripped.	Reset the circuit breaker. Make sure it is a 15 A breaker.
the "Spray arm" indicator light is flashing?	Something is blocking the middle spray arm.	Interrupt the program, rearrange items blocking the spray arm.
	The middle spray arm jets are blocked.	Turn off the dishwasher.
		Clean the spray arm. See maintenance instructions.

What if	Possible fault	Fix
the "Water inlet" indicator is lit or flashing. The dishwasher may have stopped?	The water valve is closed. The filter in the water inlet is blocked. The flow pressure at the water inlet is less than 4.5 psi (0.3 bar).	Open the water valve. See maintenance instructions. Contact a plumber.
	The waterproof system has activated.	Contact the Miele Technical Service Department.
the "Water inlet" indicator lights during the "Energy Saver" program?	The intake water has not reached the required temperature of 115 °F/45 °C, the hot water system may be overloaded, see "Program guide".	 Start the program again. If the indicator light comes on again, select a different program.

What if	Possible fault	Fix
the "Drain" indicator flashes, the program stops?	The triple filter in the wash cabinet is clogged.	Clean the filter, see maintenance instructions.
	The drain pump or the non-return valve may be blocked.	Clean the drain pump and the non-return valve, see maintenance instructions.
	The drain hose is kinked.	Remove the kink.
three horizontal bars appear in the time display at the end of a program?	There may be a technical fault.	 Turn off the dishwasher. A few seconds later: Turn on the dishwasher. Select the program. Press the "Start/Stop" button. If the horizontal bars appear again at the end of the program, there is a technical problem. Call the Miele Technical Service Department.

What if	Possible fault	Fix
there is a knocking noise in the wash cabinet?	The spray arm is hitting an item in the basket.	Interrupt the program, rearrange items blocking the spray arms.
there is a rattling noise?	Items are not secure in the wash cabinet.	Interrupt the program and rearrange loose pieces.
there is a knocking noise in the water pipes?	This may be caused by the installation or the diameter of pipe.	This has no effect on the dishwasher. If in doubt contact a plumber.
dishes are not dry, glasses and cutlery are spotted?	The rinse aid setting may be too low, or the rinse aid reservoir is empty.	Increase the dosage or refill the reservoir, see "Before using for the first time".
	Extended drying is not activated.	Activate the Extended drying feature.
	Dishes were taken out too soon.	Leave dishes in longer.
dishes are not clean?	The dishes were not loaded correctly.	See "Loading the dishwasher".
	The program was not powerful enough.	Select a more intensive program see "Program guide".
	Not enough detergent was used.	Use more detergent, see "Adding detergent".
	The spray arm jets are clogged.	Clean the spray arm jets, see maintenance instructions.
	The triple filter is clogged or not correctly seated.	Clean and reseat the filter, see maintenance instructions.
	The non-return valve is blocked while open. Water runs back into the wash cabinet.	Clean the drain pump and the non-return valve, see maintenance instructions.

What if	Possible fault	Fix
tea or lipstick stains have not been completely removed?	The wash temperature of the selected program was too low.	Select a program with a higher temperature.
	Not enough detergent was used.	Use more detergent.
white residue is visible on cutlery and dishes, clouding occurs on	Not enough rinse aid was used.	Increase the dosage, see "Before using for the first time".
glassware and film can be wiped off?	The salt reservoir is empty.	Add reactivation salt, see "Before using for the first time".
	The salt reservoir cap was not correctly screwed on.	Reseat it making sure it screws back on correctly.
	The automatic water softener is faulty.	Call the Miele Technical Service Department.
bluish sheen on the surface of glasses and film can be wiped off?	The rinse aid dosage is set too high.	Reduce the dosage, see "Before using for the first time".
glasses are dull and discolored and film cannot be wiped off?	Glasses are not dishwasher safe.	There is no remedy. Only wash dishwasher safe glasses.

What if	Descible fault	Fix
What if	Possible fault	Fix
plastic items are discolored?	Natural dyes e. g. from vegetables may be the cause. Not enough detergent was used to break down natural dyes.	Use more detergent, see "Adding detergent". Discoloration is permanent.
there are rust stains on cutlery?	The salt reservoir cap was not screwed on properly.	Reseat and screw the cap on firmly.
	The affected items are not corrosion resistant.	There is no remedy. Only wash dishwasher safe cutlery.
detergent is left in the dispenser at the end of a program?	The dispenser was damp when detergent was added.	Dry the dispenser before adding detergent.
the detergent dispenser lid can not be closed properly?	Detergent residue is blocking the catch.	Remove the residue.
water remains in the wash cabinet at the end of a program?	The triple filter in the wash cabinet is clogged.	Clean the filters, see maintenance instructions.
	The drain pump or the non-return valve may be blocked.	Clean the drain pump and the non-return valve, see maintenance instructions.
	The drain hose is kinked.	Remove the kink.

After sales service

In the event of a fault which you cannot correct yourself please contact the Miele Technical Service Department.

USA 1-800-999-1360 techserv@mieleusa.com


CDN 1-800-565-6435 service@miele.ca

When contacting the Miele Technical Service Department, please quote the model and serial number of your appliance.

These can be found on the data plate on the upper inside edge of the dishwasher door.

Program update function - PC

The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology.

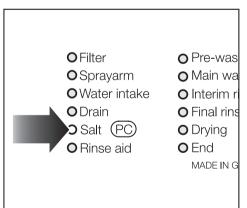

For example, if a detergent with good wash results using only cold water becomes available, the wash programs can be modified to take advantage of this.

MieleCare

MieleCare, our Extended Service Contract program; gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership.

MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance.

Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home.

To learn more about **MieleCare**Extended Service Contracts, please contact your appliance dealer or visit us online at:


www.store.miele.com

Transport

To transport the dishwasher, e.g. when moving to a new home, note the following:

- Empty the dishwasher.
- Secure any loose parts, e.g. hoses, cables, cutlery baskets.
- Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage.



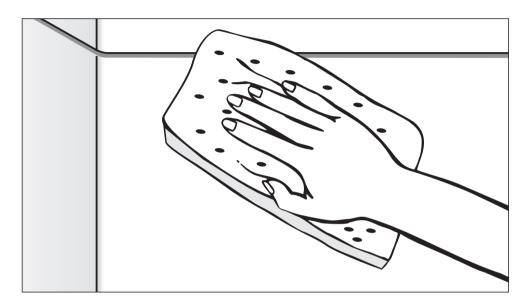

User Maintenance Instructions

To prevent accidents and machine damage, read these instructions **before** installation or use.

Triple filter system

The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones).

The filter system must be cleaned every 4 - 6 months or whenever a foreign objects is trapped.

"Filter" indicator light


The "Filter" indicator lights after every 40 program cycles to remind you to check the filter.

- Clean the filter if needed.
- Press the "Start/Stop" button at least 1 second to reset the filter timer. The "Filter" indicator goes out.


The "Filter" indicator will also go out, when the dishwasher is turned off.

Cleaning the filter in the wash cabinet


■ Turn off the dishwasher before cleaning.

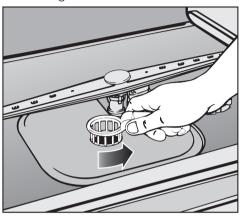

■ Turn the handle counterclockwise to release the triple filter system.

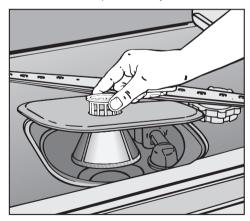


Lift the filter out of the machine. Remove any solid particles. Rinse under running water. Scrub with a nylon brush if necessary.

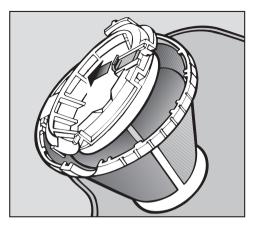

To clean the underside of the filter, the flap must be opened:

- Pull back the yellow clip.
- Rinse all parts under running water. Scrub with a nylon brush if necessary.
- Close the flap so that the clip engages.

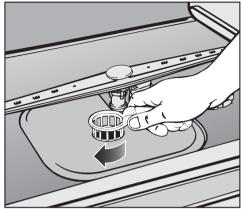

- Return the filter so that it lies flat in the base of the wash cabinet.
- Lock the filter by turning the handle clockwise.

The dishwasher must not be used without the filter in place. Make sure the filter is locked in place. Otherwise untrapped debris will redeposit on dishes.


Cleaning the spray arms

Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months.

■ Turn off the dishwasher before cleaning.


Remove the spray arms as follows:

- Remove the cutlery tray (if present).
- Press the **top** spray arm upwards to engage the inner ratchet and unscrew the spray arm.

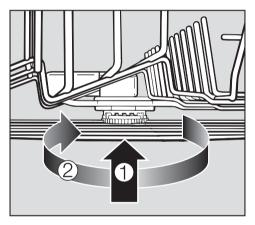


■ Lift up the **middle** spray arm, ①, to engage the ratchet and unscrew the spray arm, ②.

■ Remove the lower basket.

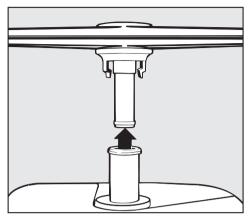

■ Pull the **lower** spray arm firmly upwards to remove.

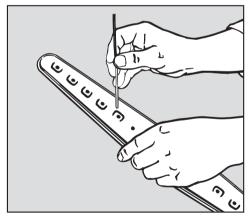

- Use a pointed object such as a toothpick to push food particles into the spray arm jets.
- Rinse thoroughly under running water.
- Return the spray arms and check that they rotate freely.

Cleaning the wash cabinet

Generally, the wash cabinet is self cleaning if the correct amount of dishwasher detergent is used.

The wash cabinet can be cleaned with a dishwasher cleaner such as Dis Cleaner available from your Miele dealer or the Miele Technical Service Department.

Cleaning the door and door seal

- Wipe the door seal with a damp cloth to remove any food particles.
- Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms.

Cleaning the exterior

Never use abrasive cleaners, scouring pads, steel wool or caustic (oven) cleaners on the dishwasher. They will damage the surface.

Plastic

All plastic surfaces and the control panel can be cleaned with warm water and liquid dish soap applied with a soft sponge.

Wipe dry using a soft cloth.

Do not use too much water when cleaning the controls. Water could penetrate into the electronics and cause damage.

Stainless steel

Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner.

To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure.

Stainless steel colored controls

These controls may become discolored or damaged if not cleaned regularly. Do not use a stainless steel cleaner on the knobs or buttons.

Wood

Panels made from wood should be cleaned using a soft damp cloth and an appropriate wood cleaner.

Cleaning the water inlet filter


A filter is incorporated in the intake hose attached to the dishwasher's shut off valve. If your water is hard, or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet.

Installing an in-line water filter

If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele. The plastic valve housing on the intake hose contains electrical components and should not be submerged, or run through water.

Cleaning the filter:

- Disconnect the dishwasher from electricity (unplug it or "trip" the circuit breaker).
- Turn off the water valve.
- Unscrew the intake hose.

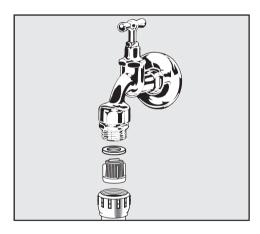


- Carefully remove the rubber seal.
- Remove the filter using needle nose pliers and rinse under running water.
- Return the filter and seal. Make sure they are seated correctly.
- Screw the intake hose back on the water valve, checking that it is not cross-threaded.
- Slowly turn on the valve and test for leaks.


Cleaning the drain pump and non-return valve

If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked.


- Turn off the dishwasher.
- Remove the triple filter (see "Cleaning the filter in the wash cabinet").
- Use a jug or bowl to scoop water out of the wash cabinet.

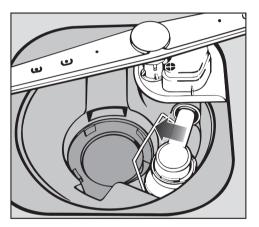

■ Tilt the locking clamp to the side.

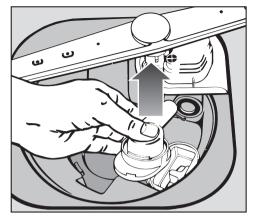

■ Pull out the non-return valve and rinse well under running water.

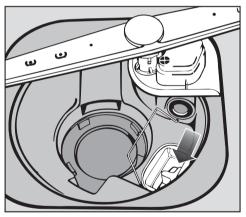

The drain pump is beneath the non-return valve (see arrow).

- Before returning the non-return valve, check that the drain pump is not blocked. Spin the propeller several times in both directions to check for obstructions.
- Carefully refit the non-return valve and secure it with the locking clamp.
- Refit and lock the filter in place.

When contacting the Technical Service, please quote the model and serial number of your appliance.



Miele, Inc.



National Headquarters

9 Independence Way Princeton, NJ 08540 Phone: 800-843-7231 609-419-9898

Fax: 609-419-4298

www.miele.com

Technical Service & Support Nationwide

Phone: 800-999-1360 Fax: 888-586-8056

Miele Limited



M.-Nr. 05 431 301 / 02

Headquarters and Showroom

161 Four Valley Drive Vaughan, ON L4K 4V8 Phone: 800-643-5381

905-660-9936 Fax: 905-532-2290

www.miele.ca

Fax:

info@miele.ca (general enquiries) professional@miele.ca (commercial enquiries)

MieleCare National Service

Phone: 800-565-6435

905-532-2272 905-532-2292

service@miele.ca (technical enquiries)