


ROBERTS

Sound for Generations

CR9901

3 Band Single Alarm
Clock Radio

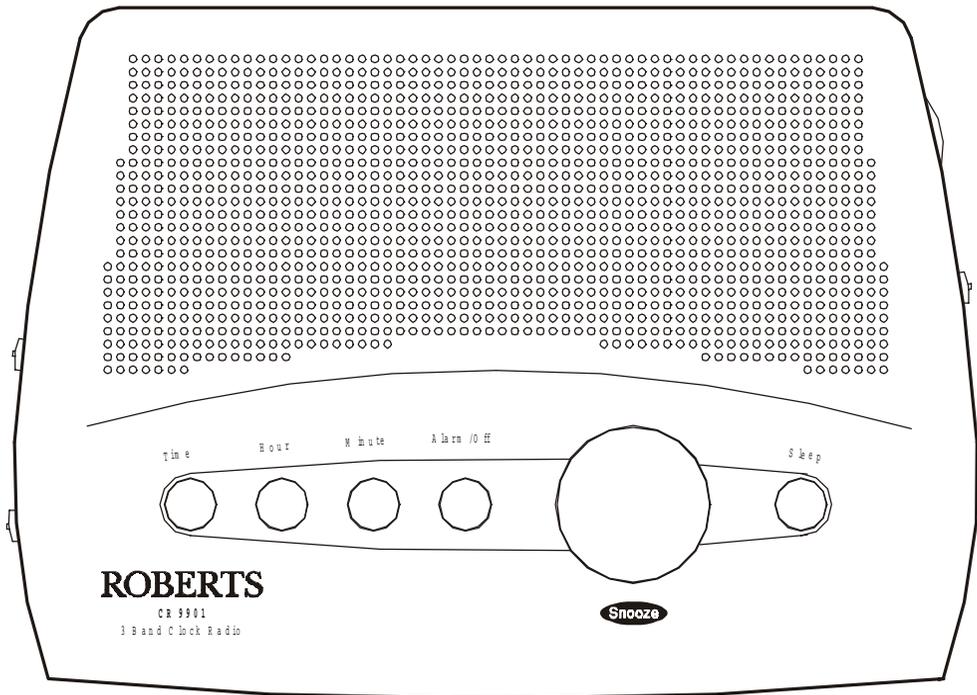


Please read this manual before use

Controls

(Top)


3

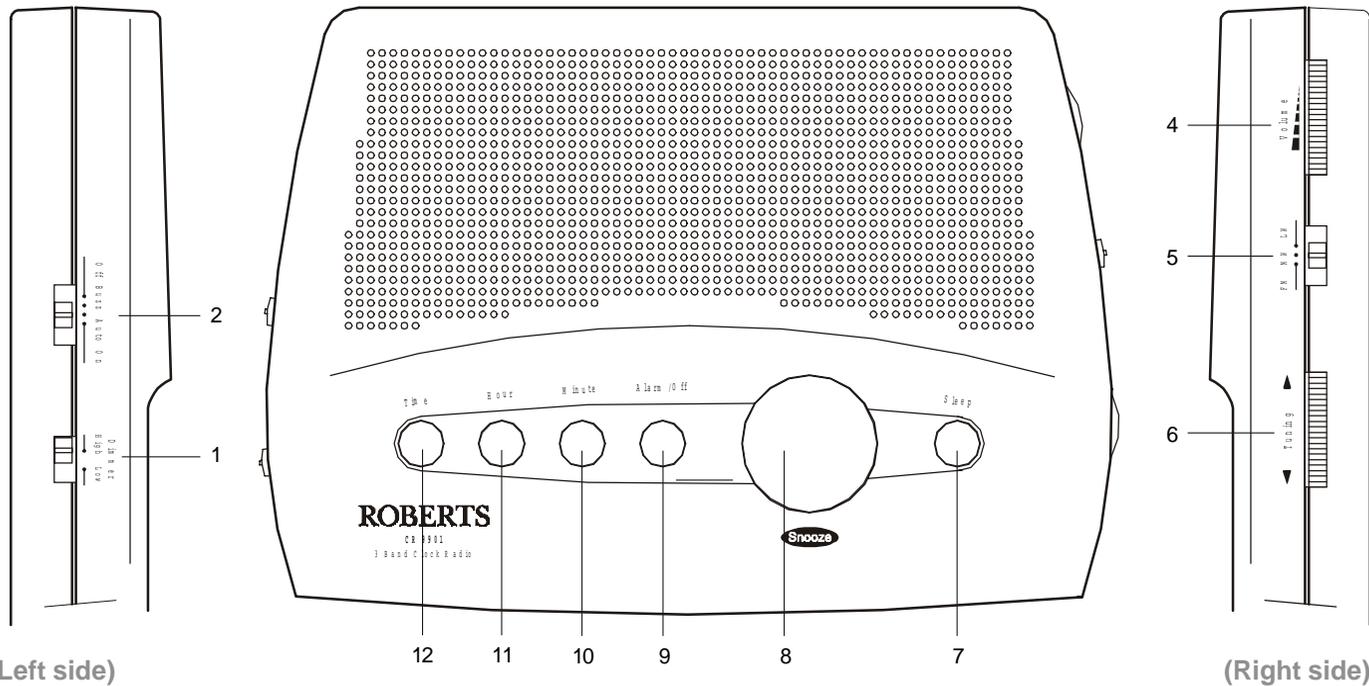

- | | | |
|---------------------|----------------------|---------------------|
| 1. Dimmer switch | 5. Waveband selector | 9. Alarm/Off button |
| 2. Function switch | 6. Tuning control | 10. Minute button |
| 3. Headphone socket | 7. Sleep button | 11. Hour button |
| 4. Volume control | 8. Snooze button | 12. Time button |

Controls

(Front)

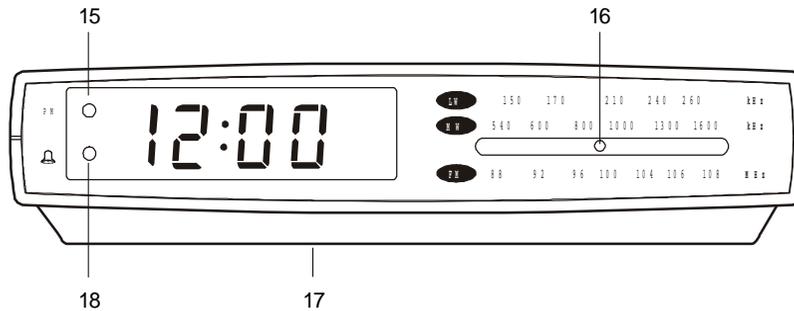


- 15. PM indicator
- 16. LED dial pointer
- 17. Battery compartment (underside)
- 18. Alarm indicator

Switching on and setting the time

Before using your clock radio you must first set the correct time.


1. Place the unit on a flat surface. Plug the power cord into the wall socket and switch on.

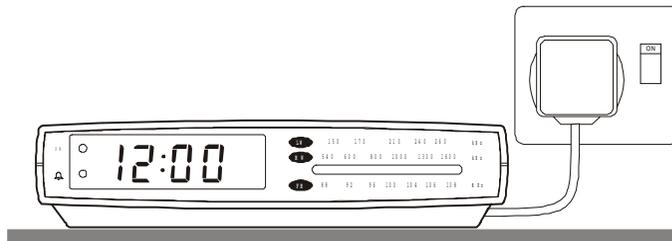


2. The clock display will flash 12.00.



3. Press and hold down the **Time Set button**.

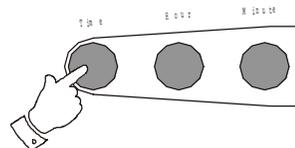


4. Whilst holding down the **Time Set button** press the **Hour**, or **Minute buttons** to set the time. Release the buttons when the correct time is reached. The clock uses a 12 hour display with a **PM indicator**. Ensure that the correct 12 hour cycle is selected.

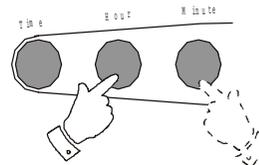


Listening to the Radio

1. Turn on the radio by sliding the **Function switch** to the 'On' position. The **LED dial pointer** will light up indicating that the radio is switched on.

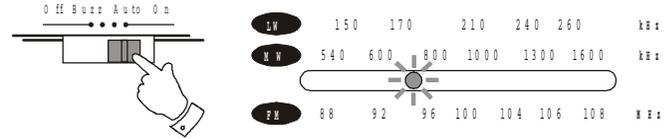


2. Select the required waveband using the **Waveband selector switch**.

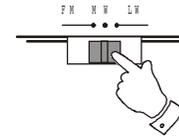


3. Tune in to the desired station by rotating the **Tuning control**. The station frequency is indicated by the **LED dial pointer**.

The **Wire aerial** located on the rear of your clock radio is for FM reception. The wire should be fully extended and positioned for optimum reception.


For MW and LW reception there is a built in ferrite aerial. Rotate the your clock radio to the position giving best reception.

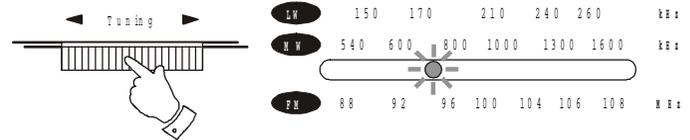

4. Adjust the volume by rotating the **Volume control**.

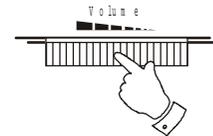

5. The radio can be switched off by sliding the **Function switch** to the 'Off' position.

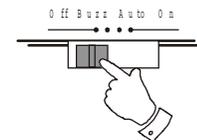



If you need any further advice, please call our Technical Helpline on :-
0181 758 0338 (Mon-Fri)

Alarm

The alarm can be set to wake you by either the buzzer or the radio.


Setting alarm time

1. Press and hold down the **Alarm/Off button**.
2. Whilst holding down the **Alarm/Off button** press the **Hour**, or **Minute buttons** to set the time. Release the buttons when the correct alarm time is reached. The clock uses a 12 hour display with a **PM indicator**. Ensure that the correct 12 hour cycle is selected.

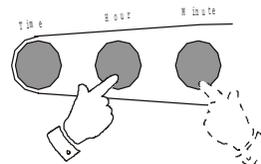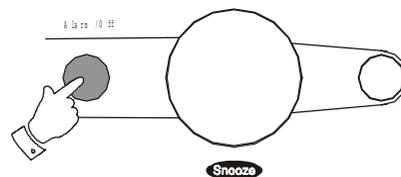

Checking the alarm time


1. To check alarm time, press and hold down the **Alarm/Off button** the display will show the alarm time.

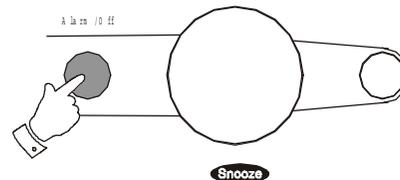

Setting the alarm to wake to buzzer

1. Set the alarm time as previously described. Set the **Function switch** to the 'Buzz' position. The **Alarm indicator** will light.

The alarm will sound every day at the preset time for 59 minutes. To turn off the alarm until the next day press the **Alarm/Off button**. To turn off the alarms permanently set the **Function selector** to the 'Off' position.

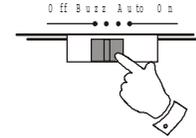


Setting the alarms to wake to radio

1. Set the alarm time as previously described. Set the **Function switch** to the 'Auto' position. The **Alarm indicator** will light.


Ensure that the volume is set to the correct level and the desired station is tuned in.

The alarm will sound every day at the preset time for 59 minutes. To turn off the alarm until the next day press the **Alarm/Off button**. To turn off the alarms permanently set the **Function selector** to the 'Off' position.

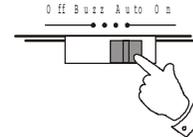

Snooze control

The radio or buzzer alarm can be silenced for 7 minutes by pressing the **Snooze** button. This sequence can be repeated whilst the alarm is sounding.

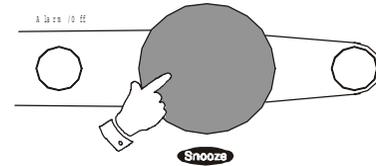


Sleep timer

The radio can be set to turn off after a preset time has elapsed.


Press and hold down the **Sleep** button until the desired time is reached (maximum 59 minutes in 1 minute steps). The radio will switch off after the sleep time has elapsed.

To cancel the sleep function before the preset time has expired, press the **Alarm/Off button**.

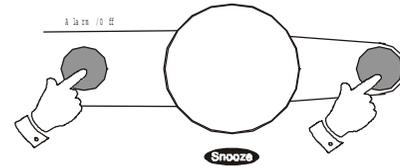


Dimmer Switch

The **Dimmer switch** located on the left side of your clock radio will allow you to adjust the intensity of the clock display to suit room brightness.

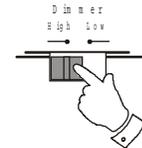

Headphones (on rear)

A **Headphone Socket** (3.5mm) is provided for use with either headphones or an earpiece. Inserting a plug automatically mutes the internal loud-speaker.

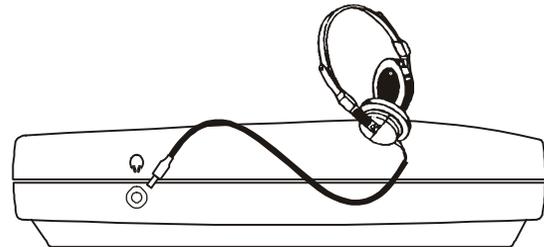

General

Do not allow this unit to be exposed to water or steam. It is recommended that the FM band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the MW or LW bands.

Mains supply

The CR9901 will operate from a supply of AC 230volts, 50Hz  only.

For your convenience this product is supplied with a plug which is fitted with a fuse of the appropriate rating. If the plug supplied is not suitable for your socket outlet, it should be removed by unscrewing the plug top, the terminal screws, and removing the cable.

The correct style of plug to suit your household together with a correctly rated fuse should be fitted.

IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN


IMPORTANT. DO NOT make any connection to the larger terminal which is marked with the letter E or by the safety earth symbol  or coloured Green or Green-and-yellow.

The wires in the mains lead are coloured in accordance with the following codes :-

BLUE - NEUTRAL

BROWN - LIVE

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

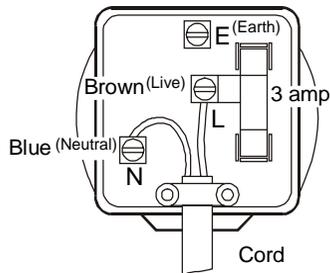

The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN must be connected to the terminal marked L or coloured RED.

If you need any further advice, please call our Technical Helpline on :-
0181 758 0338 (Mon-Fri)

Fuse

This apparatus must be protected by a 3A fuse (BS1362) in a 13A plug (BS1363). If another type of plug is used a 5A fuse should be fitted in the plug, adaptor or distribution board.


IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN.

Back-up Battery (not necessary for the unit to function)

Slide the battery cover catch in the direction of the arrow. Remove the battery cover. Fit a 9 volt IEC size 6LR61 (6F22, PP3) or equivalent battery into the compartment. Replace the battery cover.

The time and alarm settings will be retained during a temporary failure of the AC mains supply. The LED display will not be operational. The display will be extinguished to conserve battery life.

(Underside)

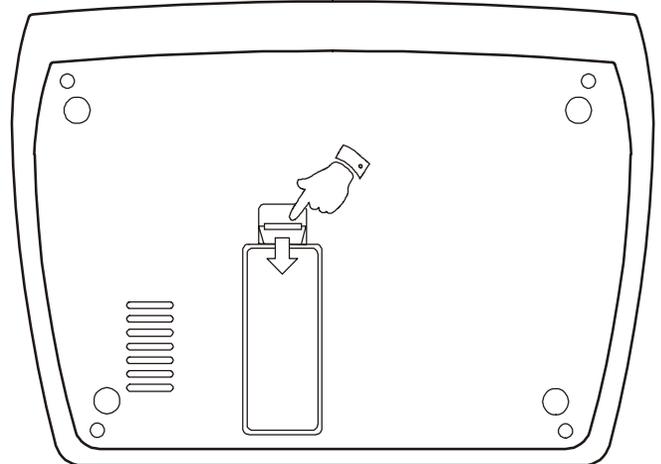

Specifications

Power Requirements

Mains	AC 230 volts, 50Hz  only
Back-up Battery	IEC size 6LR61 (6F22, PP3)

Frequency Coverage

FM	87.5 - 108MHz
MW	525 - 1610kHz
LW	147-284kHz

Circuit Features

Loudspeaker	75mm diameter 8 ohms
Output Power	0.3W RMS
Aerial System	FM Wire Aerial
	MW Built-in Ferrite aerial
	LW Built-in Ferrite aerial

ROBERTSRADIOLIMITED

PO BOX 130
MEXBOROUGH
SOUTH YORKSHIRE
S64 8YT

The Company reserves the right to amend the specification without notice.

Notes:

*If you need any further advice, please call our Technical Helpline on :-
0181 758 0338 (Mon-Fri)*

Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service department for attention. In the event that it is not possible to return the instrument to the Roberts dealer from whom it was purchased, please contact Roberts Radio Technical Services department at the address shown below before taking further action.

These statements do not affect the statutory rights of a consumer.

ROBERTS RADIO TECHNICAL SERVICES DEPARTMENT

97-99 Worton Road
Isleworth Middlesex
TW7 6EG

Technical Helpline:- 0181 758 0338 (*Mon-Fri*)

Issue 1

