

**DIRECTV®**  
**Big Button Remote**




**USER GUIDE**

# TABLE OF CONTENTS

---

Installing Batteries .....	3
To Install Batteries: .....	3
Battery Use And Safety.....	3
Features and Functions .....	4
Programming a Device.....	5
Searching for Your Code .....	6
Checking the Codes .....	7
Changing Volume Lock .....	7
Unlocking Volume Control for a Single Device (Individual Volume Unlock) .....	8
Locking Volume Control to One Mode (Global Volume Lock) ..	8
Unlocking All Volume Control.....	8
Changing Channel Lock .....	8
Locking Channels .....	8
Unlocking Channels .....	8
Clearing Custom Programming .....	8
Troubleshooting .....	9
Care.....	9
Specifications.....	10
FCC Notice .....	10
DIRECTV Setup Codes .....	11
Setup Codes for DIRECTV Receivers .....	11
Setup Codes for DIRECTV HD Receivers.....	11
Setup Codes for DIRECTV DVRs .....	12
Manufacturer's Codes .....	13
Setup Codes for TVs .....	13
Setup Codes for VCRs.....	19
Setup Codes for DVD Players .....	24
Setup Codes for Audio Amplifiers/Tuners.....	27
Setup Codes for Audio Amplifiers.....	30

1

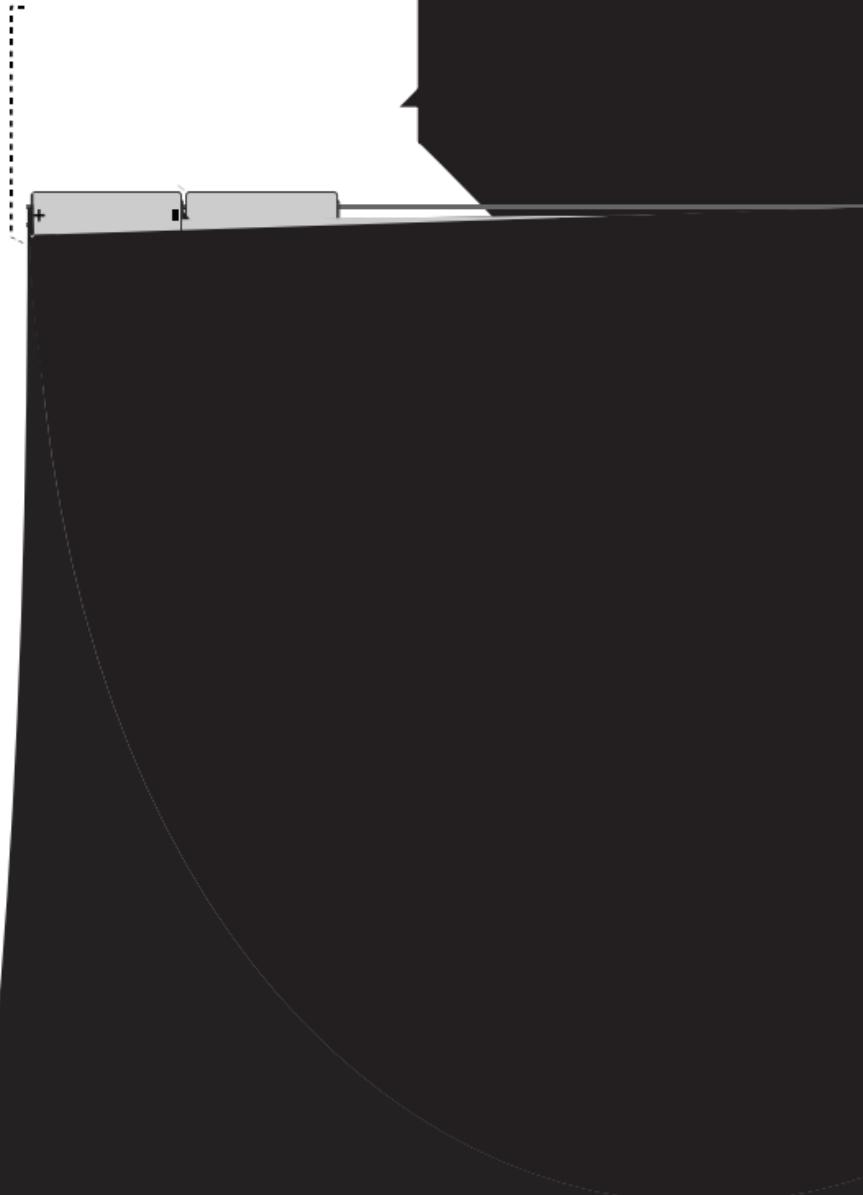

- If you do not plan to use the remote for an extended period, remove the batteries. They can leak chemicals that can destroy electronic parts.

**WARNING:** Dispose of old batteries promptly and properly. Do not burn or bury them.

## FEATURES AND FUNCTIONS

---

**NOTE:** The DIRECTV Big Button Remote does not support some DIRECTV Interactive Applications.

**NOTE:** If you are using your DIRECTV Big Button Remote with an HD receiver, you cannot change the HD format with the remote. To adjust HD display settings, use your receiver's front-panel **RES** button and the *Display* option under *System Settings* in the Quick Menu.

Press this key...

To...



AUX 1

AUX 2

TV

Select a device to control.




puts the remote into **DIRECTV** mode. This is the mode you use to watch TV with your DIRECTV Receiver.



Turn on or off the selected device.



Switch the TV's input to view TV or video programs.

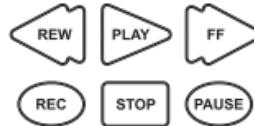

Use these keys to control your DIRECTV DVR, or your VCR, DVD or CD/DVD player.

On a DIRECTV Plus DVR, pressing **REC** enables one-touch record for any selected program.

Display the DIRECTV program Guide.

Display your TO DO list of programs.  
(Not available on all DIRECTV Receivers.)

Exits any menu and returns to the last channel viewed in DIRECTV mode; exits the menu for another selected device.

**Press this key...**

**To...**



 
Use the arrows to move the cursor in the program Guide and menu screens. Press **SELECT** to choose options from the selected device's menu or Guide.



Display the Quick Menu in DIRECTV mode, or other menu for another selected device.



View the current channel and program information.



Raise or lower the sound level.



Turn the sound off or on.




Select the next or previous channel.

Select next or previous chapter on some models of DVD players.

When in the DIRECTV Guide or other menu, **CH+** (or **CH-**) allows you to page up (or down) through a list of items.



Recall the last-viewed channel.

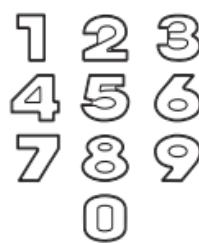

Directly enter channels (for example, **09** or **31**).

## PROGRAMMING A DEVICE

The DIRECTV Big Button Remote comes pre-programmed to operate a DTV Receiver or DVR. To control devices other than default brands, follow these steps; otherwise, skip this section.

Before proceeding, find the codes for the devices you want to program in Manufacturer's Codes and write them down or highlight them. (See "Manufacturer's Codes" on page 13.)

**NOTE:** To program a TV/DVD, TV/VCR/DVD, or TV/VCR Combo, use the **AUX 1** or **AUX 2** key.

1. Turn on the device (for example, TV) and, if needed, load media (for example, DVD).

2. On the remote, press and release the appropriate mode key for the device you want to program (that is, **DIRECTV**, **TV**, **AUX 1**, or **AUX 2**).
3. Press and hold the mode key until the green LED flashes twice. Release the key.
4. Enter the first five-digit code for your device. The LED blinks once as each digit is entered. If the code is correct, the LED blinks twice.

**NOTE:** If the LED does not blink twice, repeat steps 2 to 5 and try entering the code again.

5. Aim the remote at the device and press **POWER** (or **PLAY**, if it does not have a **POWER** key). The device should turn off. If it does not, repeat steps 2 to 6, trying each code for your brand until you find one that works. If you cannot find a code that works, see Searching for Your Code.
6. Repeat steps 1 to 5 for each device. For future reference, write down each working device code in a safe place.

## SEARCHING FOR YOUR CODE

---

If your device does not respond to the remote after trying all codes listed for your brand, or if your brand is not listed, try searching for your code. For example, to search for a code for your TV:

1. Press and hold **TV** until the green LED blinks twice.
2. Enter **9 9 1**. The LED blinks twice.
3. Enter the device ID code, according to the following table:
4. Aim the remote at the TV and press **POWER**. The remote sends IR codes from its library to the selected device, starting with the most popular code first.

**NOTE:** This process may take up to 30 minutes.

5. If the TV responds, go to step 6. If the TV does not respond, press **CH▲**. The remote tries the next code. Continue until the TV responds.

**NOTE:** Press **CH▼** to try the previous code.

6. To lock in the code, press **SELECT**.

- To search for other device codes, repeat steps 1 to 6, substituting the appropriate key for the device.

## CHECKING THE CODES

---

If you have set up the remote using the procedure in Searching for Your Code, you may need to find out which four-digit code is operating your equipment.

For example, to find out which code is assigned to your TV:

- Press and hold **TV** until the green LED blinks twice.
- Enter **9 9 0**. The LED blinks twice.
- To view the code for the first digit, press **1**. Count the LED blinks (for example, three blinks = 3), and write down the number.

**NOTE:** If a code digit is 0, the LED does not blink.

- Repeat step 4 for the four remaining digits, using **2** for the second digit, **3** for the third digit, **4** for the fourth digit, and **5** for the fifth digit.
- To check for other device codes, repeat steps 1 to 4, substituting the appropriate key for each device you are checking.

## CHANGING VOLUME LOCK

---

**CAUTION:** Changing the volume lock settings could negatively affect your DIRECTV Receiver's operation. Please read these instructions thoroughly before making any changes. For example, changing the volume lock settings can cause your DIRECTV Receiver not to control your TV's volume when in DIRECTV mode. This could cause you not to be able to control the volume if your amplifier is turned off and your TV is muted.

Your DIRECTV Big Button Remote is preset so the volume keys always control the volume on the TV you've set up on the remote when the remote is in DIRECTV mode. However, you can change this setting so the remote controls another device, such as a home theater amplifier. To enable this feature, perform the following steps:

**NOTE:** You cannot lock the volume to **DIRECTV** mode, or to **AUX 1/AUX 2** modes if those modes are set up for a DIRECTV Receiver.

### Unlocking Volume Control for a Single Device (Individual Volume Unlock)

- Select and hold the mode key for the device to unlock for volume control until the green LED blinks twice.
- Enter **9 9 3** and then press **VOL-**. The LED blinks four times.

3. Repeat steps 1 to 2 for any other device that you want to have independent volume control.

## **Locking Volume Control to One Mode (Global Volume Lock)**

1. Select and hold the mode key for a device (for example, **TV**) until the green LED blinks twice.
2. Enter **9 9 3** and then press the key for a second device (for example, **AUX 1** to control the volume of an audio amplifier). The LED blinks twice. Now when you press **VOL+**, **VOL-**, or **Mute**, the selected device (for example, **AUX 1**) controls the volume regardless of the current mode.

## **Unlocking All Volume Control**

1. Select and hold the mode key for a device (for example, **TV**) until the green LED blinks twice.
2. Enter **9 9 3** and then press **VOL+**. The LED blinks four times. Volume is independently controlled for all programmed devices.

## **CHANGING CHANNEL LOCK**

---

**CAUTION:** Changing the channel lock settings could negatively affect your DIRECTV Receiver's operation. Please read these instructions thoroughly before making any changes.

The DIRECTV Big Button Remote comes preset to allow independent channel control of each selected device. However, you may change the Channel Lock setting so that the DIRECTV Receiver's (**DIRECTV**  mode only) channel keys control the channels in all other modes.

### **Locking Channels**

1. Press and hold the **DIRECTV** key until the green LED flashes twice.
2. Enter **9 7 3** and then press **CH▲**. The LED blinks twice. Now when you press **CH▲** or **CH▼**, the satellite receiver controls the channels regardless of the current mode.

### **Unlocking Channels**

1. Press and hold the **DIRECTV** key until the green LED flashes twice.
2. Enter **9 7 3** and then press **CH▼**. The LED blinks four times. Now when you press **CH▲** or **CH▼**, the individual devices control the channels.

## **CLEARING CUSTOM PROGRAMMING**

---

Your DIRECTV Big Button Remote includes a Custom Programming Reset feature. You can use it to remove all custom programming.

**IMPORTANT:** Executing this program erases all custom settings for Volume Lock and Channel Lock.

1. Press and hold a device key (for example, **DIRECTV**).
2. Enter **9 8 1**. The last-selected device key blinks twice, pauses, and blinks twice again to confirm that all custom programming is cleared.

## TROUBLESHOOTING

---

**PROBLEM:** Light at the top of the remote blinks when you press a key, but the component does not respond.

**SOLUTION 1:** Try replacing the batteries. (See “Installing Batteries” on page 3.)

**SOLUTION 2:** Make sure you are aiming the DIRECTV Big Button Remote at your home entertainment component and that you are within 15 feet of the component you are trying to control.

**PROBLEM:** The DIRECTV Big Button Remote does not control component or commands are not recognized properly.

**SOLUTION:** Try all listed codes for the device brand being set up. Make sure all components can be operated with an infrared remote control.

**PROBLEM:** TV/VCR combo does not respond properly.

**SOLUTION:** Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation. (See “Programming a Device” on page 5.)

**PROBLEM:** **CH+**, **CH-**, and **PREV** do not work for your RCA TV.

**SOLUTION:** Due to RCA design for certain models (1983-1987), only the original remote control operates these functions.

**PROBLEM:** Changing channels does not work properly.

**PROBLEM:** Remote control does not turn on Sony or Sharp TV/VCR Combo.

**SOLUTION:** For power on, these products require setting up TV codes on the remote control. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048. (See “Programming a Device” on page 5.)

## CARE

---

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the unit only in normal temperature environments.

- Handle the remote gently and carefully. Don't drop it.
- Wipe the remote with a damp cloth to keep it looking like new.

Modifying or tampering with the internal parts can cause damage and invalidate the warranty.

## SPECIFICATIONS

---

Power(2) AA Alkaline Batteries

Size (H x W x D) 7.67 x 2.44 x 1.42 in.  
(195 x 72.5 x 34 mm)

Weight (w/o batteries) 4.76 oz. (136 g)

Specifications are typical; individual units might vary.  
Specifications are subject to change and improvement without any notice.

## FCC NOTICE

---

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase or decrease the separation between the equipment and the receiver.
- Consult the dealer or an experienced remote control/TV technician for help.

# **DIRECTV SETUP CODES**

---

## **Setup Codes for DIRECTV Receivers**

DIRECTV all models 00001, 00002

---

Hughes Network Systems 00749  
(most models)

---

Hughes Network Systems 01749  
models GAEB0, GAEB0A,  
GCB0, GCEB0A, HBH-SA,  
HAH-SA

---

GE models GRD33G2A and 00566  
GRD33G3A, GRD122GW

---

Philips models DSX5500 00099  
and DSX5400

---

Proscan models PRD8630A 00566  
and PRD8650B

---

RCA models DRD102RW, 00566  
DRD203RW, DRD301RA,  
DRD302RA, DRD303RA,  
DRD403RA, DRD703RA,  
DRD502RB, DRD 503RB,  
DRD505RB, DRD515RB,  
DRD523RB, and  
DRD705RB

---

DRD440RE, DRD460RE, 00392  
DRD480RE, DRD430RG,  
DRD431RG, DRD450RG,  
DRD451RG,  
DRD485RG, DRD486RG,  
DRD430RGA,  
DRD450RGA,  
DRD485RGA, DRD435RH,  
DRD455RH, and  
DRD486RH

---

Samsung model SIR-S60W 01109

---

Samsung models SIR-S70, 01108  
SIR-S75, SIR-S300W, and  
SIR-S310W

---

Sony models (All models 01639  
except TiVo and Ultimate  
TV)

---

## **Setup Codes for DIRECTV HD Receivers**

DIRECTV all models 00001, 00002

---

Hitachi model 61HDX98B 00819

---

HNS models HIRD-E8, 01750  
HTL-HD

---

LG model LSS-3200A, 01750  
HTL-HD

---

Mitsubishi model SR-HD5 01749, 00749

---

Philips model DSHD800R 01749

---

Proscan model PSHD105 00392

---

RCA models DTC-100, 00392  
DTC-210

---

Samsung model SIR-TS360 01609

---

Samsung models SIR- 01276  
TS160

---

Sony models SAT-HD100, 01639  
200, 300

---

Toshiba models DST-3000, 01749, 01285  
DST-3100, DW65X91

---

Zenith models DTV1080, 01856  
HD-SAT520

---

### **Setup Codes for DIRECTV DVRs**

DIRECTV all models 00001, 00002

---

HNS models SD-DVR80, 01442  
SD-DV40, SD-DVR120,  
HDVR2, GXCEBOT,  
GXCEBOTD

---

Philips models DSR704, 01142, 01442  
DSR708, DSR6000,  
DSR600R, DRS700/17

---

RCA models DWD490RE, 01392  
DWD496RG

---

RCA models DVR39, 40, 80, 01442  
120

---

Sony model SAT-T60 00639

---

Sony model SAT-W60 01640

---

Samsung models SIR- 01442  
S4040R, SIR-S4080R, SIR-  
S4120R

---

# MANUFACTURER'S CODES

---

## Setup Codes for TVs

A-Mark	10003
Abex	10032
Admiral	1093, 10463
Advent	10761, 10783, 10815, 10817, 10842
Adventura	10046
Aiko	1092
Akai	10030, 10060, 10672, 10702, 10812
Alaron	10179
Albatron	10700, 10843
Ambassador	10177
America Action	10180
Ampro	10751
Anam	10180
Anam National	10055
AOC	10003, 10019, 10030, 10052, 10185
Apex Digital	10156, 10748, 10765, 10767, 10879
Archer	10003
Audiovox	10003, 1092, 10180, 10451, 10623, 10802, 10875, 11284
Aventura	10171
Belcor	10019
Bell & Howell	10016, 10154
BenQ	11032, 11315
Boxlight	10893
Bradford	10180
Brockwood	10019
Broksonic	10003, 10180, 10236, 10463
Cadia	11283
Candle	10030, 10046, 10056, 10186
Carnivale	10030
Carver	10054
CCE	10217
Celebrity	10000
Celera	10765
Changhong	10765

Citizen	10030, 10039, 10046, 10056, 10060, 1092, 10186, 10280
Clairtone	10185
Clarion	10180
Commercial Solutions	10047, 11447
Concerto	10056
Contec	10157, 10180, 10185
Craig	10180
Crosley	10054
Crown	10039, 10180
Curtis Mathes	10016, 10030, 10039, 10047, 10054, 10056, 10060, 1093, 1145, 10154, 10166, 10451, 10466, 10702, 11147, 11347
CXC	10180
Daewoo	10019, 10039, 1092, 10451, 10623, 10661, 10672, 11661
Daytron	10019
Dell	11080, 11178, 11264, 11454
Denon	1145, 10511
Denstar	10628
Dumont	10017, 10019
Durabrand	10003, 10171, 10178, 10180, 10463, 11034
Dwin	1093, 10720, 10774
Electroband	10000, 10185
Electrograph	11755
Electrohome	10381
Emerson	10019, 10038, 10039, 10154, 10171, 10177, 10178, 10179, 10180, 10185, 10236, 10280, 10282, 10451, 10463, 10623
Envision	10030, 10813
Epson	10833, 10840
ESA	10171, 10812
Fisher	10154, 10159
Fujitsu	10179, 10186, 10683, 10809, 10853
Funai	10171, 10179, 10180
Futuretech	10180
Gateway	11755, 11756

GE	10021, 10027, 10047, 10051, 10055, 1135, 10178, 10282, 10451, 11347, 11447
Gibralter	10017, 10019, 10030
Go Video	10886
GoldStar	10001, 10019, 10030, 10032, 10178
Goodmans	10360
Grundig	10683
Grunpy	10179, 10180
Haier	10768, 11034
Hallmark	10178
Hannspree	11348, 11351, 11352
Harley Davidson	10179
Harman/Kardon	10054
Harvard	10180
Havermy	1093
Helios	10865
Hello Kitty	10451
Hewlett Packard	11502
Hisense	10748
Hitachi	10016, 10032, 10038, 10056, 1145, 10151, 11145
HP	11502
Hyundai	10849
Infinity	10054
Inteq	10017
Janeil	10046
JBL	10054
JCB	10000
Jensen	10761, 10815, 10817
JVC	10053, 10731, 11253, 11352
Kaypani	10052
KEC	10180
Kenwood	10019, 10030
KLH	10765, 10767
Kloss	10024, 10046
Konka	10628, 10632, 10638, 10703, 10707
KTV	10030, 10039, 10180, 10185, 10217, 10280
LG	10178, 10442, 10700, 10856, 11178, 11265

Loewe	1136
Logik	10016
Luxman	10056
LXI	10047, 10054, 10154, 10156, 10178
Magnavox	10020, 10024, 10030, 10054, 1096, 10179, 10186, 10187, 10386, 10706, 10802, 11254, 11454
Majestic	10016
Marantz	10030, 10054, 10704, 10855, 11154, 11454
Matsushita	10250, 10650
Maxent	11755
Megapower	10700
Megatron	10003, 1145, 10178
MEI	10185
Memorex	10016, 1150, 10154, 10178, 10179, 10463
MGA	10019, 10030, 1150, 10178
Midland	10017, 10032, 10039, 10047, 10051, 1135
Minutz	10021
Mitsubishi	10019, 1093, 1150, 10178, 10836, 10868, 11250
Monivision	10700, 10843
Motorola	10055, 1093
MTC	10019, 10030, 10056, 10060, 10185
Multitech	10180, 10217
NAD	10156, 10178, 10866
NEC	10019, 10030, 10056, 10497, 10882, 11704
NetTV	11755
Nikko	10030, 1092, 10178
Norcent	10748, 10824
Noshi	10018
NTC	1092
Olevia	11331
Onwa	10180
Optimus	10154, 10166, 10250, 10650
Optoma	10887, 11348
Optonica	1093, 10165
Orion	10179, 10236, 10463, 11463

Panasonic	10051, 10055, 10250, 10650, 11410
Penney	10003, 10018, 10019, 10021, 10027, 10030, 10032, 10039, 10047, 10051, 10060, 1135, 10156, 10178, 11347
Philco	10019, 10020, 10030, 10054, 1096
Philips	10054, 10690, 11154, 11454
Pilot	10019, 10030, 10039
Pioneer	10038, 10166, 10679, 10866
Polaroid	10765, 10865, 11276, 11314, 11316, 11326, 11327, 11328
Portland	10019, 10039, 1092
Prima	10761, 10783, 10815, 10817
Princeton	10700, 10717
Prism	10051
Proscan	10047, 10466, 11347, 11447
Proton	10003, 10052, 10178, 10466
Pulsar	10017, 10019
Quasar	10051, 10055, 10165, 10250, 10650
RadioShack	10019, 10030, 10032, 10039, 10047, 10056, 10154, 10165, 10178, 10180
RCA	10018, 10019, 10038, 10047, 1090, 1135, 10679, 11047, 11147, 11247, 11347, 11447, 11547
Realistic	10019, 10030, 10032, 10039, 10056, 10154, 10165, 10178, 10180
Rhapsody	10185
Runco	10017, 10030, 10497, 10603
Sampo	10030, 10032, 10039, 10052, 11755
Samsung	10019, 10030, 10032, 10056, 10060, 10178, 10217, 10587, 10702, 10766, 10812, 10814, 11060, 11312
Samsux	10039
Sansui	10463
Sanyo	10088, 1146, 10154, 10159, 10799, 10893

Sceptre	11360
Scimitsu	10019
Scotch	10178
Scott	10019, 10178, 10179, 10180, 10236
Sears	10047, 10054, 10056, 1146, 10154, 10156, 10159, 10171, 10178, 10179
Seleco	11351
Sharp	10039, 1093, 10157, 10165, 10386, 10491, 10688, 10689, 10851
Sheng Chia	1093
Shogun	10019
Signature	10016
Simpson	10186, 10187
Sole	10813
Sony	10000, 10080, 1111, 10834, 11100
Soundesign	10178, 10179, 10180, 10186
Spectricon	10003
Squareview	10171
SSS	10019, 10180
Starlite	10180
Studio Experience	10843
Superscan	1093, 10864
Supre-Macy	10046
Supreme	10000
SVA	10587, 10748, 10768, 10865, 10870, 10871, 10872
Sylvania	10020, 10030, 10054, 1096, 10171, 10381
Symphonic	10171, 10180
Syntax	11331
Tandy	1093
Tatung	10003, 10055, 11285, 11756
Technics	10051, 10250
Technol Ace	10179
Techview	10847
Techwood	10003, 10051, 10056
Teknika	10016, 10019, 10039, 10054, 10056, 10060, 1092, 1150, 10179, 10180, 10186
Telefunken	10056, 10702

TMK	10056, 10177, 10178
TNCi	10017
Toshiba	10060, 10154, 10156, 10650, 10832, 10845, 11156, 11256, 11265, 11343, 11356, 11360, 11656, 11704
Tosonic	10185
Totevision	10039
Trical	10157
TVS	10463
Universal	10027
Vector Research	10030
Victor	10053
Vidikron	10054
Vidtech	10019, 10178
Viewsonic	10857, 10864, 10885, 11330, 11342, 11755
Viking	10046
Vizio	10864, 10885, 11756
Wards	10016, 10019, 10020, 10021, 10027, 10030, 10054, 10056, 10080, 1096, 1111, 10165, 10178, 10179, 10866, 11156
Waycon	10156
Westinghouse	10000, 10451, 10885, 10889, 11282
White Westinghouse	10463, 10623
Yamaha	10019, 10030, 10769, 10833, 10839
Zenith	10016, 10017, 1092, 10178, 10463, 11145, 11265
Zonda	10003

### **Setup Codes for VCRs**

ABS	21972
Admiral	20048, 20209, 20479
Adventura	20000
Aiko	20278
Aiwa	20000, 20037, 20124, 20307
Akai	20041, 20061, 20106, 20175
Alienware	21972
America Action	20278
American High	20035
Asha	20240

Audiovox	20037, 20278
Beaumark	20240
Bell & Howell	20104
Broksonic	20002, 20121, 20184, 20209, 20479, 21479
Calix	20037
Canon	20035
Carver	20081
CCE	20072, 20278
Citizen	20037, 20278, 21278
Colt	20072
Craig	20037, 20047, 20072, 20240
Curtis Mathes	20035, 20041, 20060, 20162, 21035
Cybernex	20240
CyberPower	21972
Daewoo	20045, 20278, 20561, 21278
Dell	21972
Denon	20042
DirecTV	20739
Durabrand	20038, 20039
Dynatech	20000
Electrohome	20037, 20043
Electrophonic	20037
Emerex	20032
Emerson	20000, 20002, 20037, 20043, 20061, 20121, 20184, 20209, 20212, 20278, 20479, 20561, 20593, 21278, 21479, 21593
Fisher	20047, 20104
Fuji	20033, 20035
Funai	20000, 20593, 21593
Garrard	20000
Gateway	21972
GE	20035, 20060, 20065, 20202, 20240, 20761, 20807, 21035, 21060
Go Video	20240, 20432, 20526
GoldStar	20037, 20038, 21237
Gradiente	20000
Harley Davidson	20000
Harman/Kardon	20038, 20075, 20081
Harwood	20072

Headquarter	20046
Hewlett Packard	21972
HI-Q	20047
Hitachi	20000, 20041, 20042, 20065, 20089, 20105
Howard Computers	21972
HP	21972
Hughes Network Systems	20042, 20739
Humax	20739
Hush	21972
iBUYPOWER	21972
Jensen	20041
JVC	20008, 20041, 20067
KEC	20037, 20278
Kenwood	20038, 20041, 20067
KLH	20072
Kodak	20035, 20037
LG	21037
Linksys	21972
Lloyd's	20000
Logik	20072
LXI	20037
Magnasonic	20593, 21278
Magnavox	20000, 20035, 20039, 20081, 20149, 20563, 20593, 21781
Magnin	20240
Marantz	20035, 20081
Marta	20037
Matsushita	20035, 20162
Media Center PC	21972
MEI	20035
Memorex	20000, 20035, 20037, 20039, 20046, 20047, 20048, 20104, 20162, 20209, 20240, 20307, 20479, 21037, 21237
MGA	20043, 20061, 20240
MGN Technology	20240
Microsoft	21972
Mind	21972
Minolta	20042, 20105
Mitsubishi	20043, 20061, 20067, 20075, 20173, 20807
Motorola	20035, 20048

MTC	20000, 20240
Multitech	20000, 20072
NEC	20038, 20040, 20041, 20067, 20104
Nikko	20037
Nikon	20034
Niveus Media	21972
Noblex	20240
Northgate	21972
Olympus	20035, 20226
Onkyo	20222
Optimus	20037, 20048, 20104, 20162, 20432, 20593, 21048, 21062
Orion	20002, 20184, 20209, 20479, 21479
Panasonic	20035, 20077, 20162, 20225, 20226, 20616, 21035, 21062
Penney	20035, 20037, 20038, 20040, 20042, 20240, 21035, 21237
Pentax	20042, 20065, 20105
Philco	20035
Philips	20035, 20081, 20618, 20739, 21081, 21181
Pilot	20037
Pioneer	20067
Polk Audio	20081
Presidian	21593
Profitronic	20240
Proscan	20060, 20202, 20761, 21060
Protec	20072
Pulsar	20039
Quarter	20046
Quartz	20046
Quasar	20035, 20077, 20162, 21035
RadioShack	20000, 21037
Radix	20037
Randex	20037
RCA	20042, 20060, 20065, 20077, 20105, 20106, 20149, 20202, 20240, 20761, 20807, 20880, 21035, 21060
Realistic	20000, 20035, 20037, 20046, 20047, 20048, 20104
ReplayTV	20614, 20616

Ricavision	21972
Ricoh	20034
Runco	20039
Salora	20075
Samsung	20045, 20240, 20739
Sanky	20039, 20048
Sansui	20000, 20041, 20067, 20209, 20479, 21479
Sanyo	20046, 20047, 20104, 20159, 20240
Scott	20043, 20045, 20121, 20184, 20210, 20212
Sears	20000, 20035, 20037, 20042, 20046, 20047, 20104, 20105, 21237
Sharp	20048, 20807, 20848
Shintom	20072
Shogun	20240
Singer	20072
Sonic Blue	20614, 20616
Sony	20000, 20032, 20033, 20034, 20035, 20636, 21032, 21232, 21972
Stack 9	21972
STS	20042
Sylvania	20000, 20035, 20043, 20081, 20593, 21593, 21781
Symphonic	20000, 20593, 21593
Systemax	21972
Tagar Systems	21972
Tatung	20041
Teac	20000, 20041
Technics	20035, 20162
Teknika	20000, 20035, 20037
Thomas	20000
Tivo	20618, 20636, 20739, 21996
TMK	20240
Toshiba	20043, 20045, 20209, 20210, 20212, 20366, 20845, 21008, 21145, 21972, 21996
Totevision	20037, 20240
Touch	21972
Unitech	20240
Vector	20045

Vector Research	20038, 20040
Video Concepts	20040, 20045, 20061
Videomagic	20037
Videosonic	20240
Viewsonic	21972
Villain	20000
Voodoo	21972
Wards	20000, 20035, 20042, 20047, 20048, 20060, 20072, 20081, 20149, 20212, 20240
White Westinghouse	20072, 20209
XR-1000	20000, 20035, 20072
Yamaha	20038
Zenith	20000, 20033, 20034, 20039, 20209, 20479, 21139, 21479
ZT Group	21972

### **Setup Codes for DVD Players**

Aiwa	20641
Akai	20695, 20770, 21089
Alco	20790
Allegro	20869
Amphion Media Works	20872
AMW	20872
Apex Digital	20672, 20717, 20755, 20794, 20796, 20797, 21004, 21020, 21056, 21061, 21100
Aspire Digital	21168, 21407
Audiovox	20790, 21041, 21072
Axion	21072
B & K	20655, 20662
Blaupunkt	20717
Blue Parade	20571
Broksonic	20695
California Audio Labs	20490
Cinea	20831
CineVision	20833, 20869, 20876
Citizen	21277
Coby	20778, 20852, 21086, 21107, 21177, 21351
Craig	20831
Curtis Mathes	21087
CyberHome	20816, 20874, 21023, 21024, 21117, 21129

Daewoo	20705, 20784, 20833, 20869, 21169, 21172, 21234, 21242
Daytek	20872
Denon	20490, 20634
Desay	21407
Disney	20675, 21270
Dual	21068, 21085
Durabrand	21127
DVD2000	20521
Emerson	20591, 20675, 20821
Enterprise	20591
Fisher	20670
Funai	20675, 21334
Gateway	21073, 21077, 21158
GE	20522, 20717, 20815
Go Video	20715, 20741, 20744, 20783, 20833, 20869, 21044, 21075, 21099, 21158, 21304, 21730
Go Vision	21072
GoldStar	20741
GPX	20699, 20769
Gradiente	20490
Greenhill	20717
Grundig	20539
Harman/Kardon	20582, 20702
Hitachi	20573, 20664
Hiteker	20672
iLo	21348
Initial	20717
Integra	20571, 20627
Jaton	21078
JBL	20702
JSI	21423
JVC	20558, 20623, 20867, 21164
jWin	21049, 21051
Kawasaki	20790
Kenwood	20490, 20534
KLH	20717, 20790, 21020, 21149
Konka	20711
Koss	20651, 21423
Landel	20826
Lasonic	20798, 21173

Lecson	21533
Lenoxx	21127
LG	20591, 20741, 20801, 20869
LiteOn	21058, 21158, 21416, 21440
Loewe	20511
Magnavox	20503, 20539, 20646, 20675, 20821
Malata	20782, 21159
Marantz	20539
McIntosh	21533
Memorex	20695, 20831, 21270
Microsoft	20522
Mintek	20717, 20839
Mitsubishi	20521, 21521
Momitsu	21082
NAD	20591, 20692, 20741
NEC	20785
Nesa	20717
Next Base	20826
NexxTech	21402
Norcent	20872, 21003, 21107, 21265
Onkyo	20503, 20627, 20792
Oritron	20651
Panasonic	20490, 20503, 20703, 21362, 21462, 21490, 21762
Philips	20503, 20539, 20646, 20675, 21267, 21354
PianoDisc	21024
Pioneer	20525, 20571, 20631
Polaroid	21020, 21061, 21086
Polk Audio	20539
Portland	20770
Presidian	20675
Proceed	20672
Proscan	20522
ProVision	20778
Qwestar	20651
RCA	20522, 20571, 20717, 20790, 20822
Rio	20869
RJTech	21360
Rotel	20623
Rowa	20823

Sampo	20698, 20752
Samsung	20490, 20573, 20744, 20820, 21044, 21075
Sansui	20695
Sanyo	20670, 20695, 20873
Sensory Science	21158
Sharp	20630, 20675, 20752, 21256
Sharper Image	21117
Sherwood	20633, 20770, 21043, 21077
Shinsonic	20533, 20839
Sonic Blue	20869, 21099
Sony	20533, 20864, 21033, 21431, 21533
Sungale	21074
Superscan	20821
SVA	20860, 21105
Sylvania	20675, 20821
Symphonic	20675
Teac	20790, 20809
Technics	20490, 20703
Technosonic	20730
Techwood	20692
Theta Digital	20571
Toshiba	20503, 20695, 21154
Tredex	20800, 20803, 20804
Urban Concepts	20503
US Logic	20839
Venturer	20790
Vizio	21064, 21226
Xbox	20522
Yamaha	20490, 20539, 20545
Yamakawa	20872
Zenith	20503, 20591, 20741, 20869
Zoece	21265

### **Setup Codes for Audio Amplifiers/Tuners**

ADC	30531
Adcom	30616
Aiwa	30121, 30189, 31243, 31388, 31405, 31641
Akai	30224, 31255, 31512
Alco	31390
AMC	31077

Amphion Media Works	31563, 31615
AMW	31563, 31615
Anam	31074, 31609
Apex Digital	31257, 31430, 31774
Arcam	31189
Audiotronic	31189
Audiovox	31390, 31627
B & K	30701, 30820, 30840
BK	30702
Bose	30639, 31229, 31253, 31933
Brix	31602
Cambridge Soundworks	31370
Capetronic	30531
Carver	30008, 30121, 30189, 30360, 31189, 31289
Classic	31352
Coby	31389
Criterion	31420
Daewoo	31250
Delphi	31414
Denon	30121, 30273, 30771, 31142, 31360
Emerson	30424
Fisher	30219, 30360, 31801
Garrard	30424
Gateway	31517, 31567
Go Video	31532
Harman/Kardon	30110, 30189, 30891, 31289, 31304, 31306
Hitachi	31273, 31801
Initial	31426
Inkel	30062
Integra	30135, 31298, 31320
JBL	30110, 31306
JVC	30074, 31058, 31374, 31495, 31811
Kenwood	30077, 30186, 31313, 31569, 31570
KLH	31390, 31412, 31428
Koss	30424, 31366, 31497
Lasonic	31798
Lenoxx	31437
Lexicon	31076

LG	31293
Linn	30189
Liquid Video	31497
Magnavox	30128, 30189, 30531, 31189, 31269, 31514
Marantz	30039, 30128, 30189, 31189, 31269, 31289
McIntosh	31289
MCS	30039, 30346
Micromega	31189
Mitsubishi	31393
Myryad	31189
Nakamichi	30347, 31313
NEC	30235
Norcent	31389
Nova	31389
Onkyo	30135, 30380, 30842, 31298, 31320, 31531
Optimus	30177, 30186, 30219, 30531, 30670, 31023, 31074
Oritron	31366, 31497
Panasonic	30039, 30309, 31288, 31308, 31316, 31350, 31363, 31518, 31548, 31633, 31763, 31764
Philips	30189, 31189, 31266, 31269
Pioneer	30014, 30150, 30531, 30630, 31023, 31384
Polaroid	31508
Polk Audio	30189, 31289, 31414
Proscan	31254
Quasar	30039
RCA	30346, 30360, 30530, 30531, 31023, 31074, 31254, 31390, 31511, 31609
Realistic	30163
Regent	31437
Rio	31869
Saba	31519
Samsung	31295, 31304, 31500
Sansui	30189, 30346, 31189
Sanyo	30219, 31469, 31801
Scott	30163, 30322

Sharp	30186
Sharper Image	31556
Sherwood	30062, 31077, 31423, 31517, 31567, 31653
Shinsonic	31426
Sirius	31602, 31627, 31811
Sonic Blue	31532, 31869
Sony	30168, 31058, 31258, 31406, 31441, 31558, 31622, 31658, 31758, 31759, 31858
Soundesign	30670
Stereophonics	31023
Sunfire	31313
Teac	30163, 31074, 31267, 31390, 31528
Technics	30039, 30208, 30309, 31308, 31518, 31633
Thorens	31189
Toshiba	30135
Venturer	31390
Victor	30074
Wards	30014, 30189
XM	31406, 31414
Yamaha	30176, 30186, 31176, 31276, 31331, 31375
Zenith	31293

### **Setup Codes for Audio Amplifiers**

Adcom	30577, 31100
AudioSource	30011
Bose	30674
Carver	30892
Durabrand	31561
Elan	30647
GE	30078
Harman/Kardon	30892
JVC	30331
Kenwood	30356
Left Coast	30892
Lenoxx	31561
Luxman	30165
Marantz	30321, 30892
McIntosh	30251
Nakamichi	30321

NEC	30264
Optimus	30395, 30823
Parasound	30246
Philips	30892
Pioneer	30823
Polk Audio	30892
RCA	30823
Realistic	30395
Sansui	30321
Shure	30264
Sony	30689, 30815, 31126
Soundesign	30078, 30211
Victor	30331
Wards	30078, 30211
Yamaha	30133, 30143, 30354, 30504

