

**OLD FASHIONED LEMONADE JUICE
STAND™**

Model # LJS-402



FOR HOUSEHOLD USE ONLY

**READ THESE INSTRUCTIONS BEFORE
USING THIS UNIT!**

SAVE THESE INSTRUCTIONS!

IMPORTANT PRECAUTIONS

Appliance Specifications:

25 Watts
120 Volts, 60 Hz

Important Precautions to Remember:

- A. NEVER immerse the OLD FASHIONED LEMONADE JUICE STAND™ base or cord in water.
- B. NEVER leave unit unattended if used near children.
- C. NEVER use a scouring pad on the OLD FASHIONED LEMONADE JUICE STAND.™
- D. NEVER use an abrasive sponge or harsh cleaning products on the OLD FASHIONED LEMONADE JUICE STAND.™
- E. NEVER use for anything other than what this item was intended.
- F. Avoid contact with moving parts.
- G. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
- H. DO NOT place motor base in dishwasher.
- I. Keep out of reach of children.
- J. Unplug the OLD FASHIONED LEMONADE JUICE STAND™ from electrical outlet when not in use and before cleaning.
- K. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.

IMPORTANT SAFEGUARDS

Motor base and stem

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS before operating this OLD FASHIONED LEMONADE JUICE STAND™.

- Do not use outdoors, FOR HOUSEHOLD USE ONLY.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- To protect against electrical shock, do not immerse cord, plugs or unit in water.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged. Return appliance to the nearest authorized service facility for examination or repairs.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.


IMPORTANT SAFEGUARDS (Continued)

- The cord should be arranged so that it will not drape over the table or counter top in such a way where it can be pulled on by children. This should also reduce the risk resulting from becoming entangled or tripping.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Before plugging your unit into the main electrical supply, make sure the voltage corresponds to that indicated on the maker's nameplate.
- Extreme caution must be used when moving the OLD FASHIONED LEMONADE JUICE STAND™ with liquids.
- Do not use this appliance for other than intended use.
- This appliance is NOT A TOY.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with this appliance.

PRE-USE PREPARATION

Prepare for first use by thoroughly washing the clear juice mixing box, adjustable strainer basket, mixing paddle, spigot and washer, and clear cover in warm sudsy water and thoroughly dry. DO NOT put the motor base in water. Use a clean soft dry towel to dry.

PARTS BREAKDOWN

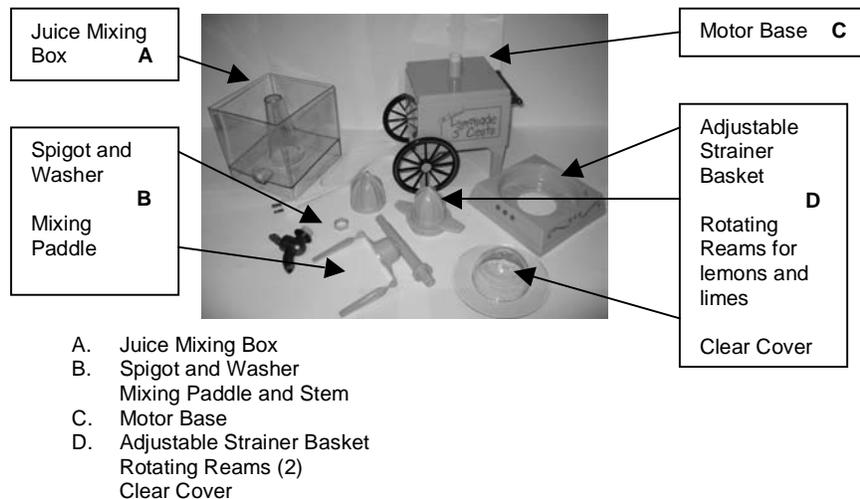

ASSEMBLY

1. Place the paddle stem on the motor base stem. Place the clear juice mixing box over the paddle stem and onto the motor base cart, positioning the spigot hole to the back (wheel side of the cart).
2. Note the clear juice mixing box has a molded interior design to accept the motor base stem (like a sleeve). When properly placed, the juice mixing box should sit nicely on the base. Lock the mixing box down by locating the locking notches at the bottom edge of the box on three sides and snap into place. The motor base stem will protrude out the top of the juice mixing box.
3. Insert the threaded side of the spigot into the receptor hole in the clear juice mixing box and hold the spigot in place with one hand. Locate the open threaded side of the washer and by placing your other hand down into the clear juice mixing box, screw the washer onto the spigot. (See Illustration A below)



A



B

4. Insert the mixing paddle over the protruding motor base stem with the paddles hanging in the down position inside the mixing box.
5. Fit the rotating reams with the adjustable strainer basket over the motor base stem and set securely onto the clear juice mixing box. Top with the clear cover and you are ready to use or store until ready to use.

SPECIAL FEATURES

- Your OLD FASHIONED LEMONADE JUICE STAND™ includes reams in two sizes. The top, larger ream is for lemons or small oranges, and is removable by holding down the adjustable strainer basket with your first finger and thumb of one hand and lifting up with your other hand. The permanently attached bottom reamer is for limes.
- Your clear juice mixing box will hold 6 cups (48 ounces) of liquid.
- Your OLD FASHIONED LEMONADE JUICE STAND™ has an adjustable pulp level control located on the top of the strainer basket (see Illustration B above). The levels are shown in graduated circles. Reading Left to Right, by selecting the larger circle, you will get more pulp in your juice. By adjusting the lever to the smaller circle, you would get a minimal amount of pulp – perhaps none.
- The strainer basket will trap the pulp and seeds from the juice.
- Clear serving cover provided for easy pouring and serves as a dust cover for storing.

OPERATING YOUR CITRUS JUICER PITCHER™

Now that you have assembled your OLD FASHIONED LEMONADE JUICE STAND™, making fresh lemonade or other healthy fresh citrus drinks is easy and fun.

Cut your citrus in half, placing one half over the reamer and gently press down. The motor will activate and the juicer will spin clockwise as it extracts the juice from the fruit. Hold the fruit covered reamer down for no longer than 3 to 5 seconds. When you release pressure, the unit stops. Give the unit another 5 seconds rest then press down again, the reamer will reverse to a counter clockwise spin extracting the juice and cleaning the pulp from the fruit.

The pulp will fall into the basket and the seeds will be trapped as you extract the juice from the citrus half. Continue to place your cut fruit halves on the reamer to extract juice, repeating the process until you have the desired amount of juice in the pitcher.

Basic Lemonade Recipe: (Serves 8)

12 Lemons

1 1/4 Cup Sugar

1 1/2 Cup Boiling Water (Combine the sugar and water and bring to a slow boil on stovetop until the sugar dissolves. Chill.)

Add 4 Cups of Ice Cold Water and mix well.

Add lemon slices for garnish and serve.

ENJOY! Experiment with lemons and limes and by adding other flavored juices to your freshly made citrus juice.

CLEANING

For Cleaning your OLD FASHIONED LEMONADE JUICE STAND™, follow the simple directions in the PRE-USE PREPARATIONS on Page 2.

- After using your OLD FASHIONED LEMONADE JUICE STAND™, disconnect from electrical outlet. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit

NOTE: Hand washing your OLD FASHIONED LEMONADE JUICE STAND™ is recommended to preserve the finish.

Easy as 1 -2 -3! Easy to use, easy to clean, and easy to store!



RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

OLD FASHIONED LEMONADE JUICE STAND™

Model # LJS-402
Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to Nostalgia Products Group, LLC at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Visit Us Online at
www.nostalgielectrics.com

©2009 Nostalgia Products Group LLC

Rev. 6/18/09
