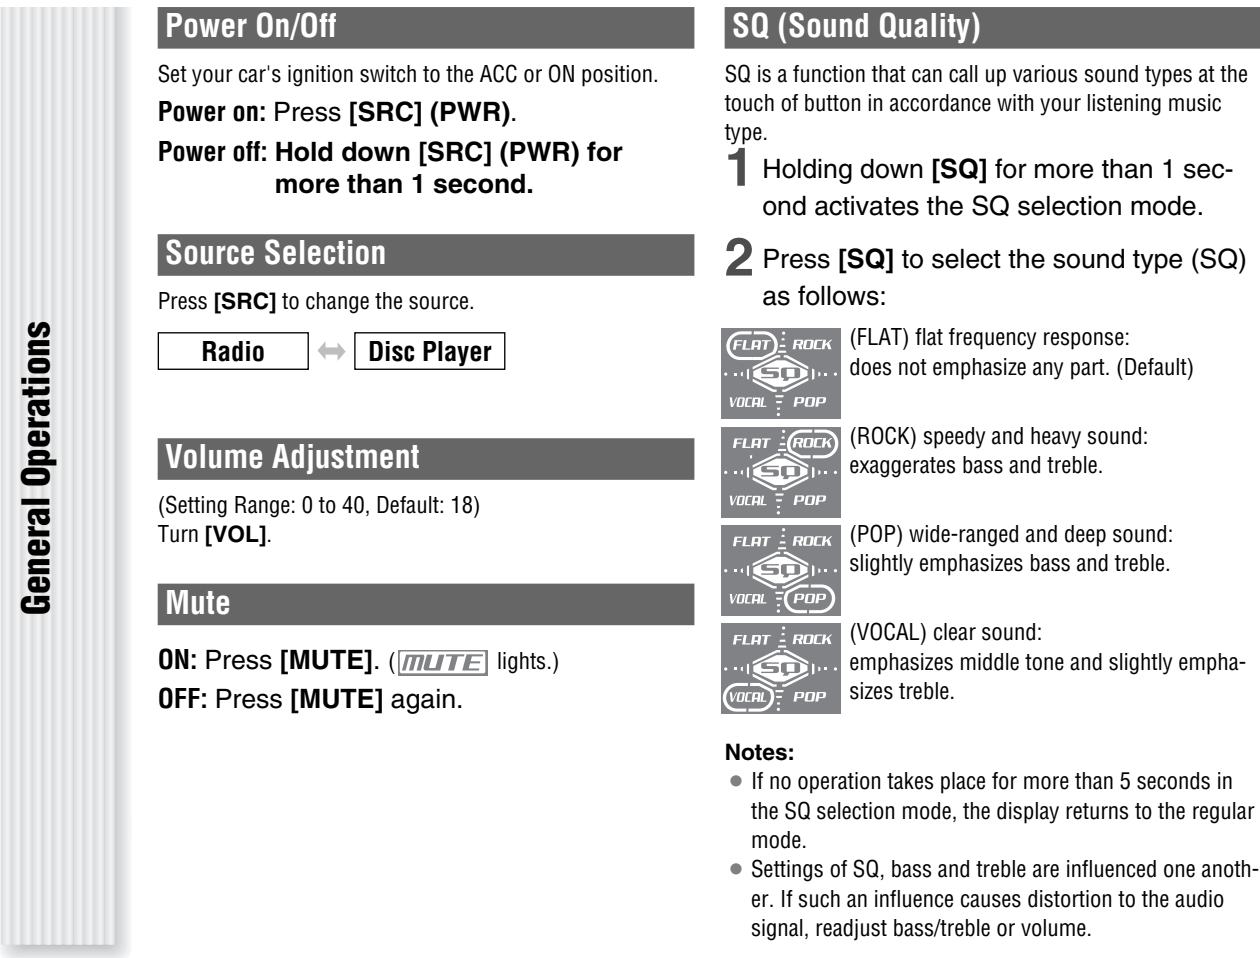






## General



## Troubleshooting

**If You Suspect Something Wrong**



 
Check and take steps as described below.

 
 

If the described suggestions do not solve the problem, it is recommended to take the unit to your nearest authorized Panasonic Service Centre. The product should be serviced only by qualified personnel.

Please refer the checking and the repair to the nearest Panasonic dealer. Panasonic shall not be liable for any accidents arising out of neglect of checking the unit or your own repair after your checking.

**⚠ Warning**

- Do not use the unit in an irregular condition, for example, without sound, or with smoke or a foul smell, which can cause ignition or electric shock. Immediately stop using the unit and consult your dealer.
- Never try to repair the unit by yourself because it is dangerous to do so.

Trouble	Check point	Trouble	Check point
<b>Common</b>		<b>Radio</b>	
<b>No power</b>	<ul style="list-style-type: none"> <li>● Start the engine. (Or turn the ignition switch to the ACC position.)</li> <li>● Verify the wiring. (battery lead, power lead, ground lead, etc.)</li> <li>● Fuse blown (Contact the nearest Panasonic Service Centre.)</li> <li>● Ask a professional for fuse replacement.</li> <li>● Be sure to use the same rated fuse.</li> </ul>	<b>Frequent noise</b>	<ul style="list-style-type: none"> <li>● Tune in to another station of high-intensity waves.</li> <li>● Make sure that the antenna mounted point is grounded properly.</li> </ul>
<b>No sound</b>	<ul style="list-style-type: none"> <li>● Disable the mute function.</li> <li>● Verify the wiring.</li> <li>● Wait until the dew disappears before turning on the unit.</li> </ul>	<b>Preset data deleted</b>	<ul style="list-style-type: none"> <li>● The preset memory is cleared to return to the original factory setting when the power connector or battery is disconnected.</li> </ul>
<b>Noise</b>	<ul style="list-style-type: none"> <li>● Make sure that grounding is established properly.</li> </ul>	<b>Error Display Messages</b>	
<b>No sound from left, right, front, or rear speaker</b>	<ul style="list-style-type: none"> <li>● Adjust the balance and fader.</li> <li>● Verify the wiring.</li> </ul>		(The disc is ejected automatically.) The disc is dirty, or is upside down. ● Check the disc.
<b>Left and right sounds are reversed</b>	<ul style="list-style-type: none"> <li>● Connect the speaker lead correctly.</li> </ul>		(The disc is ejected automatically.) The disc has scratches. ● Check the disc.
			No operation by some cause. ● If normal operation is not restored, con-

Disc Player			
<b>No sound, or disc is automatically ejected</b>	<ul style="list-style-type: none"> <li>● Load the disc correctly.</li> <li>● Clean the disc.</li> </ul>		<p>Cannot read the file</p> <ul style="list-style-type: none"> <li>● Check the file.</li> </ul>
<b>Sound skip, poor sound quality</b>	<ul style="list-style-type: none"> <li>● Clean the disc.</li> </ul>		
<b>Sound skip due to vibration</b>	<ul style="list-style-type: none"> <li>● The maximum permissible tilt angle is 30°.</li> <li>● Secure the unit.</li> </ul>		<ul style="list-style-type: none"> <li>● A WMA file can be copyrighted.</li> <li>● The file protected by copyright is not playable.</li> </ul>
<b>Disc not ejectable</b>	<ul style="list-style-type: none"> <li>● Press . If the disc is still not ejected, contact the nearest Panasonic Service Centre.</li> </ul>		

## Radio (AM [LW/MW]/FM)

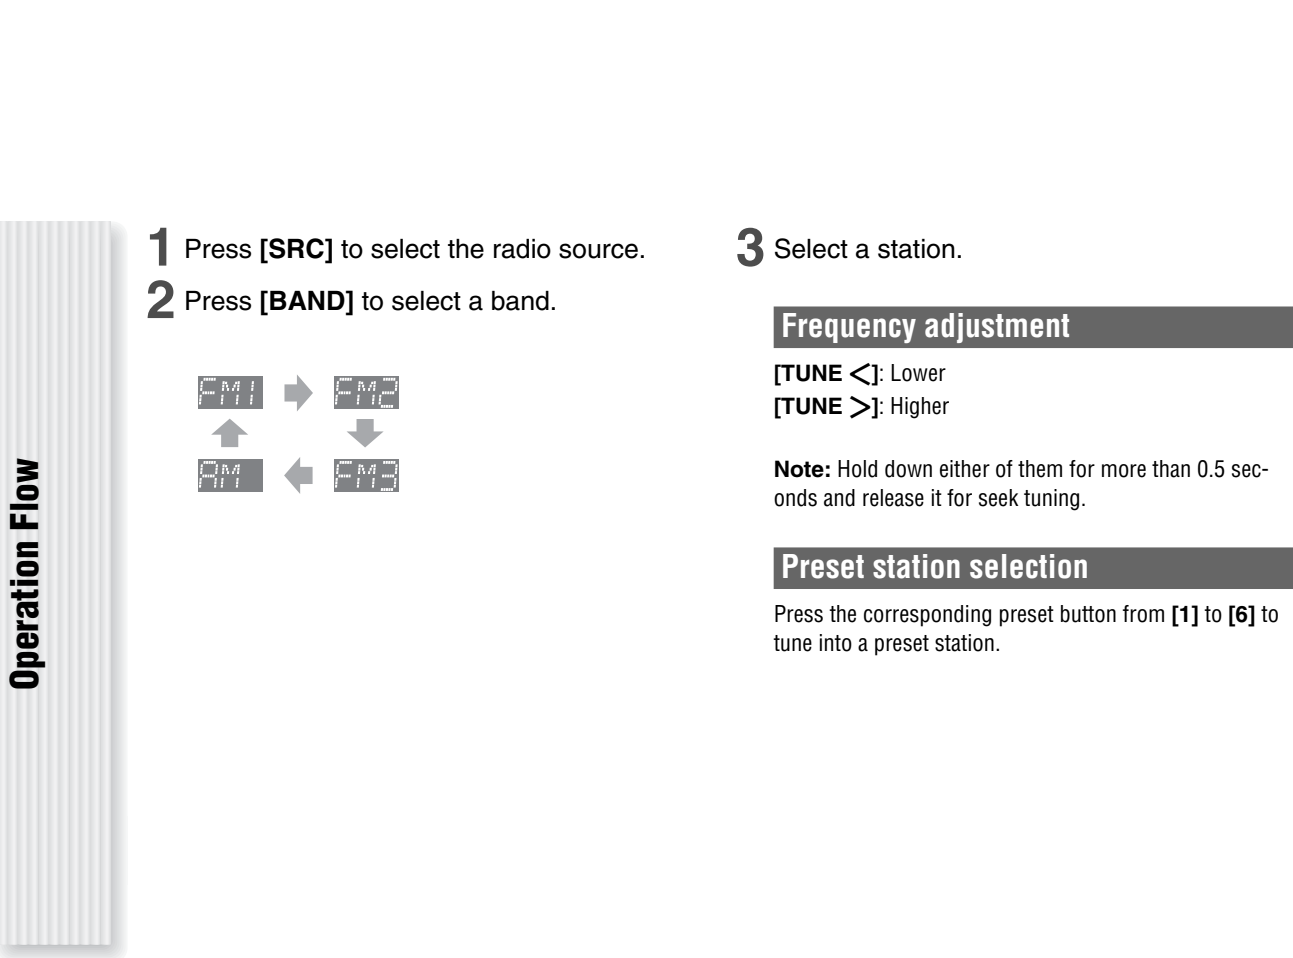 
**[BAND]**  
selects a band in the radio source.  
**[APM]** (Auto Preset Memory)  
executes APM in the radio source. (Hold it down for more than 2 seconds.)

**[SRC]** (Source)  
selects a source.

**[1] to [6]**  
selects a preset station in the radio source, and presets the current station. (Hold it down for more than 2 seconds.)

**[DISP]** (Display)  
switches the information on the display.

**[TUNE <] [TUNE >]**  
down/up the frequency. (Hold it down for more than 0.5 seconds and release it for seek tuning.)



## Radio Data System (RDS) in FM Broadcasting

Useful functions such as **AF, TA, PTY** are available in the RDS (Radio Data System) -ready areas.

Some FM stations are broadcasting additional data compatible with RDS. This radio set offers convenient functions using such data.

RDS service availability varies with areas. Please understand if RDS service is not available in your area, the following service is not available, either.

The following functions are available when receiving RDS

Setting to TA on with the unit in another mode, it will automatically switch to radio mode and output the traffic announcement when the traffic announcement begins. The traffic announcement having finished, the unit will return to the previous mode. (TA Standby Mode)

**PTY (Programme Type)**

The following functions are available when the PTY mode is

- **AF (Alternative Frequency)**  
The following functions are available when the AF mode is active (**AF** lights).
  - When receiving conditions become bad, a station with better receiving conditions is automatically tuned in to.
  - When executing APM, only RDS stations are selected.
  - When calling up a preset station, a best receiving station is selected automatically. (**BSR** Best Stations Research)
- **Notes:**
  - The AF sensitivity can be adjusted.
  - The AF available range can be adjusted. (⇒ "Function Settings")
- **TA (Traffic Announcement)**  
The following functions are available when the TA mode is active (**TA** lights).
  - A TP station is automatically searched for and received at the instant of toggling the TA mode on if you are receiving a non-TP station or TP station with poor reception.
  - When executing station search or APM, only TP stations are selected.
- **PTY (Program Type)**  
The PTY of the receiving station appears.
  - Programs can be searched for by PTY.
- **Note:** PTY language can be selected. (⇒ "Function Settings")
- **Other functions of RDS**
- **CT (Clock Time)**  
The clock is automatically adjusted.
- **PS (Programme Service Name)**  
As well as the frequency, the name of the broadcast station appears.
- **EON (Enhanced Other Network)** **[EON]**  
RDS information is updated constantly in response to the current position.
- **EON-TA**  
Traffic information from the current and other network stations can be received.
- **Emergency Announcement Reception**  
Emergency announcement automatically appears on the display when it is received.

**AF Level**

Hold down **[TA] (AF)** for more than 2 seconds to select **AF** level.

**AF1 ON**

- Low level AF operating sensitivity. (Default)

**AF2 ON**

- High level AF operating sensitivity.

**AF OFF**

When the AF network of an RDS station is not required.

**PI Seek (Programme Identification Seek)**

If reception becomes poor when tuning in a preset station, press the same preset number button. The same station with better reception will be searched for. Press same preset number button again to cancel.

**PI SEEK**

**Note:** For PI Seek, cancel the TA mode first, then execute PI Seek.

[illegible]

## Manual station preset

Up to 6 stations can be preset in AM (LW/MW), FM1, FM2, and FM3 respectively.

Preset stations can be simply called up by pressing one of the preset buttons from [1] to [6].


### Auto Preset Memory (APM)

With this operation, stations with good receiving conditions can be automatically stored in the preset memory.

- 1 Select a band.
- 2 Hold down [BAND] (APM) for more than 2 seconds.

The preset stations under best receiving conditions are received for 5 seconds each after presetting the stations (SCAN). To stop scanning, press one of the buttons from [1] to [6].

**Note:** New stations overwrite existing saved stations.



(blinks once)

**Note:** New stations overwrite existing saved stations.

<p><b>TA On/Off</b></p> <p>Pressing <b>[TA]</b> toggles TA on and off.</p>	<p><b>Traffic Information Only (TA Mute)</b></p> <p>For listening to only traffic information, activate TA and set the volume to 0 in FM mode.</p> <p>Once traffic information starts, the volume changes to the TA volume. (⇒ "Audio Settings")</p>
--	--

### Programme Search by PTY

Programs can be searched for by use of PTY that has been originally preset.

Press **[1]** to **[6]** to select PTY in the PTY mode.

Programme Type	Contents
1 NEWS	NEWS
2 SPEECH	AFFAIRS, INFO, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, WEATHER, FINANCE, CHILDREN, SOCIAL, LEISURE, PHONE IN, TRAVEL, LEISURE, DOCUMENT
3 SPORT	SPORT
4 POP M	POP M
5 CLASSICS	CLASSICS
6 MUSIC	ROCK M, EASY M, LIGHT M, OTHER M, JAZZ, COUNTRY,

### Detailed PTY Selection

Press **[<]** or **[>]** to select PTY.

→ SPEECH → MUSIC → NEWS → AFFAIRS →  
 INFO → SPORT → EDUCATE → DRAMA →  
 CULTURE → SCIENCE → VARIED → POP M →  
 ROCK M → EASY M → LIGHT M → CLASSICS →  
 OTHER M → WEATHER → FINANCE → CHILDREN →  
 SOCIAL → RELIGION → PHONE IN → TRAVEL →  
 LEISURE → COUNTRY → NATION M →  
 OLDSIES → FOLK M → DOCUMENT

### 2 Press **[BAND]**.

Search starts.

**Notes:**

- To stop searching, press **[BAND]** **(SET)**.
- When there is no corresponding programme type station, "NONE" is displayed.

**PT**

Another station in the same PTY is searched for by pressing [BAND].

**Notes:**

- When there is no corresponding programme type station, "NONE" is displayed.
- A desired PTY appears for 5 seconds.
- Preset contents are changeable.

**2** Follow the procedure of ordinary presetting.  
(⇒ "Station Preset" in "Radio (AM [LW/MW]/FM)")

## Disc Player

**Disc slot**  
Inserts a disc in with the printed side facing up.

**Notes:**

- ▶ The power will be turned on automatically when a disc is loaded at ACC ON.
- ▶ A disc which has both CD-DA data and MP3/WMA data on it may not be reproduced normally.

**[II / ►] (Pause/Play)**  
Toggles pause/play in the player source.

**[SRC] (Source)**  
Selects a source.

**[DISC] indicator**  
(RANDOM/SCAN/REPEAT)  
toggles on/off each play mode.  
(SCROLL)  
scrolls the information on display.

**[◀] [▶] (Eject)**  
ejects the disc.

**[DISP] (Display)**  
switches the information on the display.

**[◀] [▶] (Eject)**  
skip to the previous/next folder.

**Caution**

- Do not insert a disc when the **[DISC]** indicator lights.
- Refer to the section of "Notes on Discs" and "Notes on MP3/WMA".
- This unit does not support 8 cm discs.
- If you insert an 8 cm disc and cannot eject it, turn ACC of your car off once and turn it on again, then press **[▶] (Eject)**.
- Do not insert foreign objects into the disc slot.

**1** Press [SRC] to select the Disc Player source.

**2** Select a desired portion.

**Track/file selection**

Press [◀◀] / [▶▶].

**Note:** To perform fast forward/reverse, hold down either of them.

**Disc Player (CD-DA disc):**  
Previous/next track

**Disc Player (MP3/WMA disc):**  
Previous/next file

**Folder selection (MP3/WMA)**

Press [V] / [Λ].

**Pause**

Press [BAND] (II / ▶).  
Press again to cancel.

## Audio Settings

**[VOL.] (Volume)**  
selects a value in the audio menu.

**[PUSH SEL]** (Push to select)  
selects items in the audio menu.

The diagram shows a Panasonic car stereo unit. A line points from the text "[VOL.] (Volume)" to the "VOL" button on the left side of the unit. Another line points from the text "[DISP] (Display)" to the central digital display, which shows "VOL 18".

**[DISP] (Display)**  
exits from the audio menu.

**1** Press **[VOL]** (**PUSH SEL**) to display the audio menu display.

**Note:** If no operation takes place for more than 7 seconds in the audio menu (2 seconds in Main volume adjustment), the display returns to the regular mode.

**2** Press **[VOL]** (**PUSH SEL**) to select a mode to be adjusted.

**3** Turn **[VOL]** clockwise or counterclockwise to adjust.

**VOL 18** **Volume**  
(Setting Range: 0 to 40, Default: 18)

**BASS**  
(Setting Range: -12 dB to +12 dB by 2 dB, Default: 0 dB)

**TREBLE** **Treble**  
(Setting Range: -12 dB to +12 dB by 2 dB, Default: 0 dB)

**BALANCE** **Balance**  
(Setting Range: 15 levels each, Default CNT (centre))

**FADER** **Fader**  
(Setting Range: 15 levels each, Default CNT (centre))

**EXT MUTE** **External Mute**  
Allows you to mute the current source while Panasonic navigation system provides voice guidance or car telephone conversation is in progress.  
(Setting Range: 0 (no sound), 1 (decrease 15 steps), 2 (decrease 10 steps) and OFF (unchanged), Default: 0)

**TA VOL 40** **TA Volume Set**  
(Setting Range: 1 to 40, Default: 18)

**VOL 18**  
①: Up  
②: Down

**BASS +6dB**  
①: Increased  
②: Decreased

**TRE +6dB**  
①: Increased  
②: Decreased

**BAL L15**  
①: Right enhanced  
②: Left enhanced

**FAD F15**  
①: Front enhanced  
②: Rear enhanced

**EXT MUTE 1/0**  
①: Increased  
②: Decreased

**TA VOL 40**  
①: Increased  
②: Decreased

**CD-DA mode display**

Track number      Play time

Play Mode indicators

**MP3/WMA mode display**

lights when folder/normal/repeat/scan is on.

Folder number      File number

Play Mode indicators

**Display change**

Press [DISP] to change the display.

**Disc Player (CD-DA disc): Disc Player (MP3/WMA disc):**

Normal      Disc title      Normal      Play time

Track title      Folder name/ Album"

Clock      File name/ Title, artist"

\*ID3/WMA Tag On/Off

Hold down [3] for more than 2 seconds.

album title and song title/ artist name are displayed.

(Default)

folder name/file name is displayed.

**Notes:**


- For scrolling text, press [3] (SCROLL).
- "NO TEXT" is displayed when there is no information on the disc.

<p><b>Random play</b></p> <p>All the available songs (tracks/files) are played in a random sequence.</p> <p>Press <b>[4] (RANDOM)</b>.</p> <p>Press again to cancel.</p>	<p><b>Folder repeat play (MP3/WMA)</b></p> <p>The current folder is repeated.</p> <p>Hold down <b>[6] (REPEAT)</b> for more than 2 seconds.</p> <p>Hold down again to cancel.</p>
<p><b>Folder random play (MP3/WMA)</b></p> <p>All the available files in current folder are played in a random sequence.</p> <p>Hold down <b>[4] (RANDOM)</b> for more than 2 seconds.</p> <p>Hold down again to cancel.</p>	<p><b>Scan play</b></p> <p>The first 10 seconds of each songs (tracks/files) is played in sequence.</p> <p>Press <b>[5] (SCAN)</b>.</p> <p>Press again to cancel.</p>
<p><b>Repeat play</b></p> <p>The current song (track/file) is repeated.</p> <p>Press <b>[6] (REPEAT)</b>.</p> <p>Press again to cancel.</p>	<p><b>Folder scan play (MP3/WMA)</b></p> <p>From the next folder, the first 10 seconds of the first file on each folder is played in sequence.</p> <p>Hold down <b>[5] (SCAN)</b> for more than 2 seconds.</p> <p>Hold down again to cancel.</p>

## Function Settings

**[VOL]** selects a value in the function menu.

**[PUSH SEL]** (Push to select) selects items in the function menu.



The diagram shows a front view of a car stereo unit. A line from the text "[VOL]" points to the large volume knob on the left side of the unit. Another line from the text "[DISP]" points to a small button located on the right side of the unit, below the display screen.

**[DISP]** (Display) exits from the function menu.

**2** Press **[VOL] (PUSH SEL)** to select a mode to be adjusted.

<b>FM MONO</b>	<b>FM Monaural</b> <b>[FM]</b>
Noise is significantly decreased when weak signals are received from an FM broadcast station. (Default: OFF)	
<b>FM LOCAL</b>	<b>FM Local</b> <b>[FM]</b>
Only stations with good reception are detected in seek tuning. (Default: OFF)	
<b>AM LOCAL</b>	<b>AM Local</b> <b>[AM]</b>
Only stations with good reception are detected in seek tuning. (Default: OFF)	
<b>ACC SET</b>	<b>ACC Selection</b>
(Default: OFF) (⇒ "Preparation")	
<b>REGION</b>	<b>Region</b> <b>[RDS]</b>
(Default: OFF) <b>Note:</b> When the Region mode is switched from OFF to ON or vice versa, the AF mode turns on automatically.	
<b>PTY LANGS</b>	<b>PTY Language</b> <b>[RDS]</b>
(Default: ENGLISH)	

**3** Turn **[VOL]** clockwise or counterclockwise to adjust.

<b>MONO OFF</b>	<b>MONO OFF</b>
↓	
<b>MONO ON</b>	<b>MONO ON</b> ( <i>MONO</i> lights.)
<b>LOC OFF</b>	<b>LOCAL OFF</b>
↓	
<b>LOC ON</b>	<b>LOCAL ON</b> ( <i>LOCAL</i> lights.)
<b>LOC OFF</b>	<b>LOCAL OFF</b>
↓	
<b>LOC ON</b>	<b>LOCAL ON</b> ( <i>LOCAL</i> lights.)
<b>ACC OFF</b>	Set to OFF if your car has no ACC position.
↓	
<b>ACC ON</b>	Set to ON if your car has an ACC position.
<b>REG OFF</b>	The frequency is changed also for programs outside the region.
↓	
<b>REG ON</b>	The frequency is changed only for programs within the region.
<b>ENGLISH</b>	English
↓	
<b>SVENSKA</b>	Swedish