



16 In. Oscillating Stand Fan with Multi-Color Display

OWNER'S MANUAL
Model # FS1-40R-41



PLEASE READ AND SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

WARNINGS	3
TECHNICAL SPECIFICATIONS	4
PRODUCT DIAGRAM	5
ASSEMBLY INSTRUCTIONS	6
Base Assembly	6
Fan Head Assembly.....	6
OPERATING INSTRUCTIONS.....	7
Using Fan Controls	7
Adjusting Height and Fan Head Tilt.....	7
CLEANING/MAINTENENCE	8
Fan Blade Cleaning.....	8
OVERHEAT PROTECTION.....	8
REMOTE CONTROL	8
STORAGE	8
WARRANTY	9

16 IN. OSCILLATING STAND FAN with MULTI-COLOR DISPLAY

Thank you for choosing a Soleus Air fan. This owner’s manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new fan.

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

WARNINGS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

- 1) Read all instructions before using this unit.
- 2) Use only for intended household use as described in this manual.
- 3) Plug the fan directly into a 120 V A/C electrical outlet.
- 4) Never insert your fingers, pencils, or other objects through the fan grill during operation.
- 5) The fan should be used on a stable and level surface. Do not operate without the grill being properly in place.
- 6) Do not expose the fan to excessive heat or humidity. This could cause damage to the electrical components.
- 7) Do not immerse in any type of liquid. Do not use near water.
- 8) The fan should be kept out of the reach of children. Close supervision is necessary when the fan is used by or near children.
- 9) Do not operate this or any appliance with a damaged cord, if the unit malfunctions, or if it has been dropped or damaged in any manner. Connect to properly polarized outlets only.
- 10) Do not cover the cord or place near heat sources. Keep the cord away from high traffic areas, and do not submerge in water.

- 11) Unplug the fan before moving, cleaning or making repairs. NOTE: If for any reason this unit requires service, return appliance to manufacturer or a similarly qualified service agent to ensure safety.
- 12) To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 13) To disconnect, grip plug and pull from wall outlet. Never pull on the cord to unplug.
- 14) For indoor use only.


WARNING: This heater is equipped with a polarized plug (one blade is wider than the other). The plug is intended to fit into a power outlet only one way, with the wide blade in the wide slot. This is a safety feature; if you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician.

DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED PLUG.

TECHNICAL SPECIFICATIONS

Voltage Rating	120V, 60Hz
Power Consumption	55W
Unit Size	17.5 in. (W) x 15.8 in. (D) x 51 in. (H)
Unit Weight	14.3 lbs

PRODUCT DIAGRAM

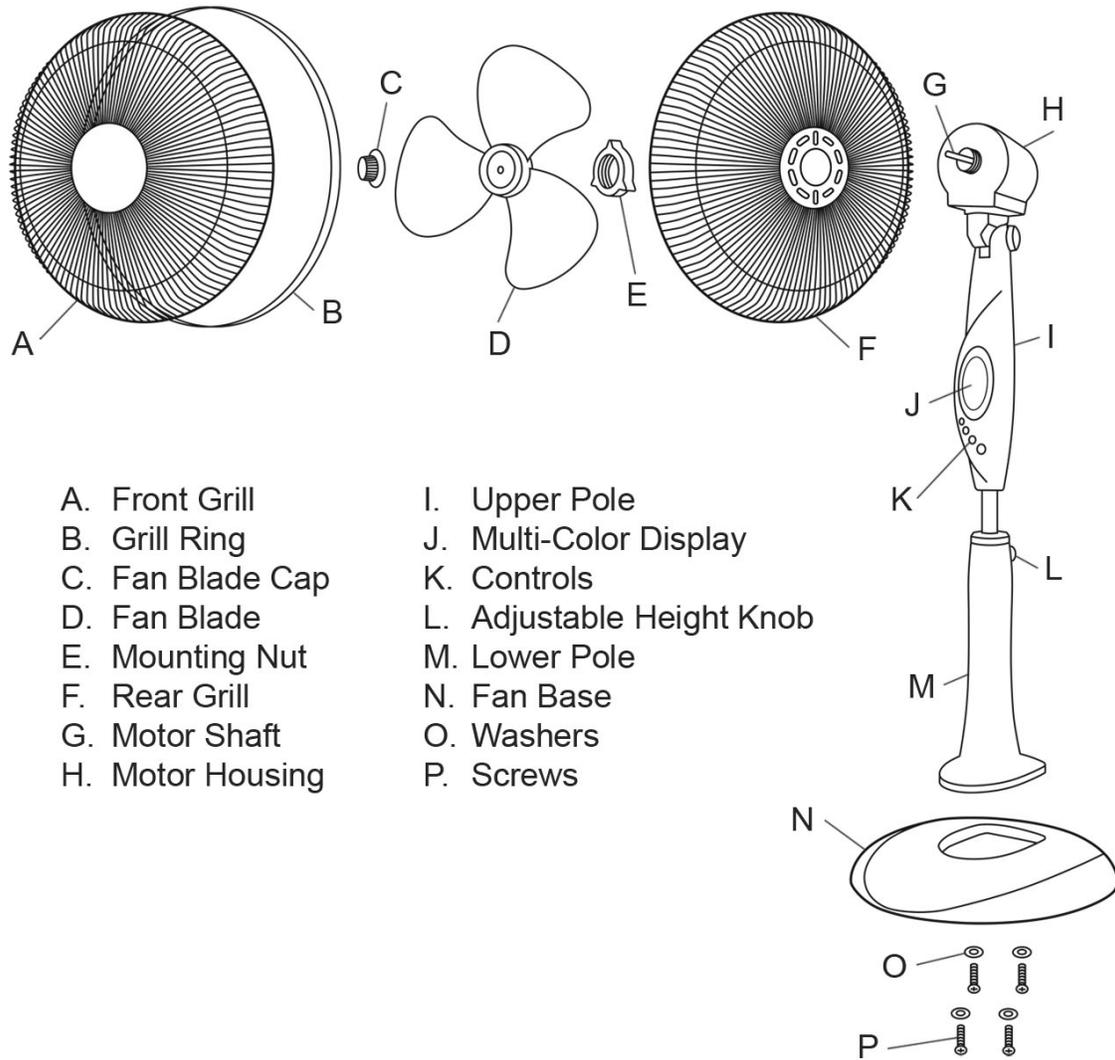

- A. Front Grill
- B. Grill Ring
- C. Fan Blade Cap
- D. Fan Blade
- E. Mounting Nut
- F. Rear Grill
- G. Motor Shaft
- H. Motor Housing

- I. Upper Pole
- J. Multi-Color Display
- K. Controls
- L. Adjustable Height Knob
- M. Lower Pole
- N. Fan Base
- O. Washers
- P. Screws

ASSEMBLY INSTRUCTIONS

Tools required: Phillips screwdriver (not included)

- 1) Remove the fan and packaging materials from the box.

Base Assembly

- 1) Attach the Lower Pole (M) to the Fan Base (N) with the included Screws (P) and Washers (O).
- 2) Attach the Upper Pole (I) to the Lower Pole (M) and tighten the screw located on the bottom of the Upper Pole (I).

Fan Head Assembly

- 1) Unscrew (turn clockwise) the Fan Blade Cap (C) if it attached to the Motor Shaft (G). Note: Fan Blade Cap (C) may be included in a plastic bag and not attached to the Motor Shaft (G).
- 2) Unscrew (turn counter-clockwise) the Mounting Nut (E) from the Motor Shaft (G).
- 3) Position the Rear Grill (F) over the Motor Shaft (G), fitting the holes in the Rear Grill (F) over the knobs that protrude from the motor. Make sure the grill fits securely against the motor housing.
- 4) Screw-on (turn clockwise) the Mounting Nut (E) to secure the Rear Grill (F) to the Motor Housing (H).
- 5) Attach the Fan Blade (D) to the Motor Shaft (G) by aligning the slots on the Fan Blade (D) with the bars on each side of the Motor Shaft (G).
- 6) Secure the Fan Blade (D) onto the Motor Shaft (G) by turning the Fan Blade Cap (C) counter-clockwise.
- 7) Align the Front Grill (A) with the Rear Grill (F).
- 8) Place the Grill Ring (B) on the outer most edge of the Grill and secure using a Phillips head screwdriver.

OPERATING INSTRUCTIONS

Using Fan Controls

- 1) Set the fan on a stable, level surface.
- 2) Turn the fan on by pressing the Power/Speed button located below the Multi-Color display, or the On/Speed button on the Remote Control.
- 3) Adjust the speed setting by pressing the Power/Speed. To adjust the speed setting using the remote, press the On/Speed button.
- 4) Pressing the Mode button on either the fan or the remote will choose the desired wind mode: Standard, Natural, Work/Sleep. In standard mode the fan operates at a steady speed. Natural mode simulates the wind by alternating the speed of the fan. In Work/Sleep mode the fan decreases speed in the middle of the oscillation pattern.
- 5) To oscillate the fan head, press the Swing button located on the fan or the remote.
- 6) This fan includes a 7.5 hour timer. To operate the timer, press the Timer button (located on the fan & remote) until the desired time is visible on the Multi-Colored Display. Each button press will increase the time by 10 minute increments.
- 7) To turn the fan off, press the Power/Speed button on the fan, or the Off button on the remote control.

Adjusting Height and Fan Head Tilt

- To adjust the height of the fan, turn the Adjustable Height Knob (L) counter-clockwise to loosen the stand. Adjust the fan to the desired height, then firmly tighten to secure into place.
- To adjust the tilt on the Fan Head, loosen the knob below the Motor Housing and tilt the fan forward/back by pulling or pushing the top of the Fan Grill. The fan will make a clicking noise while being adjusted. Once the Fan Head is set to the desired tilt, tighten the knob to secure into place.

CLEANING/MAINTENENCE

- Turn the fan off and unplug the unit.
- Clean the Fan Head, Base, and Pole using a damp cloth and a mild detergent, if necessary. Make certain all detergent residue is removed.
- Never use abrasive cleaning agents or solvents. This may cause damage or deterioration to the surface of the unit.
- Do not immerse the fan in any form of liquid. Do not allow water to drip on or into the fan motor housing.

Fan Blade Cleaning

- 1) Make certain the fan is unplugged. Loosen the Grill Ring using a Phillips screwdriver, and remove the Front Grill. Remove the Fan Blade Cap (turn clockwise), then the Fan Blade.
- 2) The Fan Blade and Grill may be cleaned with a damp cloth and mild detergent.
- 3) Reassemble the fan after the parts have dried completely. Do not plug the fan into an electrical outlet until it is fully reassembled.

OVERHEAT PROTECTION

A thermostat is built-in to the motor to prevent overheating. If the fan temperature exceeds the limit on the thermostat, the fan will automatically shut-off to prevent overheating and protect the fan components from damage.

REMOTE CONTROL

The supplied remote uses 2 “AAA” batteries. The remote will work at a distance of roughly 25 feet, and an angle of 60°.

STORAGE

When not in use, store the fan in a cool, dry location. To prevent dust and dirt build-up, use the old packaging to repack the unit.

Printed in China

WARRANTY

One Year Limited Warranty

Soleus International Inc. warrants the accompanying Soleus Air FS1-40R-41 to be free from defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States.

If the unit exhibits a defect in normal use, Soleus International, Inc. will, at its option, either repair or replace it, free of charge within a reasonable time after the unit is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

This Warranty Does Not Cover

- 1) Damage, accidental or otherwise, to the unit while in the possession of a consumer not caused by a defect in material or workmanship.
- 2) Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions.
- 3) Damage to the finish of the case, or other appearance parts caused by wear.
- 4) Damage caused by repairs or alterations of the unit by anyone other than those authorized by Soleus International Inc.
- 5) Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY ARE LIMITED TO A ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. **SOLEUS INTERNATIONAL, INC.** DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow limitation on implied warranties, the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

For Warranty, Technical Support, Customer Service, Missing or Defective Parts, before returning to your retailer, please call (888) 876-5387.

Or Write To:

Soleus International Inc.
9451 Telstar Ave.
El Monte, CA 91731 USA
www.soleusair.com

