



V6000 Analog Integrated Branch Office Solution Installation Guide

System Release 4.8



<http://www.3com.com>

Part Number 900-0387-01

Published November 2006

3Com Corporation, 350 Campus Drive, Marlborough, MA 01752-3064

Copyright © 2006, 3Com Corporation. All Rights Reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from 3Com Corporation.

3Com Corporation reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of 3Com Corporation to provide notification of such revision or change.

3Com Corporation provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms, or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. 3Com may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

If there is any software on removable media described in this documentation, it is furnished under a license agreement included with the product as a separate document, in the hardcopy documentation, or on the removable media in a directory file named LICENSE.TXT or !LICENSE.TXT. If you are unable to locate a copy, please contact 3Com and a copy will be provided to you.

UNITED STATES GOVERNMENT LEGEND

If you are a United States government agency, then this documentation and the software described herein are provided to you subject to the following:

All technical data and computer software are commercial in nature and developed solely at private expense. Software is delivered as "Commercial Computer Software" as defined in DFARS 252.227-7014 (June 1995) or as a "commercial item" as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in 3Com's standard commercial license for the Software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov 1995) or FAR 52.227-14 (June 1987), whichever is applicable. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation contained in, or delivered to you in conjunction with, this guide.

Unless otherwise indicated, 3Com registered trademarks are registered in the United States and may or may not be registered in other countries.

3Com, the 3Com logo, and VCX are registered trademarks of 3Com Corporation.

All other company and product names may be trademarks of the respective companies with which they are associated.

CONTENTS

ABOUT THIS GUIDE 5

- How to Use This Guide 5
- Conventions 6
- Related Documentation 6
- Documentation Comments 6
- Notices 7
 - WEEE EU Directive 7
 - Abbreviations and Terminology 7

CHAPTER 1: QUICK START 9

CHAPTER 2: UNPACKING THE V6000 10

CHAPTER 3: MOUNTING THE V6000 12

CHAPTER 4: CABLING THE V6000 14

CHAPTER 5: ASSIGNING THE V6000 IP ADDRESS 16

- Assigning an IP Address Using HTTP 16
- Assign an IP Address Using the CLI 17
 - Accessing the CLI 17
 - Assigning an IP Address 18
- Restoring Networking Parameters to the Initial State 19

CHAPTER 6: ACCESSING THE EMBEDDED WEB SERVER 20

CHAPTER 7: CONFIGURING SIP / H.323 GATEWAYS 22

- Configuring the V6000 Ports 22
- Configuring the Internal Routing Table 24
- Making Calls 24
 - Making an FXS to FXS Call 24

Making an FXS to FXO Call 25

Making a V6000 to MP-104 FXS Call 25

APPENDIX A: OBTAINING SUPPORT FOR YOUR 3COM PRODUCT 28

Customer Support 28

ABOUT THIS GUIDE

This guide describes the installation of the 3Com V6000 analog integrated branch office solution gateways.

Information contained in this document is believed to be accurate and reliable at the time of printing. However, because of on-going product improvements and revisions, 3Com cannot guarantee the accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document and other documents can be viewed by registered Technical Support customers at <http://www.3Com.com> under Support / Product Documentation.



When viewing this manual on CD, Web site or on any other electronic copy, all cross-references are hyperlinked. Click on the page or section titles (shown in blue) to reach the individual cross-referenced item directly. To return back to the point from where you accessed the cross-reference, press the ALT and ◀ keys.

How to Use This Guide

This book covers these topics:

- [Chapter 1: Quick Start](#)
- [Chapter 2: Unpacking the V6000](#)
- [Chapter 3: Mounting the V6000](#)
- [Chapter 4: Cabling the V6000](#)
- [Chapter 5: Assigning the V6000 IP Address](#)
- [Chapter 6: Accessing the Embedded Web Server](#)
- [Chapter 7: Configuring SIP / H.323 Gateways](#)

Conventions

[Table 1](#) lists conventions that are used throughout this guide.

Table 1 Notice Icons

Icon	Notice Type	Description
	Information note	Information that describes important features or instructions.
	Caution	Information that alerts you to potential loss of data or potential damage to an application, device, system, or network.
	Warning	Information that alerts you to potential personal injury or death.

Related Documentation

The following documents are available on the 3Com Partner Access Web site for the 3Com V6000 SIP and H.323 analog VoIP gateways:

- *900-0388-01* *V6000 Analog Integrated Branch Office Solution User Guide*
- *900-0390-01* *V6000 and V7111 Analog Integrated Branch Office Solution Release Notes*

Documentation Comments

Your suggestions are important to us because we want to make our documentation more useful to you.

Please send e-mail comments about this guide or any of the V6000 documentation to:

`VOICE_TechComm_Comments@3com.com`

Please include the following information with your comments:

- Document title
- Document part number (usually found on the front page)
- Page number
- Your name and organization (optional)

Example:

3Com V6000 Guide
Part Number
Page 25

See the Appendix [Obtaining Support for Your Product](#) in the V6000 Digital Guide for details on how to register your product and get support from 3Com.

Notices

WEEE EU Directive

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

Abbreviations and Terminology

Each abbreviation, unless widely used, is spelled out in full when first used, and only Industry standard terms are used throughout this manual. The symbol 0x indicates hexadecimal notation.



WARNING:

The V6000 is supplied as a sealed unit and must only be serviced by qualified service personnel

Ensure that you connect FXS ports to analog telephone devices only, and FXO ports to CO/PBX lines only.

To protect against electrical shock and fire, use a 26 AWG min wire to connect FXO ports to Public Switching Telephone Network (PSTN).



Where 'network' appears in this manual, it means LAN, WAN, etc. accessed via the gateway's Ethernet interface.

FXO (Foreign Exchange Office) is the interface replacing the analog telephone and connects to a Public Switched Telephone Network (PSTN) line from the Central Office (CO) or to a Private Branch Exchange (PBX). The FXO is designed to receive line voltage and ringing current, supplied from the CO or the PBX (just like an analog telephone). An FXO VoIP gateway interfaces between the CO/PBX line and the Internet.

FXS (Foreign Exchange Station) is the interface replacing the Exchange (i.e., the CO or the PBX) and connects to analog telephones, dial-up modems, and fax machines. The FXS is designed to supply line voltage and ringing current to these telephone devices. An FXS VoIP gateway interfaces between the analog telephone devices and the Internet.

The FXO port is considered to be TNV-3. FXS ports are considered to be TNV-2.

Each abbreviation, unless widely used, is spelled out in full when first used, and only Industry standard terms are used throughout this manual. The symbol 0x indicates hexadecimal notation.

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

CHAPTER 1: QUICK START

This Guide takes you through the briefest steps that are required for setting up your V6000 for the first time and making a basic call. For more details on how to use the gateway's full capability, refer to the V6000 User Manual.

Follow these required steps to set up the V6000.

- 1 Unpack the V6000.
- 2 Mount the V6000.
- 3 Cable the V6000.
- 4 Assign the V6000 IP address.
- 5 Configure the V6000 ports.
- 6 Configure the internal routing table.
- 7 Make a call.

CHAPTER 2: UNPACKING THE V6000

To unpack the V6000, follow these 6 steps:

- 1 Open the carton and remove packing materials.
- 2 Remove the V6000 from the carton.
- 3 Check that there is no equipment damage.
- 4 Check, retain and process any documents.
- 5 Notify 3Com or your local supplier of any damage or discrepancies.
- 6 Retain any diskettes or CDs.

Ensure that in addition to the V6000, the package contains:

- One or two AC power cables.
- Four anti-slide bumpers for desktop installation option (supplied in a small plastic bag).
- RS-232 DB9 adapting cable, two meters in length (direct connection to PC).
- CD (software and documentation).
- Lifeline cable (RJ-11 adaptor cable), supplied with FXS I/O modules only.
- This V6000 Guide.

CHAPTER 3: MOUNTING THE V6000

The integral front brackets are not required for a desktop installation. Optionally, attach the four (supplied) anti-slide bumpers to the base of the V6000 and place it on the desktop in the position you require.

CHAPTER 4: CABLING THE V6000



CAUTION: Protective Earthing

The equipment is classified as Class I EN60950 and UL60950 and must be earthed at all times. Units providing power sockets with three pins must be connected by service personnel to a socket-outlet with a protective earthing connection.

To cable the V6000, follow these 3 steps:

- 1 The V6000 must be permanently earthed using an equipment-earthing conductor. Connect an electrically earthed strap of 16 AWG wire (minimum) to the chassis earthing screw, using the supplied washer. The connection to the protective earthing should be in accordance with the regulations enforced in the country of installation.
- 2 Connect the first Ethernet connection (labeled I), located on the CPU module of the V6000 front panel, directly to the network using a standard RJ-45 Ethernet cable.



When assigning an IP address to the V6000 using HTTP (under [Assigning an IP Address Using HTTP](#)), you may be required to disconnect this cable and re-cable it differently.

- 3 Connect the left (active) 100-240V~50-60 Hz power socket to the mains using the supplied cord.
After connecting the V6000 to the power source, the power LED on the front panel of the power supply unit is lit green (after a self-testing period of about 2 minutes).

CHAPTER 5: ASSIGNING THE V6000 IP ADDRESS

To assign an IP address to the V6000, use one of the following methods:

- HTTP using a Web browser (see [Assigning an IP Address Using HTTP](#))
- The embedded Command Line Interface (CLI) accessed via Telnet or RS-232 (see [Assign an IP Address Using the CLI](#))
- BootP or DHCP (refer to the V6000 User Manual)



Record and retain the IP address and subnet mask you assign the V6000.

The default networking parameters are show in [Table 2](#).

Use the 'Reset' button at any time to restore the V6000 networking parameters to their factory default values (see [Restoring Networking Parameters to the Initial State](#)).

Table 2 V6000 Default Networking Parameters

Parameter	Default Value
IP Address	10.1.10.10
Subnet Mask	255.255.0.0
Default Gateway IP Address	0.0.0.0

Assigning an IP Address Using HTTP

To assign an IP address using HTTP, follow these 8 steps:

- 1 Disconnect the V6000 from the network and reconnect it to your PC using one of the following two methods:
 - Use a standard Ethernet cable to connect the network interface on your PC to a port on a network hub / switch. Use a second standard Ethernet cable to connect the V6000 to another port on the same network hub / switch.
 - Use an Ethernet cross-over cable to directly connect the network interface on your PC to the V6000.

- 2 Change your PC's IP address and subnet mask to correspond with the V6000 factory default IP address and subnet mask, shown in [Table 2](#). For details on changing the IP address and subnet mask of your PC, refer to Windows™ Online Help (Start>Help).
- 3 Access the V6000 Embedded Web Server (see [Chapter 6: Accessing the Embedded Web Server](#)).
- 4 In the 'Quick Setup' screen (shown in [Figure 3](#)), set the V6000 'IP Address' and 'Subnet Mask' fields under 'IP Configuration' *to correspond with your network IP settings*.
- 5 Click the **Reset** button and click **OK** in the prompt; the V6000 applies the changes and restarts. This takes approximately 2 minutes to complete. When the V6000 has finished restarting, the power LED on the front panel of the power supply unit is lit green. Any power supply malfunction results in the LED switching off.
- 6 Disconnect your PC from the V6000 or from the hub / switch (depending on the connection method you used in Step 1).
- 7 Reconnect the V6000 and your PC (if necessary) to the network.
- 8 Restore your PC's IP address & subnet mask to what they originally were. If necessary, restart your PC and re-access the V6000 via the Embedded Web Server with its new assigned IP address.

Assign an IP Address Using the CLI

First access the CLI using a standard Telnet application or using a serial communication software (e.g., HyperTerminal™) connected to the V6000 RS-232 port (see [Accessing the CLI](#)). Then assign the V6000 an IP address (see [Assigning an IP Address](#)).

Accessing the CLI

To access the CLI via the Embedded Telnet Server, follow these 3 steps:

- 1 Enable the Embedded Telnet Server:
 - Access the V6000 Embedded Web Server (see [Chapter 6: Accessing the Embedded Web Server](#)).
 - Set the parameter 'Embedded Telnet Server' (under **Advanced Configuration > Network Settings > Application Settings**) to 'Enable (Unsecured)'.
 - Click the **Reset** button on the main menu bar; the Reset screen is displayed.
 - Click the **Reset** button in the middle of the Reset screen with the Burn option selected; the V6000 is shut down and re-activated. A message about the waiting period is displayed. The screen is refreshed.

- 2 Use a standard Telnet application to connect to the V6000 Embedded Telnet Server.
- 3 Login using the username ('Admin') and password ('Admin').

To access the CLI via the RS-232 port, follow these 2 steps:

- 1 Connect the V6000 RS-232 port (labeled IOIO), located on the CPU module of the V6000 front panel, to either COM1 or COM2 RS-232 communication port on your PC with the supplied RS-232 cable.

- 2 Use serial communication software (e.g., HyperTerminal™) to connect to the V6000.

Set your serial communication software to the following communications port settings:

- Baud Rate: 115,200 bps
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: Hardware

The CLI prompt is available immediately.

Assigning an IP Address

To assign an IP address via the CLI, follow these 4 steps:

- 1 At the prompt type 'conf' and press enter; the configuration folder is accessed.
- 2 To check the current network parameters, at the prompt, type 'GCP IP' and press enter; the current network settings are displayed.
- 3 Change the network settings by typing: 'SCP IP [ip_address] [subnet_mask] [default_gateway]' (e.g., 'SCP IP 10.13.77.7 255.255.0.0 10.13.0.1'); the new settings take effect on-the-fly. Connectivity is active at the new IP address.



This command requires you to enter all three network parameters (each separated by a space).

- 4 To save the configuration, at the prompt, type 'SAR' and press enter; the V6000 restarts with the new network settings.

Restoring Networking Parameters to the Initial State

You can use the 'Reset' button to restore the V6000 networking parameters to their factory default values (described in [Table 2](#)) and to reset the username and password.



The V6000 returns to the software version burned in flash. This process also restores the V6000 parameters to their factory settings. Therefore, you must load your previously backed-up ini file, or the default ini file (received with the software kit) to set them to their correct values.

To restore networking parameters to their initial state, follow these 3 steps:

- 1 Press in the 'Reset' button uninterruptedly for a duration of more than six seconds; the gateway is restored to its factory settings (username: 'Admin', password: 'Admin').
- 2 Assign the V6000 IP address (see [Chapter 5: Assigning the V6000 IP Address](#)).
- 3 Load your previously backed-up *ini* file, or the default *ini* file (received with the software kit). For information on loading the *ini* file, refer to the V6000 User Manual.

CHAPTER 6:

ACCESSING THE EMBEDDED WEB SERVER

To access the Embedded Web Server, follow these 4 steps:

- 1 Open a standard Web-browsing application such as Microsoft™ Internet Explorer™ (Version 6.0 and higher) or Netscape™ Navigator™ (Version 7.2 and higher).
- 2 In the URL field, specify the new IP address of the V6000 (e.g., http://10.1.10.10); the Embedded Web Server's 'Enter Network Password' screen appears, shown in [Figure 2](#).

Figure 1 Embedded Web Server Login Screen



- 3 In the 'User Name' and 'Password' fields, enter the username (default: 'Admin') and password (default: 'Admin'). Note that the username and password are case-sensitive.
- 4 Click **OK**; the 'Quick Setup' screen is accessed, shown in [Figure 3](#).

CHAPTER 7:

CONFIGURING SIP / H.323 GATEWAYS

After accessing the Embedded Web Server the 'Quick Setup' screen is displayed for SIP or H.323 (the SIP 'Quick Setup' screen is shown in [Figure 3](#) as an example).


Figure 2 V6000 SIP Quick Setup Screen

Quick Setup	
IP Configuration	
IP Address	10.13.77.7
NAT IP Address	0.0.0.0
Subnet Mask	255.255.0.0
Default Gateway IP Address	10.13.0.1
SIP Parameters	
Gateway Name	
Working with Proxy	No
Proxy IP Address	10.13.8.10
Proxy Name	10.13.8.10
Enable Registration	No
Coder Name (msec)	
1st Coder	g711Ulaw64k 20
Tables	
Tel to IP Routing Table	-->
Endpoint Phone Number Table	-->

Configuring the V6000 Ports

You can connect and configure telephones and perform calls. The configuration described in this and following steps refers to a V6000 configured with Module 1 (FXS) and Module 2 (FXO) each having 4 ports, as an example.

Figure 3 V6000 Configured with Module 1 – FXS and Module 2 – FXO

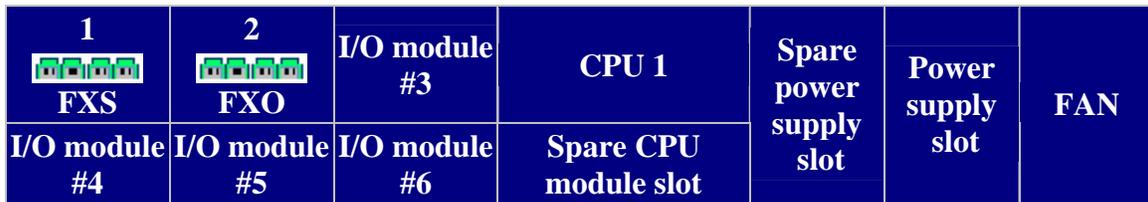

To configure the V6000 ports, follow these 4 steps:

- 1 In the 'Quick Setup' screen, click the button →, adjacent to the label 'Endpoint Phone Number Table'; the 'Endpoint Phone Number Table' screen opens (see [Figure 5](#)).

Figure 4 Endpoint Phone Number Table

Endpoint Phone Number Table			
	Module	Channel(s)	Phone Number
1	1	1-4	101
2	2	1-4	201
3	2		
4	2		
5	2		
6	2		



In the example in [Figure 5](#), Module #1 is FXS and Module #2 is FXO.

- 2 In the 'Endpoint Phone Number Table' screen, in the row for Module 1 (FXS), define 1-4 under column 'Channel(s)' and the first phone number, for example, 101, corresponding to channel 1, under column 'Phone Number' (shown in [Figure 5](#)). The phone numbers 102, 103 and 104 are automatically defined (in sequence), corresponding to subsequent channels.
- 3 In the row for Module 2 (FXO), define 1-4 under column 'Channel(s)' and the first phone number under column 'Phone Number', for example, 201, corresponding to channel 1, under column 'Phone Number' (shown in [Figure 5](#)). The phone numbers 202, 203 and 204 are automatically defined (in sequence), corresponding to subsequent channels.
- 4 Click the button **Submit** and then click **Quick Setup**; you're returned to the 'Quick Setup' screen.

Configuring the Internal Routing Table

To configure internal routing, follow these 4 steps:

- 1 In the 'Quick Setup' screen, click the button → adjacent to the label 'Tel to IP Routing Table'; the 'Tel to IP Routing Table' screen opens (see [Figure 6](#)).

Figure 5 Tel to IP Routing Table

	Dest. Phone Prefix	Source Phone Prefix	Dest. IP Address	Profile ID	Status
1	10	*	10.33.24.14		OK
2	20	*	10.33.24.14		OK
3					
4					

- 2 In row 1, under column 'Dest. Phone Prefix' enter 10, under column 'Source Phone Prefix' enter * (wildcard) and under column 'Dest. IP Address' enter the IP address you assigned the V6000; every call that its destination number starts with 10 is routed to the V6000.
- 3 Repeat Step 2 for the second row, but this time enter 20 under column 'Dest. Phone Prefix'; every call that its destination number starts with 20 is routed to the V6000.
- 4 Click the **Submit** button and then click **Quick Setup**; you're returned to the 'Quick Setup' screen.

Making Calls

Making an FXS to FXS Call

The following setup requires two telephones (**A** and **B**) and two RJ-11 cables, using the settings from the example shown in [Figure 5](#).

To make an FXS to FXS call, follow these 3 steps:

- 1 Connect the RJ-11 cable of telephone **A** to port 1 of module 1 (where module 1 is an FXS module). Connect the RJ-11 cable of telephone **B** to port 2 in the same module (Module 1).
- 2 Offhook the receiver of telephone **A** (whose number you defined as 101) and dial 102 (the automatically defined number of port 2); telephone **B** connected to port 2 rings.
- 3 Offhook telephone **B** and test the line for voice.

Making an FXS to FXO Call

The following setup requires two telephones (**A** and **B**) and three RJ-11 cables, using the settings from the example shown in [Figure 5](#).

To make an FXS to FXO call, follow these 6 steps:

- 1 Connect telephone **A** to port 1 of module 1 (where module 1 is an FXS module).
- 2 Using an RJ-11 cable, connect port 2 of module 1 to port 1 of module 2 (where module 2 is the FXO module).
- 3 Connect telephone **B** to port 3 of module 1.
- 4 Offhook telephone **A** and dial 201 (port 1 of module 2 - FXO); you'll receive a dial tone - this dial tone is the equivalent of the PBX's dial tone.
- 5 Dial 103 (the number configured for telephone **B** connected to port 3 of module 1 - FXS); telephone **B** rings (the FXO module's port 1 is outpulsing digits).
- 6 Offhook telephone **B** and test the line for voice.

Making a V6000 to MP-104 FXS Call

The following setup requires two telephones (**A** and **B**), two RJ-11 cables and an MP-104 gateway. Note that the V6000 and the MP-104 must be on the same subnet.

To make a V6000 to MP-104 FXS call, follow these 5 steps:

- 1 In the V6000 'Tel to IP Routing Table' in row 3, under column 'Dest. Phone Prefix' enter 30, under column 'Source Phone Prefix' enter * (wildcard) and under column 'Dest. IP Address' enter the IP address of the MP-104; every call that its destination number starts with 30 is routed to the MP-104.

Figure 6 V6000 Tel to IP Routing Table

	Dest. Phone Prefix	Source Phone Prefix	Dest. IP Address	Profile ID	Status
1	101	*	10.33.24.14		OK
2	201	*	10.33.24.14		OK
3	301	*	10.13.77.7		OK
4					
5					

- 2 In the MP-104 'Endpoint Phone Number Table' screen, in row 1, define 1-4 under column 'Channel(s)' and the first phone number, for example, 301, corresponding to channel 1, under column 'Phone Number' (shown in [Figure 5](#)). The phone numbers 302, 303 and 304 are automatically defined (in sequence), corresponding to subsequent channels.

Figure 7 MP-104 Endpoint Phone Number Table

Endpoint Phone Number Table					
	Channel(s)	Phone Number		Hunt Group ID	Profile ID
1	1-4	301			
2					
3					

- 3 Connect the RJ-11 cable of telephone **A** to port 1 of module 1 (where module 1 is an FXS module) on the V6000. Connect the RJ-11 cable of telephone **B** to port 1 on the MP-104 gateway.
- 4 Offhook the receiver of telephone **A** (whose number you defined as 101) and dial 301; telephone **B** connected to the MP-104 rings.
- 5 Offhook telephone **B** and test the line for voice.



*To make a call from telephone **B** on the MP-104 to telephone **A** on the V6000, you must define the internal routing table on the MP-104.*

APPENDIX A: OBTAINING SUPPORT FOR YOUR 3COM PRODUCT

Customer Support

Customer technical support and service are provided by 3Com' Distributors, Partners, and Resellers from whom the product was purchased. For Customer support for products purchased directly from 3Com, contact support@3Com.com.