

American DJ

SCOTTY II™



User Instructions

**No Moving
Parts!
3 Year
Warranty!!**

©American DJ Supply
American DJ World Headquarters:
4295 Charter Street Los Angeles, CA 90058 USA
Tel: 323-582-2650 / Fax: 323-582-2610
web: www.americandj.com / e-mail: info@americandj.com

INTRODUCTION: Thank you for purchasing the Scotty II™ by American DJ®. For your convenience this unit has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit. The Scotty II's™ appearance and effect is similar to our popular Vertigo™ but has no motors or moving parts inside which increases its' reliability. This unit features a built-in four channel sound active chaser, illuminating the four internal lamps. This unit is Master/Slave compatible which means you may link several units together for a synchronized light show. For an optimum effect link up to four Scotty IIs™ together for dramatic light show.

OPERATING INSTRUCTIONS: The Scotty II™ is ready to be hung or set on flat surface. After plugging the unit in, it will react to the low frequencies of a music source (bass) via the unit's internal microphone. The unit comes with a sensitivity adjusting knob on the rear of the unit. Use the sensitivity knob to control the amount of sound it takes to activate your unit. Turn the knob in clockwise direction for full sensitivity and counter-clockwise to decrease the unit sensitivity to sound. For Master/Slave operation, link two or more units then turn down the sensitivity of the slave units. Be sure not to obstruct the cooling vents and keep in a well ventilated area. For best results, use fog or special effects smoke to enhance the beam output.

Linking: To link the units together use standard XLR mic cables. Up to four units can be linked together. Any unit can act as a master or slave. Remember that the male XLR connection is the Input and the female XLR is the Output. Follow figure one to ensure proper connectivity.

CAUTION: The front part of fixture will get extremely hot if operated for long periods. For optimum performance, use a 30 min. ON/10 min. OFF duty cycle. Let the unit cool before handling or replacing lamps. Never open this unit when in use. Always disconnect the main power before serving or replacing lamp.

Please fill out the warranty card to validate and activate your 3 year limited warranty on the Scotty II™

Lamp replacement: Remember to always replace with the exact same type lamps and fuse unless otherwise specified by an authorized American DJ™ service technician.

This unit comes with four lamps, all are located behind the front lens assembly. To replace the lamps disconnect the unit's main power. Remove the front lens assembly to expose the lamps. Remove the old lamps and replace with alike lamps. Replace the lens assembly and reconnect main power. HALOGEN LAMP WARNING! This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

For service related issue please contact your American DJ® dealer.

SPECIFICATIONS: MODEL - SCOTTY II™

Weight: 8 lbs.
Size: 14" x 12" x 12"
Lamps: 2 x 64514 - 120V 300W
2 x FCL - 120V-500W
Fuse: 10A
Supply Voltage: 120V
Working Position: Any Safe position
Duty Cycle: 30 min. ON, 10 min. OFF
Colors: Multiple Colored

Figure 1

