



user manual

Iron Aid

EDI97170W

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com

Contents

Important safety information	2	Starting a drying programme	15
Environment	4	Drying rack	16
Product description	5	Cleaning and maintenance	17
Control panel	6	What to do if ...	20
What is shown in the display	6	Technical data	22
Before first use	6	Machine settings	23
Sorting and preparing laundry	7	Hints for test institutes	24
Starting up for the first time	7	Installation	24
Iron Aid™ Steam System	8	Service	26
Starting an Iron Aid™ programme	12	Guarantee/Customer Service	26
Drying	13	European Guarantee	27



Subject to change without notice

Important safety information

Important! Only operate the Iron Aid programmes with distilled water! Mains water causes damage to the appliance.

Important! In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: cushions, quilts and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

- Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- **Danger of explosion:** never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- The height adjustable screw feet must never be removed.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the appliance with jets of water. Risk of electric shock!
- Do not lean on the open door. The appliance may tip over.
- Once the drying cycle or Iron Aid programme has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.
- Take care when interrupting the Iron Aid programme: Do not open the machine door during the steam phase. Hot steam may result in burns. The display shows a message to indicate the steam phase.
- The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
-  **Caution – Hot surface:** Do not touch the back of the appliance while it is operating.

 **Warning! Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Risk of fire!**

- **Risk of electric shock!** Do not spray down the appliance with jets of water.

Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

Use

- The appliance is intended for drying and steam treatment of standard laundry in domestic applications.
- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only dry fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.

- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- When using dry-cleaning sets: only use those products which are declared as suitable for the dryer by the manufacturer.
- Clean the micro-fine filter and fine strainer after each drying cycle or Iron Aid programme.
- Do not use the machine without a lint filter or with a damaged lint filter. Risk of fire!
- Only fill the water reservoir for steam treatment with distilled water. Do not use tap water or any additives! The condensed water from this appliance's condensed water container can also be used, if it is filtered first (e. g. with a coffee filter).
- Clean the heat exchanger regularly.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- With stacked washer and Iron Aid appliance: do not place objects on the appliance. These may fall off during operation.
- The lamp cover for the interior light must be screwed down tightly.
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.
- **Caution - hot surface** : Do not touch the door light cover surface when the light is switched on.

Child safety

- This machine is not intended for use by young children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.

Environment

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Old appliance



Warning!

Remove mains plug from socket when you have no further use for the machine. Cut off

mains cable and dispose of together with plug. Destroy loading door hook. Children cannot then lock themselves in the machine and put their lives at risk.

Packaging material


The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

Environmental tips

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.


- Your dryer will function most economically if you:
 - always keep the ventilation slots on the base of the dryer unobstructed;
 - use the loading volumes specified in the programme overview;
 - ensure you have good ventilation in the installation room;
 - clean the micro-fine filter and fine strainer after each drying cycle;
 - spin the laundry well before drying.
-  Energy consumption depends on spinning speed set in washing machine. Higher spinning speed - lower energy consumption.

Product description

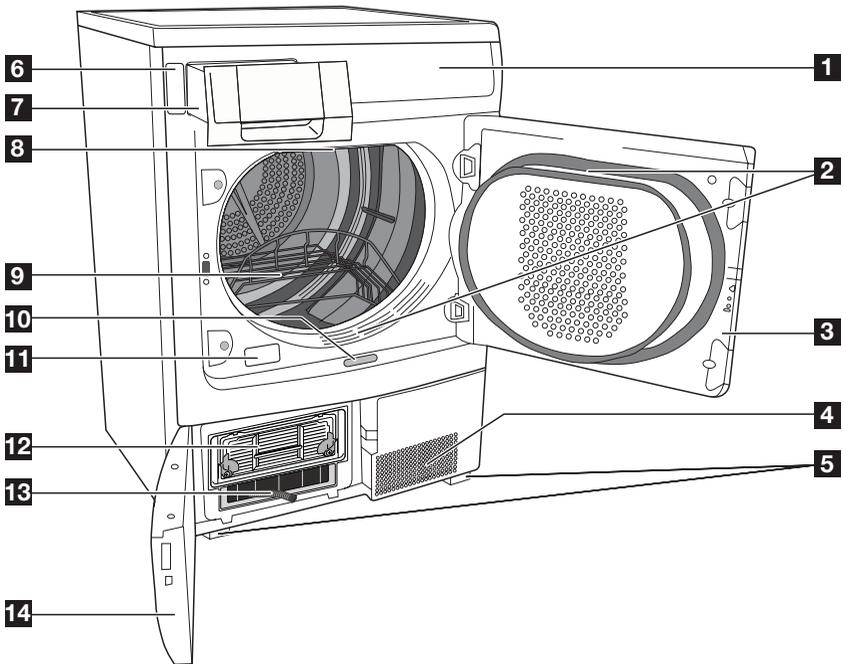


- | | |
|---|---|
| 1 Control panel | 8 Drum light |
| 2 Fluff filters | 9 Drying rack |
| 3 Loading door (reversible) | 10 Push button for base door opening |
| 4 Ventilation grille | 11 Rating Plate |
| 5 Adjustable feet | 12 Heat exchanger |
| 6 Water recirculation valve/filter, Filler neck for steam water tank | 13 Drainage hose for water tank |
| 7 Drawer with condensed water container | 14 Heat exchanger door |

Control panel

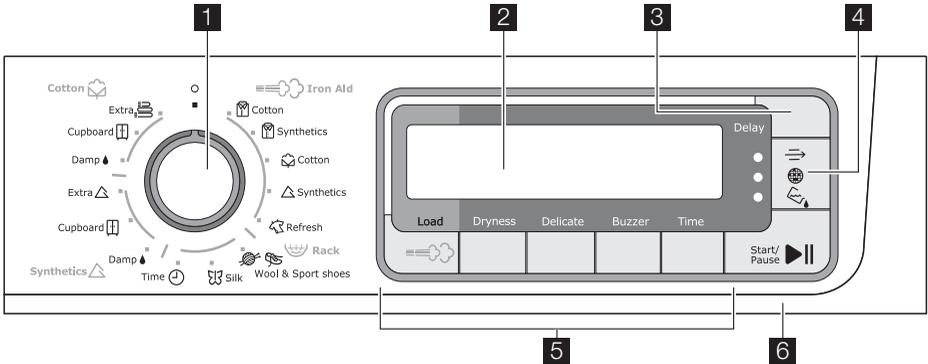

- | | |
|---|-----------------------------|
| 1 Programme knob and On/Off switch | - FILTER |
| 2 Display | - CONTAINER |
| 3 DELAY TIMER button | 5 Function buttons |
| 4 Maintenance displays
- HEAT EXCHANGER | 6 START/PAUSE button |

What is shown in the display

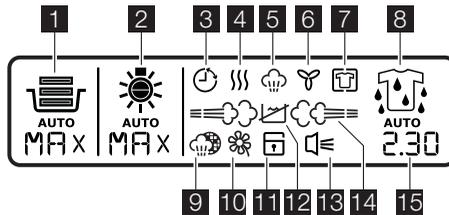

- | | |
|------------------------------------|--|
| 1 LOAD | 9 Steam Filter indicator |
| 2 DRYNESS | 10 DELICATE |
| 3 Start time preselection | 11 Child safety device |
| 4 Drying | 12 Steam water tank indicator |
| 5 Iron Aid programme | 13 BUZZER |
| 6 Cooling | 14 Steam display |
| 7 Anticrease | 15 Start time /programme duration display |
| 8 Degree of dryness Display | |

Before first use

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 MIN) with damp cloths in the machine.

1. Turn the programme knob to TIME.
2. Press the TIME button repeatedly until 0.30 appears in the display.
3. Press the START/PAUSE button.

Sorting and preparing laundry

Sorting laundry

- Sort by fabric type:
 - Cotton/linen for programmes in  COTTONS programme group.
 - Mixed fibres and synthetics for programmes in the  SYNTHETICS programme group.

- Sorting by care label. The care labels mean:

			
Drying in the tumble dryer possible in principle	Dry at normal temperature	Dry at reduced temperature (press DELICATE button!)	Drying in the tumble dryer not possible

Important! Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying. This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the EXTRA programme. Items may shrink!
- Wool and wool-like textiles can be dried using the  WOOL programme. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together which are similar or the same with respect to material, colour and weight. Please dry heavy laundry items made of wool separately.

weight, material and colour. Only smooth textiles together that are similar in terms of size, weight, material and colour.

- Do not dry new, coloured textiles together with light-coloured laundry items. Colours may fade (check colour fastness of fabric when damp in an inconspicuous area).
- Do not use dry cleaning sets such as dryel in combination with Iron Aid programmes.

Preparing laundry

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Special notes about Iron Aid

Caution!

- The following textiles cannot be treated using an Iron Aid programme: woollen knitwear, leather, textiles with large metal, wooden or plastic parts, textiles with rusting metal parts, oilskins or wax cotton garments.
- To smooth or freshen laundry with an Iron Aid programme, sort laundry by size,


Special notes about Iron Aid

- Before treating garments with an Iron Aid programme, remove stains by washing or using localised stain removal.
- Turn items with double-layered fabrics inside out (e.g. with cottonlined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Starting up for the first time

Switching appliance on / switching light on. Turn the programme selector to any programme. The appliance has been switched on. When the loading door is opened, the drum is illuminated. Opening loading door / loading laundry

1. Open loading door: Push against the loading door (push point)

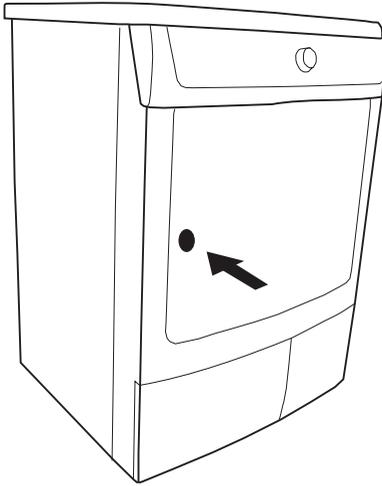

2. Load your laundry (do not force it in/ overload the machine).

! **Caution!** Be careful not to trap laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.


Iron Aid™ Steam System

Fill water tank


You must fill up the water tank before using an Iron Aid programme for the first time. Use the distilled water provided if there is not yet any condensed water from previous drying programmes (see chapter on "Cleaning and Maintenance, Emptying condensed water container"). If, after an Iron Aid programme is selected, the  water tank indicator on the display lights up, you will need to fill up the water tank with distilled water. Otherwise, you will not be able to start any Iron Aid programme.

! **Caution!** Important! Only fill the water tank with distilled or fully desalinated water. Do not use tap water or additives! You can also use the condensed water from the tank, as long as you filter it first (use the canister supplied with the filter fitted: see figure opposite).


1. Pull drawer containing condensed water container out a little (1),

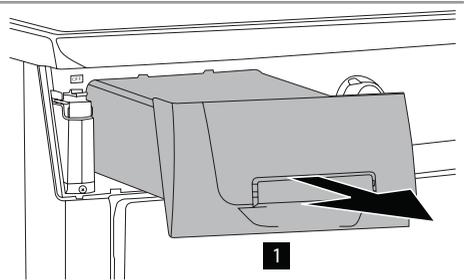

2. Push down the water tank's filler neck (1) and pull out it (2).

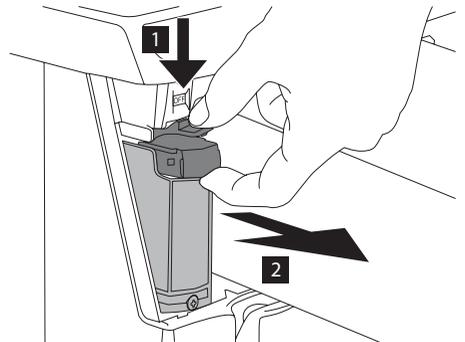

3. Fill with distilled water from the canister provided, up to the MAX mark inside the container.

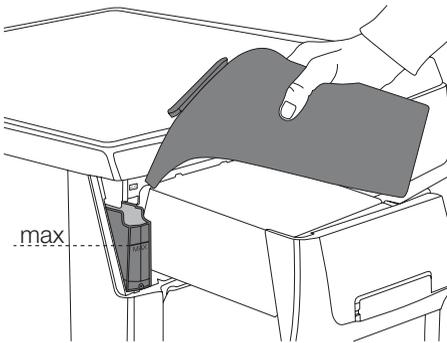

4. Push filler neck and drawer with condensed water container back in. When dry, all textiles not specifically prohibited in the chapter 'Sorting and preparing laundry' may be treated with the Iron Aid Steam System. Wet textiles may only be treated if they are labelled as suitable for dry programmes.

Water recirculation system


This system allows you to automatically use for an Iron Aid Steam cycle the condensed water collected in the condense water tank during a drying cycle.

! **Caution!** The water in the condense water tank will never automatically fill the steam water tank. The water recirculation system works only if it is supplied by water arising during standard drying cycles.


To activate this system turn the valve to the ON position. When the valve is ON the steam water tank will be filled during the next drying cycle. Water will be supplied by the water circuit directly to the steam water tank filling it automatically.

To activate recirculation set valve to the ON position. To do that:

1. Pull drawer containing condensed water container out a little (1). Behind the drawer there is water tank's filler neck (2).

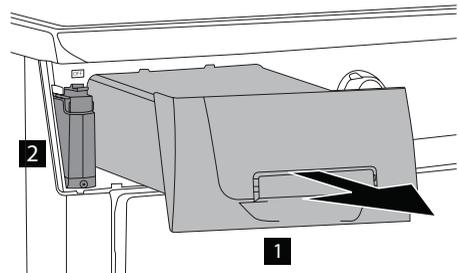

2. Turn the valve to the ON position. Water will be supplied by the water circuit directly to the steam water tank filling it automatically during the next drying cycle.

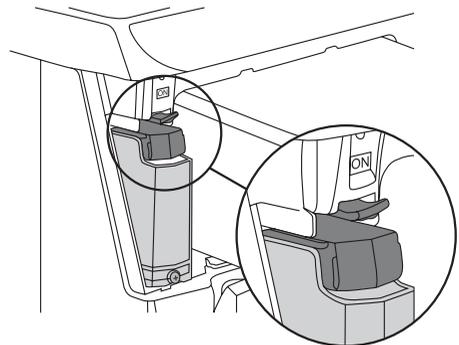

The steam water tank is empty. Please fill it and then press START/PAUSE

- i** If valve is closed (OFF position) recirculation system does not work.

Overview of Iron Aid programmes

Programmes	max. load (weight when dry)	Additional functions / options		Application/properties	
		LOAD	BUZZER		
COTTON	1.0 kg	•	•	For 1- 6 cotton shirts. Min. 80% natural fibres (cotton, linen etc).	wet, dry
SYNTHETICS	1.0 kg	•	•	For 1- 6 synthetic shirts. Max. 20% natural fibres (cotton, linen etc).	wet, dry

Programmes	max. load (weight when dry)	Additional functions / options		Application/properties	
		LOAD	BUZZER		
 COTTON	3.0 kg	•	•	For smoothing cotton garments. Min. 80% natural fibres (cotton, linen etc).	wet, dry
 SYNTHETICS	1.5 kg	•	•	For smoothing easy-care garments. Max. 20% natural fibres (cotton, linen etc).	wet, dry
 REFRESH	2.5 kg	•	•	For one suit or up to two suit jackets or pairs of trousers or similar garments. Also suitable for removing odours. For dry garments only	

i All information on applications is for guidance only. Smoothing results may vary depending on the selected programme and especially the fittings and material properties of the textile. The results can be improved if necessary by using different programmes and steam volumes. For example, some textiles containing more than 20% synthetics but with the right fittings may behave more like cotton textiles in an Iron Aid programme. You may therefore get better smoothing results by selecting a cotton Iron Aid programme.

i Given the wide range of different textile grades and properties that can be manufactured today using different mechanical and chemical processes, we recommend running the first few Iron Aid programmes at low steam levels and with a small number of garments that are as similar as possible. Later, you can carefully start to vary the conditions of Iron Aid programmes to learn from experience how to get the best results from the volume of laundry loaded, the quality of the textiles and the most suitable steam levels and Iron Aid™ programmes. Please also note the accompanying 'Textile Guide'.


Programme	LOAD	Loading volume	DURATION	
			dry [min.] ¹⁾	wet [min.] ¹⁾
COTTON	MIN MED MAX	1 - 2 shirts 3 - 4 shirts 5 - 6 shirts	20-23	41-51
SYNTHETICS	MIN MED MAX	1 - 2 shirts 3 - 4 shirts 5 - 6shirts	14-17	24-49
COTTON	MIN MED MAX	0.5 - 1 kg 1 - 2 kg 2 - 3 kg	13-16	53-64
SYNTHETICS	MIN MED MAX	0.2 - 0.5 kg 0.5 - 1 kg 1 - 1.5 kg	12-16	43-53
REFRESH	MIN MED MAX	1 pair of trousers 1 jacket 1 suit	12-16	

1) exact programme times appear in the display once the machine has performed wet/dry recognition (approx. 2 min.)

i All information provided on selecting the steam level and corresponding load are suggestions only. In some cases, using a higher steam level or smaller load may give better results. The REFRESH programme is a gentle Iron Aid programme for nonwashable textiles. Any distortion to the shape of a garment which might occur in few cases, can be remedied by ironing.

Selecting the programme

Use the programme selector to set the programme you require. The estimated programme duration (in minutes) appears in the multi-display.

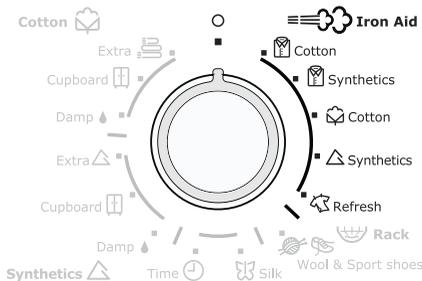

Select steam level (LOAD)


To achieve the best results, different steam levels are required for different volumes of laundry.

The LOAD button is used to set the required steam level: MIN, MED or MAX.

All Iron Aid programmes, apart from the REFRESH programme, automatically recognise the remaining dampness in clothes. When laundry is wet, a drying cycle is activated first if required.

The table shows the steam levels appropriate for the selected load, under LOAD.

1. Press the LOAD button repeatedly until the desired steam level (MIN, MED or MAX) is shown in the display.

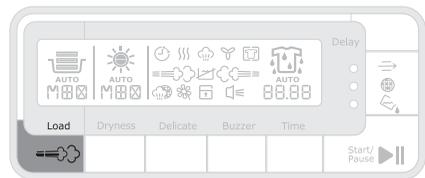


If the LOAD button is not pressed after an Iron Aid programme is selected, then medium steam level (MED) is selected automatically. If you select the REFRESH programme, MIN is selected automatically.

- i** Important: If in doubt, always select a lower steam level first until you have more experience with load volumes, fabric types and the corresponding optimum steam level. If too high a steam level is selected, garments may lose their shape. If too low a steam level is selected, creases may remain.

Selecting additional functions

The additional functions available for the Iron Aid programmes are **BUZZER**, **DELAY** and the **CHILD LOCK**.

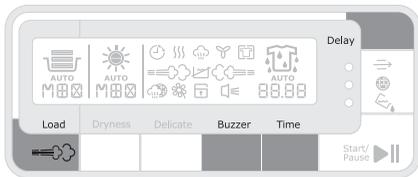

BUZZER

The appliance is supplied with the BUZZER  function activated. When the drying cycle has finished, an intermittent acoustic signal will sound. Each time a button is pressed or a programme is changed using the programme knob, an audible signal is also set to sound. The button is used to switch the function on or off. When the function is active, the BUZZER  symbol appears in the display.

DELAY

- i** With the DELAY button, you can delay the start of a programme by between 30 minutes ($00 . 30$) and a maximum of 20 hours ($20 . 00$).

1. Select the programme and additional functions.
2. Press the DELAY button as many times as necessary until the required start delay appears on the display, e.g. $12 . 00$ if the programme is to be started in 12 hours.
3. To activate the delay timer, press the START/PAUSE button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. $15 . 00, 14 . 00, 13 . 00, \dots, 00 . 30$ etc).

- i** If the display is showing $20 . 00$ and you press the button again, the time delay will be cancelled. The display will show 00 and then the duration of the selected programme.

CHILD LOCK

The child lock can be set to prevent a programme being accidentally started or a programme in operation being accidentally changed. The child safety device locks all buttons and the programme knob. The child safety device can be activated or deactivated by holding down the BUZZER and TIME buttons simultaneously for 5 seconds.

- Before programme is started: Appliance cannot be used
- After programme is started: Programme in operation cannot be changed

The symbol  appears in the display to indicate that the child safety device is activated. The child safety device is not deactivated once the programme comes to an end. If you want to set a new programme, you must first deactivate the child safety device.

Starting an Iron Aid™ programme

Press the START/PAUSE button. The programme is started. First, the drying phase indicator appears in the display. The display will also show the programme duration for the selected Iron Aid programme, not including the additional drying phase. With wet laundry, after a few minutes the appliance will show the correct programme duration for the Iron Aid programme including the preceding drying programme. As soon as the right level of dryness is reached, the Iron Aid programme will start automatically. The steam

indicator shows the progress of the Iron Aid programme in the display. The individual steam phases are shown by animated clouds of steam.

- !** **Caution!** Important: During the steam phases that form part of the Iron Aid programme and also the anti-crease phase (represented by animated clouds of steam in the display), the loading door cannot be opened. Risk of burns!

If the  water tank indicator lights up when you select an Iron Aid programme, the programme cannot be started. You will need to fill the water tank first (see section on 'Cleaning and maintenance, filling water tank'.)

i It is normal for the appliance to make noises during an Iron Aid or drying programme if garments with hard parts, such as metal buttons, are put in the drum.

Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to **0** OFF and then reset the programme.

i The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the programme knob or an additional function button (except the BUZZER button), the START/PAUSE button and  will flash in the display. The drying programme is not however affected by this.

Putting in extra items or taking items out before end of programme

1. Open door.
2. Load or remove laundry items.
3. Close door securely.
4. Press the START/PAUSE button to continue the drying cycle.

Iron Aid programme complete / removing laundry

After the Iron Aid phase has ended,   .   is illuminated and the icon  AN-

TICREASE appears in the display. If the  BUZZER has been activated, an audible signal sounds at regular intervals.

i The Iron Aid programme is automatically followed by an anti-crease phase, including brief steam phases, which lasts around 90 minutes.

The drum rotates during the anti-crease phase. This keeps the laundry loose and free of creases. It can be removed at any point during the anti-crease phase, except during steam phases (look for steam animation in the display!). Laundry should be removed as quickly as possible.

1. Open the loading door to remove the laundry.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Cleaning and maintenance" section.)
3. Remove laundry one garment at a time.
4. Turn the programme knob to **0** OFF. Important! After each drying cycle
 - Clean the micro-fine filter and fine filter
 - Drain the condensed water container (See section "Cleaning and maintenance".)
5. Close door.

! **Caution!** To retain the effects of the Iron Aid treatment, clothes must be removed one garment at a time during the anti-crease phase and hung immediately on a clothes hanger to dry (for at least 5-15 mins, depending on fabric and selected steam level). Do up the buttons and tug the garment into shape, paying particular attention to cuffs and seams.

Drying

Overview of drying programmes


Programmes	max. load (weight when dry)	Additional functions / options				Application/properties	Care symbols
		BUZZER	DELICATE	DRYNESS	TIME		
 COTTON							

Programmes	max. load (weight when dry)	Additional functions / options				Application/properties	Care symbols
		BUZZER	DELICATE	DRYNESS	TIME		
 EXTRA	7 kg	•	•	•	-	Thorough drying of thick or multilayered fabrics, e.g. terry towelling items, bathrobes.	
 CUPBOARD	7 kg	•	•	•	-	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	
 DAMP	7 kg	•	•	•	-	For normal thickness cotton or linen laundry, e.g. bedding, table linen .	
 SYNTHETICS							
 EXTRA	3 kg	•	•	•	-	Thorough drying of thick or multilayered fabrics, e.g. pullovers, bedding, table linen.	
 CUPBOARD	3 kg	•	•	•	-	For thin fabrics which are not ironed e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	
 DAMP	3 kg	•	•	•	-	For thin textiles which are still to be ironed, e.g. knitted items, shirts.	
TIME							
 TIME	7 kg	•	•	-	•	For further drying of individual items of laundry or for small volumes of less than 1kg. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps.	
 SPECIAL							
 SILK	1 kg	•	a u t o	•	-	Special programme for drying silk using warm air and gentle movement. .	
 WOOL & SPORT SHOES (with RACK)	1 kg	•	a u t o	-	•	For drying woollen fabrics after they have been washed, using warm air at minimum mechanical load (Follow section "Sorting and preparing washing"). Recommendation: Remove fabrics immediately after drying, as no anticrease programme follows. For gentle drying of one pair of sport shoes, washed and spindried at 1000 rpm. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps.	

1) Press the DELICATE button.


Selecting the programme

Use the programme selector to set the programme you require. The estimated programme duration (in minutes) appears in the multi-display.

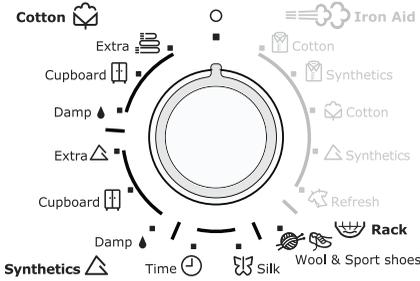

Selecting additional functions

You can choose from the additional functions DRYNESS, DELICATE, BUZZER and TIME (if a TIME programme has been selected). The symbols of the functions available for the selected programme are shown in the display.

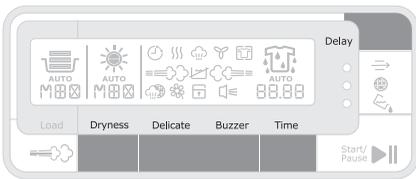

DRYNESS ☀

If laundry comes out of the machine too damp after a standard drying programme, you can increase the drying result by using the DRYNESS function. Laundry becomes drier as you move from MIN to MAX.

1. Press the DRYNESS button repeatedly until the desired dryness level (MIN, MED or MAX) is shown in the display. If another programme has been selected, AUTO flashes in the display.

If wool or silk comes out of the machine too damp at the end of a WOOL or SILK programme, you can dry it again by restarting the appropriate programme, this time with the DRYNESS function selected and dryness

level MIN, MED or MAX. In the case of a drying cycle with relatively dry laundry, the length of the programme cycle displayed at the beginning is corrected after a while.

⚠ Caution! Make sure that by selecting the DRYNESS function, you do not over-dry your wool or silk.

DELICATE ❄

For especially gentle drying of sensitive fabrics with the care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat. DELICATE is only suitable for use with loads of up to 3kg.

1. Press the DELICATE button. The ❄ DELICATE symbol appears in the display.

TIME ⌚

To select the programme duration after setting the ⌚ TIME programme. You can select a programme duration from 10 minutes to 3 hours in 10-minute steps. (corresponding to the ❄ COOLING programme).

1. Turn the programme knob to the ⌚ TIMED PROGRAMME. The 00.10 minutes is in the display
2. Press the TIME button repeatedly until the desired programme duration is shown in the display, e.g. 00.20 for a programme of 20 minutes.

If the programme duration is not selected, the duration is automatically set to 10 mins.

BUZZER 🔔

See chapter "Iron Aid™ Steam System", section "Selecting additional functions - BUZZER"

DELAY ⏸

See chapter "Iron Aid™ Steam System", section "Selecting additional functions - DELAY"

CHILD LOCK 🔒

See chapter "Iron Aid™ Steam System", section "Selecting additional functions - CHILD LOCK"

Starting a drying programme

Press the START/PAUSE button. The programme is started. The programme progress display shows drying progress. The symbols for ☁ DRYING and ❄ COOLING appear in the display one after the other. The number

of droplets in the dryness indicator gradually goes down as the drying process progresses.

Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to **O** OFF and then reset the programme.

i The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the programme knob or an additional function button (except the BUZZER button), the START/PAUSE button and **E r r** will flash in the multi-display. The drying programme is not however affected by this.

Removing laundry or loading laundry when necessary

! **Warning!** Laundry and drum can become hot. Risk of burns!

1. Open loading door
2. Load or remove laundry items.
3. Close the door securely. Lock must audibly lock.
4. Press the START/PAUSE button to continue the drying cycle.

Drying cycle complete / removing laundry

Once the drying programme has finished, **CREASE GUARD** lights up in the display.

Drying rack

The drying rack offers the possibility of drying washable woollen fabrics and sports shoes. The drying rack does not turn with the clothes-dryer drum. This allows the drying of woollen garments or sports shoes. When wet, the wool must be moved as little as possible because it tends to become matted, so drying rack is a solution. Sports shoes cannot be dried without the rack otherwise can damage the drum due to their weight.

i For first unpacking of the rack please refer to the installation chapter.

! **Warning! Before installing the rack check the dryer drum. It must be empty!**

1. Open the loading door.
2. Insert the rack.


If the **BUZZER** is activated, an audible signal sounds at regular intervals.

i The drying cycle is automatically followed by an anti-crease phase which lasts around 30 minutes.

The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. It can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.)


1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Cleaning and maintenance" section.)
3. Remove laundry.
4. Turn the programme knob to **O** OFF.
5. Important! After each drying cycle
 - Clean the micro-fine filter and fine filter
 - Drain the condensed water container (See section "Cleaning and maintenance".)
6. Close door.

Lift the rack horizontally in the drum. Guide the rack down until the support bracket at the front rests on the opening.

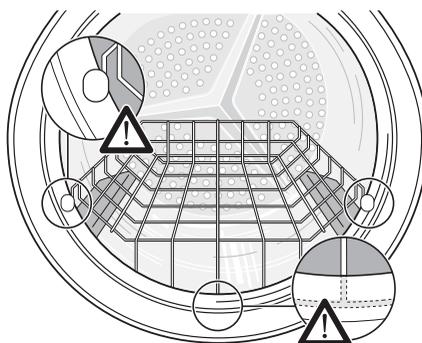


3. Place the washing on the rack:

- Spread the garment out in the rack and roll it up, without squashing or folding it.
- Place sport shoes on the rack.

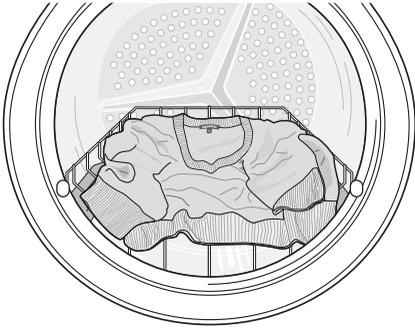

4. Select the required programme run time, selectable with an interval of 10 min, from 30 min. up to 180 minutes. Press the TIME button as many times as necessary until the required programme running time is shown in the display.
5. Press the START/PAUSE button. The programme is started.
6. At the end of the drying programme open the loading door and remove the garments or shoes.
7. Turn the programme selector to **OFF**.
8. Remove the rack from the drum at the end of drying.

Important! Take out the insoles and place them beside the shoes on the rack. Tie the shoelaces.

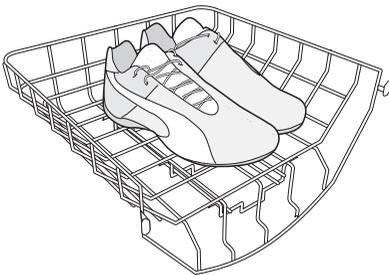


Cleaning and maintenance

Cleaning lint filters

To ensure that the appliance works perfectly, the lint filters in the door and in front of the drum must be cleaned after every Iron Aid™ or drying cycle.


Caution! Important. Never operate the dryer without the lint filter or with a damaged or blocked lint filter.

1. Open loading door

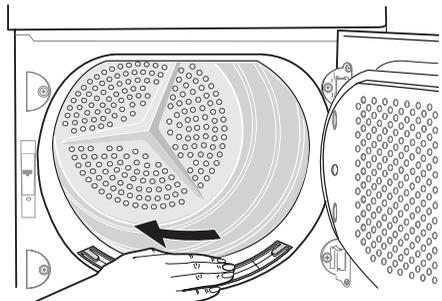


2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

3. After a period of time, a patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter from the door pulling it out. It can be positioned with the tooth facing to the left or to the right). After cleaning do not forget to put it back.

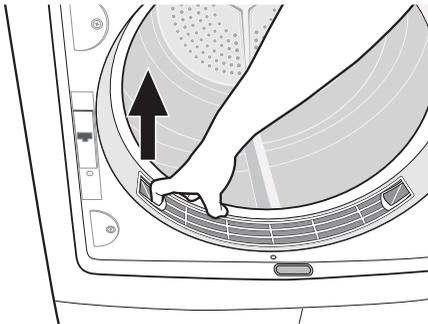


4. Remove fluff from lint filter, preferably using a damp hand for this purpose.
5. Replace the filter.

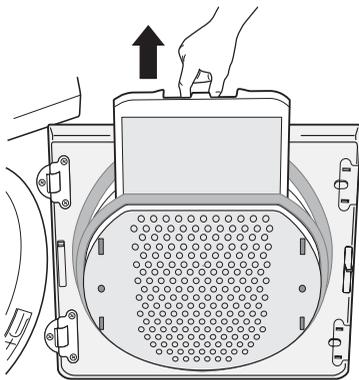


Cleaning the water recirculation valve/ filter

If the  STEAM FILTER symbol is shown in the display, the recirculation filter needs to be cleaned. The valve/filter is placed behind the tank handle - see chapter "Product description".


1. Push down the water tank's filler neck (1) and pull out it (2).

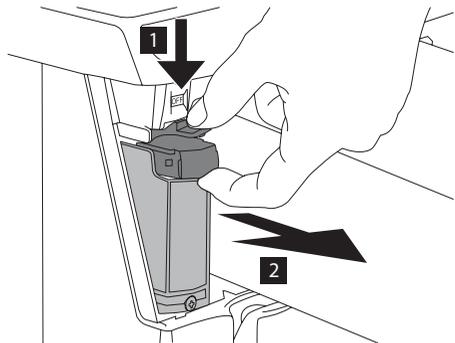

2. Clean the valve/filter under warm water.

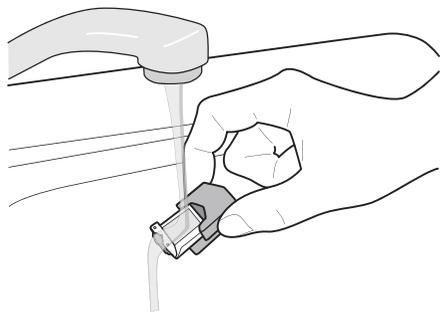

3. Re-insert the valve/filter.
4. Turn the valve/filter in ON position.

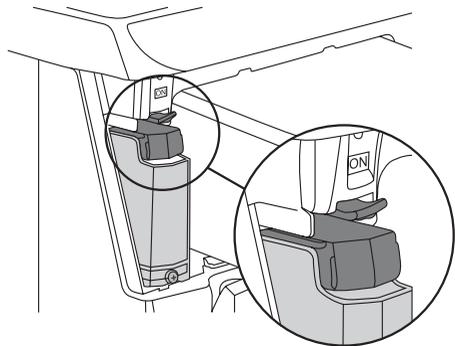

Clean the door seal

Wipe the door seal using a damp cloth immediately after the Iron Aid or drying cycle.


Emptying the condensed water container

Empty condensed water container after every drying cycle. If the condensed water container is full, an active programme will break off automatically and the  icon display will


light up. In order to continue the programme, the condensed water container must first be emptied.

Warning! The condensed water is not suitable for drinking or for preparing foodstuffs.

1. Pull drawer containing condensed water container all the way out (1) and pull up the condensed water container's drainage pipe as far as it will go (2).

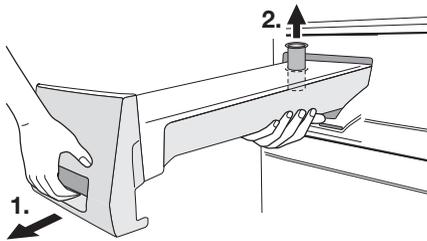


2. Pour out the condensed water into a basin or similar container.
3. Push drainage pipe in and refit condensed water container.

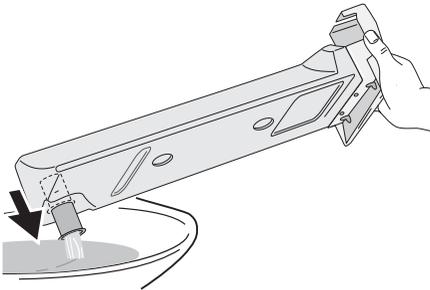

If the programme has been interrupted as a result of the condensed water container being full: Press the START/PAUSE button to continue the drying cycle.

- i** The condensed water container has a volume of approx. 4 litres. This is sufficient for around 7 kg of laundry which has previously been spun at 1000 revolutions/ minute.
4. The condensed water can be used as distilled water, e.g. for steam irons. However, first filter the condensed water to

remove any residues and small pieces of fluff.

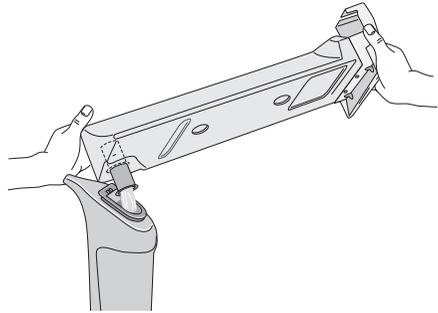


- i** Using the attached canister to filter: Pour the water out of the container straight through the filter at the top of the canister.

Cleaning heat exchanger


If the \Rightarrow HEAT EXCHANGER is displayed, the heat exchanger needs to be cleaned.

- Warning!** Operating when the heat exchanger is blocked with fluff can damage the dryer. This also increases energy consumption.


1. Open door.
2. Open door in plinth. To do this, press the release button on the bottom of the door aperture and open the door in the plinth to the left.

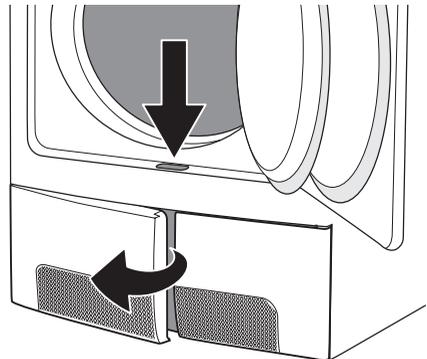

3. Clean fluff from the inside of the door and the heat exchanger front chamber. Wipe the door seal with a damp cloth.
4. Turn both lock washers inwards.

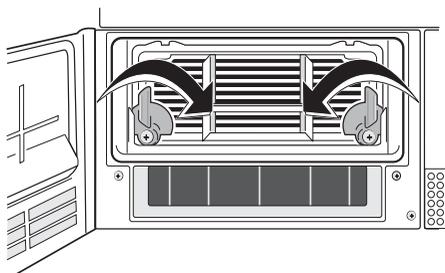

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.

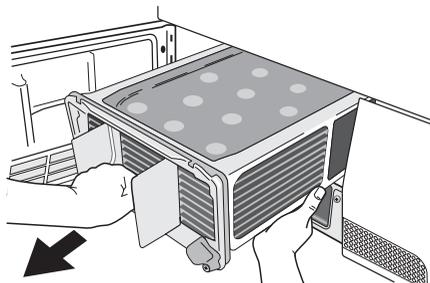

6. To empty the heat exchanger, hold vertically over a washing-up bowl.

! **Caution!** Do not use sharp objects to clean. The heat exchanger could develop leaks.

7. Clean heat exchanger. It is best to use a brush or to rinse thoroughly with a hand-held shower.

8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close door in plinth.

i The appliance will not operate if the \Rightarrow HEAT EXCHANGER indicator is still lit.

! **Caution!** Never operate the dryer without the heat exchanger.

Cleaning the drum

! **Caution!** Do not use abrasives or steel wool to clean the drum.

i Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the appliance.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean control panel and housing

! **Caution!** Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the control panel and housing.

What to do if ...

Troubleshooting by yourself

If during operation, the error code E plus number or letter) appears on the multi-display: Switch the appliance off and on again.

Reset programme. Press the START/PAUSE button. If the error appears again, please contact the Customer Care Department, stating the error code

Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Have you pressed the START/PAUSE button?	Press the START/PAUSE button again.
IronAid programme does not start. the  water tank indicator lights up.	Water tank is empty.	Fill water tank.
	Recirculation valve is closed (OFF position)	Turn the recirculation valve to ON position.

After a IronAid programme, garments are not sufficiently smooth.	Wrong programme selected (e.g.  SYNTHETICS instead of  COTTON).	Note the composition of the fabric.
	Too low a LOAD level set.	Set a higher LOAD level.
	Too many garments in machine, or garments that are too different.	Load the machine with fewer garments, or only similar ones.
	Clothes are not removed until the anti-crease phase is finished.	Remove clothes quickly one at a time from the machine as soon as possible after the start of the anti-crease phase.
	Garments not hung on clothes hangers and/or not tugged into shape.	Hang garments on clothes hangers, do up buttons and tug garments into shape.
	Multi-layered garments tend to lose their shape.	Reshape multi-layered garments by ironing after they come out of the machine.
After a IronAid programme, there are no creases left in the garments.	The IronAid programme has the effect of smoothing garments.	Iron creases in again after the IronAid programme.
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Programme overview" chapter).
	Lint filters clogged.	Clean lint filters.
	Fluff filter clogged.	Clean fluff filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	Overloading of laundry.	Observe recommended loading volumes.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
		Make an adjustment using the DRYNESS function (see chapter "Drying")
	Conductance of water at installation site differs from standard setting of machine.	Re-programme standard setting for degree of drying (see 'Programming options' chapter).
When a button is pressed - no reaction of the machine.	Drying protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF. Set the programme again.
Drum light does not work.	Programme selector in OFF position.	Turn programme selector to any programme.
	Defective light bulb.	Replace light bulb (see next section).
Displayed programme time changes erratically or stays unchanged for a long time.	Programme time is corrected automatically depending on type and volume of laundry and level of dampness.	Automatic process; this is not a machine fault.

Programme inactive,  CONTAINER display illuminated.	Condensed water container is full.	Empty Condensed water container, then start programme with START/PAUSE button.
Drying cycle ends shortly after programme starts.  ANTICREASE display illuminated.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g.  EXTRA instead of  CUPBOARD).
Drying cycle lasts an unusually long time. Note: After up to 5 hours the drying cycle ends automatically (see 'End of drying cycle').	Lint filter clogged.	Clean lint filter.
	Fluff filter clogged.	Clean fluff filter.
	Load volume too big.	Reduce load volume.
	Laundry insufficiently spun.	Laundry must be adequately spun.
	Particularly high room temperature. Temporary switching off of the compressor to avoid overload.	Automatic process, there is no fault with the appliance. If possible, lower the room temperature.
Discoloration	Colour fastness of textiles.	Check colour fastness of textiles. Only treat textiles together if they are a similar colour.

Changing the bulb for interior lighting

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from your local Service Force centre.

 **Warning!** When the appliance is switched on, the interior lighting switches itself off after 4 minutes when the door is open.

 **Warning!** Do not use standard bulbs! These develop too much heat and may damage the machine!

 **Warning!** Before replacing the bulb, disconnect the mains plug.

1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
 2. Replace defective bulb.
 3. Screw cover back down.
- Check the correct positioning of o-ring gasket before screwing back the door light cover. Do not operate the dryer when missing o-ring gasket on door light cover.

 **Warning!** For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

Technical data



This appliance conforms with the following EU Directives:

- 2006/95/EC dated 12.12.2006 Low Voltage Directive
- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 58 cm
Drum volume	108 l
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm

Weight when empty	approx. 46 kg
Loading volume (depends on programme) ¹⁾	max. 7 kg
Voltage	240V
Required fuse	13A
Total power	2350
Energy efficiency class	B
Energy consumption (7 kg of cotton, predrained at 1000 rpm) ²⁾	3,92
Use	Domestic
Permissible ambient temperature	+ 5°C to + 35°C

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Energy consumption in kWh
COTTON CUPBOARD DRY ²⁾	4,0 (7 kg load pre-drained at 800 rpm) 3,9 (7 kg load pre-drained at 1000 rpm) 3,6 (7 kg load pre-drained at 1400 rpm)
COTTON IRON DRY ²⁾	3.3 (7 kg load pre-drained at 1000 rpm)
SYNTHETICS CUPBOARD DRY ²⁾	1,3 (7 kg load pre-drained at 1200 rpm)

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

2) in accordance with EN 61121

Machine settings

Setting	Implementation
BUZZER permanent off	<ol style="list-style-type: none"> Turn the programme selector to any programme. Press simultaneously the DRYNESS and DELICATE buttons and hold down for approx. 5 seconds. The buzzer is by default always off. You can use BUZZER button to activate or deactivate sound but machine does not memorize your selection.
<p>Water hardness</p> <p><i>Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values.</i></p> <p><i>Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water.</i></p>	<ol style="list-style-type: none"> Turn the programme selector to any programme. Press simultaneously the DELICATE and START/PAUSE buttons and hold down for approx. 5 seconds. The current setting is on the display: <ul style="list-style-type: none"> –  low conductivity <300 micro S/cm –  medium conductivity 300-600 micro S/cm –  high conductivity >600 micro S/cm Press the START/PAUSE button sequentially until you set desired level. To memorize setting press simultaneously the the DELICATE and START/PAUSE buttons or turn knob to O OFF position

Hints for test institutes

Parameters possible to be checked by the Test Institutes:

- Energy consumption (corrected with final humidity) during the cupboard dry cotton cycle with nominal load.
- Energy consumption (corrected with final humidity) during the cupboard dry cotton cycle with half load.
- Final humidity (during cupboard dry cotton, iron dry cotton and cupboard dry easy care)

Installation

Important! The appliance must be moved in vertical position for transport.

Appliance positioning

- It is recommended that, for your convenience, the machine is positioned close to your washing machine.
- The tumble dryer must be installed in a clean place, where dirt does not build up.
- Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.
- To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.
- Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.
- The feet must never be removed. Do not restrict the floor clearance through deep-pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.

Important!

The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

Important! Should the appliance be moved, it must be transported vertically.

- Condensation efficiency (corrected with final humidity) during cupboard dry cotton cycle with nominal and half load

All the cycles have to be checked in accordance with EN 61121 (Tumble dryers for household use – Methods for measuring the performance).


Important! The appliance must not be installed behind the lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance.

Removing transport safety packaging


! Caution!

Before use all parts of the transport packaging must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

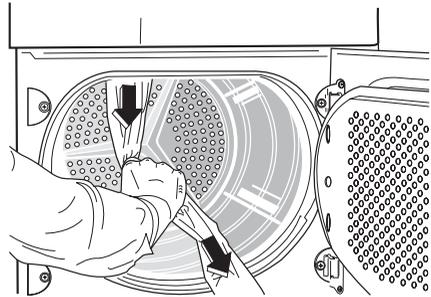

3. Remove foil hose and polystyrene padding from the machine.

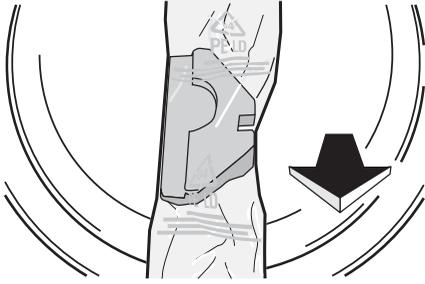


Drying rack unpacking


! **Caution!** Before use all packaging parts and rack must be removed from the drum

To unpack the rack:

1. Remove upper protection polystyrene parts by pulling them.

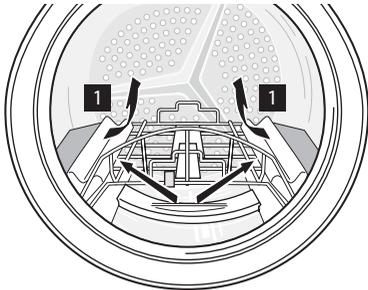

2. Lift slightly rack handle (not to the end). **For easiest unpacking turn the rack upside down**
3. Take it carefully out of the drum.

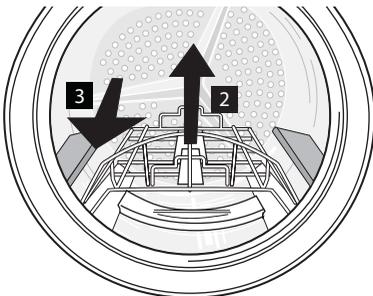

4. Remove from the drum rest of packing elements.


Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the rating plate. The rating plate is fitted near the loading aperture (see "Product description" chapter).

Connect the machine to an earthed socket, in accordance with current wiring regulations.

! **Warning! The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions. Should the appliance power supply cable need to be replaced, this must be carried out by an authorised service engineer or a qualified electrician. .**

The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved BS 1363/A fuse must be used.

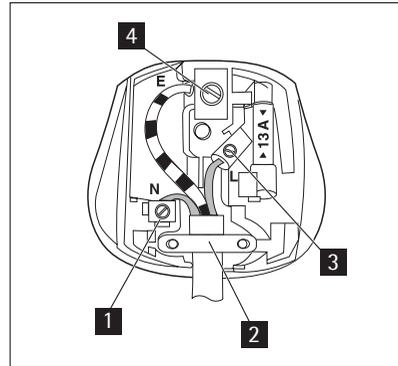

The wires in the mains lead are coloured in accordance with the following code:

- 1 Blue - Neutral
- 2 cord clamp
- 3 Brown - Live
- 4 Green and Yellow - Earth

The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol \perp or coloured green and yellow.

The wire coloured blue must be connected to the terminal «N» or coloured black.

The wire coloured brown must be connected to the terminal marked «L» or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

Warning! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

Warning! The power supply cable must be accessible after installing the machine.

Permanent connection

In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

Special accessories

The following special accessories are available from your Electrolux Service Force Centre or your specialist dealer:

Intermediate installation kits for stacked washer and iron aid appliance: These intermediate installation kits can be used to arrange the iron aid appliance and an automatic Electrolux washing machine (60cm wide, front loading) as a space-saving washer/iron aid stack. The automatic washing machine is at the bottom and the iron aid appliance is at the top. Two versions can be supplied:

- without stacker plate
- with extractable stacker plate

Read the manual supplied with the installation kit carefully.

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions - see chapter *What to do if...*

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners. In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No. is on rating plate stuck to the product - to find it see chapter *Product description*))

- Type of fault
- Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description: PNC: S No:

GB IE Guarantee/ Customer Service

**GREAT BRITAIN & IRELAND
Standard guarantee conditions**

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Exclusions

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacturer that are not marketed by Electrolux

Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning

0870 5 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading "What to do if..."

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and postcode.
2. Your telephone number.
3. Clear concise details of the fault.

European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of

4. The model and Serial number of the appliance (found on the rating plate).
5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.electrolux.co.uk

Customer Care Department, Electrolux Major Appliances

Addington Way, Luton
Bedfordshire, LU4 9QQ

	Tel:
Electrolux	08705 950 950 ¹⁾
AEG-Electrolux	08705 350 350 ¹⁾
Zanussi-Electrolux	08705 727 727 ¹⁾

1) Calls may be recorded for training purposes

For Customer Service in The Republic of Ireland please contact us at the address below:

Electrolux Group (Irl) Ltd

Long Mile Road, Dublin 12, Republic of Ireland

Tel: +353 (0)1 4090751

Email: service.eid@electrolux.ie

residence for this particular model or range of appliances.

- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com