
Quick Reference Guide

Parts Descriptions

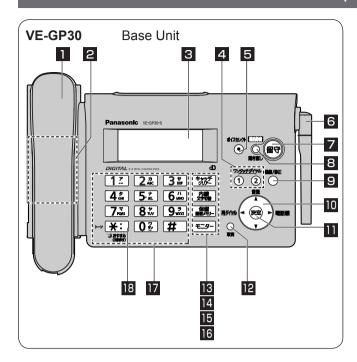


- Handset
- 2 Speaker
- 3 Liquid crystal display
- 4 One-touch Dial buttons
- 5 Voice select button
- 6 Antenna
- 7 Auto Answer button & indicator
- 8 Playback/Call Record button
- 9 Function/Edit button
- 10 Redial button (两外协(

Phone book button ((本)電話帳)



Volume control buttons ()

- 11 Set button
- 12 Cancel button
- 13 Flash/Clear button
- 14 Intercom/Character entry mode button
- 15 Hold/Caller ID button
- 16 Monitor button
- 17 Numeral/Character buttons
- 18 Tone button (to switch to DTMF tone)

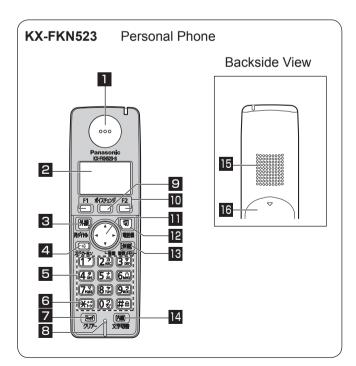

- 1 Earpiece
- 2 Liquid crystal display
- 3 Talk button
- 4 Speakerphone button
- 5 Numeral/Character buttons
- 6 Tone button (to switch to DTMF tone)
- 7 Flash/Clear button
- 8 Microphone
- 9 Voice change button
- 10 Multi-operation buttons
- III Redial button (再外加(◄



Phone book button (



Volume control button (



- 12 Off button
- 13 Hold/Caller ID button
- 14 Intercom/Character entry mode button
- 15 Speaker
- 16 Battery cover
- 本機は日本国内用です。国外での使用に対するサービスは致しかねます。
- This product is designed for use in Japan. Panasonic cannot provide service for this product if used outside Japan.

Basic Operations

 The number after the button shows the location of the button described in the previous page.

Base unit (VE-GP30)

■ To make a call

Lift the handset. → Dial.

■ To receive a call

When the phone rings... → Lift the handset.

To place the current call on hold Press (15) during a call.

(You can place the handset on the base unit.)

- To retrieve the held call
 - If you have returned the handset on the base unit, lift the handset.
 - If you have not returned the handset on the base unit, press again.
- To transfer the held call to the personal phone

 Press (14) during a call. (→When you
 use multiple personal phones, press 1 6

 (Intercom No.).) → Place the handset on the
 base unit when the other party answers.
- To use TAM (Telephone Answering Machine)

When you leave home, press (7) to turn on the indicator.

(To deactivate, press (again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages.

Then, the 🗃 indicator starts flashing.

→ When you return home, press (to play back the messages.

The (indicator turns off and the answering mode is deactivated.

After playing back the messages, press *
to erase the messages or press # to keep the messages.

To play back the messages while TAM is deactivated, press (8).

- *Up to 50 messages can be recorded for approx. 12 minutes in total.
- To hear recorded messages while away from home (Remote control)

Preparation before you leave home Store a remote control number.

0 0 6. → Enter the desired

4-digit number. → Press (決定), then press (決定).

When you leave home, press to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back...

- → Enter your remote control number.
- → Announcement → Press 2... → You will hear recorded messages if any.

NOTE

 This operation can be made only from telephones which can send DTMF signals.

Personal phone (KX-FKN523)

To make a call

Lift the personal phone from the charger and press 例 (3). → Dial......To end the call, place the personal phone on the charger or press 切 (12).

■ To receive a call

When the phone rings... → Lift the personal phone from the charger or press 例. → Talk......To end the call, place the personal phone on the charger or press 切.

■ To make a call using the speakerphone (Hands-free talk)

Press (4). → Dial.→ Talk to the microphone.....To end the call, place the personal phone on the charger or press 切.

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings... → Press 元 ...

→ Talk to the microphone..... To end the call, press 切.

- To place the current call on hold Press 保留 (13) during a call.
- To retrieve the held call Press 外線 or 保留.
- To transfer the held call to another personal phone

Press during a call. → Press 1 - 6 (Intercom No.).→ Place the personal phone on the charger, or press when the other party answers.