




## INSTRUCTION MANUAL

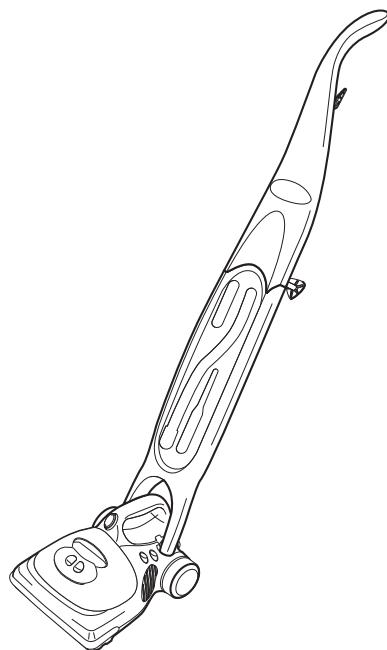

BEFORE RETURNING THIS PRODUCT  
FOR ANY REASON PLEASE CALL

**1-800-54-HOW-TO (544-6986)**

IF YOU SHOULD EXPERIENCE A PROBLEM  
WITH YOUR **BLACK & DECKER** PURCHASE,  
**CALL 1-800-54-HOW-TO (1-800-544-6986)**.  
IN MOST CASES, A **BLACK & DECKER** REPRESENTATIVE  
CAN RESOLVE YOUR PROBLEM OVER THE PHONE.  
IF YOU HAVE A SUGGESTION OR COMMENT,  
GIVE US A CALL. YOUR FEEDBACK IS VITAL  
TO THE SUCCESS OF **BLACK & DECKER'S** QUALITY  
IMPROVEMENT PROGRAM.

### SAVE THIS MANUAL FOR FUTURE REFERENCE.

VEA EL ESPAÑOL EN LA CONTRAPORTADA.

INSTRUCTIVO DE OPERACIÓN, CENTROS DE SERVICIO Y PÓLIZA DE GARANTÍA.

**ADVERTENCIA:** LÉASE ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO.

Form No. 243935-00 REV. 1 Cat. # FV7000 (SEPT. 02) Copyright © 2001 Black & Decker Printed in China

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS CAREFULLY BEFORE USING THE UNIT.**

**WARNING:** This product contains chemicals, including lead, known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling.

**WARNING:** To reduce the risk of fire, electrical shock or injury:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use or store outdoors or on wet surfaces.
- To prevent tripping accidents, store vacuum after each use.
- Close supervision is necessary when any appliance is used near children. Do not allow to be used as a toy.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, is left outdoors, dropped into water or is damaged in any manner. Return the appliance to any authorized service facility.
- Do not pull or carry by cord, do not use cord as a handle, do not close a door on cord or pull cord around sharp edges or corners, do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into unit openings. Do not use with any openings blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra caution when cleaning on stairs.
- Keep work areas well lit.
- Do not vacuum any electrical appliances while they are plugged in.
- Do not pick up sharp objects that may damage vacuum or filters.
- Do not use to pick up any liquids, toxic substances, flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not insert accessories when unit is running.
- Do not vacuum burning or smoking materials, such as lit cigarette butts, matches or hot ashes.
- Do not use on or near hot surfaces.

- Do not use without dirt bowl and filters in place.
- This appliance is intended for household use only and not for commercial or industrial use.

### SAVE THESE INSTRUCTIONS

### Unpack / Déballage / Desempacado

FIG. 1

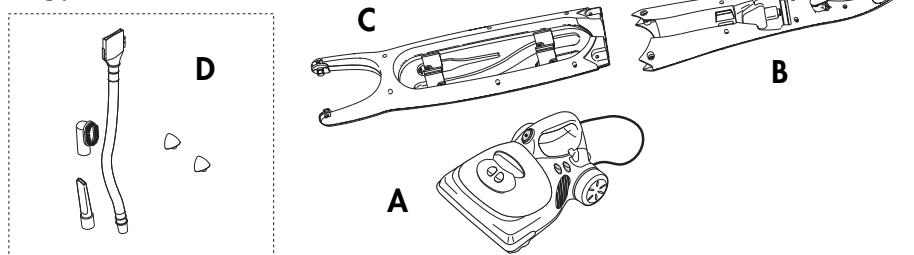


FIG. 2

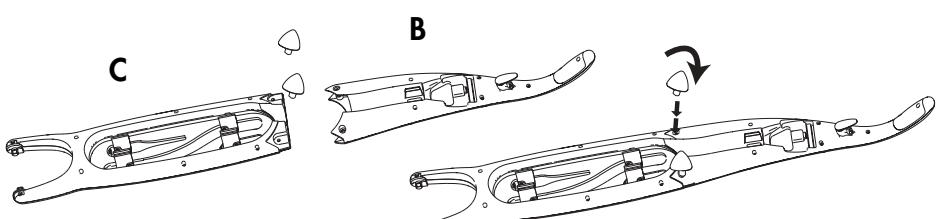


FIG. 3

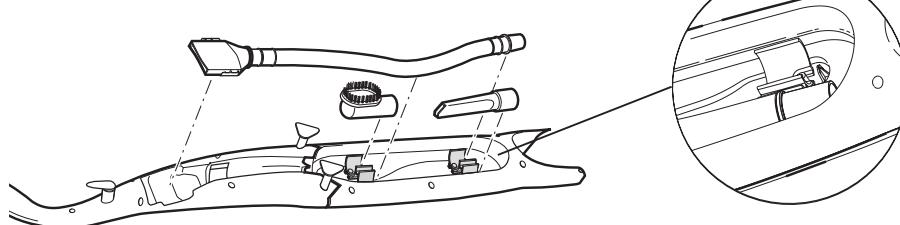


FIG. 4


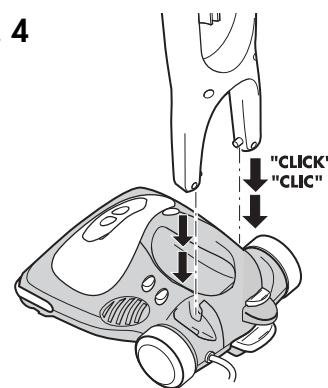


FIG. 5

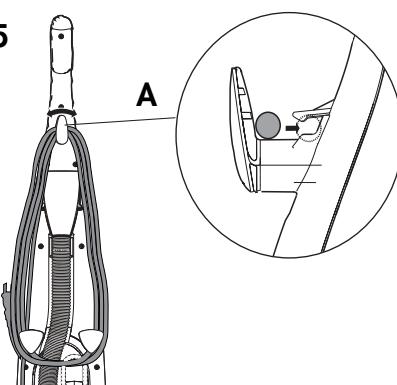

### Use / Utilisation / Uso

FIG. 6

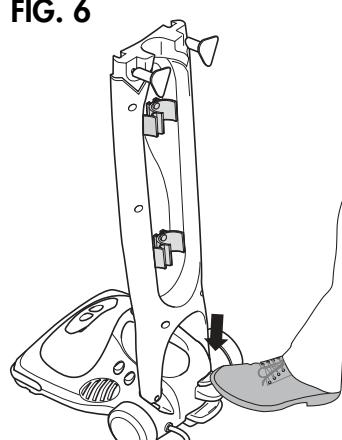


FIG. 7A

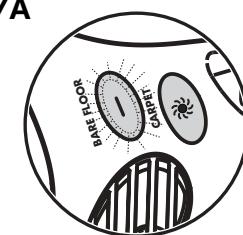


FIG. 7B

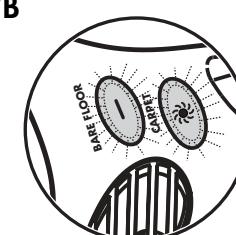


FIG. 8

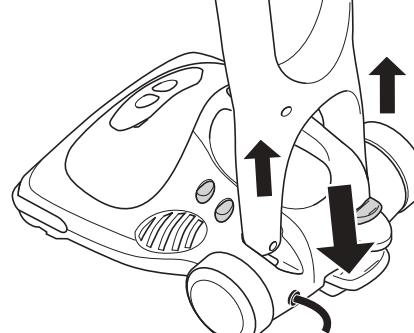


FIG. 9

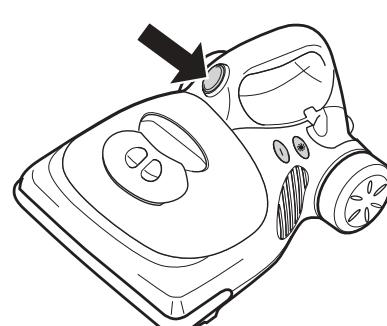


FIG. 10

