

CODE ALARM

Model CATX500

TRANSMITTER PROGRAMMING

- 1) Enter the vehicle, and turn the ignition switch to the ON position.
- 2) Press and release the Programming button switch 3 times.
- 3) Press and hold the LOCK button of the transmitter you wish to program.
- 4) The lights will flash 1 time, indicating that the system is accepting the programming of channel #1 which is lock.

"Repeat step 3 for each transmitter you wish to program"

- 5) Press and release the valet push button switch 1 time to advance to channel 2.
- 6) Press and hold the UNLOCK button of the transmitter you wish to program.
- 7) The lights will flash 1 time, indicating that the system is accepting the programming of channel #2 which is unlock.

"Repeat step 6 for each transmitter you wish to program"

- 8) Press and release the valet push button switch 1 time to advance to channel 3.
- 9) Press and hold the TRUNK button of the transmitter you wish to program.
- 10) The lights will flash 1 time, indicating that the system is accepting the programming of channel #3 which is trunk.

"Repeat step 9 for each transmitter you wish to program"

- 11) Press and release the valet push button switch 1 time to advance to channel 4.
- 12) Press and hold the STAR button of the transmitter you wish to program.
- 13) The lights will flash 1 time, indicating that the system is accepting the programming of channel #4 which is remote start.

"Repeat step 12 for each transmitter you wish to program"



Technical Support (800) 421-3209
or go to
<http://techservices.codesystems.com>