


# Wireless Telephone Quick Reference Guide

Fujitsu F9600

DT14DS

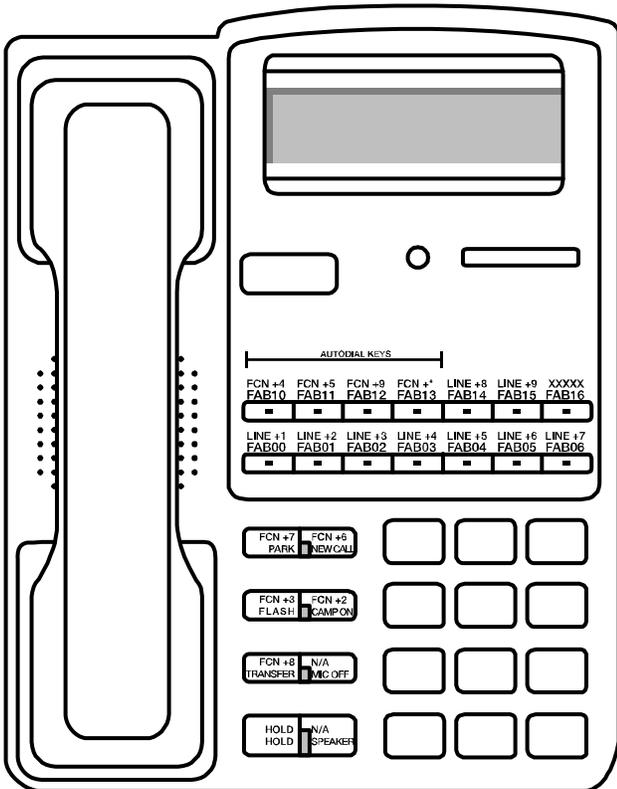


## DT14DS

The diagram above shows how the DT14DS keypad corresponds to the Wireless Telephone.

Pressing **LINE** followed by a digit (1-8) on the Wireless Telephone is equivalent to pressing one of the Feature Access buttons on the DT14DS. **LINE + 1** is reserved as the prime line appearance and **LINE + 9** is reserved for message waiting and cannot be used for any other feature.

**FCN 4, 5, 9** and \* on the Wireless Telephone can be programmed for autodial capabilities.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	CAMP ON	
FCN + 3	FLASH	
FCN + 4	(AutoDial)	
FCN + 5	(AutoDial)	
FCN + 6	NEW CALL	
FCN + 7	PARK	
FCN + 8	XFER	
FCN + 9	(AutoDial)	
FCN + *	(AutoDial)	
FCN + #	EXIT MENUS	

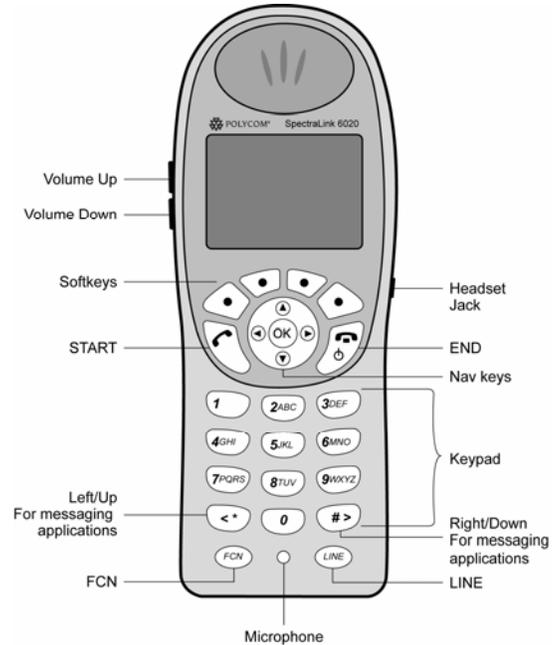

## SpectraLink 6020 Wireless Telephone

**On/Off** Press and hold **END**. Two chirps on, one chirp off

**Make a call** Press **START** to get dial tone.

**Hang up** Press **END**. Be sure to do this at the end of each call.

**Answer call** Press **START**. Line indicator comes on steady when the call is answered.

**Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.

**Hold** Press **HOLD**

**Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.

**Mute On/Off** Press the **MUTE** softkey.

**Function** Pressing **FCN** while off hook allows you to scroll through menu screens.

**User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

