

IVM 4


Main Menu Overview

SST 4 / SPR 4

© AKG Acoustics 2008




SST 4 – MAIN MENU – OVERVIEW

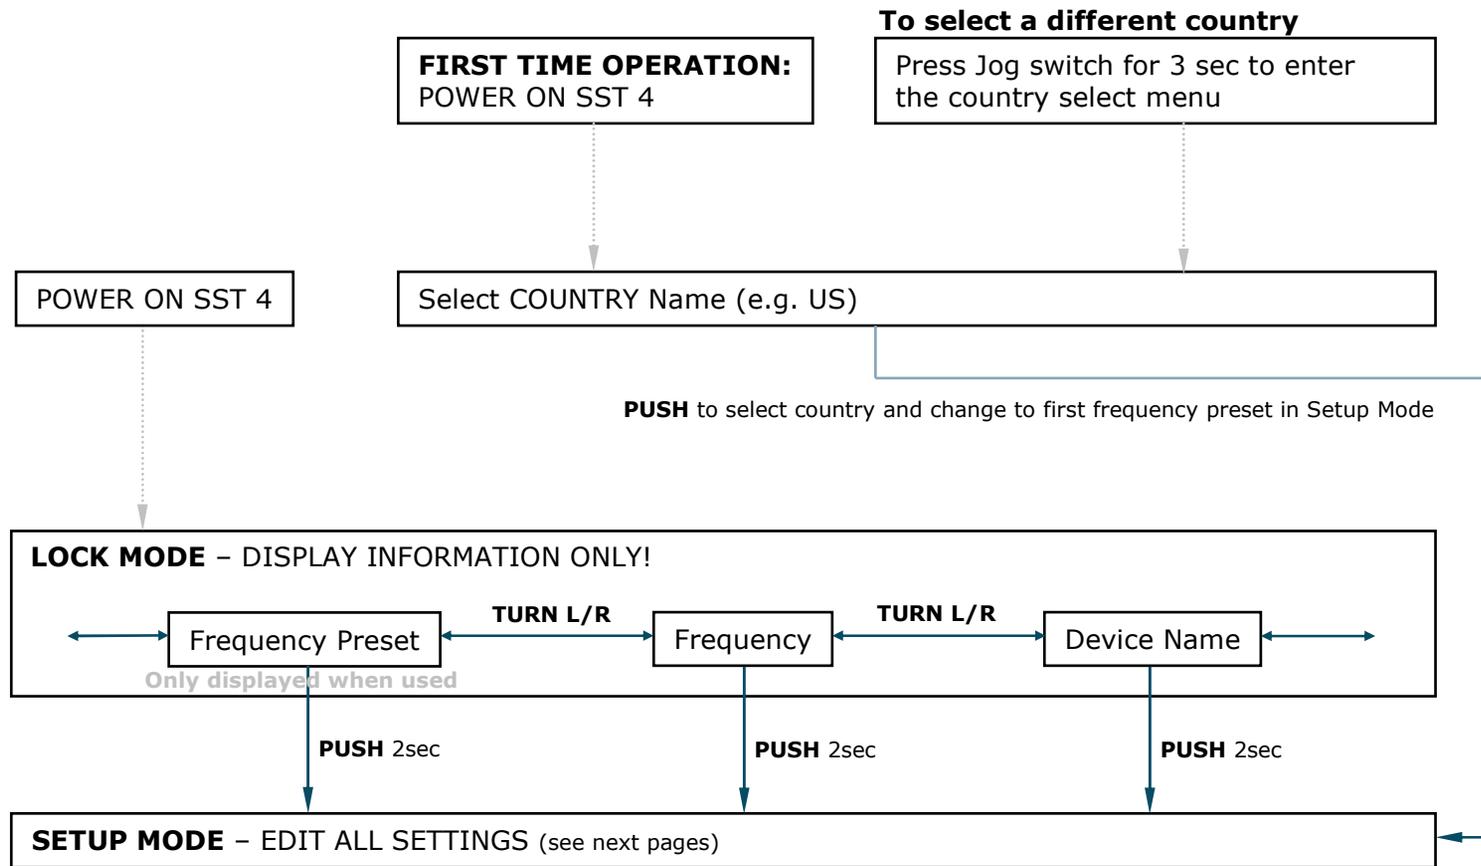


IVM 4

SST 4 – MAIN MENU – SETUP MODE 1/3

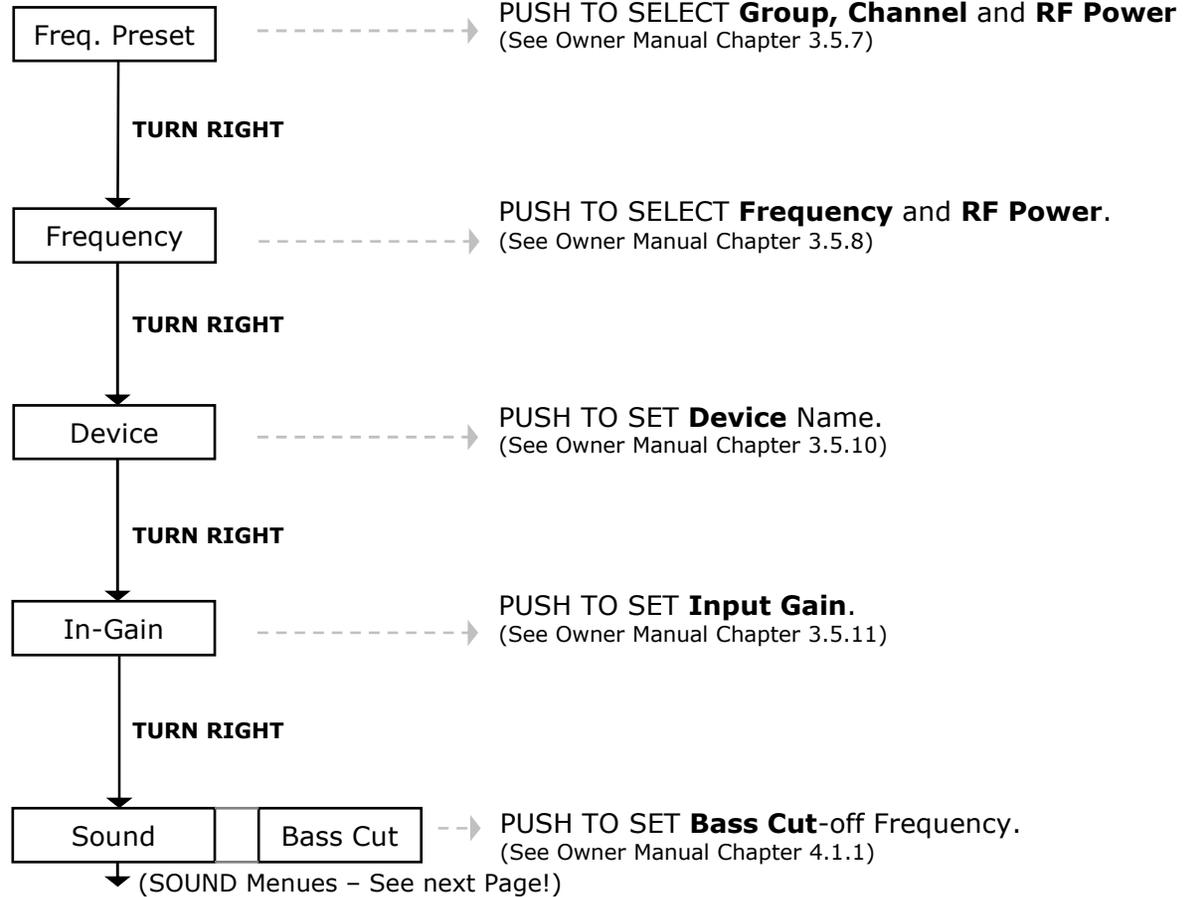

SST 4 – MAIN MENUE - SETUP MODE 2/3

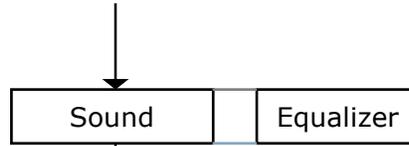


-----> PUSH TO SELECT **EQ** Preset.
(See Owner Manual Chapter 4.1.1)

TURN RIGHT




-----> PUSH TO SELECT **Room Simulation** Preset.
(See Owner Manual Chapter 4.1.1)

 TURN RIGHT



-----> PUSH TO SELECT **Compressor** Preset.
(See Owner Manual Chapter 4.1.1)

 TURN RIGHT



-----> PUSH TO ACTIVATE/DEACTIVATE **Bypass**.
(See Owner Manual Chapter 4.1.1)


TURN RIGHT




-----> PUSH TO ENTER **Extra** Menu.
TURN RIGHT to return to **Frequency Preset** Menu.



SST 4 – MAIN MENUE - SETUP MODE 3/3




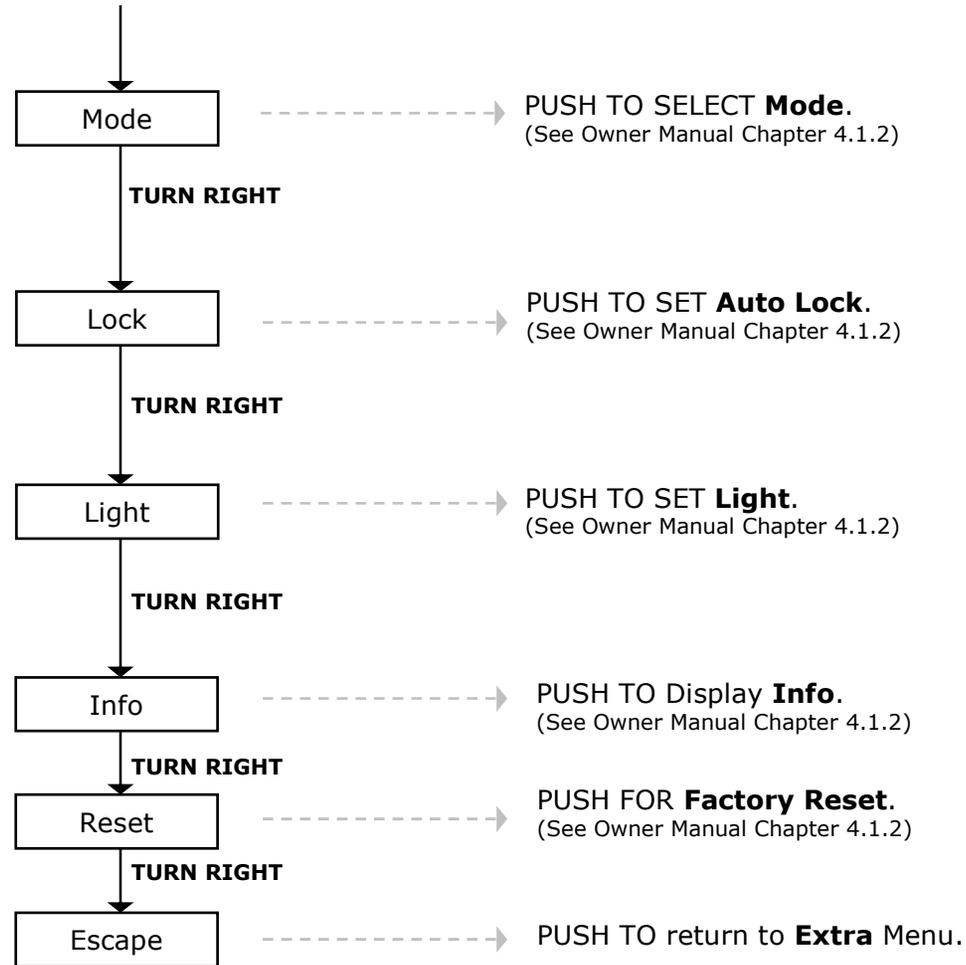


SPR 4 – MAIN MENUE – OVERVIEW

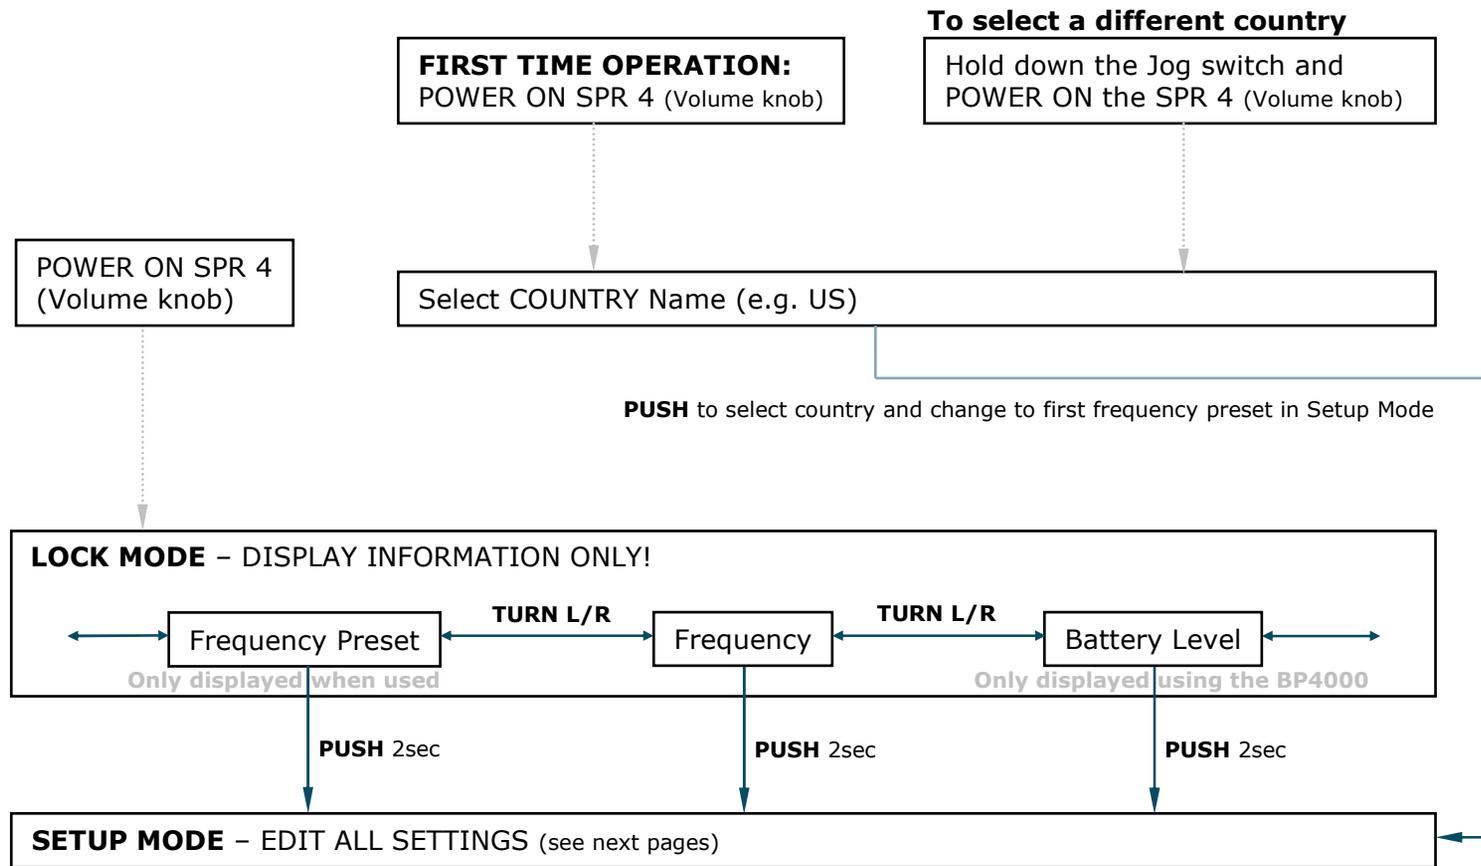

IVM 4

SPR 4 – MAIN MENUE - SETUP MODE 1/2

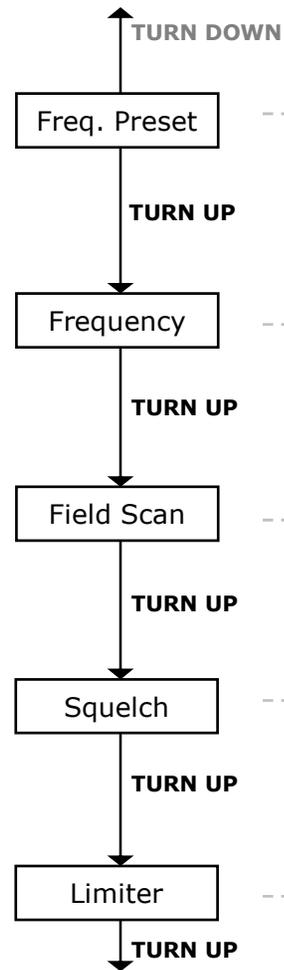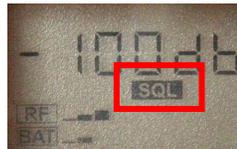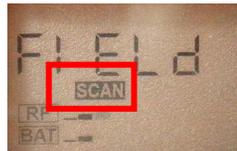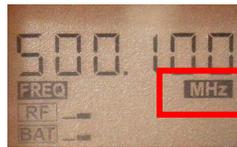

PUSH DOWN TO goto **Auto Channel** Menu.

PUSH TO SELECT Frequency **Preset**.
(See Owner Manual Chapter 3.4.6)

PUSH TO SELECT **Frequency**.
(See Owner Manual Chapter 3.4.6)

PUSH TO START **Field** Scan.
(See Owner Manual Chapter 4.2.1)




PUSH TO SET **Squelch** Level.
(See Owner Manual Chapter 4.2.2)

PUSH TO ACTIVATE/DEACTIVATE Safety **Limiter**.
(See Owner Manual Chapter 4.2.3)



IVM 4

SPR 4 – MAIN MENUE - SETUP MODE 2/2

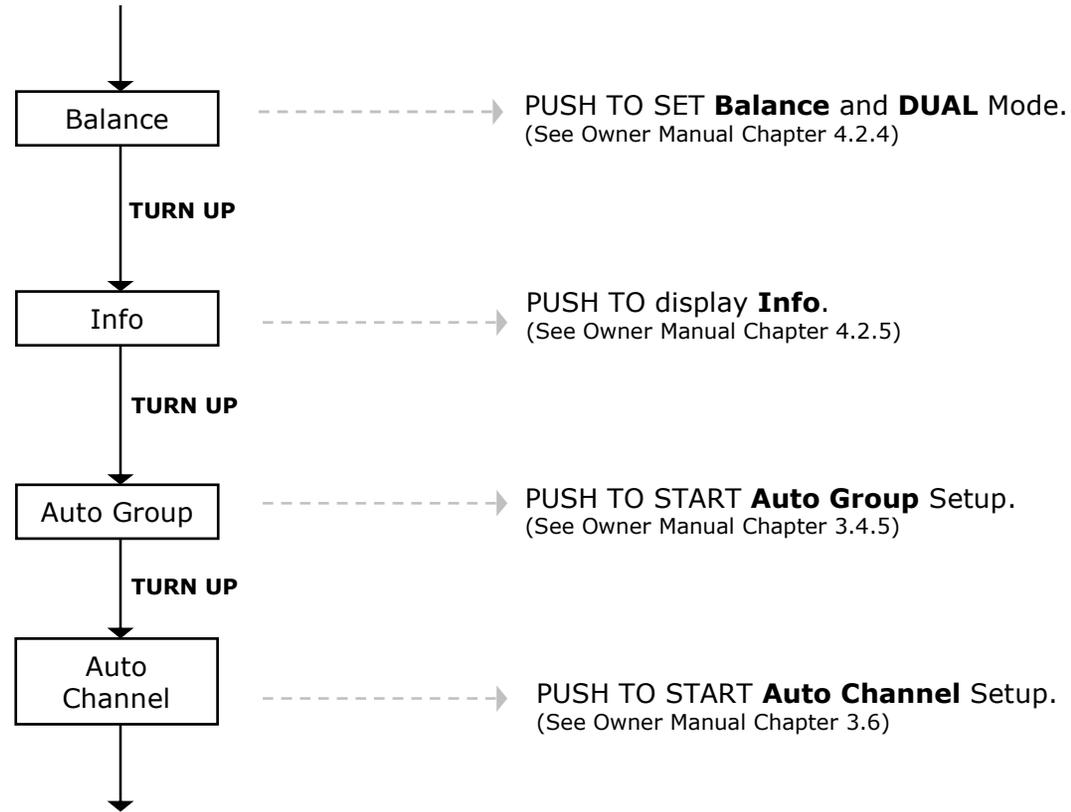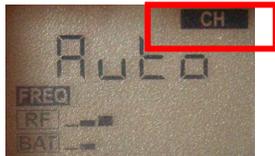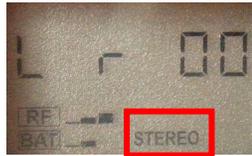

TURN UP TO return to **Frequency Preset** Menu.

