


LAVATHERM 59800

Condenser Dryer with Heat Pump

User Information

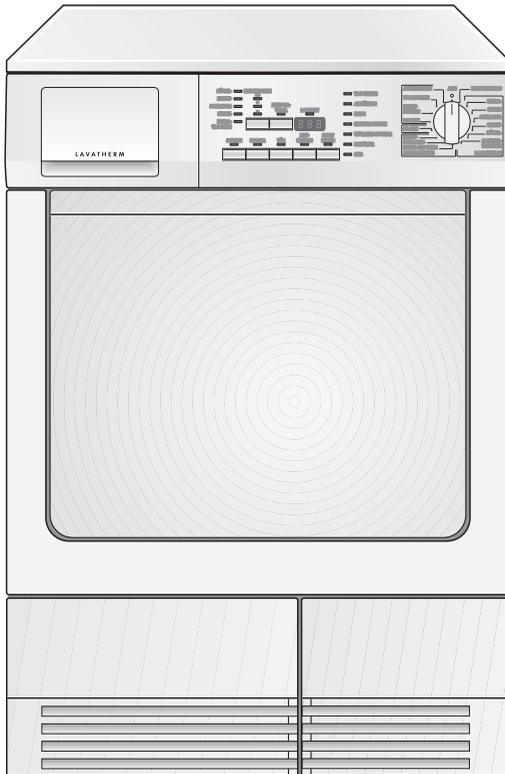

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.

Pass it on to any subsequent owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning! Notes that concern your personal safety.

Important! Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety	5
Disposal	7
Environmental tips	8
Description of machine	9
Operating screen	9
Programme overview	10
Before the first drying cycle	12
Sorting and preparing laundry	12
Drying	13
Switching machine on / switching light on.....	13
Opening loading door / loading laundry.....	13
Selecting the programme.....	13
Selecting additional functions.....	14
Setting time delay.....	15
Starting the programme.....	15
Changing programme.....	15
Putting in extra items or taking items out before end of programme....	16
Drying cycle complete / removing laundry.....	16
Cleaning and maintenance	17
Cleaning fluff filter.....	17
Cleaning the door seal.....	18
Emptying the condensate tank.....	19
Cleaning the fluff filter.....	20
Cleaning the drum.....	22
Clean operating screen and housing.....	22
What to do if	22
Troubleshooting by yourself.....	22
Changing the bulb for interior lighting.....	24
Programming options	25
Technical data	26
Consumption values	26

Installation and connection instructions	27
Installation safety instructions	27
Transporting the appliance	28
Removing transport safety equipment	29
Electrical connection	29
Changing door stop	30
Special accessories	32
Guarantee conditions	33
Customer services	34
Service	35

Operating Instructions



Safety

Before first starting up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.

Intended use

- The dryer is intended for drying standard laundry in domestic environments.
- Conversions or modifications to the dryer are not permitted.
- The laundry must not contain flammable solvents (benzene, alcohol, stain remover, etc.) . Risk of fire and/or explosion! Laundry which has come into contact with such substances must be rinsed thoroughly by hand before drying.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place items of laundry in the dryer which contain foam rubber or materials similar to rubber. Risk of fire!
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Ensure that explosive objects (e.g. cigarette lighters, spray cans, etc.) do not enter the dryer with the laundry. Risk of fire and/or explosion!
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Do not use the machine if there are no lint filters or if these are damaged. Risk of fire!
- Clean the fluff filter behind the base door regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.

- The covering bonnet of the bulb for the drum light must be screwed down tightly.

Child safety

- Keep packaging away from children. Risk of suffocation!
- Children can often not see the dangers associated with electric machines. Never leave unsupervised children near the dryer.
- Ensure that children and small animals cannot climb into the dryer's drum. Risk of death! Keep the dryer door shut whenever it is not being used.

General safety

- Only specialists may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or fully unscrew the screwed-in fuse.
- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

Disposal



Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

The heat pump of your dryer contains a closed refrigerant circuit filled with the refrigerant R134a which is free from fluoro-chloro-hydrocarbons. The refrigerant circuit in the heat pump must not be damaged.



Warning! Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug.

Destroy loading door lock. Children cannot then lock themselves in the machine and put their lives at risk.




Environmental tips

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
 - always keep the ventilation slots on the base of the dryer unobstructed;
 - use the loading volumes specified in the programme overview;
 - ensure you have good ventilation in the installation room;
 - clean the micro-fine filter and fine strainer after each drying cycle;
 - spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the COTTONS STORAGE DRY (KATOEN KASTDROOG) programme.


Revolutions per minute	Pre-draining		Drying cycle	
	Residual dampness in litres	as a %	Energy in kWh	Costs in euros ¹⁾
800	4.2	70	2,4	0,36
1000	3,6	60	2,1	0,32
1200	3.2	53	1,9	0,29
1400	3.0	50	1,8	0,27
1800	2.5	42	1,5	0,23

1) Tariff: 0.15 Euro/kWh

Description of machine

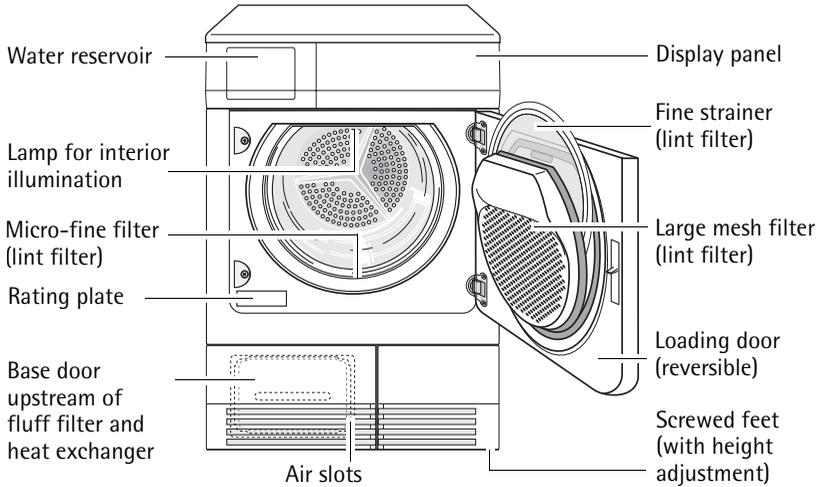

Operating screen

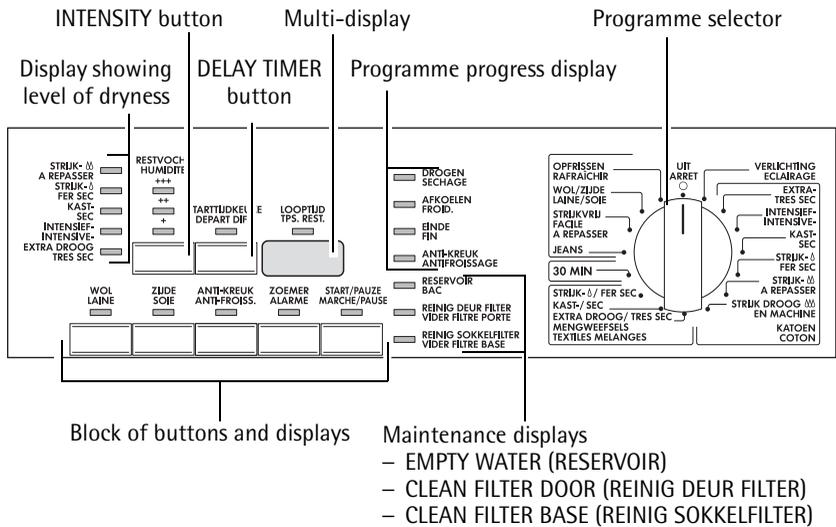

Programme overview

Programmes	max. load (weight when dry)	Additional functions			Application/properties	Care symbols	
		INTENSITY (RESTVOCHT)	LONG ANTICREASE (ANTI-KREUK)	SIGNAL (ZOEMER)			
COTTONS (KATOEN)	EXTRA DRY (EXTRA-DROOG)	6 kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes.	 
	INTENSIVE DRY (INTEN-SIEFDROOG)	6 kg	•	•	•	Thorough drying of thick fabrics, e.g. terry towelling items, towels.	 
	STORAGE DRY (KASTDROOG)	6 kg	•	•	•	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	 
	DAMP (STRIJKDROOG ♪)	6 kg	•	•	•	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	 
	HAND IRON (STRIJKDROOG ♫)	6 kg	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	 
	MACHINE IRON (STRIJKDROOG ♫♫)	6 kg	•	•	•	For cotton or linen laundry which is also to be machine pressed, e.g. bedding, table linen.	 
EASY CARES (MENGWEEFSELS)	EXTRA DRY (EXTRA-DROOG)	3 kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. pull-overs, bedding, table linen.	  
	STORAGE DRY (KASTDROOG)	3 kg	•	•	•	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	  
	DAMP (STRIJKDROOG ♪)	3 kg	•	•	•	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	  

Programmes	max. load (weight when dry)	Additional functions			Application/properties	Care symbols
		INTENSITY (RESTVOCHT)	LONG ANTICREASE (ANTI-KREUK)	SIGNAL (ZOEIER)		
30 MIN	1 kg	-	•	•	For further drying of individual items of laundry or for small volumes of less than 1 kg.	  
LEISURE (JEANS)	6 kg	•	•	•	Special programme for leisure clothing, such as jeans, sweatshirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams).	 
EASY IRON (STRIJKVRIJ)	1 kg	-	•	•	Special programme with anti-crease mechanism for easy care fabrics such shirts and blouses; for minimum ironing effort. The result depends on the type of fabric and its finish. (The load corresponds to approx. 5 to 7 shirts.) Recommendation: Place fabrics in the dryer straight after spinning. Once dried, immediately remove fabrics and place on a clothes hanger.	  
WOOL (WOL)	1 kg	•	-	•	Special programme, for drying woollen fabrics after they have been washed, using warm air at minimum mechanical load (Follow section "Sorting and preparing washing"). Recommendation: Remove fabrics immediately after drying, as no anti-crease programme follows.	
SILK (ZIJDE)	1 kg	•	•	•	Special programme for drying silk using warm air and gentle movement.	
REFRESH (OPFRISSEN)	1 kg	-	-	•	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning products. (Only use those products which are declared as suitable for the dryer by the manufacturer; please observe the manufacturer's instructions for use.)	

Before the first drying cycle



If the appliance was not transported in an upright position, leave it to stand for 12 hours before connecting it to the electricity supply and using it for the first time, so that the oil can flow back to the compressor. Otherwise the compressor could be damaged.

1. In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 MIN) with damp cloths in the machine.

Sorting and preparing laundry

Sorting laundry

- Sorting by fabric type:
 - Cotton/linen for programmes in the COTTON (KATOEN) programme group.
 - Mixed fibres and synthetics for programmes in the EASY CARES (MENGWEEFSELS) programme group.
- Sorting by care label. The care labels mean:

Drying in the tumble dryer possible in principle	Dry at normal temperature	Dry at reduced temperature	Drying in the tumble dryer not possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the EXTRA DRY (EX-TRADROOG) programme. Items may shrink!
- Wool and wool-like textiles can be dried using the WOOL (WOL) programme. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together which are similar or the same with respect to material, colour and weight. Please dry heavy laundry items made of wool separately.

Preparing laundry

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Drying

Switching machine on / switching light on

Turn the programme selector to any programme or turn it to LIGHT (VERLICHTING). The machine has been switched on. When the loading door is opened, the drum is illuminated.

Opening loading door / loading laundry


1. Open loading door:
Use force to push against the loading door (push point )
2. Load your laundry (do not force it in).

 **Caution!** Do not jam laundry in between the loading door and rubber seal.


3. Close loading door securely. Lock must audibly lock.

Selecting the programme

Use the programme selector to set the programme you require. The probable programme run time is displayed (in minutes) on the multi-display.

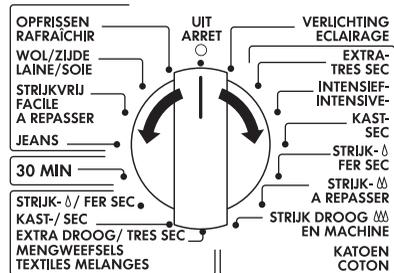

With the programme knob position WOOL/SILK (WOL/ZIJDE), the desired programme can be selected with the WOOL (WOL) or SILK (ZIJDE) buttons. If no button is pressed, the WOOL (WOL) programme is automatically set.

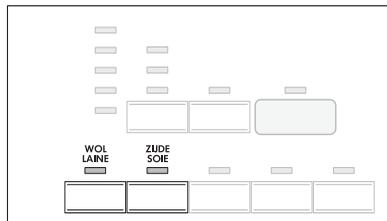

Selecting additional functions

INTENSITY (RESTVOCHT)



For precise setting of the residual moisture content of the laundry, the degrees of dryness +, ++ or +++ can be set in addition to most programmes. Laundry becomes drier from + to +++.

1. Press the INTENSITY (RESTVOCHT) button repeatedly until the light for the residual moisture required is lit.

In the programmes WOOL (WOL) or SILK (ZIJDE) further drying can also be set by restarting the programmes with the residual moisture levels +, ++ or +++ set in addition, as required. In the case of a drying cycle with relatively dry laundry, the length of the programme cycle displayed at the beginning is corrected after a while.

Important: Do not over dry wool or silk.

If required, press the LONG ANTICREASE (ANTI-KREUK) or SIGNAL (ZOEMER) buttons.

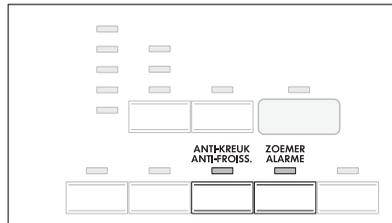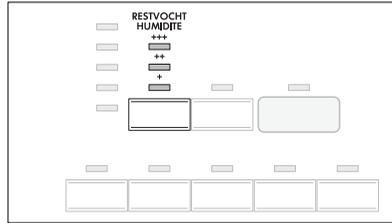

LONG ANTICREASE (ANTI-KREUK)

If this additional function is selected, the anti-crease phase at the end of the drying cycle is lengthened by 60 minutes. The laundry can be removed at any time during the anti-crease phase.

SIGNAL (ZOEMER)

When the drying cycle has finished, an intermittent acoustic signal will sound.

Setting time delay

- i** With the DELAY TIMER (STARTTIJDKEUZE) button, you can delay the start of a programme by between 30 minutes (30') and a maximum of 23 hours (23h).
1. Select the programme
 2. Press the DELAY TIMER (STARTTIJDKEUZE) button as many times as necessary until the required start delay appears on the multi display, e.g. 12h if the programme is to be started in 12 hours. The DELAY TIMER (STARTTIJDKEUZE) display is illuminated.
- i** If 23h is displayed and you press the button again, the time delay will be cancelled. The display will show 0' and then the duration of the selected programme.
3. To activate the delay timer, press the START/PAUSE (START/PAUZE) button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. 12h, 1h, 10h, ... 30' etc).
- i** Until the start of the programme the drum is moved at longish intervals to loosen the laundry.

Starting the programme

Press the START/PAUSE (START/PAUZE) button. The programme is started.

The programme progress display and the display showing the level of dryness show drying progress.

Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF (UIT) and then reset the programme.

- i** The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option button (excluding the SIGNAL (ZOEMER) button) is pressed, **ERR** appears in the multidisplay. The drying programme is not however affected by this (laundry protection).

Putting in extra items or taking items out before end of programme

1. Open loading door



Warning! Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close loading securely. Lock must audibly lock.
4. Press the START/PAUSE (START/PAUZE) button to continue the drying cycle.

Drying cycle complete / removing laundry

Once the drying cycle is complete, the END (EINDE) and CREASE GUARD (ANTI-KREUK) indicators light up. If the SIGNAL (ZOEMER) button has been pressed, an acoustic signal sounds intermittently.



The drying cycles (except for the WOOL (WOL) programme) are automatically followed by an anti-crease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.) If LONG ANTICREASE (ANTI-KREUK) has been selected, the anti-crease phase is lengthened by 60 minutes.

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Cleaning and maintenance" section.)
3. Remove laundry.
4. Turn the programme selector to OFF (UIT).
Important: After each drying cycle
 - Clean the micro-fine filter and fine filter
 - Drain the condensed water container (See section "Cleaning and maintenance".)
5. Close door.

Cleaning and maintenance


Cleaning fluff filter

To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.




Caution! Never operate the dryer without fluff filters or with damaged or blocked fluff filters.


1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

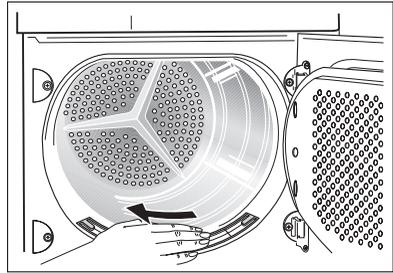

3. Push down unlock button on large mesh filter.
Large mesh filter jumps up.

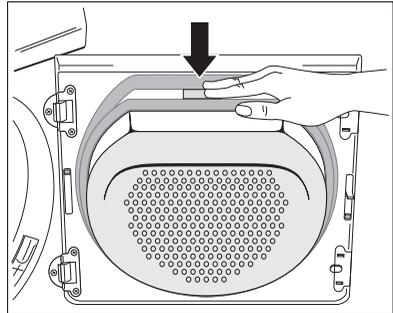

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

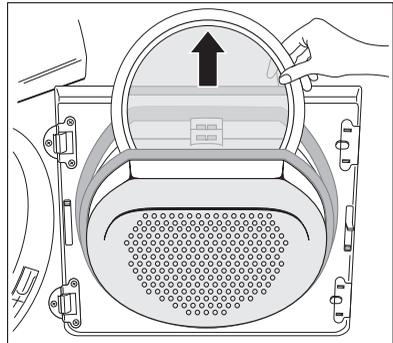


Clean the entire filter area




The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.
9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.

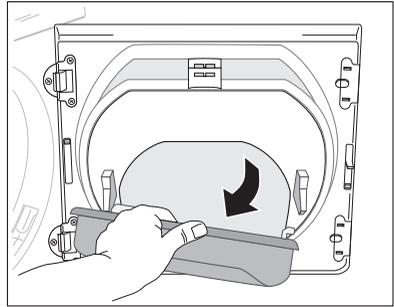

If the fine strainer is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

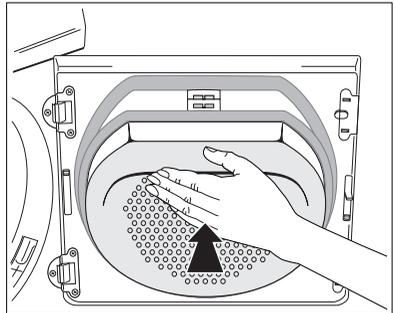

Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

Emptying the condensate tank


Empty condensate tank after every drying cycle.

If the condensate tank is full, an active programme will break off automatically and the EMPTY WATER (RESERVOIR) display will light up. In order to continue the programme, the condensate tank must first be emptied.



Warning! The condensate is not suitable for drinking or for preparing foodstuffs.


1. Take out drawer containing condensed water container completely (1) and pull up the condensed water container's drainage pipe as far as it will go (2).

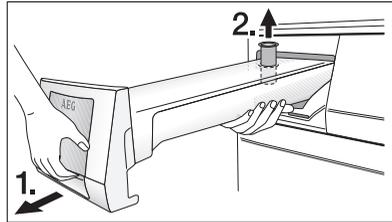

2. Pour condensed water out into a basin or similar receptacle.
3. Slide outlet connections in and re-fit condensate tank.

If the programme has been interrupted as a result of the condensate tank being full:

Press the START/PAUSE (START/PAUZE) button to continue the drying cycle.

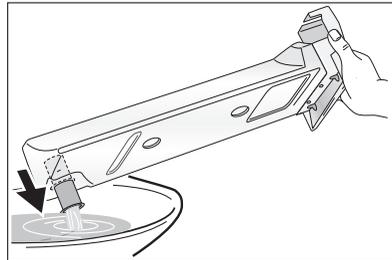

The condensate tank has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 800 revolutions/minute.



The condensate can be used as distilled water, e.g. for steam ironing. However first filter the condensate (e.g. with a coffee filter) to remove any residue and small pieces of fluff.

Cleaning the fluff filter

If the indicator CLEAN BASE FILTER (REINIG SOKKELFILTER) lights up, the fluff filter and the filter mat in the base of the appliance must be cleaned.



To protect the heat pump from dirt, the dryer is fitted with a special filter mat, which is located in the filter housing. Here too large amounts of fluff build up over time, which affect the function of the appliance.




Important

- Operating when the fluff filter is clogged with fluff can damage the dryer. This also increases energy consumption.
- Never operate the dryer without the fluff filters.
- Do not use the dryer without the filter mat. A dirty heat pump requires more energy and can only be cleaned up by means of a costly process.


1. Open door.

2. Open door in plinth: To do this, press the release button on the bottom of the door aperture and open the door in the plinth to the left.

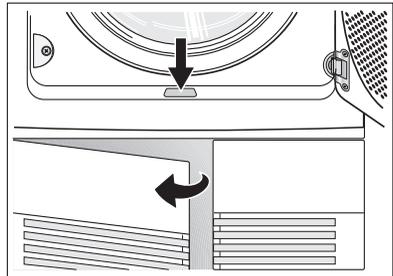


3. Pull filter housing out of the base by the handle.

4. Clean the inside of the door, the fluff filter chamber and the rubber seals of fluff.

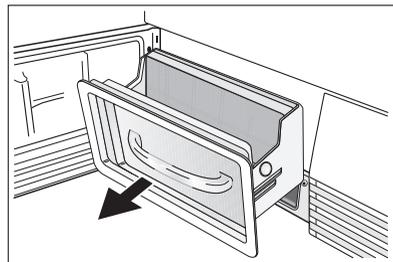

5. Remove fluff from the fluff filter on the floor of the base with a damp hand.

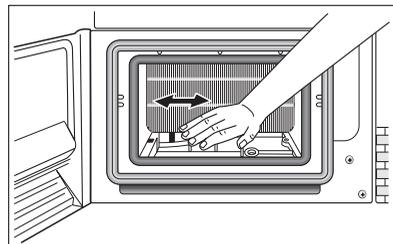



6. To clean the filter mat:
Remove filter mat from filter housing. To do this, press the pressure points on the sides and pull the filter mat and frame up and out of the housing.

7. Take the filter mat out of the frame and wash it by hand or use a vacuum cleaner, when it has dried out. Fluff, which has become stuck in the filter mat and has not been removed by washing, does not affect the function.

8. Insert the filter mat in the frame and then insert with the frame into the filter housing.




Important: The filter mat must engage tightly with the frame. Check that the mat is sitting snugly in the frame, especially after inserting it into the filter housing.

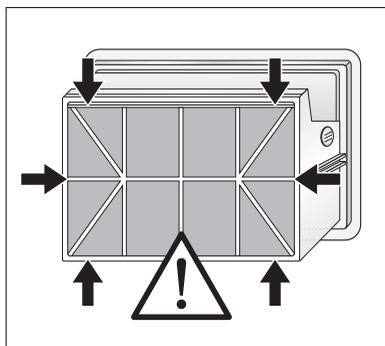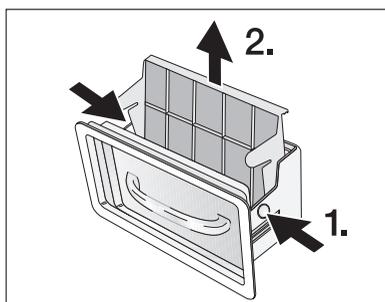

9. As necessary, approx. once every 6 months, remove the fluff from the heat exchanger using the sponge supplied. When doing this, please use rubber gloves.

Tip: The fluff can be removed more easily if it is first dampened e. g. with a laundry dampener.

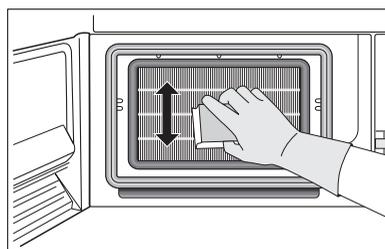

10. Re-insert filter housing with frame and filter mat in the base of the appliance.

Note: If the filter mat and frame are not inserted in the filter housing, the filter housing cannot be pushed into the base of the appliance.

11. Close door in plinth.



The indicator CLEAN BASE FILTER (REINIG SOKKELFILTER) only goes out when the programme knob has been positioned to OFF (UIT).

Cleaning the drum



Caution! Do not use abrasives or steel wool to clean the drum.



Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean operating screen and housing



Caution! Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

What to do if ...

Troubleshooting by yourself

If, during operation, the error code (E plus number or letter) appears on the multi-display: Switch the machine off and on again. Reset programme. Press the START/PAUSE (START/PAUZE) button
If the error is still displayed, please inform your local Service Force Centre and quote the error code.

Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Have you pressed the START/PAUSE (START/PAUZE) button?	Press the START/PAUSE (START/PAUZE) button again.

Problem	Possible cause	Remedy
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Overview of programmes" section).
	Lint filters clogged.	Clean lint filters.
	Fluff filter clogged.	Clean fluff filter.
	Overloading of laundry.	Observe recommended loading volumes.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
		Make an adjustment using the INTENSITY (RESTVOCHT) function (see chapter "Drying, Selecting additional functions").
Loading door does not close.	Fine strainer not in place and/or large mesh filter not locked in place.	Install fine strainer and/or snap large mesh filter into place.
When a button is pressed, <i>Err</i> appears in the multi-display.	Washing protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF (UIT). Set the programme again.
Drum light does not work.	Programme selector in OFF (UIT) position.	Turn programme selector to LIGHT (VERLICHTING) or to any programme.
	Defective light bulb.	Replace light bulb (see next section).
PROGRAMME TIME (LOOPTIJD) display changes erratically or stays unchanged for a long time.	Programme time is corrected automatically depending on type and volume of laundry and level of dampness.	Automatic process; this is not a machine fault.
Programme inactive, EMPTY WATER (RESERVOIR) display illuminated.	Condensate tank is full.	Empty condensate tank, then start programme with START/PAUSE (START/PAUZE) button.
Drying cycle ends shortly after programme starts. END (EINDE) display illuminated.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g. INTENSIVE DRY [INTENSIEFDROOG] instead of STORAGE DRY [KASTDROOG]).

Problem	Possible cause	Remedy
Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete“).	Lint filter clogged.	Clean lint filter.
	Fluff filter clogged.	Clean fluff filter.
	Load volume too big.	Reduce load volume.
	Laundry insufficiently spun.	Laundry must be adequately spun.
	Particularly high room temperature. Temporary switching off of the compressor to avoid overload.	Automatic process, there is no fault with the appliance. If possible, lower the room temperature.

Changing the bulb for interior lighting

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from the Customer Care Department, ET no. 112 552 000-5.



Important: When the appliance is switched on, the interior lighting switches itself off after 5 minutes when the door is open.



Warning: Do not use standard bulbs! These develop too much heat and may damage the appliance.



Warning: Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw cover back down.



Warning: For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

Programming options

Objective	Implementation
<p>Permanently programme in the audible signal which reminds you that the programme is complete.</p>	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the SIGNAL (ZOEMER) button and hold down for approx. 5 seconds. A brief signal sounds several times. The SIGNAL (ZOEMER) display flashes several times. The setting is permanently programmed. The setting is cancelled as described under 1 and 2.
<p>Adjust "level of dryness" detection: If the laundry is slightly drier or slightly damper at the end of the programme than with the standard setting.</p>	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the SILK (ZIJDE) and SIGNAL (ZOEMER) buttons at the same time and hold down for approx. 5 seconds. The current setting appears on the multi-display: <ul style="list-style-type: none"> – E^{D}: Setting for drier laundry – E^{I}: Standard setting – E^{Z}: Setting for damper laundry 3. Press the START/PAUSE (START/PAUZE) button until the setting required appears on the multi-display. 4. Turn the programme selector to OFF (UIT). The setting is permanently programmed.
<p>To deactivate the EMPTY WATER (RESERVOIR) display when using an external drain for the condensed water.</p>	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the WOOL (WOL) and LONG ANTICREASE (ANTI-KREUK) buttons at the same time and hold down for approx. 5 seconds. The multi-display briefly displays "0" The EMPTY WATER (RESERVOIR) display is permanently deactivated. The setting is cancelled as described under 1 and 2; the multi-display however briefly displays "!" (rather than "0").

Technical data

- CE** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
 - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
 - 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 60kg
Loading volume (depends on programme) ¹⁾	max. 6kg
Energy consumption in accordance with IEC 1121 s. e. (6kg of cotton, pre-drained at 1000 rpm, COTTONS STORAGE DRY [KATOEN KASTDROOG] programme)	2,1 kWh
Use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY (KATOEN KASTDROOG) ¹⁾	6	2,1
COTTONS HAND IRON (KATOEN STRIJKDROOG Δ) ¹⁾	6	1,7
EASY CARES STORAGE DRY (MENGWEEFSELS KASTDROOG) ²⁾	3	0,9

1) pre-drained at 1000 rpm

2) pre-drained at 1200 rpm

Installation and connection instructions





Installation safety instructions

- Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
- Before starting up for the first time, ensure that the nominal voltage and type of current specified on the machine type plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the type plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install machine in rooms at risk of frost.
- Ensure that the door of the machine cannot be blocked by interior doors of the house or the doors of other appliances.
- Do not install on carpets with high piles. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- Install the machine horizontally.

Transporting the appliance




Important: Only tip the appliance on its left side to transport (see illustration), if it cannot be transported in an upright position.

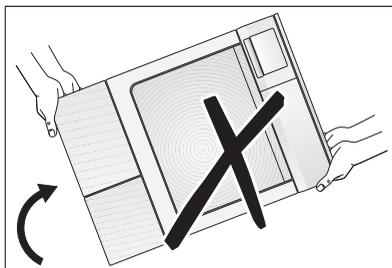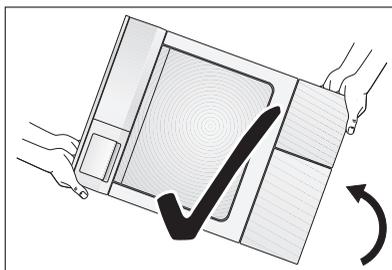

Removing transport safety equipment


 **Caution!** Before first starting up, all parts of the transport safety equipment must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

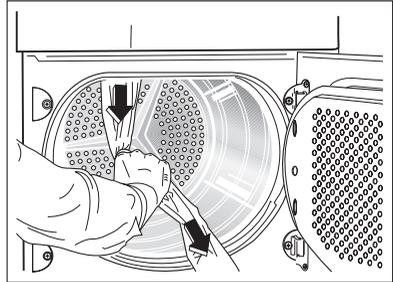

3. Remove foil hose and polystyrene padding from the machine.

 If the appliance was not transported in an upright position, leave it to stand for 12 hours before connecting it to the electricity supply and using it for the first time, so that the oil can flow back to the compressor. Otherwise the compressor could be damaged.

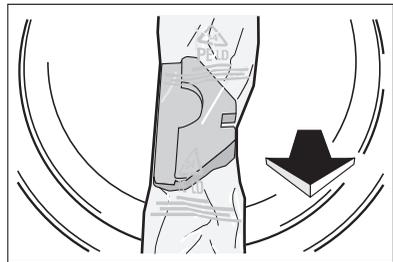

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Machine description" section).

Important:

The plug must be accessible after the appliance has been installed.


Changing door stop




Warning! The door stop may only be changed by a specialist. If necessary, please contact our after-sales service or your specialist dealer.

Warning! Before changing the door stop, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Open loading door.
2. Unscrew hinge A from the front of the machine and take off the loading door.
3. Remove cover plates B and C. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Use an appropriate tool and exert pressure to unfasten locking block D from the snap-on fixture, take out and reinsert on the other side, having rotated the block through 180°.
5. Unscrew hinge A from the loading door, rotate through 180°, reinsert on the opposite side and screw down.
6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.

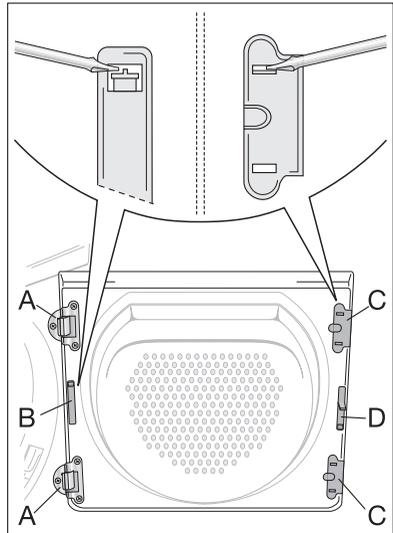

7. Unscrew cover plates E from the front of the machine, rotate through 180, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
10. Transfer door lock F to the opposite side and screw down.
11. Fix cover G on to the other side and allow the snap-in button to lock in place.
12. Insert loading door and hinges into recesses on the front of the machine and screw down.

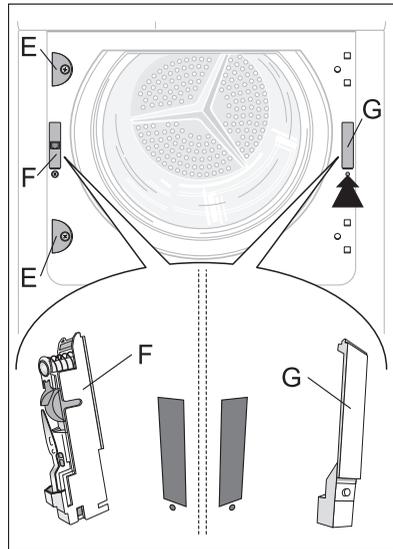

Note regarding contact protection: The machine is only secure for operations again once all plastic parts have been inserted.

Special accessories

The following special accessories are available from your Service Force Centre or your specialist dealer:

Intermediate installation kits for stacked washer and dryer:

These intermediate installation kits can be used to arrange the dryer and an automatic AEG-Electrolux washing machine (60cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.

Version to be supplied:

– with extractable stacker plate 916 019 103

Installation kit for external condensate drain

Installation kit (125 122 510) for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine. Refer to the "Programme options" section for how to deactivate the EMPTY WATER (RESERVOIR) display.

Max. displacement height: 1 m from the base of the dryer; max. displacement length: 3 m

Guarantee conditions

Belgium

DECLARATION OF GUARANTEE TERMS.

Our appliances are produced with the greatest of care. However, a defect may still occur. Our consumer services department will repair this upon request, either during or after the guarantee period. The service life of the appliance will not, however, be reduced as a result.

This declaration of guarantee terms is based on European Union Directive 99/44/EC and the provisions of the Civil Code. The statutory rights that the consumer has under this legislation are not affected by this declaration of guarantee terms.

This declaration does not affect the vendor's statutory warranty to the end user. The appliance is guaranteed within the context of and in adherence with the following terms:

1. In accordance with provisions laid down in paragraphs 2 to 15, we will remedy free of charge any defect that occurs within 24 months from the date the appliance is delivered to the first end user. These guarantee terms do not apply in the event of use for professional or equivalent purposes.
2. Performing the guarantee means that the appliance is returned to the condition it was in before the defect occurred. Defective parts are replaced or repaired. Parts replaced free of charge become our property.
3. So as to avoid more severe damage, the defect must be brought to our attention immediately.
4. Applying the guarantee is subject to the consumer providing proof of purchase showing the purchase and/or delivery date.
5. The guarantee will not apply if damage caused to delicate parts, such as glass (vitreous ceramic), synthetic materials and rubber, is the result of inappropriate use.
6. The guarantee cannot be called on for minor faults that do not affect the value or the overall reliability of the appliance.
7. The statutory warranty does not apply when defects are caused by:
 - a chemical or electrochemical reaction caused by water,
 - abnormal environmental conditions in general,
 - unsuitable operating conditions,
 - contact with harsh substances.
8. The guarantee does not apply to defects due to transport which have occurred outside of our responsibility. Nor will the guarantee cover those caused by inadequate installation or assembly, lack of maintenance or failure to respect the assembly instructions or directions for use.
9. Defects that result from repairs or measures carried out by people who are not qualified or expert or defects that result from the addition of non-original accessories or spare parts are not covered by the guarantee.
10. Appliances that are easy to transport may be delivered or sent to the consumer services department. Home repairs are only anticipated for bulky appliances or built-in appliances.
11. If the appliances are built-in, built-under, fixed or suspended in such a way that removing and replacing them in the place where they are fitted takes more than half an hour, the costs that result therefrom will be charged for. Connected damage caused by these removal and replacement operations will be the responsibility of the user.
12. If, during the guarantee period, repairing the same defect repeatedly is not conclusive, or if the repair costs are considered disproportionate, in agreement with the consumer, the defective appliance may be replaced with another appliance of the same value. In this event, we reserve the right to ask for a financial contribution calculated according to the length of time it has been used.
13. A repair under guarantee does not mean that the normal guarantee period will be extended nor that a new guarantee period begins.
14. We give a twelve month guarantee for repairs, limited to the same defect.
15. Except in the event where liability is legally imposed, this declaration of guarantee terms excludes any compensation for damage outside the appliance for which the consumer wishes to assert his rights. In the event of legally admitted liability, compensation will not exceed the purchase price paid for the appliance.

These guarantee terms are only valid for appliances purchased and used in Belgium. For exported appliances, the user must first make sure that they satisfy the technical conditions (e.g.: voltage, frequency, installation instructions, type of gas, etc.) for the country concerned and that they can

withstand the local climatic and environmental conditions. For appliances purchased abroad, the user must first ensure that they meet the qualifications required in Belgium. Non-essential or requested adjustments are not covered by the guarantee and are not possible in all cases.

Our consumer services department is always at your disposal, even after the guarantee period has expired.

Address for our consumer services department:
ELECTROLUX HOME PRODUCTS BELGIUM
Bergensesteenweg, 719 - 1502 LEMBEEK
Tel.: 02.363.04.44

Customer services

Belgium

Electrolux Home Products Belgium
ELECTROLUX SERVICE
Bergensesteenweg 719
1502 Lembeek
E-mail:
consumer.services@electrolux.be

Consumer services

Tel.:

02/363.04.44

Fax.:

02/363.04.00

02/363.04.60


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers, see rating plate)
- Type of fault
- Any error messages displayed by the appliance

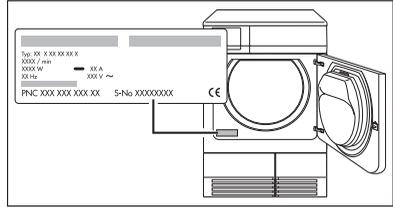

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No.:

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg-electrolux.de>

© Copyright by AEG

822 944 726-01-280306-03

Subject to change without notice