


# Record in Hi-Definition!

## Video Recording Guide




LYT1789-004A


- 1** Turn off the camera and attach the battery pack

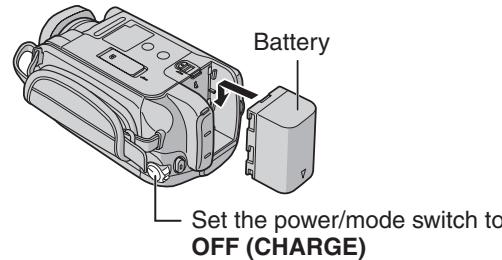


- 2** Charge the battery pack  
Required charging time (approx.): 2 hr. 40 min.

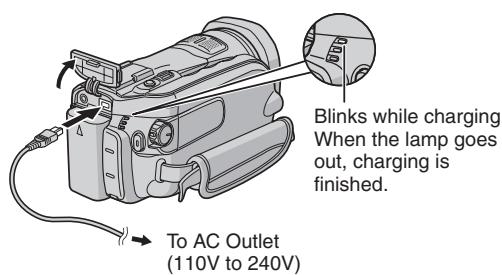


- 3** Open the lens cover

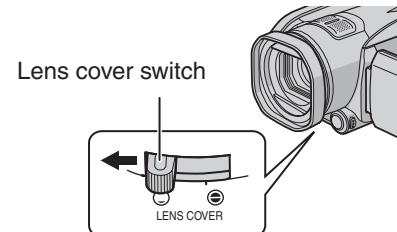


- 4** Open the LCD monitor

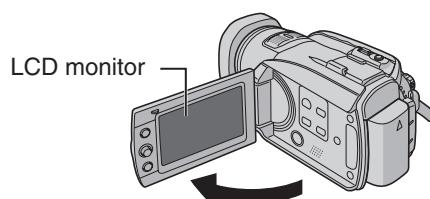


- 5** Set the power/mode switch to ON

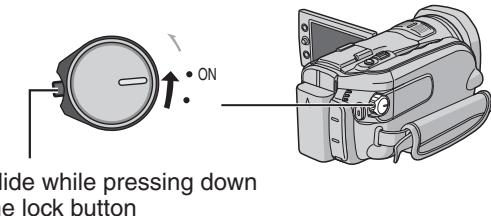

- 6** Select auto recording mode

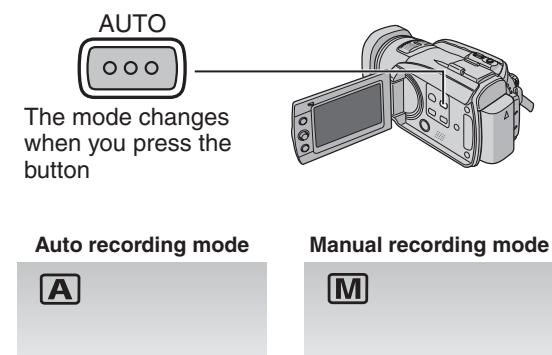



- 7** Start recording

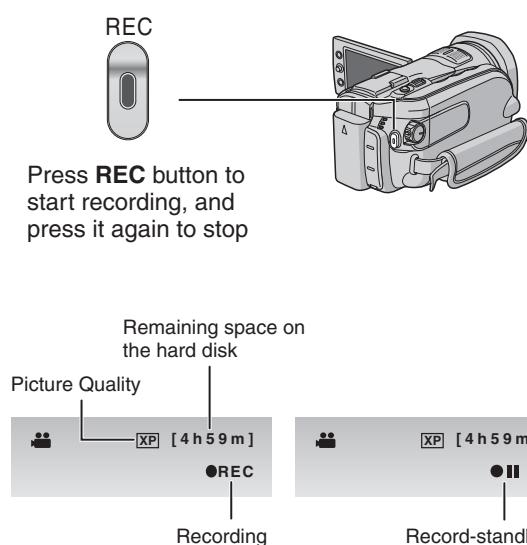



### When the recording is failed...

Check the LCD monitor one more time.

- 1** Did you select video mode?

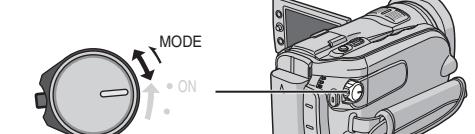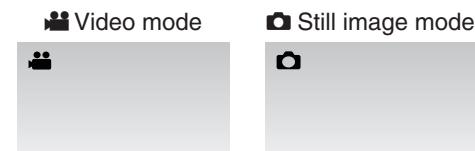


- 2** Did you select video recording mode?

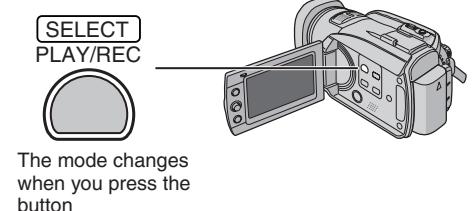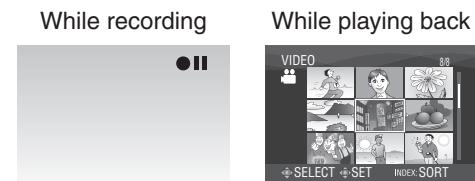


### Let's Playback Videos!

Follow the procedures **1** to **5** shown in the left side of this sheet

- 1** Select playback mode

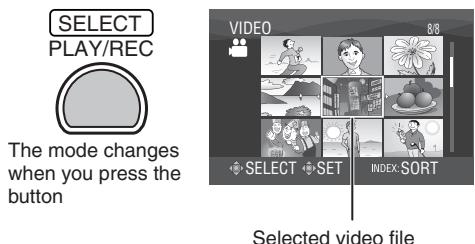


- 2** Move the set lever to  $\wedge/\vee/\langle/\rangle$  to select the desired file

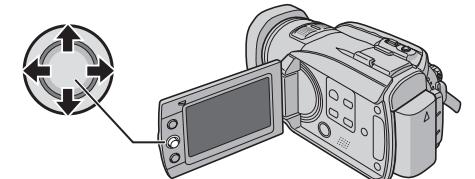

- 3** Press down the set lever to start playback



#### ■ Basic Operations during Playback

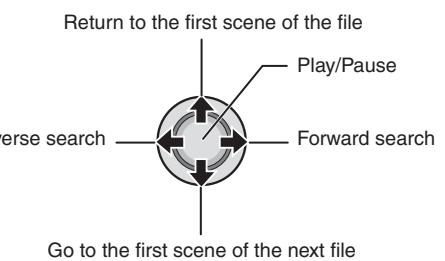

For customers using DVD Burner  
(sold separately)

# Back-Up Hi-Definition Images

## (Easy and correct way of copying to a DVD)

### 1. Get ready a recommended disc

Please use the recommended discs stated below.

Using discs other than those recommended may cause problem when copying to the DVD and when playing back the DVD.


#### Recommended discs

	DVD-R	DVD-RW	DVD-R DL (single-sided double layer)
Brand	JVC TDK Verbatim SONY	JVC	JVC Verbatim

#### Caution

- Only DVD-R and DVD-RW discs can be used.
- Recording and playback may not function properly if the recording side is scratched or dirty.

### 2. Set up each device before copying

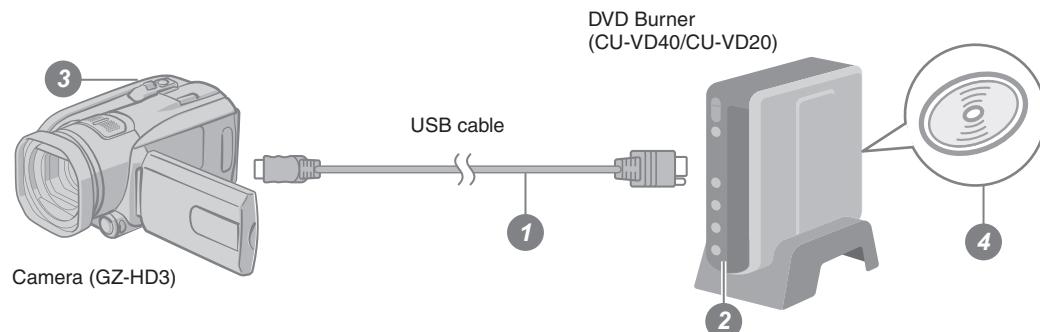

#### 1 Connect the USB cable provided with DVD Burner (CU-VD40/CU-VD20)

#### 2 Turn on the DVD Burner

After turning on the power, wait for approximately 20 seconds before proceeding to step ③.  
The burner may not function properly within this 20 seconds.

#### 3 Turn on the camera (GZ-HD3)

#### 4 Insert a new recommended disc into the DVD Burner


Next, operate the camera (GZ-HD3). Proceed to step 3. ↗

### 3. Copy all images to the DVD


Perform operations on the camera.

#### 1 Confirm that the display on the right appears on the LCD screen of the camera (GZ-HD3)



#### 2 Select "NORMAL BACK-UP"

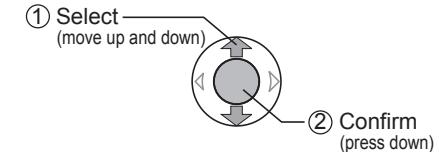


(Camera's LCD screen display)

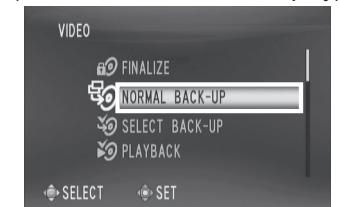

#### 3 Select "ALL"

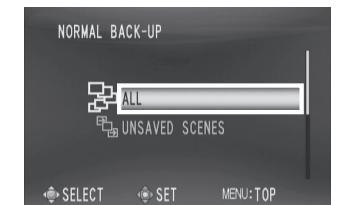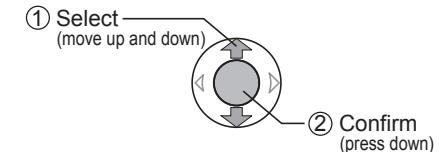


#### 4 Select "EXECUTE AND FINALIZE"

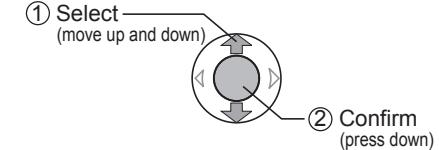

#### IMPORTANT

- Playback is not possible if the disc is not finalized.
- Wait for the "copy in progress" screen on the right and the "hourglass" mark to disappear, then turn off the power and disconnect the USB cable.

#### 5 Exit

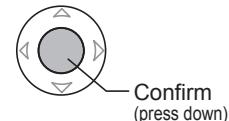

Copying completed!

#### Note

- There are other ways of copying which includes copying only the desired files. For details, refer to the instruction manual of the camera (GZ-HD3).