



E

Listening to the Radio (see Fig. E-①)

- 1 Press RADIO ON/BAND to turn on the radio.
- 2 Press RADIO ON/BAND repeatedly to select AM or FM.
- 3 Press TUNING+/- to tune in to the desired station. If you keep pressing TUNING+/- for a few seconds, the Walkman will start tuning to the stations automatically.

To turn off the radio

Press ■RADIO OFF.

To improve the broadcast reception

- For AM: The Walkman has a built-in antenna. Reorient the Walkman horizontally to obtain optimum AM reception.
- For FM (see Fig. E-②): Extend the cord of the remote control, the aerial. If the reception is still not good, press MENU repeatedly to set the cursor to FM MODE in the display. Then press SET to choose from MONO (monaural), LOCAL or none (stereo) mode for best reception.

Note

- Do not remove the power sources while listening to the radio, or the received stations may not be stored.

Presetting Radio Stations

Once you store your favorite stations in memory, you can play them easily. You can preset up to 16 stations for FM and 8 stations for AM.

Tuning in to and Storing Radio Stations Automatically (Auto-Memory Scanning function) (see Fig. E-③)

- 1 Press RADIO ON/BAND to turn on the radio.
- 2 Press RADIO ON/BAND repeatedly to select AM or FM.
- 3 Press ENTER until "A" appears in the display. The Walkman starts searching and storing stations.
- 4 After the preset number appears, tune into a station using PRESET+/-.

- 1 Slide HOLD so that the yellow mark appears.
- To unlock, slide HOLD so that the yellow mark is hidden.

Storing Radio Stations Manually (Manual-Memory function) (see Fig. E-④)

- 1 Turn on the radio and select the desired band.
- 2 Press ENTER. The frequency digits and a preset number flash in the display.
- 3 While the frequency digits and the preset number are flashing, tune in to a station you wish to store using TUNING+/-, and select a preset number using PRESET+/-.

Using Other Functions (see Fig. F)

Emphasizing Bass

- 1 Press MENU repeatedly to set the cursor to SOUND in the display. Then, press SET to select the desired mode. With each press, the indications change as follows.
- 2 While the frequency digits and the preset number are flashing, press ENTER.
- 3 Tune in to a station using PRESET+/-.

Notes

- If you cannot complete step 3 or 4 while the indications are flashing, repeat from step 2.
- If you preset a new station to the same preset number, the previously stored station will be erased.

To cancel the stored station

- Follow the procedure above and in step 3, instead of tuning in to a station, press and hold TUNING+/- until "— —" is displayed. Press ENTER while "— —" is flashing.

Note

- If the sound is distorted with the mode "GRV", select the mode "MB" or no message.

Protecting Your Hearing (AVLS)

The AVLS (Automatic Volume Limiter System) function to active, the maximum volume is kept down to protect your ears.

- 1 Press MENU repeatedly to set the cursor to AVLS in the display. Then press SET to show "○".

Notes

- If the sound is distorted when you listen to the bass-boosted sound with the AVLS function, turn down the volume.
- The setting is stored as long as the battery is not replaced.

Using the Remote Control (see Fig. G)

- All buttons on the remote control unless otherwise noted below function identically to those corresponding on the main unit.
- 1 Press RADIO ON/BAND to turn on the radio.
 - 2 Press ENTER.
 - 3 Press and hold RADIO ON/BAND until the area indication flashes in the display.
 - 4 Press RADIO ON/BAND repeatedly to select the following area "Eur", "JPN" or "USA" and press ENTER.
 - 5 Tune in to and store stations as necessary following the procedure of the "Listening to the Radio" and "Presetting Radio Stations". (Stations are stored independently for each area.)

To lock the buttons

- 1 Slide HOLD so that the yellow mark appears.
- To unlock, slide HOLD so that the yellow mark is hidden.

Area indication and frequency range

Area*	Frequency range FM (MHz)	AM (kHz)
Eur	87.5-108	531-1,602
JPN	76-90	531-1,710
USA	87.5-108	530-1,710

*Eur : European and other countries

JPN : Japan

USA : North, Central, and South America

Additional Information

Precautions

On rechargeable battery and charger ("Sony Tourist Model" only)

- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.
- The nameplate indicating the operating voltage, power consumption, etc. is located on the bottom exterior of the battery charger.

Maintenance

Frequency response (Dolby NR off)

Playback: 20-18,000 Hz

Output

Headphones (□ REMOTE jack)

Load impedance 8-300 ohms

General

Power requirements

1.5 V

One R6 (size AA) battery

Rechargeable battery (for the "Sony Tourist Model" only)

Dimensions (w/h/d)

Approx. 109 x 79.2 x 29.4 mm

(4 3/8 x 3 1/8 x 1 1/8 inches) incl.

projecting parts and controls

Mass

Approx. 150 g (5.3 oz)

Approx. 210 g (7.5 oz) incl.

a battery and a cassette

Supplied accessories

Stereo earphones with remote control (1)

Battery charger (1) ("Sony Tourist Model" only)

AC plug adaptor (1) ("Sony Tourist Model" only)

Rechargeable battery (NC-AA) (1) ("Sony Tourist Model" only)

Battery R6P (SR) (1) ("Sony Tourist Model" only)

Carrying pouch (1)

Troubleshooting

The cassette holder does not open.

If the tape is playing, stop and then slide OPEN.

- This condition may occur when you remove the power sources during playback, or when you use exhausted dry or rechargeable battery. Set the power sources again or replace the exhausted battery with new one.

The volume cannot be turned up.

If "○" appears for AVLS display, press SET so that "○" disappears.

On tapes longer than 90 minutes

We do not recommend the use of tapes longer than 90 minutes except for a long continuous playback. They are very thin and tend to be stretched easily.

The tape fastforwards by itself during playback.

If "ON" appears for BL SKIP display, press SET so that "ON" disappears.

The unit does not operate at all.

HOLD is activated. Deactivate HOLD.

On headphones/earphones

Road safety

- Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Specifications

Radio section

Frequency range

FM: 65 - 87.5 - 108 MHz

(Eastern Europe)

87.5 - 108 MHz (Other countries)

AM: 530 - 1,710 kHz (North,

Central, and South America)

531 - 1,602 kHz (Other countries)

Power requirements

1.5 V

One R6 (size AA) battery

Rechargeable battery (for the "Sony Tourist Model" only)

Dimensions (w/h/d)

Approx. 109 x 79.2 x 29.4 mm

(4 3/8 x 3 1/8 x 1 1/8 inches) incl.

projecting parts and controls

Mass

Approx. 150 g (5.3 oz)

Approx. 210 g (7.5 oz) incl.

a battery and a cassette

Supplied accessories

Stereo earphones with remote control (1)

Battery charger (1) ("Sony Tourist Model" only)

Dimensions (w/h/d)

Approx. 109 x 79.2 x 29.4 mm

(4 3/8 x 3 1/8 x 1 1/8 inches) incl.

projecting parts and controls

Mass

Approx. 150 g (5.3 oz)

Approx. 210 g (7.5 oz) incl.

a battery and a cassette

Supplied accessories

Stereo earphones with remote control (1)

Battery charger (1) ("Sony Tourist Model" only)

Dimensions (w/h/d)

Approx. 109 x 79.2 x 29.4 mm

(4 3/8 x 3 1/8 x 1 1/8 inches) incl.

projecting parts and controls

Mass

Approx. 150 g (5.3 oz)

Approx. 210 g (7.5 oz) incl.

a battery and a cassette

Supplied accessories

Stereo earphones with remote control (1)

Battery charger (1) ("Sony Tourist Model" only)

Dimensions (w/h/d)

Approx. 109 x 79.2 x 29.4 mm

(4 3/8 x 3 1/8 x 1 1/8 inches) incl.

projecting parts and controls

Mass

Approx. 150 g (5.3 oz)

Approx. 210 g (7.5 oz) incl.

a battery and a cassette

Supplied accessories

Stereo earphones with remote control (1)

Battery charger (1) ("Sony Tourist Model" only)</p