

DIGITAL WIRELESS QUAD VIEW MONITORING SYSTEM

Interference Free, Secure,
Indoor/Outdoor, Day/Night

Instruction Manual

English Version 1.0



**MODEL:
LW2100**



Thank you for purchasing the Digital Wireless Quad View Monitoring System.

This manual refers to the following products:

- LW2100

Please visit us on the web for the most current Manuals and Quick Start Guides. Additional Language Manuals may also be available at:

www.lorexcctv.com

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION: TO REDUCE THE RICK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK).
NO USER SERVICABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products' enclosure that may be of sufficient magnitude to constitute a risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF THE PLUG TO THE WIDE SLOT AND FULLY INSERT.

BEFORE YOU START

THIS PRODUCT MAY REQUIRE PROFESSIONAL INSTALLATION

LOREX IS COMMITTED TO FULFILLING YOUR SECURITY NEEDS



- We have developed user friendly products and documentation. Please read the Quick Start Guide and User Manual before you install this product.



- Consumer Guides and Video Tutorials are available on our web site at www.lorexcctv.com/support



- If you require further installation assistance, please visit www.lorexcctv.com/installation or contact a professional installer.



- Please refer to the “Need Help” insert for technical support and customer care information.



- Please note that once the components of this product have been unsealed, you cannot return this product directly to the store without the original packaging.

AVANT DE COMMENCER

ANTES DE EMPEZAR

CE PRODUIT POURRAIT EXIGER UNE INSTALLATION PROFESSIONNELLE

ESTE PRODUCTO PUEDE EXIGIR UNA INSTALACIÓN PROFESIONAL

LOREX S'ENGAGE À SATISFAIRE VOS BESOINS SÉCURITAIRES

- Veuillez lire le guide de démarrage rapide et le mode d'emploi avant d'installer ce produit.
- Les guides du consommateur et les séances de tutorat vidéo sont disponibles sur l'Internet en visitant www.lorexcctv.com/support
- Si vous avez besoin de l'aide pour l'installation, veuillez visiter www.lorexcctv.com/installation ou contactez un spécialiste en installation
- Veuillez référer à l'insert "Need Help" pour obtenir de l'information sur le service à la clientèle et le support technique
- Veuillez constater qu'une fois que les composants de ce produit ont été retirés de l'emballage, vous ne pourrez plus retourner ce produit directement au magasin.

LOREX SE COMPROMETE A SATISFACER SUS NECESIDADES EN SEGURIDAD

- Favor de leer la guía de instalación rápida y la guía del usuario antes de instalar este producto.
- Puede conseguir las guías del consumidor y los cursos en enseñanza video sobre el Internet visitando www.lorexcctv.com/support
- Si necesita ayuda para la instalación, visite www.lorexcctv.com/installation o contacte un especialista en instalaciones
- Favor de referir al documento "Need Help" para obtener información acerca del servicio al cliente y al soporte técnico
- Favor de notar que una vez que los componentes de este producto han sido removidos del embalaje, no podrá devolver este producto directamente a la tienda



 **LOREX**[®]
www.lorexcctv.com

NEED HELP?


 


CONTACT US FIRST

DO NOT RETURN THIS PRODUCT TO THE STORE

Please make sure to register your product at www.lorexcctv.com to receive product updates and information

3 EASY WAYS TO CONTACT US:

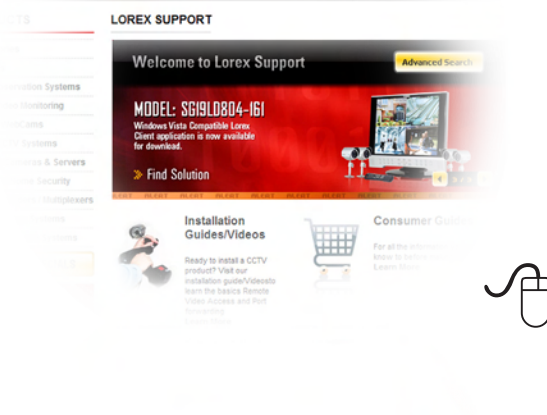

Online:

Product Support is available 24/7 including product information, user manuals, quick start up guides and FAQ's at www.lorexcctv.com/support

To order accessories, visit www.lorexcctv.com

By Email:

Technical Support (for technical/installation issues)
support@lorexcorp.com

Customer Care (for warranty and accessory sales)
customerservice@lorexcorp.com

Customer Feedback
info@lorexcorp.com

By Phone:

NORTH AMERICA: 1-888-425-6739 (1-888-42-LOREX)

MEXICO: 1-800-514-6739

INTERNATIONAL: +800-425-6739-0

(Example: From the UK, dial 00 instead of +)

Technical Support (for technical/installation issues)
Press option 1 for English, and then press option 1

OR

Customer Care (for warranty and accessory sales)
Press option 1 for English, and then press options 2 to 5





NECESITA AYUDA

COMUNÍQUESE PRIMERO CON NOSOTROS



VOUS AVEZ BESOIN D'AIDE? CONTACTEZ-NOUS D'ABORD

NO DEVUELVA ESTE PRODUCTO A LA TIENDA

NE RETOURNEZ PAS CE PRODUIT AU MAGASIN

Cerciórese de por favor colocar su producto en www.lorexcctv.com/registration para recibir actualizaciones y la información del producto

Veuillez veiller à enregistrer votre produit à www.lorexcctv.com/registration pour recevoir des mises à jour et l'information de produit

3 MANERAS SENCILLAS DE COMUNICARSE CON NOSOTROS:

3 FAÇONS FACILES DE NOUS CONTACTER:



En línea:

apoyo al producto disponible 24/7 incluyendo información del producto, manuales para el usuario, guías de inicio rápido y preguntas más frecuentes en

www.lorexcctv.com/support

Para colocar pedidos de accesorios, visite

www.lorexcctv.com



En ligne:

le support des produits est disponible 24 heures sur 24, 7 jours sur 7, y compris les informations sur les produits, les guides de l'utilisateur, les guides de démarrage rapide et les foires à questions

www.lorexcctv.com/support

Pour commander des accessoires, visitez

www.lorexcctv.com



Por Correo Electrónico:

soporte técnico (para asuntos técnicos/la instalación)

support@lorexcorp.com

0

servicio al cliente (respecto a la garantía y a la venta de accesorios)

customerservice@lorexcorp.com

Comentarios de cliente

info@lorexcorp.com



Par Courriel:

support technique (pour les questions techniques et d'installation) support@lorexcorp.com

OU

service à la clientèle (pour les questions de garantie et les ventes d'accessoires)

customerservice@lorexcorp.com

Commentaires des clients

info@lorexcorp.com



Por Teléfono:

L'AMÉRIQUE DU NORD: 1-888-425-6739 (1-888-42-lorex)

MEXICO: 1-800-514-6739

INTERNACIONAL: +800-425-6739-0

(Ejemplo: Desde el Reino Unido, marque el 00 en lugar del +)

soporte técnico (para asuntos técnicos/la instalación)

oprima la opción 1 para inglés y luego oprima la opción 1

0

servicio al cliente (respecto a la garantía y a la venta de accesorios) oprima la opción 1 para inglés y luego oprima las opciones 2 A 5

sus opiniones son bienvenidas en

info@lorexcorp.com

para colocar pedidos de accesorios, visite

www.lorexcctv.com



Par Téléphone:

NORTE AMÉRICA: 1-888-425-6739 (1-888-42-lorex)

MEXICO: 1-800-514-6739

INTERNATIONAL: +800-425-6739-0

(Exemple: À partir du Royaume-Uni, composez 00 au lieu de +)

support technique (pour les questions techniques et d'installation) appuyez sur l'option 1 pour l'anglais, et ensuite sur l'option 1

OU

service à la clientèle (pour les questions de garantie et les ventes d'accessoires) appuyez sur l'option 1 pour l'anglais, et ensuite sur les options 2 à 5

nous serions heureux de recevoir vos

commentaires à info@lorexcorp.com pour

commander des accessoires, visitez

www.lorexcctv.com

Important Safeguards

 
In addition to the careful attention devoted to quality standards in the manufacture process of your video product, safety is a major factor in the design of every instrument. However, safety is your responsibility too. This sheet lists important information that will help to assure your enjoyment and proper use of the video product and accessory equipment. Please read them carefully before operating and using your video product.

Installation

1. **Read and Follow Instructions** - All the safety and operating instructions should be read before the video product is operated. Follow all operating instructions.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - Comply with all warnings on the video product and in the operating instructions.
4. **Polarization** - Do not defeat the safety purpose of the polarized or grounding-type plug.
 - o A polarized plug has two blades with one wider than the other.
 - o A grounding type plug has two blades and a third grounding prong.
 - o The wide blade or the third prong is provided for your safety.
 - o If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
5. **Power Sources** - This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your location, consult your video dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.
6. **Overloading** - Do not overload wall outlets of extension cords as this can result in the risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicates damage or deteriorated insulation, have it replaced by your service technician.
7. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the video product.
8. **Ventilation** - Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video equipment on a bed, sofa, rug, or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the video product manufacturer's instructions have been followed.
9. **Camera Extension Cables** - Check the rating of your extension cable(s) to verify compliance with your local authority regulations prior to installation.
10. **Attachments** - Do not use attachments unless recommended by the video product manufacturer as they may cause a hazard.
11. **Water and Moisture** - Do not use this video product near water. For example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, near a swimming pool and the like. Caution: Maintain electrical safety. Power line operated equipment or accessories connected to this unit should bear the UL listing mark of CSA certification mark on the accessory itself and should not be modified so as to defeat the safety features. This will help avoid any potential hazard from electrical shock or fire. If in doubt, contact qualified service personnel.
12. **Accessories** - Do not place this video equipment on an unstable cart, stand, tripod, or table.

The video equipment may fall, causing serious damage to the video product. Use this video product only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the video product.

Any mounting of the product should follow the manufacturer's instructions and use a mounting accessory recommended by the manufacturer.



Service

13. **Servicing** - Do not attempt to service this video equipment yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
14. **Conditions Requiring Service** - Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.
 - A. When the power supply cord or plug is damaged.
 - B. If liquid has been spilled or objects have fallen into the video product.
 - C. If the video product has been exposed to rain or water.
 - D. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
 - E. If the video product has been dropped or the cabinet has been damaged.
 - F. When the video product exhibits a distinct change in performance. This indicates a need for service.
15. **Replacement Parts** - When replacement parts are required, have the service technician verify that the replacements used have the same safety characteristics as the original parts. Use of replacements specified by the video product manufacturer can prevent fire, electric shock or other hazards.
16. **Safety Check** - Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the video product is in safe operating condition.
17. **Mounting** - The cameras provided with this system should be mounted only as instructed in this guide, using the provided mounting brackets.
18. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Use

19. **Cleaning** - Unplug the video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
20. **Product and Cart Combination** - Video and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the video product and cart combination to overturn.
21. **Object and Liquid Entry** - Never push objects for any kind into this video product through openings as they may touch dangerous voltage points or "short-out" parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.
22. **Lightning** - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges. The manufacturer's instructions and use a mounting accessory recommended by the manufacturer.

General Precautions

1. All warnings and instructions in this manual should be followed
2. Remove the plug from the outlet before cleaning. Do not use liquid aerosol detergents. Use a water dampened cloth for cleaning
3. Do not use this unit in humid or wet places
4. Keep enough space around the unit for ventilation. Slots and openings in the storage cabinet should not be blocked

FCC NOTICE

This equipment has been certified and found to comply with the limits regulated by the FCC part 15, subpart C.

However, it is imperative that the user follows the guidelines in this manual to avoid improper usage which may result in damage to the unit, electrical shock and fire hazard injury

In order to improve the feature functions and quality of this product, the specifications are subject to change without notice from time to time.



www.lorexcctv.com

Features

- Latest Ultra Digital Wireless Technology provides excellent image quality and clarity
- Connect up to 4 receivers to your surveillance recorder (DVR) to create a wireless surveillance solution†
- Infrared night vision LED's allow you to see in total darkness
- Up to 150ft (46m) indoor / 450ft (137m) outdoor wireless range*
- View one particular channel, cycle through all channels or view all 4 channels on one screen (Quad view)**
- Auto infrared light filter ensures outstanding image quality day or night

† Using multiple receivers in close proximity to each other may cause a slight slowdown in frame rate performance. Try to maintain at least a few inches of space between each receiver.

*Maximum transmission range. Actual range is dependent upon building materials and other obstructions in path of wireless signal.

**Additional cameras sold separately

Receiver Features

- Compact receiver easy to install and operate
- 4 Channel System – Supports up to 4 Wireless Cameras
- VGA (640x480) & QVGA (320x240) Resolution Supported
- Convenient Signal Strength Indicator
- Plug directly into a TV (RCA adapter included) or surveillance recorder or use a BNC extension cable (included) to position the wireless receiver in a more convenient location

Camera Features

- VGA Resolution Camera
- 65ft (20m) IR Night Vision*
- Auto infrared light filter ensures outstanding image quality any time, day or night
- Weather Proof Housing (IP66 rated)

* Stated IR Illumination range is based on ideal conditions. Actual range and image clarity depends on installation location, viewing area and light reflection/absorption level of object

The Digital Wireless signal transmission type used by the Lorex LW2100 series is also known as **FHSS – Frequency Hopping Spread Spectrum**. This type of signal is highly resistant to deliberate jamming as it generates a channel hopping sequence using an algorithm generated by the receiver system.

Table of Contents

Getting Started	8
Wireless Receiver	9
Connecting the Camera	9
Installation Warnings:	10
Installing the Camera	10
Setting up the Wireless Receiver	11
Viewing Modes	12
On-Screen Display	13
Adding Cameras	14
Using Auto-Scan	14
Setting Dwell Time	15
Appendix A: System Specifications	16
Receiver Specifications	16
Camera Specifications	16
Appendix B: About Digital Wireless Technology	17
Appendix C: Strengthening the Range of the Wireless Signal	18
Clear Line-of-Sight	18
Obstacles	18
Extending Your Wireless Signal	18
2.4 GHZ Directional Wireless Panel Antenna	19
2.4 GHZ Omni-Directional Wireless Antenna	20
Troubleshooting	21
FAQ	22

Getting Started

The System comes with the following components:



1 x WIRELESS CAMERA*



**1 x CAMERA
MOUNTING STAND**



1 x WIRELESS RECEIVER



**1 X WIRELESS
ANTENNA
(FOR RECEIVER)**



**1 x MOUNTING
SCREW KIT**



**1 x BNC/RCA
ADAPTER**



**2 x POWER ADAPTERS
(FOR RECEIVER &
CAMERA)**



**3ft/1m BNC
Female/BNC
Male Extension
Cable**

*Camera configuration may vary by model

CHECK YOUR PACKAGE TO CONFIRM THAT YOU HAVE RECEIVED THE COMPLETE SYSTEM, INCLUDING ALL COMPONENTS SHOWN ABOVE.

Wireless Receiver

1. **Wireless Antenna:** Screws onto to the top of the receiver.
2. **Channel LEDs:** When lit up, indicates the current viewing mode.
3. **Resolution* button:** Press to switch between VGA and QVGA video resolutions; press and hold for several seconds to remove/replace channels from Auto-Scan. See page 14 for more details.
4. **Front LED:** Lit in green to indicate power to the receiver.
5. **Channel:** Press to change channels (1~4), Quad split-screen mode, and Auto-Scan viewing mode; press and hold to add (pair) a new camera to the receiver.



*VGA mode has a resolution of 640 X 480 pixels; QVGA mode has a resolution of 320 X 240 pixels. Use VGA mode for best video performance. Use QVGA mode if you need a higher video frame rate.

Connecting the Camera

Before you install the camera, carefully plan where and how it will be positioned, and where you will route the cable that connects the camera to the power adapter.

- Before starting permanent installation, verify its performance by observing the image on a monitor when camera is positioned in the same location/position where it will be permanently installed.

Installation Warnings:

- Aim the Cameras to best optimize the viewing area: Select a location for the camera that provides a clear view of the area you want to monitor, which is free from dust, and is not in line-of-sight to a strong light source or direct sunlight.
- Avoid installing the cameras where there are thick walls or obstructions between the Cameras and the Receiver*.
- Select a location for the camera that has an ambient temperature between 14°F~122°F (-10°C~50°C)

***Avoid installing in a location which requires the wireless signal to pass through cement, concrete, and metal structures. This will reduce the range of transmission.**

Installing the Camera

To install the camera:

1. Use the included mounting screws to mount the stand to the mounting surface:
 - Mark the position of the screw holes on the wall
 - Drill holes and insert the drywall plugs as needed
 - Firmly attach the stand to the wall using the provided screws
2. Attach the camera to the mounting stand. Adjust the angle of the camera until the desired view is set. Tighten the thumbscrews to secure the desired camera position.
3. Connect the power cable from the camera to the Power Adapter; plug the Power Adapter to an outlet or surge protector.

NOTE: You can add additional cameras (maximum of 4 cameras). When adding cameras that were not included in the original box, you will need to pair up the cameras with the receiver. Refer to the camera pairing section of this manual for more details.

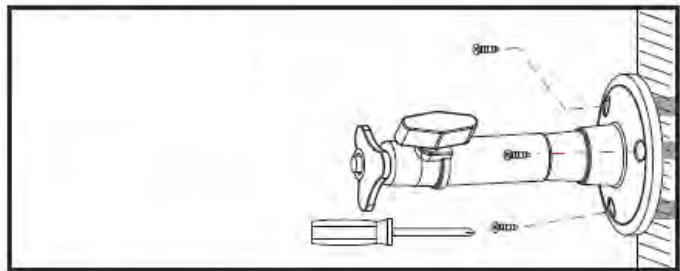


Figure 1.0 Attach stand to mounting surface



Figure 1.1 Attach the camera to the stand

Setting up the Wireless Receiver

To connect the wireless receiver to a surveillance recorder (DVR):

1. Screw the antenna onto the top of the receiver.
2. Connect the BNC connector on the receiver directly into an available video input.

NOTE: If necessary, attach the 3ft (1m) BNC/BNC extension cable at one end to the receiver and at the other end to the surveillance recorder.

3. Connect the power cable from the receiver to the Power Adapter; plug the Power Adapter to an outlet or surge protector.

To connect the wireless receiver to a TV or VCR:

1. Screw the antenna onto the top of the receiver.
2. Attach the included BNC/RCA adapter to the BNC connector on the receiver and plug the receiver directly into an available video input.

NOTE: If necessary, attach one end of the 3ft (1m) BNC/BNC extension cable to the receiver and at the other end attach the BNC/RCA adapter, and then connect the BNC/RCA adapter to the viewing/recording device.

3. Connect the Black power cable from the receiver to the cable of the Power Adapter; plug the Power Adapter to a local AC power outlet or surge protector.

NOTE: Use the included BNC/BNC extension cable in case the receiver is not able to properly connect into the viewing/recording device due to space constraints at the back/front of the device or to clear obstructions between camera and receiver which can affect wireless signal strength.

ATTENTION: Make sure to first connect and power on the camera(s) before powering on the receiver; this will ensure a proper connection.



Figure 2.0 Attach the receiver directly to an integrated system, TV, or DVR

Viewing Modes

There are six different viewing modes available on the system: individual viewing of channels 1~4, Quad split-screen, and Auto-Scan. For details on Auto-Scan, see page 14.

- Press the **CHANNEL** button *repeatedly* to switch between these viewing modes.

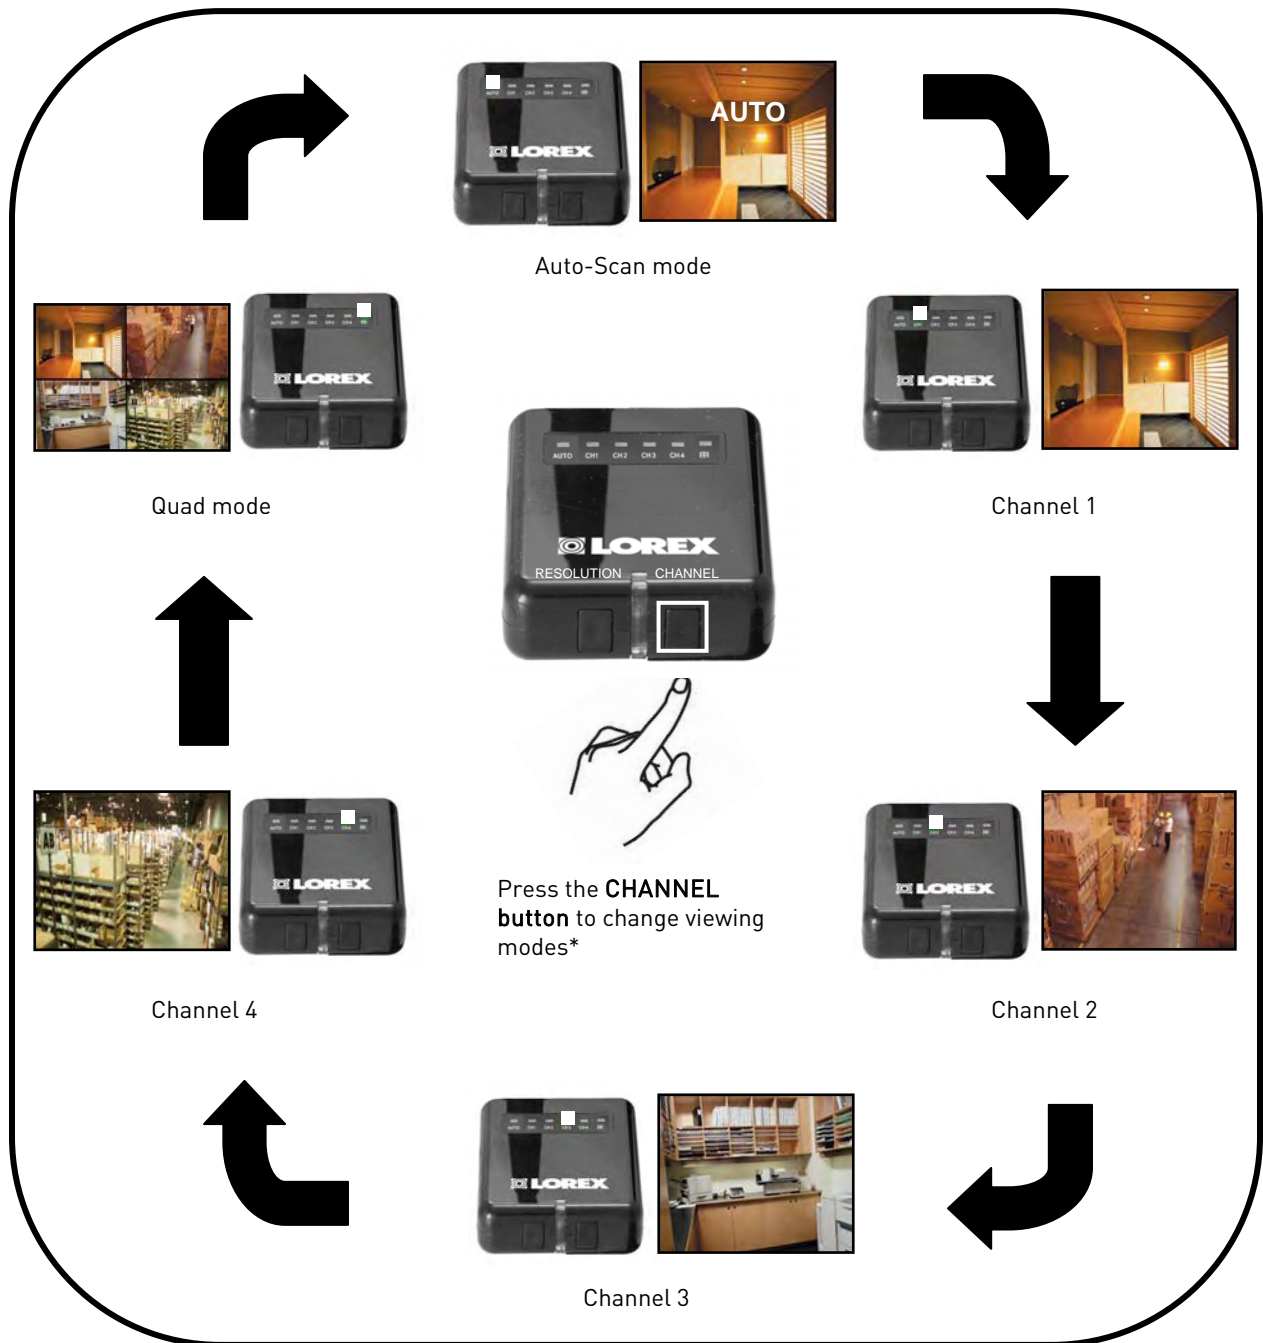


Figure 3.0 View Mode diagram

*Images simulated.

On-Screen Display

1. **Signal Indicator** – The signal indicator shows the strength of the signal being received from the camera. The number of bars in the Signal Indicator shows the strength of the signal – One or No Bars indicates the signal is poor, and 4 bars indicate a very strong signal.

NOTE: Signal Indicator not shown while in Quad Mode.

ATTENTION: If signal is low (e.g. 1 or 2 bars) adjust the antennas, or reposition the cameras or receiver for best performance.

Optional high power antennas are available to extend the range of the wireless signal or help the signal get around solid objects. For more details, see page 17 of this manual, or visit www.lorexcctv.com and go to Wireless Products Solutions.

2. **Channel Indicator** – Displays the current channel number. Press the **CHANNEL** button on the Receiver to switch between available cameras.

NOTE: Channel Indicator not shown while in Quad Mode.

CH 1	CH 2
CH 3	CH 4

3. **Status Indicator** – The Status indicator message “Connecting” appears when the receiver is trying to locate a camera.

NOTE: There may be temporary signal losses for less than 1 second, due to the connection retrieval process between the Camera and Receiver (when switching between channels). This is a normal operation of the receiver.

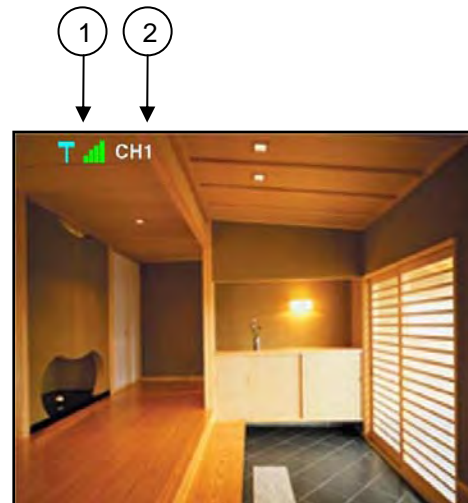


Figure 4.0 On-screen display

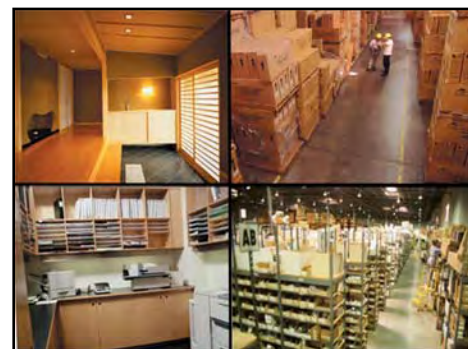


Figure 4.1 Quad split-screen view



Figure 4.2 Connecting message

Adding Cameras

The System comes with a camera that has already been paired. The Pairing Function assigns each camera to a different channel on the Wireless Receiver (up to four cameras), and is necessary for configuring additional cameras. By default, the camera included with the system appears on channels 1 on the wireless receiver.

NOTE: It is highly recommended to pair the cameras to the receiver before permanently mounting the cameras.

1. Connect the power cable from the camera to the Power Adapter; plug the Power Adapter into an outlet or surge protector.
2. Press the **CHANNEL** button on the Wireless Receiver to select an empty channel.
3. Press and hold the CHANNEL button for 5 seconds to activate pairing function. The on-screen display informs you that you have 30 seconds to press the pair button on the camera (see Figure 5.1).
4. Press and hold the **Pair** button underneath the antenna on the back of the camera. You must press the Pair button on the camera within 30 seconds of pressing the Pair button on the Wireless Receiver. If pairing is successful, live video from the camera will immediately appear on the monitor.



Figure 5.0 Hold the CHANNEL button to pair additional cameras



Figure 5.1 Pair button underneath antenna

Using Auto-Scan

Auto-Scan automatically switches between channels 1~4. Press the **CHANNEL** button on the wireless receiver to turn on Auto-Scan (CH1~4>Quad,>**Auto-Scan**).

You can also disable Auto-Scan for individual channels. This allows you to customize viewing of the connected cameras.

To disable Auto-Scan:

1. Make sure the Wireless Receiver and cameras are fully connected and powered on.
2. Press the **CHANNEL** button to select the channel you wish to remove from Auto-Scan.
3. Press and hold the **RESOLUTION** button until the on-screen display indicates that Auto-Scan has been turned **OFF** for that specific channel.

NOTE: Repeat step 3 to turn Auto-Scan ON.



Figure 6.0 Auto-Scan turned OFF for Channel 1.

Setting Dwell Time

You can set the length of time (in seconds) that the receiver displays each channel while in Auto Scan.

To set dwell time:

1. Make sure the Wireless Receiver and cameras are fully connected and powered on.
2. Press and hold the **RESOLUTION** button and **CHANNEL** button *at the same* until the Dwell Time screen appears. Continue holding both buttons.
3. With the CHANNEL button and RESOLUTION button held down, the receiver will automatically cycle the dwell time from 1~20 seconds. The higher the dwell time, the longer each channel remains on-screen during Auto-Scan.
4. Release both buttons to set the desired dwell time.

NOTE: If you repeat this process, the Dwell Time screen will display the last set dwell time.



Figure 7.0 Press and hold the RESOLUTION and CHANNEL buttons at the same time

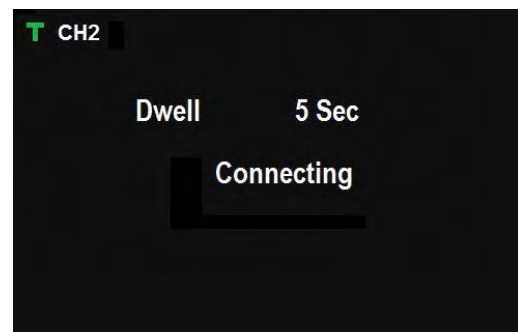


Figure 7.1 Continue holding both buttons to set the dwell time for Auto Scan

Appendix A: System Specifications

Receiver Specifications

Receiver	
Receiving Frequency Range	2.400GHz~2.480GHz
RX Sensitivity	-81dBm
Demodulation	GFSK
Data Rate	160 Kb/s
Supported Resolutions	VGA (640x480) or QVGA (320x240)
Power Requirement	12Vdc +/-10%
Power Consumption	200mA Max
Operating Temp Range	14°F ~ 122°F -10° ~ 50° C

Camera Specifications

Camera	
Transmit Frequency Range	2.400GHz~2.480GHz
TX Power	16dBm
Data Rate	160 Kb/s
Modulation	GFSK
TX Range	450 ft / 137 m Line in Sight
Image Sensor Type	1/4" Color CMOS Image Sensor
Effective Pixel	H: 640, V: 480
Image Processing	Motion JPEG
Image Resolution	Up to 640 x 480 (VGA)
Lens	4.5mm F1.5
Viewing Angle	53°
AGC	On
AES	1/60~1/62500S
Power Requirement	12Vdc +/-10%.
Power Consumption	315mA Max with IR LED, 135mA Max without IR LED.
Operating Temp Range	14°F ~ 122°F -10° ~ 50° C
Environment Rating	IP66
Built-in IR LED	18 Units of IR LED (850nm type) for Night Vision
Built-in Auto IR Turn On/Off	CdS Drive Auto IR LED turn On/Off Circuit

Appendix B: About Digital Wireless Technology

The Digital Wireless signal transmission type used by the Lorex LW2100 is also known as **FHSS -Frequency Hopping Spread Spectrum**. This type of signal is highly resistant to deliberate jamming as it generates a channel hopping sequence using an algorithm generated by the receiver system.

The 2.4GHz (2.400-2.480Ghz) band is being divided into sections or paths of 2MHz per section, and each second the transmission signal hops hundreds of times in a specified sequence within this frequency range. The overall bandwidth required for frequency hopping is much wider than 2MHz however because transmission occurs only on a small section of this bandwidth at any given time, the signal being transmitted does not suffer from greatly reduced signal degradation and also avoids blocked paths other devices who act as sources of competing signals. The strength of the signal being transmitted is set to be from 13.5-16dBm, which is much higher than the analog transmission signal allowed by authorities around the Globe.

When an image is captured by the camera it is instantly converted from an analog to digital signal and packaged into small packets. With each successful transmission via the 2 MHz paths discussed above, the packets of information containing images are delivered to the receiver and decoded into analog information. The information can then be displayed on devices that are connected to the wireless receiver (RX).

A device pairing process is required to synchronize the transmitter (TX, Camera) and the receiver (RX). This allows the transmitter and receiver to be on the same frequency and use the same algorithm for frequency hopping. This ensures that only the paired transmitter and receiver can maintain communication signal by hopping to the same frequency paths at the exact same time. As a result, the chance that other devices within the same frequency range are on the same frequency, at the same time and in the same order is extremely unlikely. Note that the pairing process is already done at the factory for products that ship within the same packaging. Only when add-on devices are purchased is a pairing process required.

Appendix C: Strengthening the Range of the Wireless Signal


Signal

Is your wireless signal choppy? Do you want to extend the range of wireless transmission?

There are several ways to boost your wireless signal as well as options to help you extend the range of the wireless signal.

Clear Line-of-Sight

The digital wireless signal is virtually interference free. However, you should always ensure there is a clear line-of-sight between the camera and the receiver.

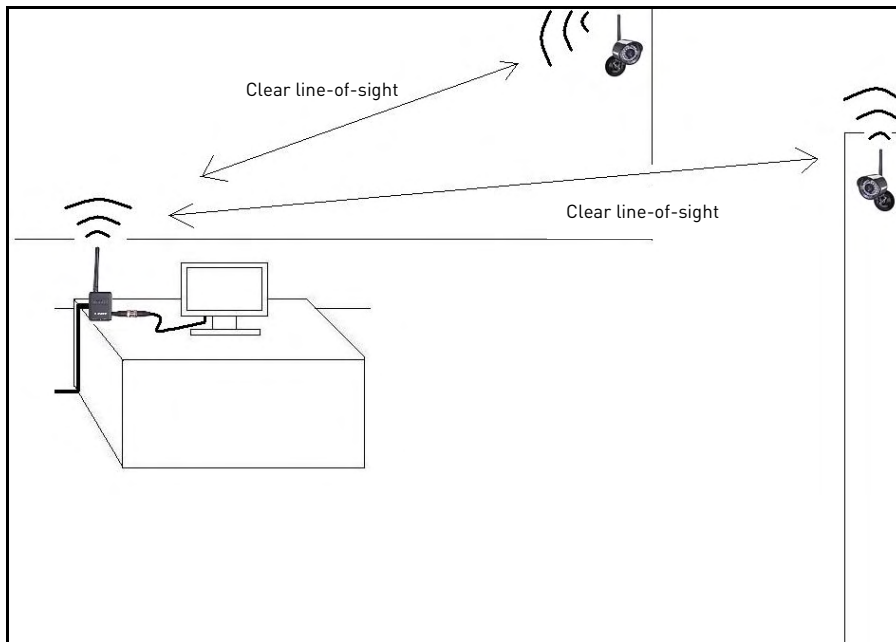

Obstacles

There should be little to no obstacles obstructing the line-of-sight between the camera and the receiver. Solid objects, such as concrete and metal may limit the range of the wireless signal.

Extending Your Wireless Signal

Even with a clear line-of-sight between your camera(s) and your receiver, you may experience a lower video frame rate simply due to the distance between your wireless devices.

Accessory antennas are available that can help extend the range of your wireless signal.

2.4 GHz Directional Panel Antenna


Use the 2.4GHz Directional Panel Antenna (model#: ACCANTD9) in one of two scenarios:

SCENARIO 1—Single camera installation: Attach the directional antenna to either the camera or receiver or both to extend the range.


SCENARIO 2—Multi-camera installation: Attach the directional antenna to those cameras which are located far away to improve the wireless signal strength. A 20 ft. extension cable is included with the antenna to help with proper positioning of the antenna including getting around walls / objects to achieve line-of sight transmission.



2.4 GHz Panel Antenna (ACCANTD9)

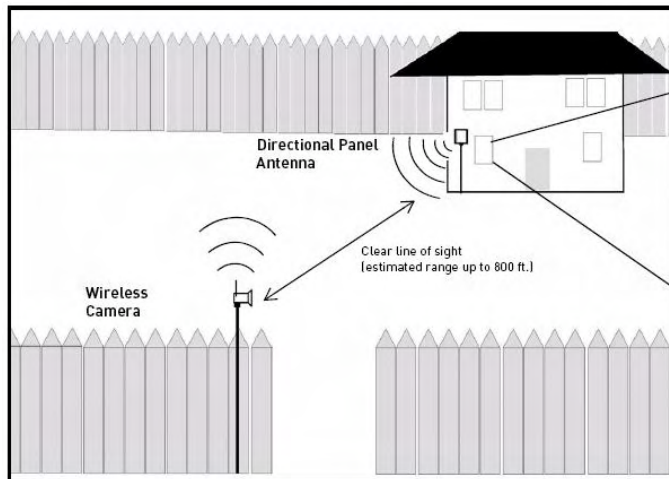

Outdoor installation.

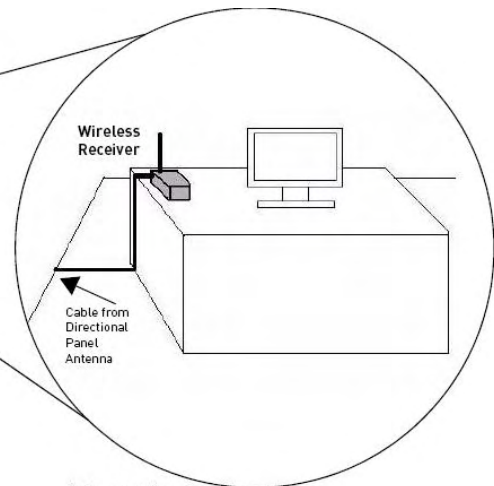

Indoor connection.


2.4 GHZ Omni-Directional Antenna

Use the 2.4GHz Omni-Directional Antenna (model#: ACCANT08) in the following scenario:


Multi-camera installation: Attach the Omni-Directional antenna to the receiver to extend the wireless transmission range of the receiver.

To further improve the strength of the wireless signal, consider adding directional antennas to those cameras which are located far away.

The Omni-Directional Antenna should be positioned in an elevated location (i.e. rooftop) to achieve clear line-of sight to the cameras. A 20 ft. extension cable is included with the antenna to help with proper positioning of the antenna including getting around walls / objects to achieve line-of sight transmission.

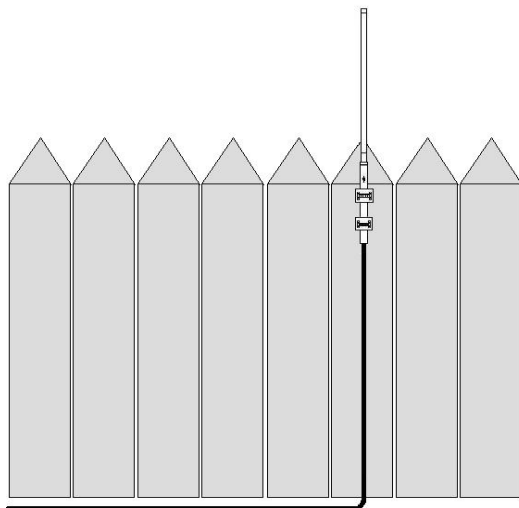

FENCE

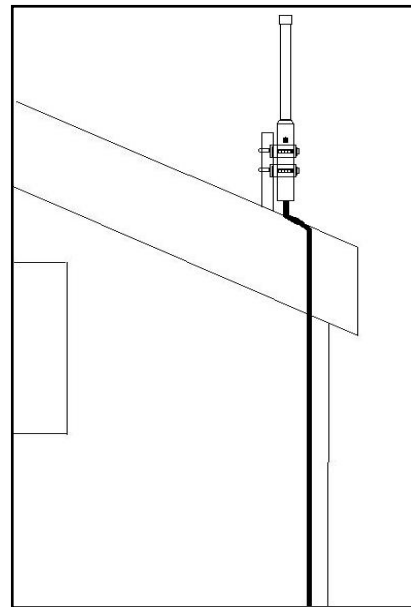

ROOFTOP

Visit www.lorexctv.com for more details on wireless antennas and accessories.

Troubleshooting

If you have problems with your System, there is often a quick and simple solution. Please try the following:

Problem	Solution
There is no picture from a camera.	<ul style="list-style-type: none"> • Check power to the Camera. Make sure the adapter is plugged in and the red LED light on the power adapter is on • Make sure that the Cameras and Receiver are both ON. • Make sure that the camera is in range of the Receiver.
There is interference with the camera picture.	<ul style="list-style-type: none"> • Make sure that each camera is within range, and that there are no large obstructions or interference • Try repositioning the camera, receiver or both to improve the reception.
The picture is dropping	<ul style="list-style-type: none"> • Move the camera closer to the receiver. • Try repositioning the camera, receiver or both to improve the reception.
The picture is or has become choppy	<ul style="list-style-type: none"> • The picture may become choppy when experiencing a lower frame rate (i.e. 10 frames per second vs. a higher 20 frames per second). • Try moving the camera closer to the receiver. • Remove obstructions between the Receiver and Camera • Try switching to QVGA mode. Resolution will be reduced but video frame rate will increase
The picture appears to be grainy/distorted	<ul style="list-style-type: none"> • When using with large screen TV/Monitor (especially high-definition televisions), the picture might be grainy as the camera limits video resolution to VGA (640x480 pixels). This is not a product defect. • For best performance use with TV/Monitor PIP (Picture in Picture) function. Check your TV/Monitor product manual to see if this feature is available on your TV/Monitor • View video on a smaller screen TV/Monitor • Consider increasing the range of the wireless signal with an accessory antenna (see page 17)
The picture is white	<ul style="list-style-type: none"> • Common situation know as "washout" or "whitewash" where a strong light source is pointed at the camera lens. The camera lens IS NOT harmed during a whitewash. • DO NOT point your camera towards a light source

FAQ

Q: What is the maximum distance I can have between the camera and the receiver?

A: Typically 450 feet (137 m) with a clear line of sight in open space, or approximately 150 feet (46 m) in a house. Walls, studs, furniture will interfere with the range of wireless transmission.

Q: Why does my “wireless camera” have a power cable?

A: The term “wireless” refers to the lack of a video cable between the camera and the receiver. The camera still requires a power source.

What does 'line-of-sight' mean?

A: 'Line-of-sight' means that there are no obstructions which may interfere with the transmission of the audio/video signal. Obstructions include items such as walls, buildings and certain electronic devices.

Q: What is pairing?

A: Pairing is an electronic handshake between digital wireless devices. Pairing allows the devices to communicate exclusively with each other. The transmission is encrypted and secure.

Q: Can digital wireless cameras be paired to more than one receiver?

A: Digital Wireless cameras can only be paired to one receiver. This is to prevent interception by 3rd parties, and prevents any other device from picking up the signal – this also means that you cannot pair one camera to multiple receivers.

Q: Can I use 900 MHz and 2.4 GHz systems at the same time?

A: Yes. 900 MHz devices and 2.4 GHz devices will not interfere with one another.

Q: Can I connect analogue 2.4 GHz wireless cameras to the wireless receiver?

A: No, analogue and digital wireless products are incompatible. Visit www.lorexcctv.com for a full list of cameras and accessories that are compatible with this system.

LOREX PRODUCT LIMITED WARRANTY

LOREX warrants, to the original retail purchaser only (the "Purchaser"), that this item (the "Product") if properly used and installed, and where applicable, the CD-ROM on which the accompanying software is provided, is free from manufacturing defects in material and workmanship, provided the Product is used in normal conditions and is installed and used in strict accordance with the instructions contained.

This warranty shall be for the following warranty periods (the "Warranty Period"), commencing on the date the Purchaser buys the Product at retail in an unused condition.

Parts and Labor: 1 year (Warranted parts do not include Bulbs, LED's and Batteries)

LOREX's obligations under this warranty shall be limited to

- The repair and/or replacement of the product by means of hardware and/or software (at option of LOREX);
 - The replacement of any warranted parts found by LOREX to be defective in the Product or, in LOREX's sole discretion, the replacement of the Product found to be defective.
 - If LOREX is unable to repair or replace the Product or CD-ROM, refund the then-current value of the Product.
- Any replacement parts furnished by LOREX in connection with this warranty shall be warranted to the Purchaser for a period equal to the unexpired portion of Warranty Period for the Product.

Warranty Exclusions

This warranty does not apply to Bulbs, LED's and Batteries supplied with or forming part of the product. This warranty is invalidated if other than LOREX accessories are or have been used in or in connection with the Product or in any modification or repair is made to the Product by other than a service depot authorized by LOREX.

This warranty does not apply to defects or damages arising by use of the Product in other than normal (including normal atmospheric, moisture and humidity) conditions or by installation or use of the Product other than in strict accordance with the instructions contained in the Product's Owner's Manual.

This warranty does not apply to defects in or damages to the Product caused by (i) negligent use of the Product, (ii) misuse, abuse, neglect, alteration, repair or improper installation of the Product, (iii) electrical short circuits or transients, (iv) Purchaser usage not in accordance with Product installation, (v) use of replacement parts not supplied by LOREX (vi) improper Product maintenance, or (viii) accident, fire, flood or other Acts of God.

This warranty does not cover the performance or functionality of any computer software included in the package with the Product. This warranty only covers defects in the CD-ROM media such as a broken or a defect in the CD-ROM that would prevent the CD-ROM from being read by your personal computer's CD-ROM drive. LOREX makes no warranty that the software provided with the Product will function without interruption or otherwise be free of anomalies, errors or "Bugs". LOREX makes no warranty with regard to any software provided with the Product unless specifically set forth otherwise in a license agreement accompanying such software. This warranty does not cover any costs relating to removal or replacement of any Product, CD-ROM, or software installed on your computer.

LOREX reserves the right to make changes in design or to make additions to or improvements in its products without incurring any obligation to modify any product which has already been manufactured. LOREX will make every effort to provide updates and fixes to its software via its website. This warranty does not cover any alteration or damage to any other software that may be or may become resident on the user's system as a result of installing the software provided. This warranty is in lieu of other warranties, express or implied, and LOREX neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale or service of the Product. In no event shall LOREX be liable for any special or consequential damages arising from the use of the Product or arising from the malfunctioning or non-functioning of the Product, or for any delay in the performance of this warranty due to any cause beyond its control.

This warranty shall not apply to the appearance or accessory items including, but not limited to cabinets, cabinet parts, knobs etc., and the uncrating, setup, installation or the removal and reinstallation of products after repair.

LOREX does not make any claims or warranties of any kind whatsoever regarding the Product's potential, ability or effectiveness to prevent minimize, or in any way affect personal or property damage or injury. LOREX is not responsible for any personal damage, loss or theft related to the Product or to its use for any harm, whether physical or mental related thereto. Any and all claims or statements, whether written or verbal, by salespeople, retailers, dealers or distributors to the contrary are not authorized by LOREX, and do not affect this provision of this warranty.

LOREX's responsibility under this, or any other warranty, implied or expressed, is limited to repair, replacement or refund, as set forth above. These remedies are the sole and exclusive remedies for any breach of warranty. LOREX is not responsible for direct, special, incidental, or consequential damages resulting from any breach of warranty or under any other legal theory including but not limited to, loss profits, downtime, goodwill, damage to or replacement of equipment and property and any costs of recovering, reprogramming or reproducing any program or data stored in or with a system containing the Product CD-ROM or accompanying software.

LOREX does not warrant that the software will operate with any other software except that which is indicated. LOREX cannot be responsible for characteristics of third party hardware or software which may effect the operation of the software included.

The purchaser may have other rights under state, provincial, or federal laws and where the whole or part of any item of this warranty is prohibited by such laws, it shall be deemed null and void, but the remainder of the warranty shall remain in effect.

All expressed and implied warranties are limited in duration to the limited warranty period. No warranties apply after that period. Some states do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above warranty may not apply to you. This limited warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Obtaining Service

In order to obtain service, please make sure that you have registered your product on-line (www.lorexcstv.com) in the warranty registration section. Should the Product require service under this warranty, the Purchaser must provide LOREX with a copy of his/ her original, dated bill of sale, receipt or invoice, failing which LOREX will not perform any of its obligations under this warranty. If you return the Product and/or CD-ROM to LOREX, you must assume the risk of damage or loss during shipment. You must use the original packaging or the equivalent, and you must pay postage.

To claim on this warranty, proceed with the following steps:

- 1 Pack the Product in a well-padded sturdy carton.
2.
 - i). If the unit was purchased in the United States proceed as follows:
 - a. Please contact our customer service department to obtain a return authorization number.
 - b. Return the unit to:

LOREX Returns
c/o Russell Farrow
15 Lawrence Bell Drive, Amherst, NY 14221
 - ii). If the unit was purchased in Canada proceed as follows:
 - a. Please contact our customer service department to obtain a return authorization number.
 - b. Return the unit to:

LOREX Service Center,
250 Royal Crest Court, Markham, Ont. L3R 3S1

www.lorexinternational.com for return instructions.

TOLL FREE CUSTOMER SUPPORT
North America: 1-888-42-LOREX (1-888-425-6739)

Local: 905-940-5355

International: 800-42-LOREX 0 (800-425-67390)

www.lorexcstv.com

Always use discretion when installing video and/or audio surveillance equipment especially when there is perceived privacy. Inquire regarding federal, state and/or local regulations applicable to the lawful installation of video and/or audio recording or surveillance. Party consent may be required.

GARANTEE LIMITEE DES PRODUITS LOREX

LOREX garantit à l'acheteur original (ci-après désigné comme étant "l'acheteur") dans un magasin au détail (seulement), et que ce produit (ci-après désigné comme étant le "produit"), s'il est installé correctement et - s'il y a lieu - utilisé conformément aux instructions ci-inclues, et le disque CD-ROM qui comporte le logiciel, seront libres de tout défaut de fabrication, tant dans les pièces que la main-d'œuvre, pourvu que le produit soit utilisé dans des conditions normales et installé et utilisé strictement selon les instructions incluses dans le guide qui l'accompagne.

Cette garantie couvrira la période mentionnée ci-dessous (ci-après désignée comme étant la "période de garantie"), commençant le jour où l'acheteur se procure le produit à l'état neuf dans un magasin au détail.

Pièces et main-d'œuvre : 1 année (les pièces couvertes ~~n'incluent pas les ampoules, voyants à DEL ni les piles~~).

Les obligations de LOREX selon les termes de cette garantie se limitent exclusivement aux points suivants :

- LOREX se réserve le droit de réparer ou de remplacer, sa seule discrétion, le logiciel et/ou le matériel.
 - Le remplacement des pièces sous garantie que LOREX estime être défectueuses dans le produit ou le disque CD-ROM ou, à sa seule discrétion, le remplacement du produit jugé défectueux.
 - Si LOREX ne peut réparer ni remplacer le produit ou le disque CD-ROM, rembourser la valeur monétaire du produit ou du disque CD-ROM en cours au moment de l'achat.
- Toutes les pièces remplacées par LOREX seront couvertes pendant la période résiduelle de la garantie dudit produit.

Exclusions de la garantie

Pour obtenir du service, veuillez vous assurer que vous avez inscrit votre produit en ligne (www.lorexcstv.com) dans la section d'abonnement à la garantie. Cette garantie ne couvre pas les ampoules, voyants à DEL, ni les piles incluses avec le produit ou faisant partie de celui-ci. Cette garantie deviendra nulle si des accessoires autres que ceux vendus ou distribués par LOREX sont utilisés ou ont été utilisés conjointement avec le produit ou si des modifications ou des réparations ont été effectuées au produit par une entité autre qu'un centre de service autorisé par LOREX.

Cette garantie ne s'applique pas aux défauts ni aux dommages survenus suite à une utilisation anormale du produit (incluant des conditions atmosphériques et des taux d'humidité anormaux) ou suite à une installation ou une utilisation du produit autre que celle décrite dans le guide accompagnant le produit.

Cette garantie ne s'applique pas aux défauts ni aux dommages causés au produit suite à (i) une utilisation insouciante du produit, (ii) mauvaise utilisation, abus, négligence, modification ou mauvaise installation du produit, (iii) court-circuits ou transferts électriques, (iv) tout usage de l'acheteur qui ne correspond pas à l'installation prescrite du produit, (v) l'utilisation de pièces non fournies par LOREX, (vi) un entretien inadéquat du produit, ou (vii) tout accident, incendie, inondation ou autres désastres naturels.

Cette garantie ne couvre pas la performance ni la fonctionnalité de tout logiciel informatique inclus avec le produit. Cette garantie ne couvre pas les défauts que pourrait contenir le support optique (disque CD-ROM) ou magnétique (disquette), tel qu'un CD-ROM brisé ou comportant un défaut qui l'empêcherait d'être lu adéquatement par le lecteur de disque de votre ordinateur. LOREX ne garantit pas que le logiciel fourni avec le produit fonctionnera sans interruption ni qu'il sera libre de tout défaut, dérivés ou de bogues. LOREX ne garantit pas le logiciel inclus à moins que cela ne le soit mentionné spécifiquement dans l'entente de la licence incluse avec le produit. Cette garantie ne couvre pas les frais se rapportant à l'enlèvement ni à la réinsertion de tout produit, logiciel, périphérique ou disque CD-ROM installé sur votre ordinateur.

LOREX se réserve le droit de modifier la conception ou d'apporter des ajouts ou des améliorations à ses produits, sans obligation de sa part de modifier les produits déjà fabriqués. LOREX fera tout en son pouvoir pour fournir des améliorations et des réparations à son logiciel via son site web. Cette garantie ne couvre pas les altérations ni les dommages effectués tout autre logiciel, ni les bogues pouvant résider de la façon permanente sur le système de l'utilisateur suite l'installation du logiciel ci-inclus.



Cette garantie a présance sur toutes les autres garanties tacites ou explicites, incluant la garantie en qualité loyale et marchande et les aptitudes visant toute autre obligation ou responsabilité de la part de Lorex, et par les présentes, Lorex n'autorise aucune personne ni entité à assumer pour elle nulle autre responsabilité en rapport avec la vente de ce produit. Lorex ne sera pas tenue responsable, en aucune circonstance, des dommages-intérêts directs ou indirects survenant de l'utilisation du produit ou suite au mauvais fonctionnement ou à l'absence de fonctionnement dudit produit, ainsi que pour tout délai dans l'exécution de cette garantie suite à des circonstances hors du contrôle de Lorex.

Lorex ne garantit d'aucune manière l'apparence extérieure du produit, ni les pièces ou accessoires incluant, mais ne s'y limitant pas, le boîtier, les pièces du boîtier, les boutons, etc., ainsi que le déballage, l'installation, l'enlèvement et la réinstallation du produit après une réparation.

Lorex ne garantit pas et ne fait aucune revendication de ce qui a trait au potentiel, à la capacité ou l'efficacité de prévenir, réduire ou d'une façon quelconque, d'influer sur les dommages à la propriété privée ou sur les blessures corporelles. Lorex ne sera pas tenue responsable des blessures corporelles, dommages à la propriété personnelle, perte ni au vol se rapportant de près ou de loin au produit ou son usage dans un cadre malveillant, qu'il soit physique ou mental. Lorex n'autorise aucunement les représentants, détaillants ou grossistes, à faire des revendications ou des annonces de la part de Lorex, tant par voie écrite que verbale et ces annonces n'influent d'aucune manière sur les clauses de cette garantie.

La seule responsabilité de Lorex, selon les termes de cette garantie, qu'ils soient tacites ou explicites, se limite à une réparation, un remplacement ou un remboursement, selon les clauses décrites dans les présentes. Ces recours constitueront les seuls auxquels a droit l'acheteur pour les bris des clauses de la garantie. Lorex ne sera pas responsable des dommages-intérêts spéciaux, directs ou indirects, qui résulteraient d'un bris des clauses de cette garantie ou de toute autre convention législative, incluant mais ne s'y limitant pas, les pertes de profits, pertes de courants immobilisant des équipements, la valeur ajoutée des biens incorporels, les dommages effectués au produit et à la propriété ou les coûts reliés à leur remplacement, ainsi que les frais de recouvrement, reprogrammation ou reproduction d'un programme ou des données stockées dans un système contenant le disque CD-ROM du produit ou le logiciel qui accompagne celui-ci.

L'acheteur peut bénéficier de certains droits provinciaux ou fédéraux additionnels et toute clause de cette garantie qui soit prohibée par de tels lois sera jugée nulle et sans effet mais les autres clauses demeureront en vigueur.

Lorex ne garantit pas que ce logiciel fonctionnera conjointement avec tout autre logiciel ou suite logicielle, moins que cela ne soit indiqué. Lorex ne sera pas tenue responsable des caractéristiques ni des fonctions du matériel ou des logiciels d'un tiers pouvant entrer en conflit avec le fonctionnement du logiciel ci-inclus.

Toutes les garanties tacites ou explicites se limitent à la durée de la garantie limitée. Aucune garantie ne sera applicable après cette période de temps. Certains états ou provinces ne permettent pas de restrictions en ce qui a trait aux termes d'une garantie tacite, ni d'exclusions aux dommages-intérêts directs ou indirects et il se peut que ces restrictions ne s'appliquent pas à vous. Cette garantie donne à l'acheteur original des droits spécifiques et il se peut que d'autres droits, variant d'un état ou d'une province à l'autre, puissent lui être conférés.

Obtention du service

Si l'acheteur a besoin de service pour son produit, selon les termes de cette garantie limitée, il doit fournir à Lorex une copie de la facture d'achat affichant clairement la date et l'endroit où le produit a été acheté. Sans cette preuve d'achat, Lorex ne sera pas dans l'obligation de remplir ses obligations envers l'acheteur. Si vous retournez le produit et/ou le disque CD-ROM à Lorex, vous devez assumer le risque que ceux-ci soient endommagés ou perdus au cours de l'expédition. Vous devez emballer le produit dans sa boîte originale ou un emballage adéquat et vous devez défrayer les coûts d'expédition à l'une des adresses mentionnées ci-dessous.

Pour bénéficier du service sous garantie, vous devez suivre les étapes ci-dessous :

- Emballer le produit dans une boîte solide et remplie de matériau d'expédition.
- i) Si l'appareil a été acheté aux États-Unis, suivez ces étapes-ci :
 - Veuillez contacter notre département de service à la clientèle pour obtenir un numéro d'autorisation pour le retour.
 - Retournez le produit à :
Lorex Returns
c/o Russell Farrow
15 Lawrence Bell Drive, Amherst, NY 14221
- Si l'appareil a été acheté au Canada, suivez ces étapes-ci :
 - Veuillez contacter notre département de service à la clientèle pour obtenir un numéro d'autorisation pour le retour.
 - Retournez le produit à :
Lorex Customer Service
250 Royal Crest Court, Markham, ON L3R 3S1
- Si l'unité a été achetée dans Europe veuillez visiter : www.lorexinternational.com pour les instructions de retour

COMPOSEZ LA LIGNE D'ASSISTANCE SANS FRAS AUS CONOMMATEURS:

L'Amérique du nord: 1-888-42-LOREX (1-888-425-6739)

Local : 905-940-5355

International : 800-42-LOREX 0 (800-425-67390)

Soyez toujours très discret lorsque vous installez des systèmes de surveillance, surtout dans les endroits plus intimes. Informez-vous au sujet des lois et règlements municipaux, provinciaux ou fédéraux qui s'appliquent à l'installation d'appareils de surveillance audio et vidéo. Il se peut que le consentement de la partie surveillée soit exigé.

GARANTIE LIMITADA DEL PRODUCTO LOREX

Lorex garantiza, sólo al comprador original al por menor (el "Comprador") que este artículo (el "Producto"), si se usa e instala debidamente, y – si hay lugar – el CD-ROM en el que se proporciona el software asociado, está libre de defectos de fabricación en materiales y mano de obra, sujeto a que el Producto sea usado en condiciones normales y que sea instalado y usado estrictamente de acuerdo con las instrucciones contenidas.

Esta garantía será para los siguientes periodos de garantía (el "Período de Garantía"), a partir de la fecha en que el Comprador adquiere el Producto al por menor en la condición de no haber sido usado previamente.

Repuestos y Mano de Obra: 1 año (Las piezas garantizadas no incluyen bombillas, LEDs y baterías)

Las obligaciones de Lorex bajo esta garantía estarán limitadas a:

- la reparación o el reemplazo del producto por medio de hardware y/o software (a opción de Lorex).
- el reemplazo de cualquier parte garantizada que Lorex determine que está defectuosa en el Producto o CD-ROM o, por decisión única de Lorex, al reemplazo del Producto que Lorex encuentre defectuoso.
- Si a Lorex no le es posible reparar o reemplazar el Producto o el CD-ROM, se devolverá el valor vigente en ese momento del Producto o CD-ROM.

Se garantizará al Comprador cualquier pieza de repuesto provista por Lorex en conexión con esta garantía por un período igual a la parte no vencida del Período de Garantía del Producto.

Exclusiones de la garantía

Esta garantía no se aplica a las bombillas, LEDs y baterías suministradas con el producto o que formen parte del mismo.

Esta garantía quedará nula si se han usado accesorios que no son Lorex en el Producto o en relación con el mismo o si se hace alguna modificación o reparación al Producto en algún taller que no sea un local de servicio autorizado por Lorex.

Esta garantía no se aplica a defectos o daños resultantes del uso del producto en condiciones diferentes a las normales (incluyendo condiciones atmosféricas o de humedad normales) o por la instalación o uso del Producto en forma distinta a seguir estrictamente las instrucciones contenidas en el Manual del Propietario del Producto.

Exclusiones de la garantía

Esta garantía no se aplica a las bombillas, LEDs y baterías suministradas con el producto o que formen parte del mismo.

Esta garantía quedará nula si se han usado accesorios que no son Lorex en el Producto o en relación con el mismo o si se hace alguna modificación o reparación al Producto en algún taller que no sea un local de servicio autorizado por Lorex.

Esta garantía no se aplica a defectos o daños resultantes del uso del producto en condiciones diferentes a las normales (incluyendo condiciones atmosféricas o de humedad normales) o por la instalación o uso del Producto en forma distinta a seguir estrictamente las instrucciones contenidas en el Manual del Propietario del Producto.

Esta garantía no se aplica a defectos o daños al Producto causados por (i) uso negligente del Producto, (ii) mal uso, abuso, negligencia, alteración, reparación o instalación incorrecta del Producto, (iii) cortocircuitos o corrientes eléctricas transitorias, (iv) uso por el Comprador que no está de acuerdo con la instalación del producto, (v) uso de piezas de repuesto no suplidas por Lorex (vi) inadecuado mantenimiento del Producto, o (vii) accidente, incendio, inundación u otros accidentes naturales.

Esta garantía no cubre el rendimiento o funcionalidad de ningún software de computadora incluido en el paquete con el Producto. Esta garantía sólo cubre defectos en el material de CD-ROM, tal como roturas o defectos en el CD-ROM que impida que sea leído por la unidad de CD-ROM de su computadora personal. Lorex no garantiza que el software provisto con el Producto funcione sin interrupción o que de otra forma esté libre de anomalías, errores o "bugs". Lorex no ofrece ninguna garantía con respecto a algún software provisto con el equipo a menos que específicamente se establezca de otra forma en un acuerdo de licencia que acompañe a dicho software.

Esta garantía no cubre ningún costo relativo a la remoción o reemplazo de algún Producto, CD-ROM, o software instalado en su computadora.

Lorex se reserva el derecho de hacer cambios en el diseño o hacer adiciones o mejoras a sus productos sin incurrir en ninguna obligación de modificar algún producto que ya haya sido fabricado.

Lorex tratará en lo posible de proporcionar actualizaciones y arreglos a su software por medio de su página en la red.

Esta garantía no cubre ninguna alteración ni daño a algún otro software que pueda ser instalado o pueda quedar instalado en el sistema del usuario como resultado de la instalación del software provisto.

Esta garantía es el reemplazo de otras garantías, expresas o implícitas, y Lorex no asume ni autoriza a ninguna persona a asumir por ella ninguna obligación en relación con la venta o servicio del producto. En ningún caso Lorex será responsable por ningún daño o perjuicio especial o consecuente resultante del uso del Producto o de su mal funcionamiento o incapacidad de funcionar, o por cualquier demora en la atención de esta garantía debida a causas fuera de su control.

Esta garantía no se aplicará a la apariencia o artículos accesorios incluyendo, sin estar limitado a ellos, gabinetes, piezas de gabinetes, perillas, etc., y el desembalaje, instalación, configuración, o remoción y reinstalación del producto después de ser reparado.

Lorex no hace ninguna de cada declaración ni garantía de ninguna clase con respecto al potencial, capacidad o eficacia del Producto para evitar, minimizar o en alguna forma atectar a los daños o lesiones personales o a la propiedad. Lorex no es responsable por ningún daño personal, siniestro o robo relacionado con el Producto o a su uso para cualquier daño, sea físico o mental relacionado con el mismo. Cualquier afirmación o declaración, sea escrita o verbal, hecha por vendedores, minoristas o distribuidores en sentido contrario no es autorizada por Lorex y no afecta esta disposición de esta garantía.

La responsabilidad de Lorex según esta o cualquier otra garantía, implícita o explícita, está limitada a la reparación, reemplazo o reembolso, como se establece anteriormente. Estas compensaciones son el único y exclusivo remedio por cualquier incumplimiento de garantía. Lorex no es responsable por daños y perjuicios directos, especiales, incidentes o consecuentes resultantes de algún incumplimiento de garantía o bajo cualquier otra teoría legal, incluyendo pero sin estar limitada a: pérdida de utilidades, paralización, plusvalía, daños o reemplazo de equipos y propiedad y cualquier costo de recuperar, reprogramar o reproducir cualquier programa o datos almacenados o usados con un sistema que contenga el CD-ROM del Producto o el software que lo acompaña.

Lorex no garantiza que el software operará con ningún otro software excepto con el que se indica. Lorex no puede ser responsable de las características de hardware o software de terceras personas que puedan afectar la operación del software incluido.

El comprador puede tener otros derechos de acuerdo con las leyes federales, provinciales o estatales y cuando toda esta garantía o parte de la misma sea prohibida por dichas leyes, será considerada nula, pero el resto de la garantía permanecerá vigente.

Todas las garantías expresadas e implícitas están limitadas en duración al período de garantía limitada. Ninguna garantía se aplicará después de dicho período. Algunos estados no permiten limitación a la duración de una garantía implícita, de modo que esta limitación puede no ser de aplicación. Algunos estados no permiten la exclusión o limitación de daños y perjuicios incidentes o consecuentes, por lo que la garantía anterior puede no ser de aplicación. Esta garantía limitada le otorga derechos legales específicos y usted puede también tener otros derechos que varía de un estado a otro.

Cómo obtener servicio

Con el fin de obtener servicio, por favor asegúrese de registrar haber registrado su producto en nuestra página web www.lorexctv.com en la sección de registro de garantía. Si el Producto necesitase servicio bajo esta garantía, el Comprador debe hacer llegar a Lorex una copia del recibo o factura de compra, con su fecha respectiva, sin lo cual Lorex no estará obligada a cumplir con ninguna de sus obligaciones bajo esta garantía. Si devuelve el Producto y/o el CD-ROM a Lorex, debe usted asumir el riesgo de daño o pérdida durante el envío. Debe usar el envase original o equivalente y debe pagar el flete.

Para hacer un reclamo bajo esta garantía, proceda con los siguientes pasos.

- Empaque el Producto en una caja robusta bien acolchada.
 - Si la unidad fue comprada en Estados Unidos proceda en la siguiente forma:
 - Para devoluciones por favor contacte nuestro departamento de servicio para obtener un número de autorización
 - Devuelva la unidad a:
Lorex Returns
c/o Russell Farrow
15 Lawrence Bell Drive, Amherst, NY 14221
 - Si la unidad fue comprada en Canadá proceda en la siguiente forma:
 - Para devoluciones por favor contacte nuestro departamento de servicio para obtener un número de autorización.
 - Devuelva la unidad a:
Lorex Customer Service,
250 Royal Crest Court, Markham, Ont. L3R 3S1
 - Si la unidad fue adquirida en Europa y desea devolver el producto por favor visite:
www.lorexinternational.com para obtener instrucciones.

NUMERO GRATUITO DE SERVICIO A CLIENTES:

Norteamérica: 1-888-42-LOREX (1-888-425-6739)

Internacional: 800-42-LOREX 0 (800-425-67390)

Local : 905-940-5355

www.lorexctv.com

Use siempre discreción cuando instale equipo de vigilancia por video y/o audio especialmente cuando se percibe privacidad. Consulte acerca de las regulaciones federales, estatales y/o locales aplicables a la instalación legal de equipos de grabación o vigilancia por video y/o audio. Puede requerirse el consentimiento de las partes.

SEE > HEAR > PROTECT



Enhance your security with genuine Lorex Cameras, Digital Video Recorders, Integrated Systems and Accessories. Order whatever you need at www.lorexctv.com or call 1-888-42-LOREX (1-888-425-6739)

Warehouse



CVC6998HR

Office



CVC6993R

Restaurant



VQ1536HR

Convenience Store



CNC1020

Day Care



LW2602

PROTECT EVERYTHING THAT MATTERS

Add wired or wireless cameras to expand the "Envelope of Protection" for your business, your home and your family

Home Office



LW2002B

Drive Way



SG7555

Front Door



LW1010

Nursery



LW2002W

Backyard



LW2201