
UK

Kompernaß GmbH · Burgstrasse 21 · D-44867 Bochum www.kompernass.com

ID-Nr.: KH4105-06/06-V1



© Car Massage Mat KH 4105
Operating instructions

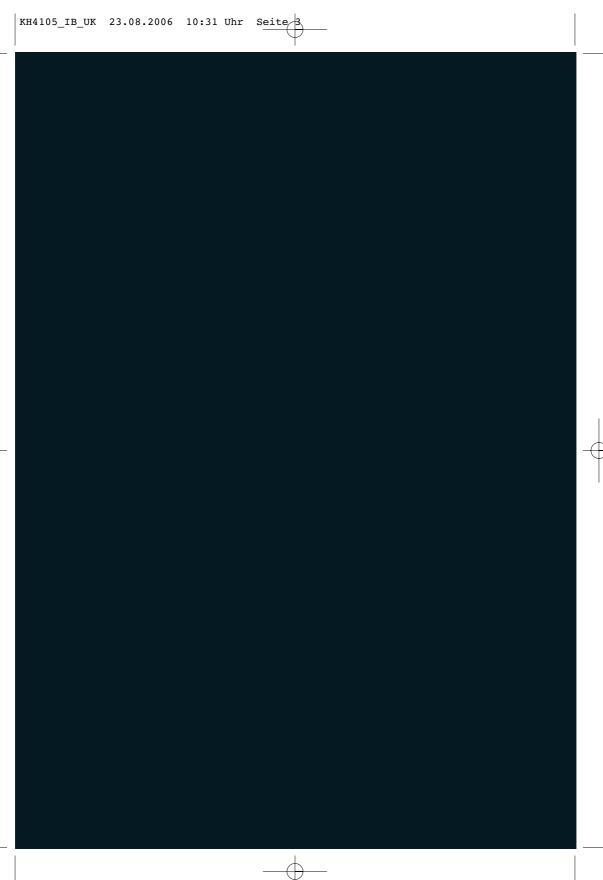



Massage mat	Page
Intended Use	4
Description of the appliance	4
Included in delivery	4
Technical Data	4
Safety instructions	4
Connection	5
Operation	5
MASSAGE ON / OFF MASSAGE MODE PROGRAM AUTO/SELECT	6 6 6
SELECT INTENSITY SPEED HEAT ON / OFF	7 7 7 7
Cleaning	7
Disposal	7
Warranty and Service	7

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Hand over the manual to anyone, whom you pass on the appliance to.

KH 4105

# Massage mat

#### **Intended Use**

This massage mat is intended solely for private household use. It is intended for the relaxation massage of the shoulders, back, hips and thighs. This massage mat is not suitable for other purposes. It is not intended for use in medical/therapeutical applications or in commercial environments.

### Description of the appliance

- Massage mat
- 2 Storage bag for remote control
- 3 Remote control
- 4 12 V car connector
- **5** 230 V connector power pack

### Included in delivery

Massage mat 12 V car connector 230 V connector power pack Operating instructions Warranty card

#### **Technical Data**

Rated voltage: 12 V (DC) Rated current : 800 mA

# **△** Safety instructions

- Do not allow children to handle electrical equipment without supervision - children are not able to recognise potential hazards.
- Unplug the power cord after every use and before cleaning, so as to prevent the appliance from switching on inadvertently.
- Check the appliance and all the parts for visible damages. The safety concept can work only if the appliance is in an immaculate condition.

# **⚠** Danger of electrical shock!

- Connect the connector to a power socket with a mains voltage of 230 V ~ 50 Hz or to a 12 V vehicle cigarette lighter
- Do not operate the appliance with damaged connecting cable or power plug.
- Get customer service to repair or replace connecting cables and/or appliances that are not functioning properly or have been damaged.
- Never immerse the appliance in water. Just wipe it with a damp cloth.
- Do not expose the appliance to the rain and never use it in a humid or wet environment.
- make sure that the connecting cable is never wet or damp during operation.



- Unplug the appliance immediately after use. The appliance is completely disconnected, only when you pull out the power plug from the power socket.
- You must not open or repair the massage mat. In this case, the device is not safe and the warranty is voided.

#### ⚠ Fire hazard!

- Do not use the massage mat in places exposed to direct solar radiation. The massage mat may otherwise overheat and suffer permenent damage.
- Do not leave the appliance unattended when in use.

# **⚠** Injury hazard!

- Keep children away from the connecting cable and the appliance.
   Children frequently underestimate the danger from electrical appliances.
- Make sure that the massage mat is firmly fitted into place.
- If the appliance is damaged, it must no longer be operated. Have the appliance checked and repaired if necessary by a qualified expert.

### **⚠** Danger of accident!

 Only operate the massage mat in the car when it is stationary.

#### Connection

If you wish to use the massage mat in the car...


- First plug the small pin of the 12 V car connector 4 into the socket provided on the remote control 3...
- and then plug the large connector into the cigarette lighter of your car.

If you wish to use the massage mat at home...

- First plug the small pin of the 230 V connector power pack into the socket provided on the remote control 3...
- and then plug the power plug into the wall socket

#### Operation

You can easily control the individual functions of the massage mat using the buttons on the remote control unit.

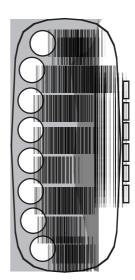

KH 4105

#### **MASSAGE ON / OFF**

Press this button....

- once to switch on the massage mat,
- again to switch off the massage mat. The massage automatically switches itself off after 15 minutes operation. To re-activate the massage mat,
- press the MASSAGE ON / OFF button again.

#### **MASSAGE MODE**

You can adjust the type pf massage using this button.

When you switch the massage mat on, you receive a pulse massage.

Press the button MASSAGE MODE...

- once for a beating massage,
- twice for a kneading massage,
- threee times for a wave massage.

#### **PROGRAM**

You can select the order of massage zones using this button.

You can activate several zones at the same time.

1 Shoulders
2 Back
3 Hips
4 right thigh
5 left thigh

The active zone(s) is/are displayed by a green LED at the right-hand edge of the remote control. The top LED is for zone 1, the second for zone 2 etc.

When you switch on the massage mat, the standard order is:

$$1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 5 \rightarrow 5 \rightarrow 4 \rightarrow 3 \dots$$

Press the PROGRAM button...

once for order:

$$1 + 2 + 3 \Rightarrow 4 + 5 \Rightarrow 1 + 2 + 3 \dots$$

• twice for order:

$$1+2 \rightarrow 2+3 \rightarrow 3+4 \rightarrow 4+5 \rightarrow 4+5 \rightarrow 3+4 \dots$$

• three times for order:

$$3 \rightarrow 2 + 4 \rightarrow 1 + 5 \rightarrow 1 + 5 \rightarrow 2 + 4 \dots$$

### **AUTO/SELECT**

You can explicitly select one or more massage zones by means of this button.

- Press the AUTO/SELECT button during the massage to maintain the activated zone.
- Press the SELECT button to change the massage zone.
- Press the PROGRAM button to activate several zones at the same time.

Press the PROGRAM button...

• once for zones:

$$1 + 2 + 3$$

• twice for zones:

- three times for zone:3
- four times for zone:

1

• Press the AUTO/ SELECT button again to deactivate the function.

The massage mat will then return to standard operation.

#### **SELECT**

 All massage sequences are interrupted as long as this button is kept pressed.

#### **INTENSITY**

You can control the intensity of the massage by means of this button.

 Press this button to receive the desired massage intensity: Medium→ High → Low

#### **SPEED**

You can control the cycle speed of the massage motors using this button.

 Press this button to receive the desired speed: Medium → Fast → Slow

### **HEAT ON / OFF**

- Press this button to activate the heat function.
- Press this button again to deactivate the heat function.

When the heat function is active, the bottom red diode at the edge of the remote control lights up. The heat function automatically switches itself off after 15 minutes operation. To reactivate the heat function, press the HEAT ON / OFF button again.

The massage function remains active when you switch the heat function on or off.

#### Note:

The automatic cut-off after 15 minutes applies to both operating modes (massage/heat), related to the function activated first.

**Example:** If the heat function is added 5 minutes after the massage function, the heat function is only available for the remaining 10 minutes.

### Cleaning

- Pull the connector out of the power socket before cleaning the massage mat.
- Never immerse the massage mat in water or other liquids for cleaning.
- Remove fluff with a clothes brush.
- Stains can be treated with a slightly damp cloth.

# **Disposal**



Do not dispose of the device in normal domestic waste.

Dispose of the device over a registered waste disposal firm or through your communal waste disposal facility.

Observe the currently valid regulations. In case of doubt, consult your waste disposal facility.

### Warranty and Service

Please read the conditions for warranty and service centre addresses on the warranty card.

Kompernaß GmbH Burgstrasse 21 D-44867 Bochum www.kompernass.com