CMD-Z28

SERVICE MANUAL

Ver 1.0 2001.06

E Model



SPECIFICATIONS

Signalling format Dual-Band

Frequency range E-GSM 900 MHz, Transmit: 880 – 915 MHz Receive: 925 – 960 MHz

DCS 1800 MHz, Transmit: 1710 – 1785 MHz

Receive: 1805 – 1880 MHz

GSM power class Class 4 (2W) DCS power class Class 1 (1W)

SIM chip Pluggable mini SIM card

Display High resolution grey scale full graphics display

Resolution: 96×72 pixels

Graphic Icons

5 lines × 12 (normal font numeric) characters

200 kHz E-GSM: 174 DCS: 374

Frequency stability Transmit frequency drift (synchronized)

 $< \pm 0.1$ p.p.m GSM: 2W DCS: 1W

Battery life Standby: 30h – 130h standard battery

50h – 220h extended battery

Talk time: 1h30 – 3h40 standard battery

2h30 – 6h extended battery

Power requirements 4.0 V (nominal)
Operating temperature -10°C to $+55^{\circ}\text{C}$ Accessories operating temperature $\pm 0^{\circ}\text{C}$ to $+45^{\circ}\text{C}$ Battery pack charging temperature $\pm 0^{\circ}\text{C}$ to $+40^{\circ}\text{C}$

Dimensions $88 \text{ mm} \times 47.5 \text{ mm} \times 22 \text{ mm}$

Weight 82 g Volume 78 cm^3

<Supplied accessories>

Channel spacing

RF output power

Number of channels

AC Adaptor QN-2TC
 Battery (std.) QN-Z5BPS
 Desk Top Charger QN-Z5DTC

Hand StrapAC Cable

Design and specifications are subject to change without notice.



TABLE OF CONTENTS

1.	GENERAL	3
2.	GENERAL DESCRIPTIONS	
2-1.	Multi-band	4
2-2.	Real Time Clock (RTC)	4
2-3.	Vibra Functionality	4
2-4.	Battery Safety	4
2-5.	Battery Capacity	4
2-6.	Accessory Interface	5
2-7.	RF Antenna Connector/Antenna Switch	5
2-8.	Languages	5
3.	ACCESSORIES	
3-1.	Travel Charger	6
3-2.	Desk Top Charger (not for sale by itself)	6
3-3.	Extended Battery (TBD)	6
3-4.	Standard Battery	6
4.	JIGS AND TOOLS	7
5.	DISASSEMBLY	7
6.	INTERFACE TO GSM-TESTER	9
7.	PROGRAMMING INSTRUCTIONS	
7-1.	Requirement	
7-2.	Hardware Set-up	
7-3.	Software Set-up	10
8.	SAVE PERSONAL DATA IN MOBILE	11
9	EXPLODED VIEW	12

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommen

Replace only with the same or equivalent type recommended by the manufacturer.

Discard used batteries according to the manufacturer's instructions.

ADVARSEL!

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri
af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandøren.

ADVARSEL

Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

VARNING

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en likvärdig typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt gällande föreskrifter.

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

GENERAL

Welcome to Sony CMD-Z28

phone is fully equipped with the Advanced Jog Dial and a visual menu for network of GSM (Global System for Mobile Communications). Your Welcome to the Sony CMD-Z28 designed for use in the worldwide easy access and navigation - with only one hand!

messages waiting and the status of options you have selected (for example

Your phone lets you see at a glance if you have missed calls, have

Icon Glossary

developed the following icons to provide you with a quick overview of

your mobile activity:

if you have diverted your phone or turned the ringer off). Sony has

What's Included in Your Kit


The kit should include the following:

- One mobile phone
- One lithium ion standard battery
- One AC adaptor
- One AC cable
- One desktop holder
- One hand strap
- This manual



If one of these parts is missing, please contact your retail dealer immediately.

Parts and Controls

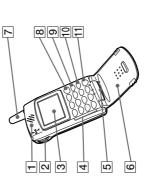

- Advanced Jog Dial Ear piece 3 2
- Keys (alphanumeric keys) Display 4
- Microphone
 - 9
- Send key Antenna



- Memo key (MEMO) Clear key C
 - On/Off key Battery pack
- (Charging and Accessories) External connector
- Battery release hook
 - Charging indicator 15 14

Divert option activated Barring service in/out Explanation Missed call activated con Ĵ.

Network signal strength

Battery strength

3

Explanation

Status con

SMS message waiting (flashing=message storage full) (flashing=battery level low)

 \triangleright

Answering machine

())

notification

Answering machine on

		Ringer off
<u> c</u> on	•	≪

<u>co</u> u	Explanation	Silent	Single beep	
	lcon	+ + +	4	

Manner

	lcon	©	Ęij.	Ø
on	Explanation	Go to	Search	Help notification
Function	con	Ф	ර	

Explanation	View	Paste	T9 (Text editing system)
con	©	먇	Ø
			l

10^{GB}

96

SECTION 2 GENERAL DESCRIPTIONS

2-1 Multi-band:

CMD-Z28 support E-GSM 900 and DCS 1800 multi-band functionality.

Because the usage of multi-band depends on network capabilities, the phone is able to operate as a single band mobile in GSM 900 as well as in DCS 1800; In addition, it supports the extra functionality required for multi-band mobile stations: Inter-band/ "seamless" hand-over, channel assignment, cell selection and re-selection, all between both bands within a Public Land Mobile Network. The manual and automatic PLMN selection in both bands is given.

The user does not need any special action to use the multi-band functionality of the phone.

Users are able to manually roam between PLMN's operating in GSM 900 and DCS 1800 bands.

The CMD-Z28 is a phase II, GSM 900 class 4, DCS 1800 class 1 mobile phone.

The nominal maximum output power for GSM 900 is 2 W, for DCS 1800 1 W.

2-2 Real Time Clock (RTC):

The real time clock is integrated into the phone.

When the mobile is switched on the RTC is powered via the CPP.

When the phone is powered down, the RTC is powered from the main battery via it's own low quiescent current regulator.

When the main battery is low or removed, a back-up battery keeps the clock alive.

After the main battery is removed the RTC keeps the time for 20 days (ability value).

2-3 Vibra Functionality

The vibrator is a 1.3 V device.

A general port pin of the SC1 controls the switch mode of the vibration motor. It is powered through regulator by an interface control unit. If the mobile is in the phase of switching on or off the vibrator is off at all times.

2-4 Battery Safety

The battery pack contains a safety circuitry. The charging circuitry and the safety circuitry together guarantee a double fail-safe battery pack. This means that each component can be either short or open and still all the safety requirements will not be violated.

The safety concept protects against:

Over voltage: The charging is stopped when Battery Voltage (Vbat) reaches (4.24 V- 4.3 V). The charging resumes when Vbat falls below (4.06 V - 4.15 V).

Under voltage: When the cell voltage drops below (2.5 V - 2.7 V) the cell is disconnected for discharging.

Charging is still possible.

2-5 Battery Capacity:

Standard Battery 620 mAh typical Li-ion QN-Z5BPS
Extended Battery 1000 mAh typical Li-ion QN-Z5BPE (TBD)

The phone can be charged even during making phone calls.

However, the shortest charging time will be reached when the phone is switched off.


As the charging circuit is integrated in the battery pack, the phone cannot be powered up by the charger without the battery pack being attached

2-6 Accessory Interface

The table explains what kind of pins the phone supplies to the different accessories.

Pins	GND 18	Charge 1/2	ACC_ power 3	Audio IN 14	Audio Out 13	ACC ID 11	ACC Detect 6	TX (OUT) 9	RX (IN) 10	AGND 12	RF GND 19/22	RF OUT 20
Travel charger (QN-2TC)	√	V										

I/O connector layout

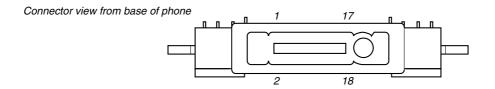

The connector comprises the following pins:

Detection:

The detection of accessory is done by the charge pin and the detect pin.

Any accessory with an active charge will wake up the phone, indicating the battery icon but can not be operated.

The insertion and removal of the charger (Cigar Lighter Charger, Desktop-Charger, AC-Charger) is detected via polling. To reduce the power consumption the polling can take up to 5 sec.

The insertion and removal of other accessory is detected via an Interrupt. This detection is only possible when the phone is powered up.

ID:

The ID pin indicates what kind of accessory is connected.

2-7 RF Antenna Connector / Antenna Switch

To connect an external antenna for accessory use, the CMD-Z28 contains a stable RF connector with an integrated mechanical switch. This connector is placed on the I/O connector. The integrated mechanical switch switches between the helix antenna and the external RF antenna connection. The switching criterium is mechanical pressure from the RF accessory connector.

2-8 Languages

The CMD-Z28 supports the following languages:

EnglishChinese (Simplified)Chinese (Traditional)

SECTION 3 ACCESSORIES

3-1 Travel Charger

The Travel Charger QN-2TC is a small and lightweight device. It has a full Input Voltage Range from 110 – 240 Volts. Using a standard cable makes the connection to the mains socket.

Specifications:

Input voltage 110 to 240 V Rated output voltage 5.0 V Rated output current 500 mA

3-2 Desk Top Charger (not for sale by itself)

The desktop charger QN-Z5 DTC can charge either the Standard or Extended battery with the phone attached. The Desk Top Charger gets its power supply via the Power adapter or the Travel Charger QN-2TC.

Specifications:

Input voltage DC 5 V Rated output voltage 5.0 V Rated output current 500 mA

3-3 Extended Battery (TBD)

Specifications:

Lithium Ion Battery QN-Z5 BPE
Maximum output voltage DC 4.2 V
Nominal output voltage DC 4.0 V
Capacity 1000 mAh

3-4 Standard Battery

Specifications:

Lithium Ion Battery QN-Z5 BPS
Maximum output voltage DC 4.2 V
Nominal output voltage DC 4.0 V
Capacity 620 mAh


SECTION 4 JIGS AND TOOLS


Description	Part No.	Remark
DATA TRANSFER JIG	1-792-172-11	NECESSARY FOR SOFTWARE UPDATE
HOOK RELEASE JIG	3-043-180-01	FOR HOUSING OPENING
TESTER CONNECTION CABLE	1-792-726-11	FOR CONNECTION TO GSM MEASURE EQUPMENT




SECTION 5 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

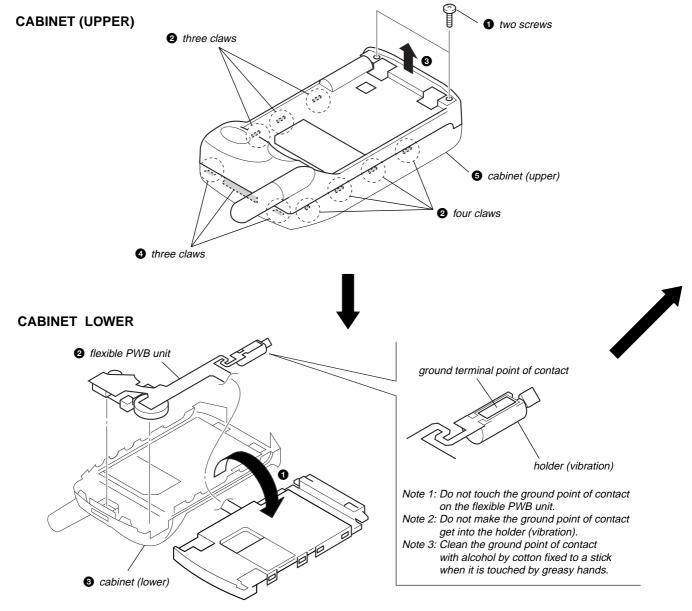

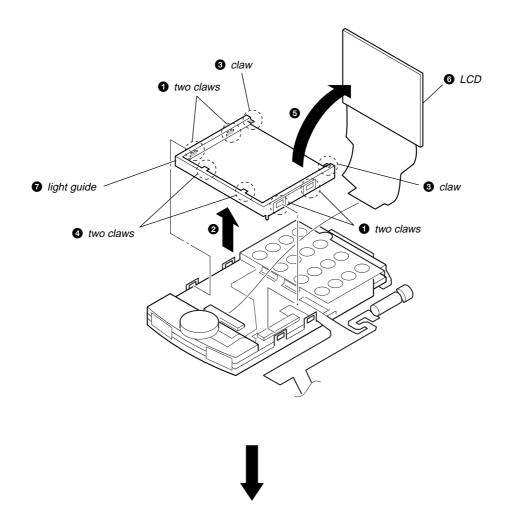


MAIN BOARD ASS'Y

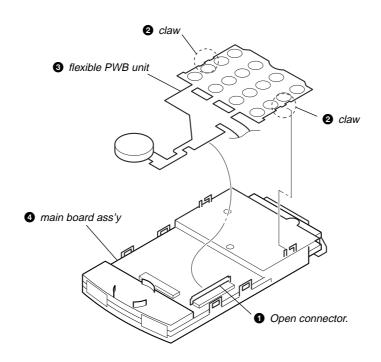

SECTION 6 INTERFACE TO GSM-TESTER

CMD-Z28 Level 1 Testing with GSM Tester

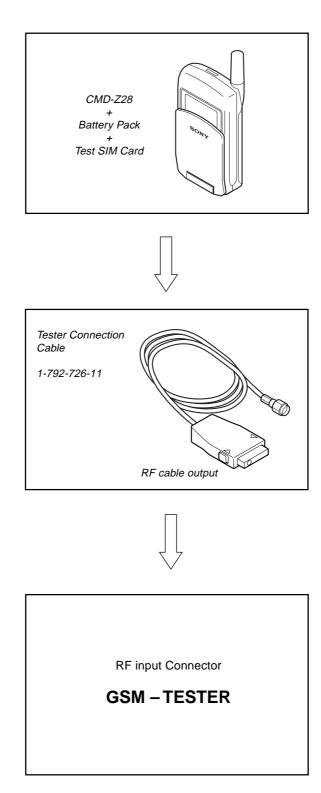

Level Test Procedure with GSM TESTER recommendation:


- Simulate GSM call processing to check the functionality of transmit and receive audio of loudspeaker and microphone.
- Basic GSM transmission & reception parameter testing to ensure handset's performance compile with standard GSM specification.

SECTION 7 PROGRAMMING INSTRUCTIONS

7-1 Requirement

- PC (486 type or higher) with Microsoft "Windows" Operating System
- One COM-port free for usage
- The Data Transfer Jig (p/n 1-792-172-11)

PREPARATION FOR SOFTWARE UPDATE

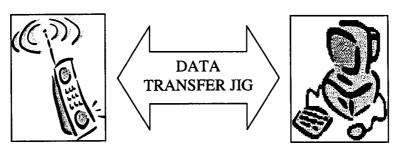


7-2 Hardware Set-up

- Copy all the files to the PC (define own directory).
- Connect the Data Transfer Jig to the PC COM-port (COM 1 or COM 2) and the CMD-Z28 external connector.
- Attach battery pack to CMD-Z28; the CMD-Z28 is powered up from the battery pack.
- The initial settings of the flash.exe program may not correspond with the normally correct settings. It is highly advisable to check the settings first (See page 12 for Software Set-up).

7-3 **Software Set-up**

Start the program Z28Loader.exe by double-clicking its icon on the Explorer in Windows.

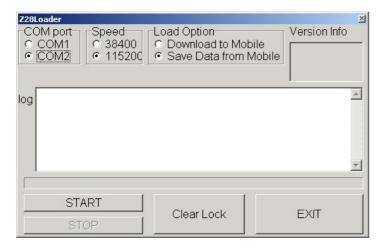



Z28 Loader.exe

Settings can be saved to "flash.ini" in the windows directory.

- · Download Software to Mobile
 - Check Load Option to "Download to Mobile"
 - · Click "START"
 - · Select a file to download

Usually, you can download only a kind of file.

"nonvm.sre" Software without NVM area.

- Flash erase area is automatically calculated with the contents of the file.
- Connect CMD-Z28 and set battery pack, and then start loading.

SECTION 8 SAVE PERSONAL DATA IN MOBILE

Check Load Option to "Save Data in Mobile"

Click "START"

Select or input file to save data.

Connect CMD-Z28 and set battery pack, then start reading data from Mobile.

And then save read data in the selected file.


The read data can be downloaded to Mobile with this loader.

SECTION 9 EXPLODED VIEW

NOTE:

- The parts with no reference in the exploded view are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

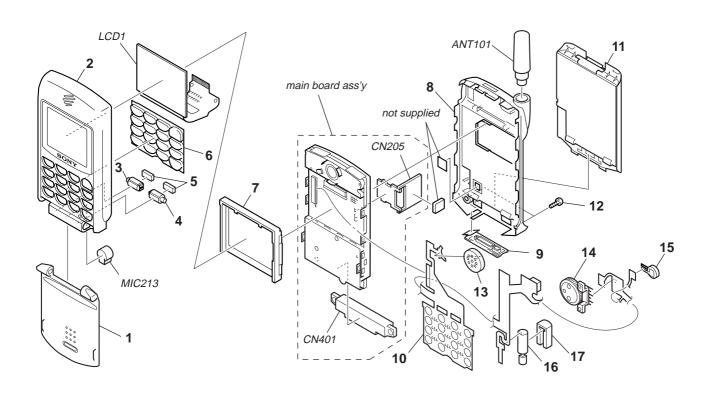

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
1	A-3649-323-A	CABINET (FLIP) ASSY		ANT101	1-754-123-11	ANTENNA (DUAL BAND)	
2	A-3649-322-A	CABINET (UPPER) ASSY		CN205	1-794-139-21	CONNECTOR, CARD (SÍM)	
3	3-229-711-11	BEARING ASSY (L)		CN401	1-793-786-11	CONNECTOR, CELLULAR (WIT	TH RF)
4	3-229-712-11	BEARING ASSY (R)		LCD1	1-803-928-11	INDICATOR MODULE, LIQUID	CRYSTAL
5	3-046-958-01	CUSHION, BEARING		MIC213	1-542-470-11	MICROPHONE	
				******	******	***********	********
6	1-786-232-11	SWITCH, RUBBER KEY					
7	X-3378-891-2	LIGHT GUIDE ASSY			ACCESSORIES	& PACKING MATERIALS	
8	X-3380-985-1	CABINET REAR (S) ASSY			********	******	
9	3-046-954-01	COVER (CONNECTOR)					
10	1-418-984-61	PWB UNIT, FLEXIBLE		\triangle	1-418-645-14	AC POWER SUPPLY	
					1-418-868-13	DESK TOP CHARGER	
11	A-3649-324-A	BATTERY ASSY			1-791-964-12	CORD SET, POWER (EURO TY	PE)
12	3-926-356-01	SCREW (ROTARY SWITCH), FITTING			1-792-884-11	CORD SET, POWER (UK TYPE)
13	1-544-939-11	SPEAKER			3-234-126-11	MANUAL, INSTRUCTION (ENG	GLISH)
14	1-418-983-11	ENCODER, ROTARY					
15	1-528-999-11	BATTERY, LITHIUM SECONDARY			3-234-126-31	MANUAL, INSTRUCTION	
						(TRADIT	TONAL CHINESE)
16	1-763-510-11	MOTOR, DC			3-047-243-01	HAND STRAP	
17	3-046-962-01	HOLDER (VIBRATION)					

(Hong Kong/Malaysia)