


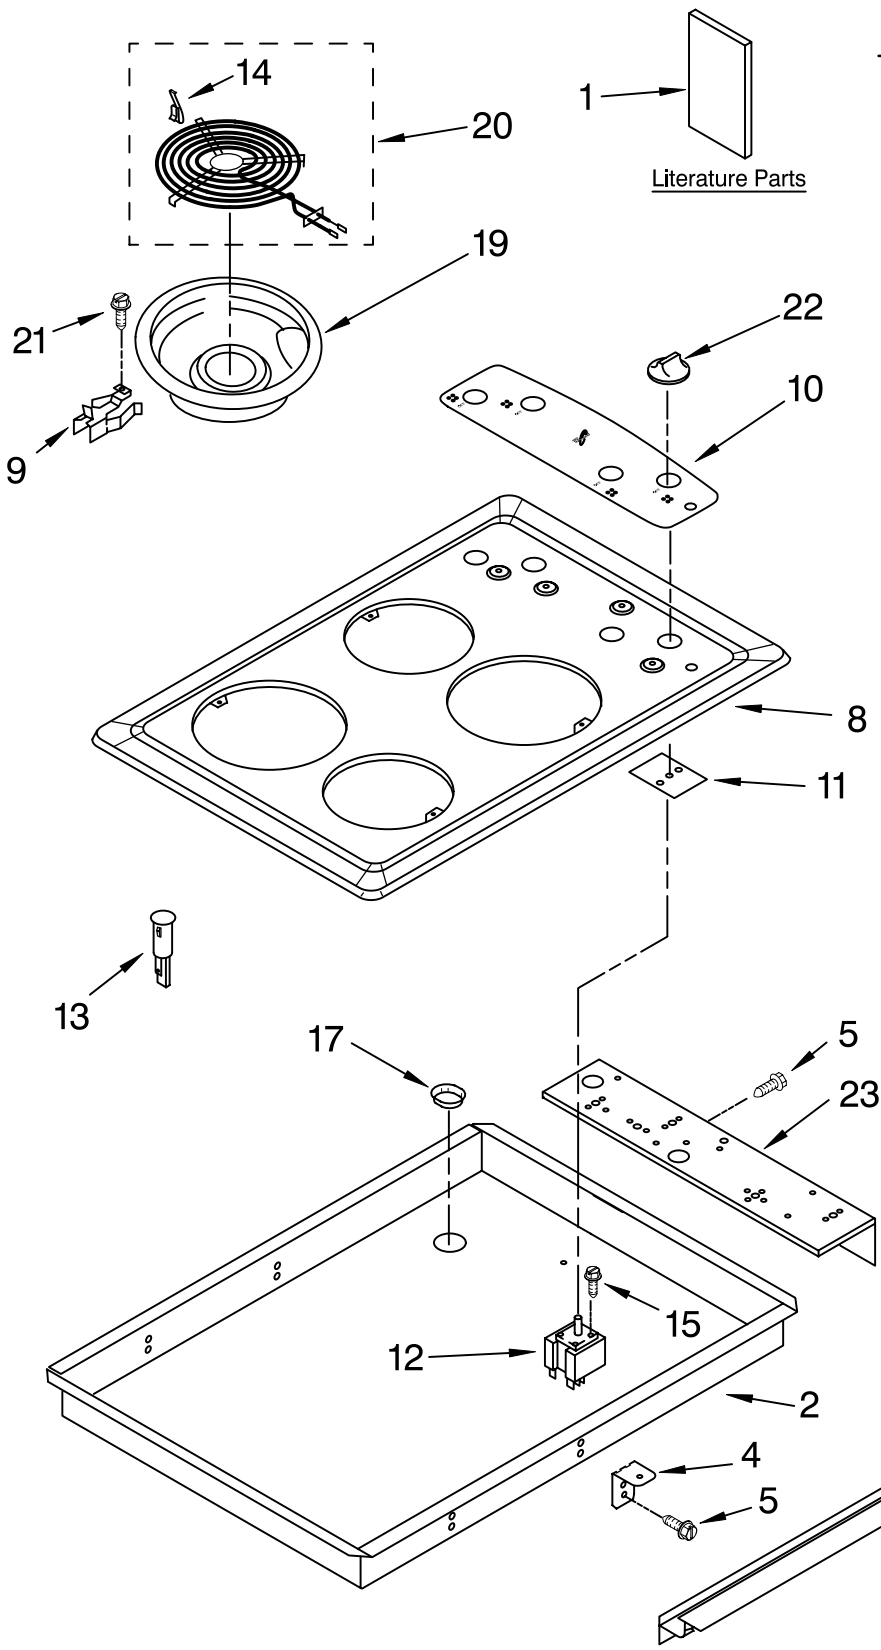

COOKTOP PARTS

For Models: RS610PXGW1, RS610PXGN1
(White) (Almond)

30" DROP-IN
ELECTRIC
STANDARD CLEAN
OVEN



Illus. No.	Part No.	DESCRIPTION
1	LIT3191799	Literature Parts Installation Instructions
	LIT3191537	Use & Care Guide
	LIT3192846	Tech Sheet
	LIT3191638	Safe Cooking Tips
2	3192459	Burner Box
4	3192575	Bracket, Mounting
5	3196537	Screw, 8-18 x 3/8
7	3192102	Trim, Extension
8	3191168	Cooktop White
	3191169	Almond
9	3195210	Clip, Receptacle
10	3191228	Panel, Control
11	3183956	Seal, Switch (4)
12	3191471	Switch, Infinite Use W/ 6" Surface (Blue Shaft)
	3191472	Use W/ 8" Surface (Silver Shaft)
13	3191491	Light, Indicator
14	3195917	Clip, Element
15	3400855	Screw, 8-32 x 1/4
17	4448444	Grommet
19	3195208	Drip Bowl 6" (2)
	3195209	8" (2)
20	8053265	Element, Coil 6" LF-RR
	8053267	8" RF-LR
21	3400843	Screw, 8-18 x 3/8
22	3196231	Knob, Control (4)
23	3192330	Bracket, Switch Mounting


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RS610PXGW1, RS610PXGN1

(White)

(Almond)

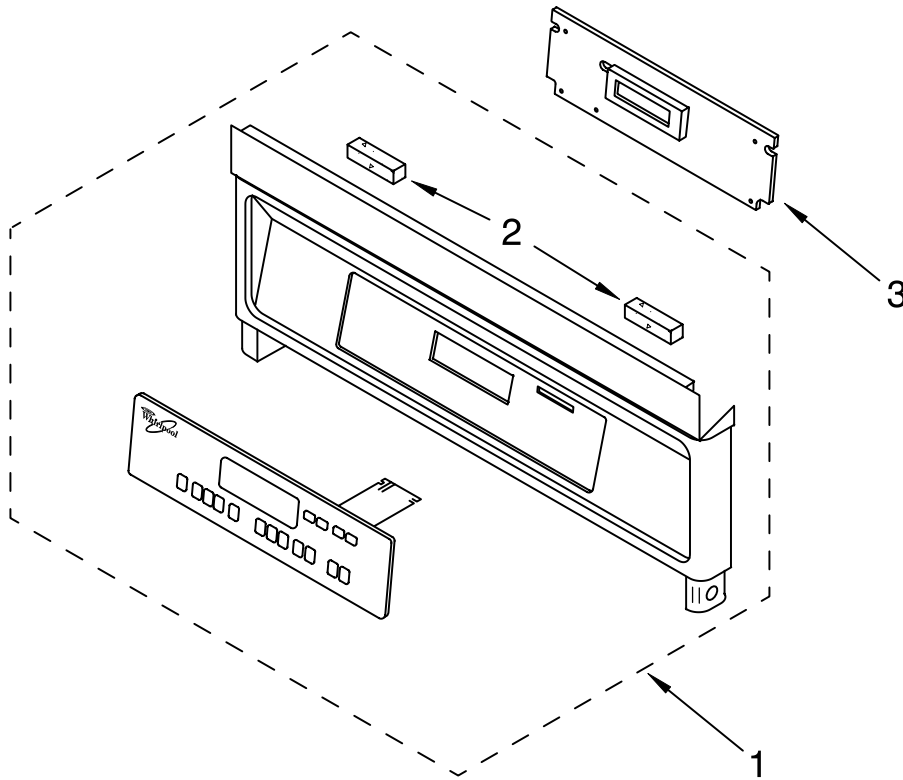

<u>Illus. No.</u>	<u>Part No.</u>	<u>DESCRIPTION</u>
-------------------	-----------------	--------------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4452843	Control Panel Assy. W/Membrane Switch
	4449745	Screw
	3400832	Screw
2	4451034	Gasket, Control Panel
3	4453193	Microcomputer
	4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS610PXGW1, RS610PXGN1
(White) (Almond)

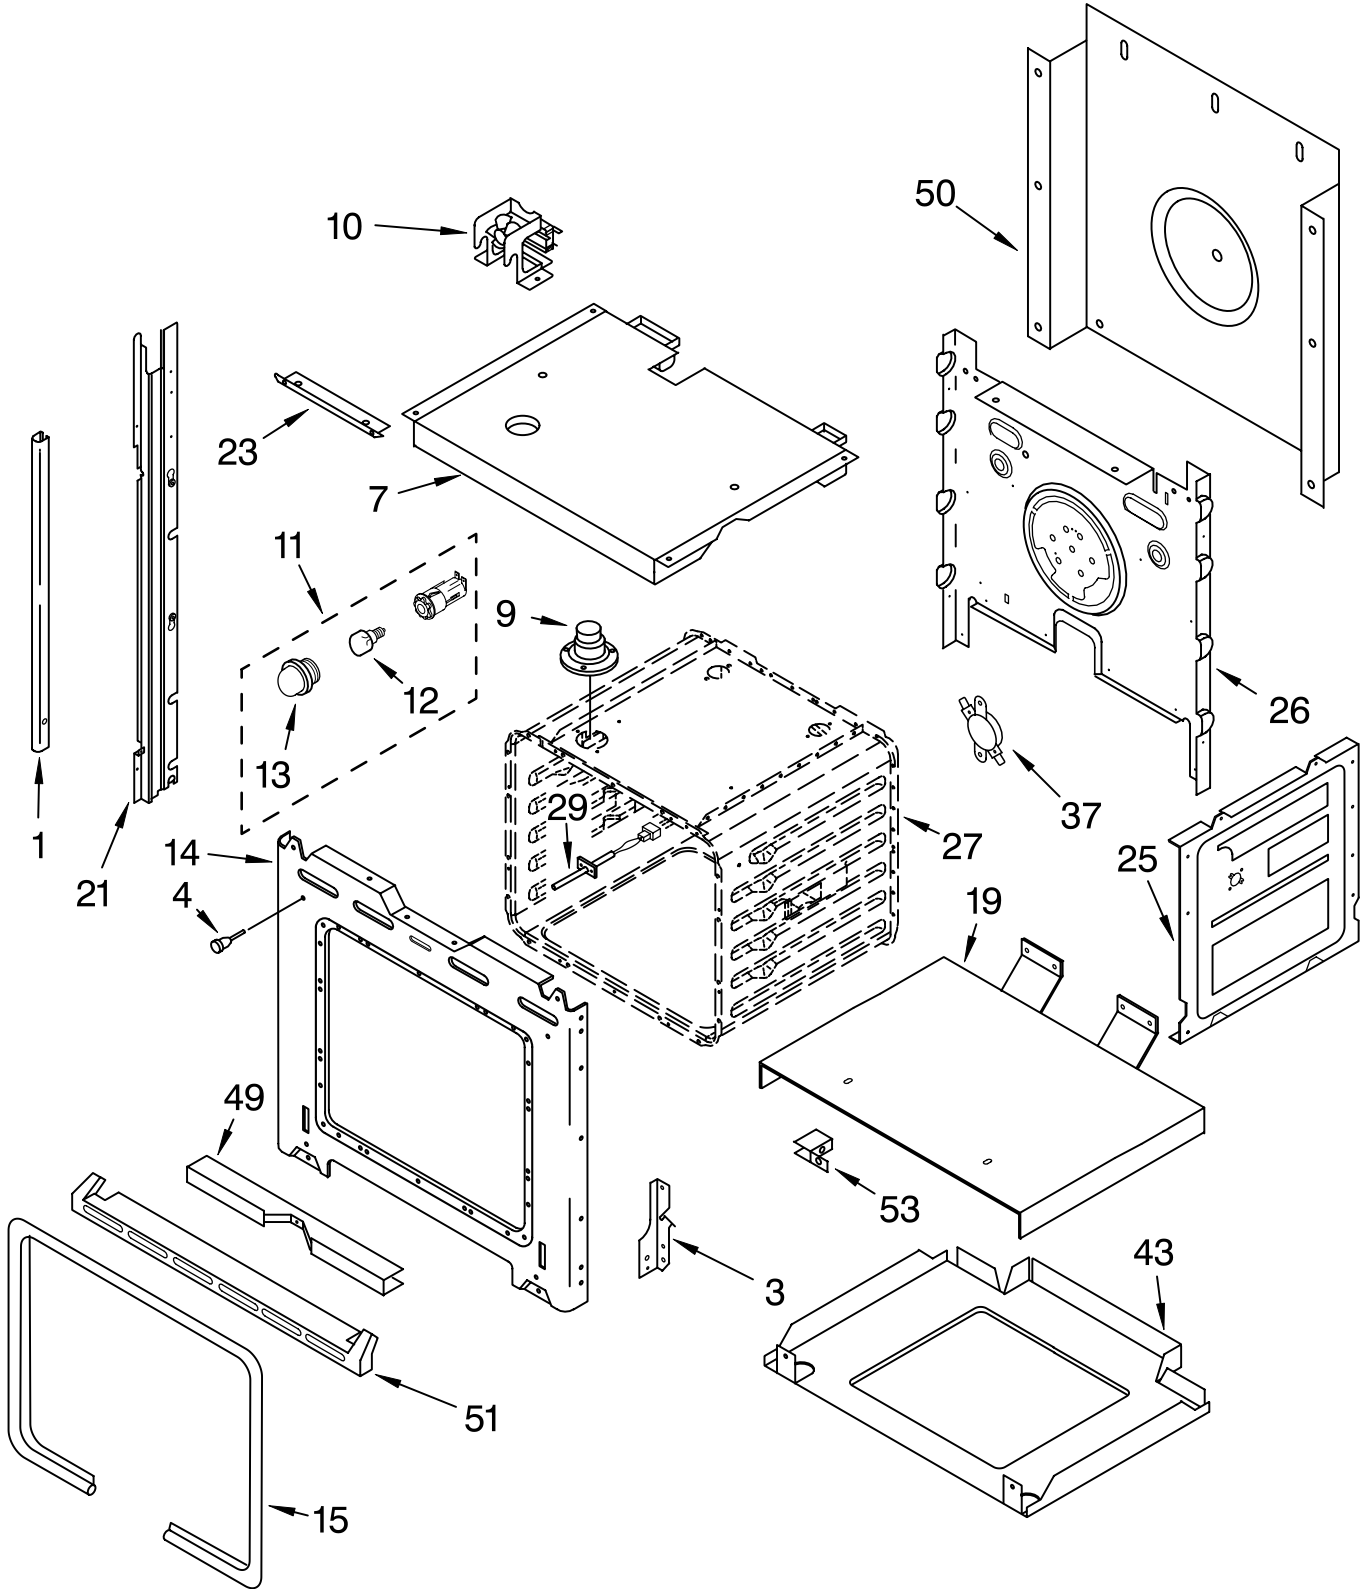

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Models: RS610PXGW1, RS610PXGN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			14	4451740	Frame, Front	37	4451354	Fuse – Thermal
				4449040	Screw		4449809	Screw
				4450118	Nut	43	4451398	Base, Chassis
1		Trim, Side	15	4450493	Gasket, Door		4449154	Screw
	4450844	RH Black	19	4451478	Support, Insulation	49	4448933	Retainer
	4450847	LH Black		4449809	Screw		4449154	Screw
	4449747	Screw	21		Rail, Side	50	4451747	Cover, Back
3		Hinge Receiver		4450579	Right Side		4449809	Screw
	4454664	Left Hand		4450580	Left Side	51	4448477	Trim, Bottom
	4454665	Right Hand		4448444	Grommet	53	4449845	Support, Bracket
4	4448520	Bumper, Door		4449154	Screw		4449154	Screw
7	4455190	Top, Chassis	23	4450051	Deflector	FOLLOWING PARTS NOT ILLUSTRATED		
	4449809	Screw		4449154	Screw	INSULATION		
9	4452159	Tube, Vent	25	4454691	Side, Chassis (R.H. & L.H.)		4449316	Insulation, Wrap
	3196176	Screw		4449809	Screw		4450365	Insulation, Back
10	4451664	Fan & Bracket Assy	26	4452234	Back, Chassis			
	4449809	Screw		4449809	Screw			
11	4452368	Oven Light Assy	27		Liner, Oven (Not serviceable)			
12	4452166	Bulb, Light	29	4451665	Sensor			
13	4452165	Lens, Light		4449154	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: RS610PXGW1, RS610PXGN1
(White) (Almond)

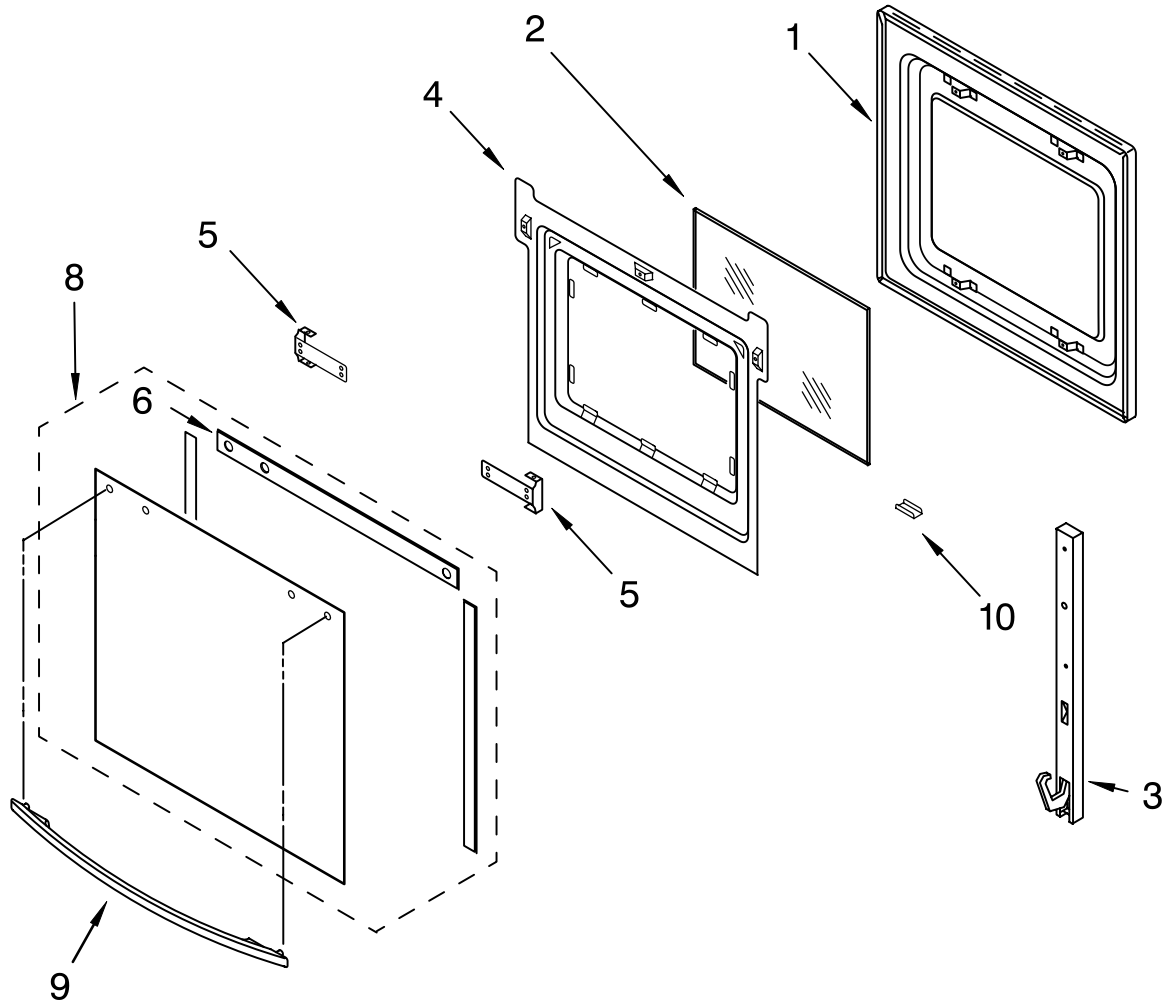

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451719	Door Liner
2	4449259	Glass, Inner
3	4454946	Hinge, Door
	4449743	Screw (4)
4	4451671	Retainer, Glass
	4449809	Screw (4)
5	4450813	Bracket, Handle
	4451040	Screw (4)
	4449743	Screw (2)
6	4451674	Seal, Top
8	4452065	Assy, Door Glass
9	4448854	Handle, Door
10	4450863	Retainer, Glass
	4449743	Screw (2)


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: RS610PXGW1, RS610PXGN1

(White)

(Almond)

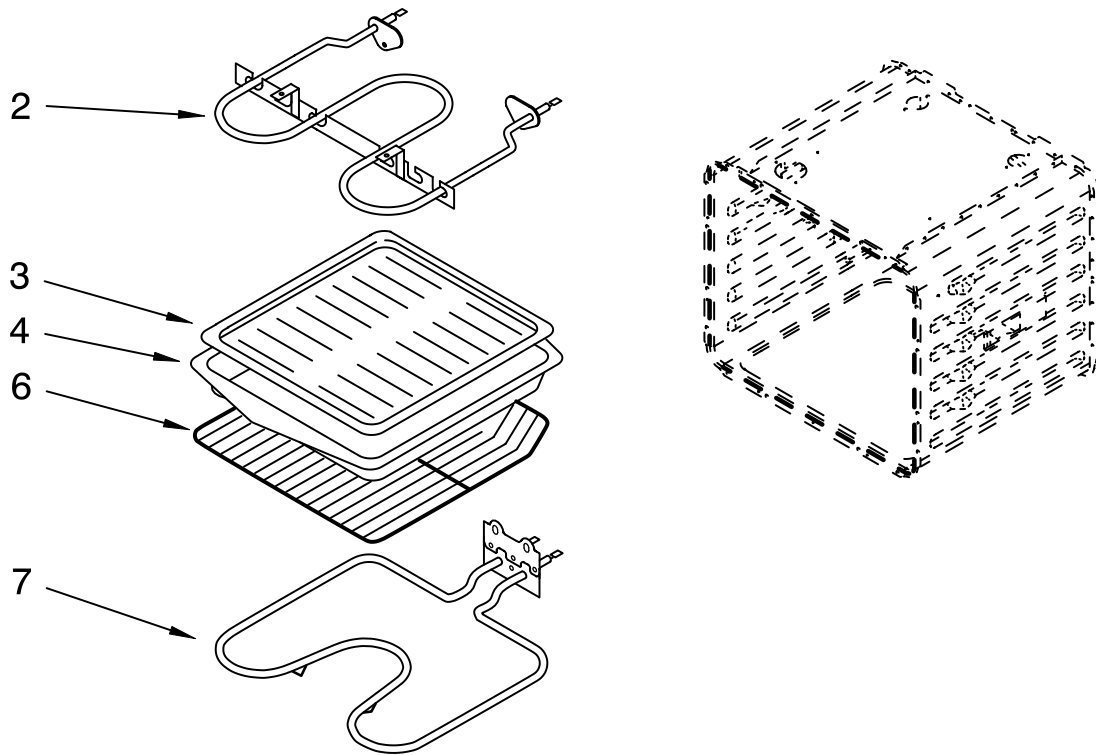


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: RS610PXGW1, RS610PXGN1
(White) (Almond)

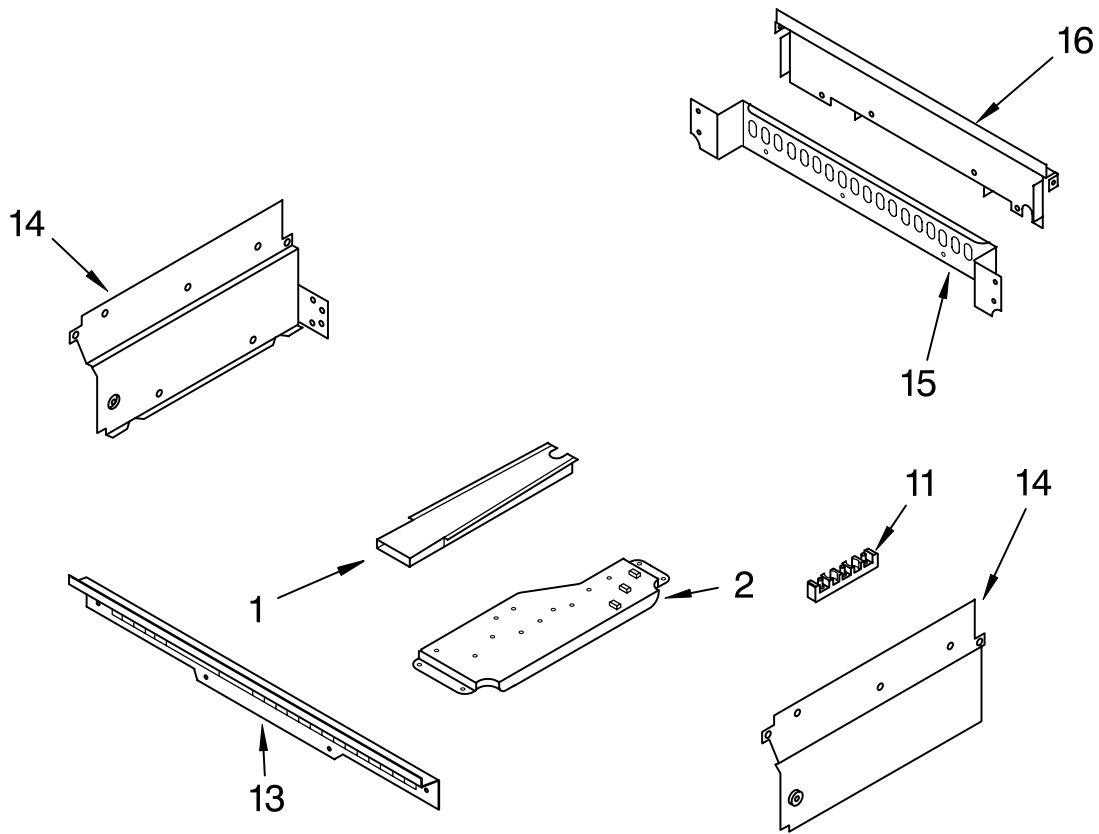

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
	4449040	Screw
2	4451789	Plate, Mounting
11	4449868	Block, Terminal
	3400016	Screw
13	4448549	Vent, (Control Panel)
	4450038	Screw
14		Side, Control Compt.
	3191832	Right
	3191833	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	3191842	Cover, Rear
	4449809	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RS610PXGW1, RS610PXGN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

	72017	White
	261869	Cord Brown
	72032	Black

PAINT, SPRAY

	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

SPLICING WIRES--25FT.

LENGTH

	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

WIRING HARNESS PARTS

	4449809	Screw
	3191220	Harness, Wire (Main)
	4451163	Conduit
	3400015	Screw, Ground
	4448664	Clamp
	3192236	Harness, Wire (Infinite Switch)
	3192245	Harness, Wire (Light)
	4454384	Ground, Wire
	4452222	Spacer, Harness
	4454835	Tie, Cable
	4455365	Harness, EDC

Miscellaneous

	4448950	Screw, Install. 8-14 x 1" (4)
	814381	Hinge Pin Kit