

If the dealer does not have a Blackjack: You lose your insurance bet and the display will flash "L O S E" and you then continue to play your hand as you normally would play it.

Game (while "Game Over" is flashing)

When "Game Over" is flashing, press to switch between Regular Blackjack and Face Up Blackjack.

Doubledown

Lets you double your bet after you are dealt two cards with a total of 10 or 11 points. You will be dealt one additional card only.

Shuffle (while "Game Over" is flashing)

This game uses a 52-card deck which is the computer will shuffle on its own when the deck gets low enough. However, you can shuffle the deck at any time (between hands) by pressing the button.

Surrender

Lets you give up your hand so that you lose only half of your bet.

Split

When your first two cards are identical, you can split your cards and play two hands against the dealer's hand. If you split aces, each hand will be dealt on card only.

Max Bet

Places a 50 point bet.

Stand

Keeps your hand as currently shown without dealing additional cards.

Sound

Turns the sound on and off.


Ride (short for "Parlay Bet")

Lets you bet your winnings from the previous hand up to 300 points.

BATTERY INSTALLATION:

This game is powered by two (2) AAA (LR03) batteries.

- Remove the battery cover: Press a coin down into the slot. Then slide the battery cover off, as shown.
- Insert two AAA batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door.

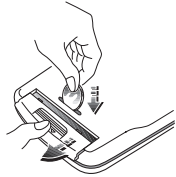

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION:

- **As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.**
- **Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**

- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **Under the environment with radio frequency interference, the sample may malfunction and require user to reset the sample.**

MAINTENANCE:

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the computer or try new batteries. If problems persist, consult the Warranty information located at the end of this Instruction Manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

RADICA®
BIG SCREEN BLACKJACK 21 IS A
REGISTERED TRADEMARK OF
RADICA GAMES LTD.
© 2002 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

