

877/CRES COR (273-7267) • 440/350-1100 Fax: 440/350-7267 • www.crescor.com

FL-2246 **Banquet Cabinet** Rev. 0 (12/00)

Insulated

Page 1 of 4

# OPERATING and MAINTENANCE INSTRUCTIONS

# **Model CCB150 Series Banquet Warming Cabinet**

# **ELECTRICAL SPECIFICATIONS:**

Volts	Watts	Amps	Hertz	Phase	NEMA	*NEMA
120	1650	13.8	60	1	5-15P	5-20P
240	1650	6.9	60	1	6-15P	6-15P

\*For Canadian use. Models designed for AC service

# **HOW TO INSTALL UNIT:**

- 1. Remove all packing material from inside the cabinet and clean cabinet thoroughly.
- 2. Install all channels and shelves before the unit is put into operation.
- 3. Plug the power cord into the proper wall outlet.

## **HOW TO START UNIT:**

- 1. Push power switch to *ON*. The yellow light will turn on.
- 2. Turn thermostat to #10.
- 3. Preheat (assuming a "cold" cabinet of 75° F/25° C):
  - (a) To 150°F/65°C takes about 30 minutes.
  - (b) To 175°F/79°C takes about 45 rninutes.
  - (c) To 190°F/88°C takes about 1 hour.
- 4. Put food into the cabinet.
- 5. Turn thermostat to the required temperature.

**NOTE:** No.8 is about 175°F/79°C.


No.7 is about 160°F/71°C.

No.6 is about 145°F/63°C.

Proper food holding temperature is 140°F/60°C or higher.

## TO TURN OFF UNIT:

Push the power switch to OFF. The yellow light will go out.

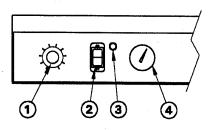

#### PARTS IDENTIFICATION

- 1. Thermostat
- 2. Power Switch
- 3. Yellow Indicator Light
- 4. Temperature Display

877/CRES COR (273-7267) • 440/350-1100
Fax: 440/350-7267 • www.crescor.com

Insulated Banguet Cabinet	FL-2246
Rev. 0 (12/00)	Page 2 of 4

# **OPERATING and MAINTENANCE INSTRUCTIONS**

# **Model CCB150 Series Banquet Warming Cabinet**

# **MAINTENANCE: Hot Unit Removal Instructions:**

- 1. Unplug power cord from wall outlet.
- 2. Lift unit off from front and rear of cabinet.

# **HOW TO CLEAN UNIT:**



# **BEFORE** Cleaning the Cabinet:


- 1. Allow Cabinet to Cool.
- 2. Remove Hot Unit From Cabinet.
- 3. Do NOT Use Abrasives or Harsh Chemicals.

# **Cleaning Notes:**

- 1. Wipe up spills as soon as possible.
- 2. Clean cabinet regularly to avoid heavy dirt build-up.
- 3. Make a test spot with cleaner.
- 4. Follow manufacturer's directions on cleaner.
- 5. Do not mix cleaners.
- 6. Avoid drips and splashes.

	SOIL	CLEANER	METHOD
	Routine cleaning.	Soap, ammonia, or detergent* and water.	Sponge on with cloth.     Rinse.
(Stainless	Stubborn spots and stains.	Mild abrasive made for stainless steel.	Apply with damp sponge or cloth.     Rub lightly.
Steel)	Burnt-on foods or grease.	Chemical oven cleaner	Follow Oven Cleaner Manufacturer's directions.
	Hard water, spots and scale.	Vinegar	Swab or wipe with cloth.     Rinse and dry.

<sup>\*</sup> Mild detergents include soaps and non-abrasive cleaners.

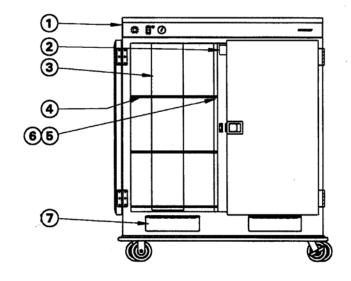

## **REMOVABLE PARTS IDENTIFICATION:**

DESCRIPTION	Qty.
1. Hot Unit	1
2. Vent	1
3. Air Tunnels	2
4. Wire Grids	6
5. Channel Post	1
6. Shelf Channels	3
7. Utility Drawers	2



77/CRES COR (273-7267) ● 440/350-1100 Fax: 440/350-7267 ● www.crescor.com

Insulated Banquet Cabinet	FL-2246
Rev. 0 (12/00)	Page 3 of 4

# **OPERATING and MAINTENANCE INSTRUCTIONS**

# **Model CCB150 Series Banquet Warming Cabinet**

## TROUBLE-SHOOTING CHART:

FAILURE	Possible Cause
Yellow light at switch does not light.	<ul><li>1a. Circuit breaker/fuse to wall outlet blown.</li><li>1b. Cord unplugged from wall outlet.</li><li>1c. Switch is <i>OFF</i>.</li></ul>
2. Unit does not heat.	<ul><li>2a. Thermostat set too low or is <i>OFF</i>.</li><li>2b. Switch is <i>OFF</i>.</li></ul>
3. Unit gets too hot or won't shut off.	3a. Defective electrical parts.  UNPLUG UNIT FROM WALL OUTLET.
<ol><li>Blower does not work or makes noise.</li></ol>	4a. Defective Blower.
5. Excess moisture in cabinet.	<ul><li>5a. Open vent.</li><li>5b. "Slack out" foods from oven or fryer for</li><li>5 minutes before putting in hot cabinet.</li></ul>

If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

## **REPLACEMENT PARTS:**

# DESCRIPTION 120 Volt 240 Volt Hot Unit HU18671164\* HU18671165 Blower Kit 0769-005-K 0769-006-K1 Heater Kit 0811-214-01 0811-215-01 Thermostat Kit 0848-062-K 0848-062-K Thermometer Kit 5238-030-K 5238-030-K Power Cord 0810-029-02\* 0810-039-03 Power Switch 0808-118 0808-116 Pilot Light 0766-094 0766-095

#### For Canadian Use:\*

Hot Unit (120 Volt) ...... HU18671164C Power Cord Plug ...... 0713-017

#### **CABINET PARTS:**

DESCRIPTION	CMP Part No.
Door Latch	1006-143 <b>-</b> K
Door Strike	1006-144-K
Door Hinge	0519-084
Door Gasket	0861-225
Door Ass'y. Complete	1221-462-K
Wire Grid	1170-041
Push Handle	1072-089
Utility Drawer	5069-008
Center Channel Ass'y	1043-041-K




Fax: 440/350-7267 • www.crescor.com

Insulated Banquet Cabinet	FL-2246
Rev. 0 (12/00)	Page 4 of 4

# **OPERATING and MAINTENANCE INSTRUCTIONS**

**Model CCB150 Series Banquet Warming Cabinet** 

POWER SWITCH

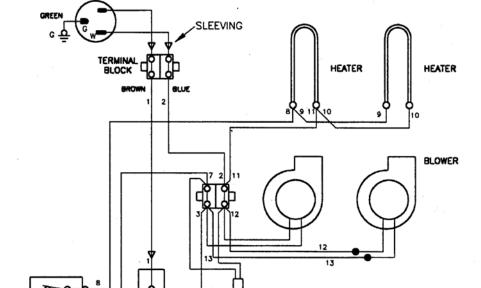

PILOT

# **ELECTRICAL SPECS.**

MODEL #0671-164 1650W, 120V, 60Hz, 1Ph **AC SERVICE** 



