

# Ceiling Fan & Video Universal Remote Control Owner's Manual

Hunter Fan Company



# **READ AND SAVE THESE INSTRUCTIONS**

## **Caution: Risk of Electrical Shock!**

### **Transmitter Model No. 27177**

This device complies with part 15 of the FCC rules. Changes or modifications not expressly approved by Hunter Fan Company could void your authority to operate this equipment!

Operation Is Subject To The Following Two Conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Any changes or modifications to the transmitter or receiver not expressly approved by Hunter Fan Company may void one's authority to operate this remote control.

Not for use with shaded-pole or non-reversible motors. Not recommended for use with the Hunter Original®.

**setting up your remote control ..... 4**

- installing your batteries ..... 4**
- setting your remote dip switches ..... 4**
- programming your device code ..... 5**
- testing your device code ..... 5**
- checking your device code ..... 6**
- searching for your device code ..... 6**
- TV brand codes ..... 7**
- VCR brand codes ..... 10**
- DVD brand codes ..... 12**
- cable brand codes ..... 12**
- satellite brand codes ..... 13**

**operating your remote control ..... 14**

 
- power and device button functions ..... 14**
- menu button functions ..... 15**
- channel and volume button functions ..... 16**
- VCR and DVD button functions ..... 17**
- number keypad button functions ..... 18**
- fan button functions ..... 19**

**troubleshooting ..... 20**

**warranty ..... 22**

# setting up your remote control

---

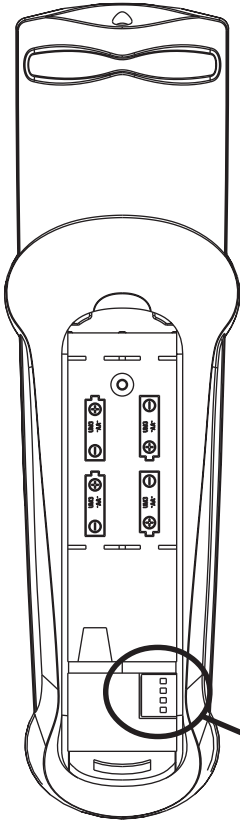

## installing your batteries

1. Remove the battery cover.
2. Install 4 AA batteries.

## setting your remote dip switches

 
Your dip switches control the radio frequency signal that is used to control your Hunter ceiling fan. The dip switches in the remote should be the same as the dip switches/pin jumpers in the receiver that is installed in your Hunter ceiling fan.

1. Set the dip switches in the remote to the same code as the dip switches in the receiver.
2. Replace the battery cover.

Dip Switches


# setting up your remote control

## programming your device code

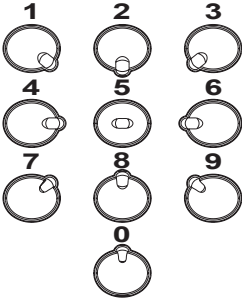

1. Manually turn on your device.
2. On your Hunter Universal Video & Fan Remote, press and hold the device button for 3 seconds. The red indicator light comes on and goes off.
3. Release the device button. The red indicator light comes on as you release the device button.
4. Press the 4 digit code listed for your device brand on pages 7-13. The red indicator light should go off when pressing a button and come on when the button is released.
5. The red indicator light should flash 3 times to indicate that the code was successfully entered. The remote then exits to the normal operating mode.

## testing your device code

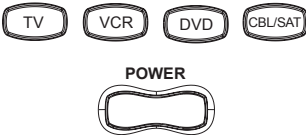 


1. Press and release the device button.
2. Press and release the POWER button.
3. If your device does not turn off, start over with **programming your device code** and try the next code listed for your device brand. If you are still unable to find a code, try **searching for your device code**. If you are unable to program your device, feel free to contact Hunter Customer Service for assistance at 1-888-830-1326.
4. Once you have found the code that works for your device, write the code in the space provided.

|         |                      |                      |                      |                      |
|---------|----------------------|----------------------|----------------------|----------------------|
| TV      | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| VCR     | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| DVD     | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| CBL/SAT | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |




# setting up your remote control
 
## checking your device code

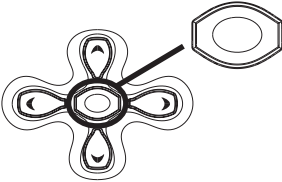

1. Press and hold the device button for 3 seconds. The red indicator light comes on and goes off.
2. Release the device button. The red indicator light comes on as you release the device button.
3. Press and release the SELECT button. The red indicator light should go off.
4. The red indicator light should indicate the code by flashes and pauses. A quick flash indicates a zero in the code. The red indicator light will indicate each digit of the code by the number of flashes. There should be a short pause between each digit of the code.

## searching for your device code

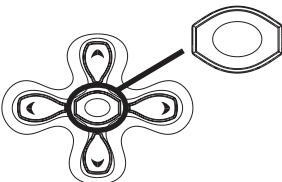   

1. Using **programming your device code**, program in a code to start the search at.
2. Press and hold the device button for 3 seconds. The red indicator light comes on and goes off.
4. Release the device button. The red indicator light comes on as you release the device button.
5. Press and release the POWER button.
6. Press the CHANNEL button to search for your device code. The remote sends out a power signal that will turn off the device if it is the correct code. The remote will automatically move to the next code number every ten seconds and it will be signified by the red indicator light blinking on then off. You may also advance to the next code manually by pressing the CHANNEL button.
7. When the device turns off, press and release the SELECT button to store the code.
8. The red indicator light should rapidly flash 8 times to indicate that the code search is completed. The remote then exits to the normal operating mode.

# setting up your remote control

## TV brand codes

|                     |   |
|---------------------|---|
| Akai .....          | 1160, 1035, 1023  |
| Alba .....          | 1047  |
| A-Mark .....        | 1051  |
| Amstrad .....       | 1024  |
| Anam .....          | 1150, 1052, 1051, 1030, 1014  |
| AOC .....           | 1159, 1127, 1082, 1081, 1080, 1051, 1019  |
| Archer .....        | 1051  |
| Audiovox .....      | 1051  |
| Bauer .....         | 1045  |
| Baycraft .....      | 1129  |
| Brockwood .....     | 1082  |
| Candle .....        | 1159, 1129, 1082, 1080, 1078, 1022, 1020  |
| Capenhart .....     | 1127, 1082  |
| Circuit City .....  | 1082  |
| Citizen .....       | 1159, 1080, 1079, 1078, 1022, 1021, 1020, 1017  |
| Colortyme .....     | 1160, 1082  |
| Concerto .....      | 1078  |
| Contec .....        | 1119, 1118, 1040, 1030  |
| Craig .....         | 1129, 1057, 1030  |
| Crown .....         | 1129, 1079  |
| Curtis Mathes ..... | 1160, 1159, 1080, 1079, 1065, 1017  |
| CXC .....           | 1030  |
| Daewoo .....        | 1159, 1150, 1090, 1089, 1088, 1087, 1081, 1079, 1023, 1021  |
| Daytron .....       | 1082, 1079  |
| Dixi .....          | 1102, 1051, 1023  |
| Dumont .....        | 1082  |
| Electrohome .....   | 1160, 1135, 1079, 1060  |
| Elta .....          | 1023  |
| Emerson .....       | 1160, 1153, 1134, 1133, 1129, 1121, 1119, 1118, 1117, 1082, 1079, 1030,<br>1029, 1028, 1027, 1026, 1025, 1024, 1000 |
| Envision .....      | 1159, 1080  |
| Etron .....         | 1023  |
| Fisher .....        | 1039, 1031  |
| Formenti .....      | 1045  |
| Fortress .....      | 1160, 1042  |
| Fujitsu .....       | 1057, 1025  |
| Funai .....         | 1057, 1030, 1025  |
| Futuretech .....    | 1057, 1030  |
| GE .....            | 1158, 1157, 1156, 1155, 1150, 1144, 1137, 1082, 1032, 1029, 1016, 1014,<br>1013, 1011                               |
| Genexxa .....       | 1047  |
| Goldstar .....      | 1160, 1159, 1152, 1102, 1101, 1100, 1081, 1079, 1078  |
| Granada .....       | 1106, 1082  |
| Grand .....         | 1082  |
| Grandiente .....    | 1106  |
| Hallmark .....      | 1082  |
| Harmon Kardon ..... | 1136  |
| Hinari .....        | 1025  |
| Hitachi .....       | 1142, 1141, 1140, 1139, 1106, 1099, 1098, 1097, 1096, 1095, 1094, 1093,<br>1092, 1091, 1079, 1078                   |
| Infinity .....      | 1034  |

# setting up your remote control

## TV brand codes

|                         |   |
|-------------------------|---|
| JBL .....               | 1034  |
| JCPenny .....           | 1144, 1137, 1122, 1088, 1081, 1080, 1079, 1041, 1032, 1017, 1011  |
| Jensen .....            | 1160, 1033  |
| JVC .....               | 1086, 1085, 1084, 1083  |
| Kawasho .....           | 1159, 1136, 1098  |
| Kenwood .....           | 1160, 1159, 1080  |
| Kloss Novabeam .....    | 1150, 1136, 1129, 1044, 1020  |
| KTV .....               | 1159, 1126, 1117, 1079, 1030, 1029, 1028  |
| Lloyds .....            | 1082  |
| Lloytron .....          | 1079  |
| Loewe .....             | 1102  |
| Logik .....             | 1004  |
| Luxman .....            | 1078  |
| LXI .....               | 1144, 1069, 1066, 1055, 1050, 1039, 1034, 1011  |
| Magnasonic .....        | 1160  |
| Magnavox .....          | 1160, 1159, 1129, 1128, 1105, 1104, 1103, 1080, 1044, 1034, 1022, 1019,<br>1003, 1002, 1001   |
| Marantz .....           | 1160, 1159, 1102, 1080, 1034  |
| Matsui .....            | 1023  |
| Megatron .....          | 1082  |
| Memorex .....           | 1082, 1039, 1023, 1004  |
| MGA .....               | 1160, 1082, 1081, 1080, 1036, 1007  |
| Mitsubishi .....        | 1159, 1082, 1081, 1059, 1053, 1037, 1036, 1035, 1008, 1007  |
| MTC .....               | 1159, 1088, 1082, 1081, 1080, 1078, 1017  |
| M. Wards .....          | 1159, 1157, 1137, 1117, 1114, 1103, 1081, 1080, 1043, 1032, 1025, 1016,<br>1004, 1003, 1002, 1001                                     |
| NAD .....               | 1082, 1050, 1010  |
| National .....          | 1150, 1058, 1014  |
| National Quenties ..... | 1058  |
| NEC .....               | 1160, 1159, 1081, 1080, 1078, 1056, 1018, 1012  |
| Nikkai .....            | 1047, 1046  |
| Normandic .....         | 1138  |
| Nyon .....              | 1144  |
| Onwa .....              | 1030  |
| Optonica .....          | 1043, 1042  |
| Orion .....             | 1121, 1057  |
| Osaki .....             | 1046  |
| Panasonic .....         | 1158, 1150, 1137, 1077, 1076, 1075, 1074, 1073, 1072, 1058, 1034, 1014,<br>1013, 1005   |
| Philco .....            | 1160, 1159, 1129, 1081, 1080, 1044, 1022, 1003, 1002, 1001  |
| Philips .....           | 1102, 1034  |
| Pioneer .....           | 1151, 1098, 1010  |
| Portland .....          | 1159, 1081, 1079  |
| Proscan .....           | 1011  |
| Proton .....            | 1160, 1129, 1127, 1082, 1079, 1054, 1015  |
| Pulsar .....            | 1009  |
| Quasar .....            | 1150, 1126, 1014, 1013, 1005  |
| Radio Shack .....       | 1150, 1079, 1046, 1043, 1030  |
| RCA .....               | 1158, 1157, 1154, 1150, 1149, 1148, 1147, 1146, 1145, 1144, 1143, 1137,<br>1132, 1131, 1130, 1125, 1124, 1098, 1081, 1055, 1016, 1011 |
| Realistic .....         | 1039  |



# setting up your remote control

## TV brand codes

|                       |   |
|-----------------------|---|
| Saisho .....          | 1024, 1023  |
| Sampo .....           | 1150, 1127, 1080  |
| Samsung .....         | 1159, 1138, 1123, 1122, 1102, 1082, 1081, 1080, 1079, 1078, 1046, 1023,<br>1017   |
| Samwon .....          | 1051  |
| Sanyo .....           | 1040, 1039, 1038, 1031, 1006  |
| SBR .....             | 1102  |
| Schneider .....       | 1102  |
| Silver .....          | 1160  |
| Scott .....           | 1144, 1121, 1120, 1117, 1079, 1030, 1026, 1025  |
| Sears .....           | 1111, 1082, 1078, 1071, 1070, 1069, 1068, 1067, 1066, 1065, 1064, 1063,<br>1062, 1050, 1041, 1039, 1038, 1031, 1025, 1011 |
| Seimitsu .....        | 1082  |
| Sharp .....           | 1110, 1109, 1108, 1107, 1079, 1043, 1042, 1040  |
| Siemens .....         | 1040  |
| Signature .....       | 1004  |
| Solavox .....         | 1046  |
| Sony .....            | 1116, 1115, 1114, 1113, 1112  |
| Soundesign .....      | 1129, 1082, 1022  |
| Spectricon .....      | 1051, 1019  |
| Squareview .....      | 1057  |
| SSS .....             | 1160, 1159, 1081  |
| Supra .....           | 1078  |
| Supre-Macy .....      | 1020  |
| Sylvania .....        | 1160, 1159, 1129, 1128, 1120, 1080, 1045, 1044, 1034, 1022, 1003, 1002,<br>1001   |
| Symphonic .....       | 1153, 1111, 1057  |
| Tandy .....           | 1047, 1042  |
| Tatung .....          | 1150, 1014  |
| Technics .....        | 1013  |
| Techwood .....        | 1160, 1078  |
| Teknika .....         | 1159, 1081, 1079, 1078, 1049, 1048, 1025, 1022, 1021, 1020, 1017, 1007,<br>1004   |
| Teletech .....        | 1023  |
| Tera .....            | 1015  |
| Thomas .....          | 1082  |
| Thompson .....        | 1060  |
| TMK .....             | 1160, 1082, 1078  |
| Toshiba .....         | 1122, 1061, 1050, 1041, 1039, 1017  |
| Tosonic .....         | 1119  |
| Totevision .....      | 1079  |
| Toyomenko .....       | 1082  |
| Universal .....       | 1032  |
| Vector Research ..... | 1080  |
| Victor .....          | 1084  |
| Video Concepts .....  | 1035  |
| Vidtech .....         | 1159, 1082, 1081  |
| Viking .....          | 1020  |
| Yamaha .....          | 1159, 1081, 1080  |
| York .....            | 1082  |
| Zenith .....          | 1152, 1009, 1004  |
| Zonda .....           | 1051  |

# setting up your remote control

---

## VCR brand codes

|                      |   |
|----------------------|---|
| Aiwa .....           | 2083  |
| Akai .....           | 2092, 2058, 2057, 2056, 2055, 2054, 2053, 2052, 2051                                  |
| Alba .....           | 2032  |
| Amstrad .....        | 2083  |
| ASA .....            | 2027  |
| Audio Dynamics ..... | 2118, 2081  |
| Broksonic .....      | 2112  |
| Bush .....           | 2009  |
| Candle .....         | 2117, 2106  |
| Canon .....          | 2082, 2049  |
| Capehart .....       | 2113, 2107, 2032  |
| Carver .....         | 2119  |
| Citizen .....        | 2006  |
| Craig .....          | 2002  |
| Curtis Mathes .....  | 2082, 2006, 2004  |
| Daewoo .....         | 2108, 2107, 2106, 2034, 2032  |
| Daytron .....        | 2107, 2032  |
| DBX .....            | 2081  |
| Dumont .....         | 2031  |
| Dynatech .....       | 2083  |
| Electrohome .....    | 2001  |
| Emerson .....        | 2112, 2111, 2110, 2109, 2083, 2058, 2047, 2046, 2040, 2039, 2038, 2010,<br>2008, 2001 |
| Finlandia .....      | 2031  |
| Finlux .....         | 2031, 2027  |
| Fisher .....         | 2083, 2031, 2017, 2011, 2002, 2000  |
| GE .....             | 2116, 2115, 2114, 2098, 2082, 2012, 2007, 2004  |
| Goldstar .....       | 2117, 2073, 2072, 2059, 2006  |
| Goodmans .....       | 2009  |
| Go Video .....       | 2094, 2093  |
| Granada .....        | 2031, 2018  |
| Grundig .....        | 2027  |
| Harmon Kardon .....  | 2059, 2025  |
| Hinari .....         | 2009  |
| Hitachi .....        | 2091, 2090, 2089, 2088, 2087, 2086, 2085, 2084, 2083, 2033                            |
| ITT .....            | 2056  |
| JCPenny .....        | 2118, 2082, 2081, 2060, 2059  |
| Jensen .....         | 2090, 2053  |
| JVC .....            | 2118, 2081, 2060, 2030, 2029, 2028, 2016  |
| Lloyd .....          | 2083  |
| Logik .....          | 2009  |
| Luxor .....          | 2056  |
| Kenwood .....        | 2118, 2081, 2060, 2018, 2016, 2006  |
| Magnavox .....       | 2122, 2119, 2082, 2036, 2027, 2013  |
| Marantz .....        | 2118, 2082, 2081, 2060, 2059, 2027, 2006, 2005  |
| MEI .....            | 2082  |
| Memorex .....        | 2117, 2083, 2082, 2050, 2035, 2031, 2018, 2002  |
| MGA .....            | 2095, 2058, 2026, 2001  |
| Mitsubishi .....     | 2096, 2095, 2058, 2026, 2025, 2016, 2001  |
| MTC .....            | 2083  |
| Mutitech .....       | 2083, 2009  |

# setting up your remote control

## VCR brand codes

|                       |   |
|-----------------------|---|
| M. Wards .....        | 2036, 2009, 2008, 2003, 2002, 2001  |
| NAD .....             | 2024  |
| NEC .....             | 2118, 2081, 2065, 2064, 2063, 2062, 2061, 2060, 2059, 2016, 2006, 2005                |
| Orion .....           | 2040, 2039  |
| Panasonic .....       | 2082, 2076, 2071, 2070, 2069, 2068, 2067, 2066, 2037                                  |
| Pentax .....          | 2033, 2006  |
| Perdio .....          | 2083  |
| Philco .....          | 2082, 2013  |
| Philips .....         | 2121, 2082, 2027  |
| Pioneer .....         | 2098, 2081, 2074, 2024, 2023, 2022, 2016  |
| Portland .....        | 2107, 2106, 2032  |
| Proscan .....         | 2098, 2004  |
| Pulsar .....          | 2035  |
| Quartz .....          | 2018  |
| Quasar .....          | 2021, 2020  |
| Radio Shack .....     | 2003, 2002, 2001, 2000  |
| RCA .....             | 2105, 2104, 2103, 2102, 2101, 2100, 2099, 2098, 2097, 2076, 2075,<br>2036, 2033, 2004 |
| Realistic .....       | 2031, 2018, 2017  |
| Ricoh .....           | 2043  |
| Saisho .....          | 2040, 2039  |
| Salora .....          | 2026, 2018  |
| Samsung .....         | 2051, 2034, 2019  |
| Sansui .....          | 2081, 2063, 2016  |
| Sanyo .....           | 2079, 2078, 2077, 2031, 2018, 2002  |
| SBR .....             | 2027  |
| Schneider .....       | 2009  |
| Scott .....           | 2120, 2112, 2046, 2008  |
| Sears .....           | 2031, 2018, 2017, 2011, 2002, 2000  |
| Sentra .....          | 2032  |
| Sharp .....           | 2014, 2003, 2001  |
| Shintom .....         | 2009  |
| Sony .....            | 2045, 2044, 2043, 2042, 2041, 2015  |
| Sylvania .....        | 2119, 2026, 2013  |
| Symphonic .....       | 2118  |
| Tatung .....          | 2118, 2060, 2048  |
| Teac .....            | 2105, 2060  |
| Teknika .....         | 2080  |
| TMK .....             | 2040  |
| Toshiba .....         | 2120, 2034, 2026, 2008  |
| Vector Research ..... | 2081, 2059  |
| Victor .....          | 2081, 2030, 2016  |
| Video Concepts .....  | 2058  |
| Yamaha .....          | 2118, 2060, 2059, 2006  |
| Zenith .....          | 2045, 2044, 2035  |

# setting up your remote control

---

## DVD brand codes

|                  |                        |
|------------------|------------------------|
| Aiwa .....       | 3013                   |
| Hitachi .....    | 3020                   |
| JVC .....        | 3021, 3002             |
| Konka .....      | 3012, 3011             |
| Magnavox .....   | 3019                   |
| Mitsubishi ..... | 3008                   |
| Panasonic .....  | 3006                   |
| Pioneer .....    | 3024, 3010, 3007       |
| Philips .....    | 3019, 3009, 3005, 3004 |
| Proscan .....    | 3003                   |
| RCA .....        | 3003                   |
| Samsung .....    | 3020                   |
| Sanyo .....      | 3022                   |
| Sony .....       | 3023, 3001, 3000       |
| Toshiba .....    | 3018, 3016, 3015, 3014 |
| Zenith .....     | 3017                   |

## cable brand codes

|                          |                        |
|--------------------------|------------------------|
| CI/Tocom .....           | 4006                   |
| Eastern .....            | 4007                   |
| Gemini .....             | 4019, 4018, 4015       |
| General Instrument ..... | 4017, 4016, 4015       |
| Jerrold .....            | 4017, 4009, 4008       |
| Magnavox .....           | 4020                   |
| Oak .....                | 4000                   |
| Panasonic .....          | 4005, 4001             |
| Philips .....            | 4020                   |
| Pioneer .....            | 4010, 4003, 4002       |
| Regency .....            | 4007                   |
| Scientific Atlanta ..... | 4012, 4011, 4004, 4003 |
| Viewstar .....           | 4020                   |
| Zenith .....             | 4014, 4013, 4003       |

## satellite brand codes

 
 
|                           |                  |
|---------------------------|------------------|
| Alphastar .....           | 5021             |
| Chaparral .....           | 5020, 5019       |
| Cheyenne .....            | 5019             |
| Dishnet .....             | 5018             |
| Drake .....               | 5017, 5016       |
| Echostar Dish .....       | 5015             |
| GE .....                  | 5010, 5009, 5008 |
| General Instruments ..... | 5027, 5026, 5025 |
| Hitachi .....             | 5028, 5022       |
| Hughes Network .....      | 5014, 5013       |
| JVC .....                 | 5012             |
| Magnavox .....            | 5000             |
| Philips .....             | 5000             |
| Primestar .....           | 5011             |
| Proscan .....             | 5010, 5009, 5008 |
| RCA .....                 | 5010, 5009, 5008 |
| Realistic .....           | 5007             |
| Sierra I .....            | 5019             |
| Sierra II .....           | 5019             |
| Sierra III .....          | 5019             |
| Sony .....                | 5006             |
| STS1 .....                | 5005             |
| STS2 .....                | 5004             |
| STS3 .....                | 5003             |
| STS4 .....                | 5002             |
| Toshiba .....             | 5024, 5023       |
| Uniden .....              | 5001             |

# operating your remote control

Some features may not be applicable to your devices. Refer to each device's owner's manual for more information about what your devices are capable of doing.

## power and device button functions

The power and device buttons are used to turn off and on your devices and to switch between devices.

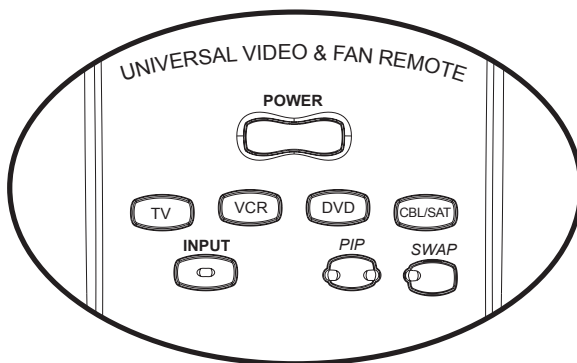

**POWER** - Press the POWER button to turn off or on the selected device. Note: May only turn the device off. Try the device button to turn the device on.



**TV** - Press the TV button to select the television to control.



**VCR** - Press the VCR button to select the VCR to control.



**DVD** - Press the DVD button to select the DVD to control.



**CBL/SAT** - Press the CBL/SAT button to select the cable/satellite to control.



**INPUT** - Press the INPUT button to switch viewing between the television and other devices.



**PIP** - Press the PIP button to turn on or off the picture-in-picture feature.




**SWAP** - Press the SWAP button to exchange the view in the picture-in-picture with the view on the main television screen.

# operating your remote control
 
## menu button functions


The menu buttons are used to control the menu for all devices.

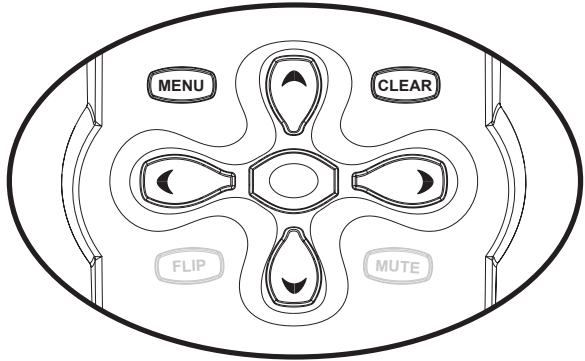

**MENU** - Press the MENU button to view the selected device's menu.



 **CLEAR** - Press the CLEAR button to exit the selected device's menu.

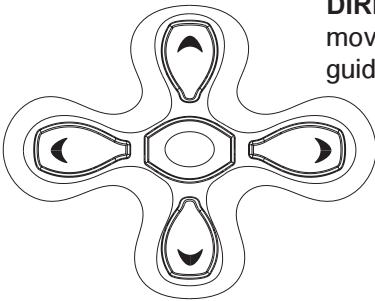

**DIRECTION KEYS** - Press the DIRECTION KEYS to move the cursor in the menu screens and program guide of the selected device.




**SELECT** - Press the SELECT button to select items from the selected device's screen menu. Note: If your SELECT button does not function as select, try using another button on your remote (ex. ENTER button).

# operating your remote control
 
## channel and volume button functions


The channel and volume buttons are used to control the channel for the TV and VCR and control the volume.

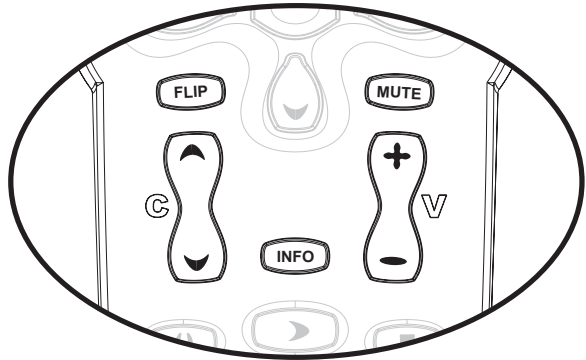

**FLIP** - Press the FLIP button to display the previous television channel.



 **MUTE** - Press the MUTE button to turn off or on the sound.



**CHANNEL** - Press the CHANNEL button to select the next higher or lower channel.



**INFO** - Press the INFO button to display information on the selected device.




**VOLUME** - Press the VOLUME button to raise or lower the volume.



# operating your remote control
 
## VCR and DVD button functions

The VCR and DVD buttons are used to control the play features of both devices.

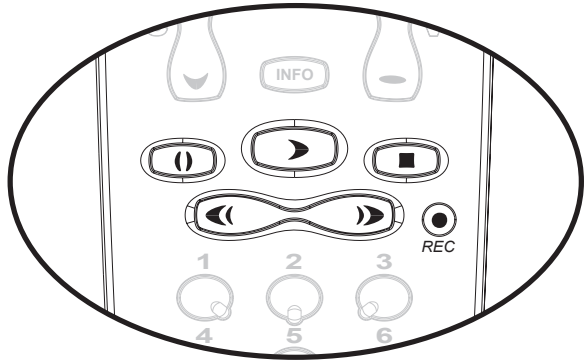


**PAUSE** - Press the PAUSE button to pause on your screen while using your selected device.



**PLAY** - Press the PLAY button to play while using your selected device.



 **STOP** - Press the STOP button to stop your selected device.



**FFD/REW** - Press the FFD/REW button to fast forward or rewind on your selected device. Press and hold the FFD/REW button to scan. Note: All devices may not scan when held.





**REC** - Press the REC button to record on your VCR.

# operating your remote control
  
## number keypad button functions

The number keypad buttons are used to enter numbers for channels or menu options.

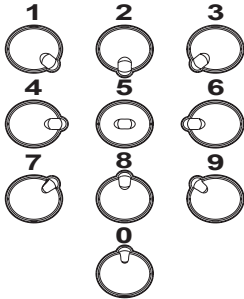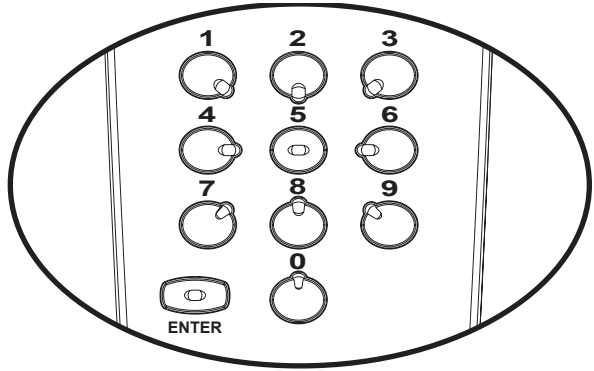


**NUMBER KEYPAD** - Press the NUMBER KEYPAD to manually enter the channel numbers.

**ENTER** - Press the ENTER button after entering channel numbers if necessary. Note: May also be used to select items in the menu view.

# operating your remote control
 
## fan button functions

The fan buttons are used to control your Hunter ceiling fan.

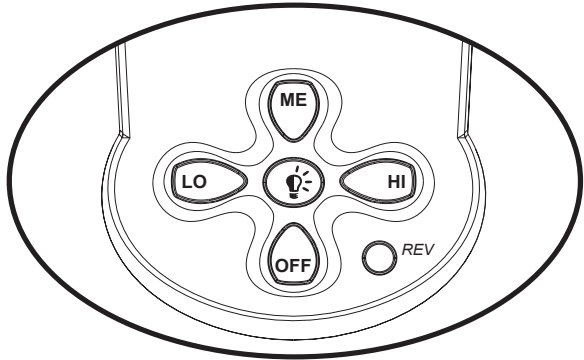

**LO** - Press the LO button to set your fan on low speed.



**ME** - Press the ME button to set your fan on medium speed.



**HI** - Press the HI button to set your fan on high speed.



**OFF** - Press the OFF button to turn off your fan.



**LIGHT** - Press the LIGHT button to turn your light off or on. Press and hold the the LIGHT button to dim or brighten the light.



**REV** - Press the REV button to reverse the direction of the fan. Some models may not have the REV button. Refer to your fan's Owner's Manual for instructions on how to reverse the direction of the fan.

For best fan operation: Allow the ceiling fan motor to start on High, then select the desired speed.

# troubleshooting

---

- Nothing happens when operating remote.
1. Make sure batteries are properly installed.
  2. Replace with 4 new AA batteries.
- Red indicator light not blinking when pressing buttons.
1. Make sure batteries are properly installed.
  2. Replace with 4 new AA batteries.
- Remote will not operate my devices.
1. Try all codes listed for your device brand.
  2. Use the **searching for your device code** method on page 6.
- Nothing happens when operating ceiling fan.
1. Make sure dip switches in both the transmitter and receiver are set to the same code.
  2. Make sure ceiling fan is initially set on high speed.
- POWER button does not turn on device.
1. Try pressing the device button.
  2. Try all codes listed for your device brand.
  3. Use the **searching for your device code** method on page 6.
- INPUT button does not function.
1. Try entering "00" for the TV channel number.
  2. Refer to your television owner's manual for similar suggestions.
  3. Use the **searching for your device code** method on page 6.
- SELECT button does not function.
1. Try the ENTER button.
  2. Try all codes listed for your device brand.
  3. Use the **searching for your device code** method on page 6.

- FWD/RWD button does not function.
1. Try all codes listed for your device brand.
  2. Use the **searching for your device code** method on page 6.

Feel free to contact Hunter Customer Service for assistance at 1-888-830-1326.

## HUNTER FAN COMPANY REMOTE CONTROL LIMITED WARRANTY

The Hunter Fan Company makes the following limited warranty to the original purchaser of the Hunter Universal Video and Fan Remote ("Control"): Your Control is warranted to be free from defects in material and workmanship for a period of one year from the date of sale. If the Control malfunctions or fails within the warranty period due to a defect in material or workmanship we will replace it free of charge. IF THE ORIGINAL PURCHASER CEASES TO OWN THE CONTROL, THIS WARRANTY AND ANY IMPLIED WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO ANY CONTROL, IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE FOR SUCH CONTROL. This warranty excludes malfunctions or failures which were caused by repairs by persons not authorized by us, mishandling, improper installation, modifications, or damage to the Control while in your possession, or unreasonable use. This warranty does not apply to batteries or to deterioration or damage to the product caused by the use of faulty batteries. To obtain a replacement, return your Control postage prepaid along with proof of purchase to Hunter Fan Company Service Department at 2500 Frisco Avenue, Memphis, Tennessee 38114. IN NO EVENT SHALL HUNTER FAN COMPANY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.





**Hunter Fan Company**  
**2500 Frisco Avenue**  
**Memphis, Tennessee 38125**  
**1-888-830-1326**