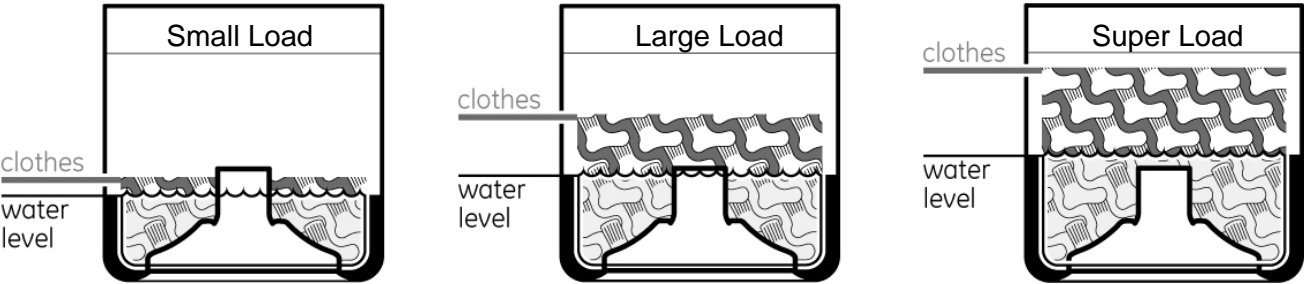
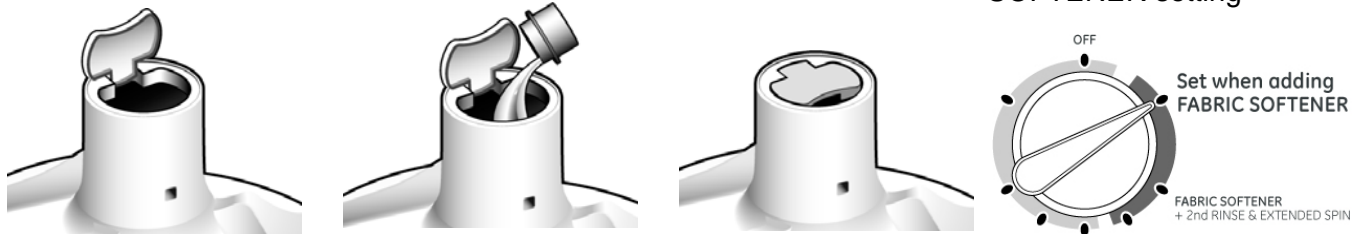


# GE High-Efficiency Washer Quick Reference Guide

Congratulations on the purchase of your new GE high-efficiency washer!

This HE washer has the new HydroWave™ system with Infusor™ wash technology. This system provides excellent performance while using less water and energy than a conventional washer. You will notice some differences during operation. Below is a list of quick tips to better understand your unit during normal operation.

Topics	Comments	Reasons
Water level seems low, Not enough water	This is normal	During the wash cycle water may not entirely cover the top of clothes. Infusor™ wash technology is at work and will provide excellent cleaning.
		
Detergent	Use High Efficiency detergent	The use of HE detergent will optimize wash performance and prevent over sudsing.
Fabric Softener	Always use dispenser located on the top of the Infusor™ when using Fabric Softener.	Using the dispenser will ensure optimal distribution of fabric softener and avoid spotting on garments.
<p>1. Lift Infusor™ Lid      2. Measure Fabric Softener and Pour      3. Close Infusor™ Lid      4. Turn OPTIONS Knob on control panel to FABRIC SOFTENER setting</p> 		
"PreciseFill" Load Size Option	Washer will not fill with water when lid is open	Unit will not operate with lid open during "PreciseFill". This is for your safety - basket spins to aid in load sensing – also allows option to perform properly.
Seems too quiet	This is normal	HydroWave™ system is very quiet during portions of the wash cycle. This action allows for optimal wash performance.
Pauses	This is normal	At the beginning of the Cycle (with lid open or closed) the smart drive system is sensing the load; as a result, there will not be any noise.
"Swoosh" or "zip" sound	This is normal	The machine uses a (no gear) direct drive system. This is the sound of the motor rotating back and forth to agitate your laundry.