


ELMO

VISUAL PRESENTER

HV-8000SX

INSTRUCTION MANUAL

VISUAL PRESENTER

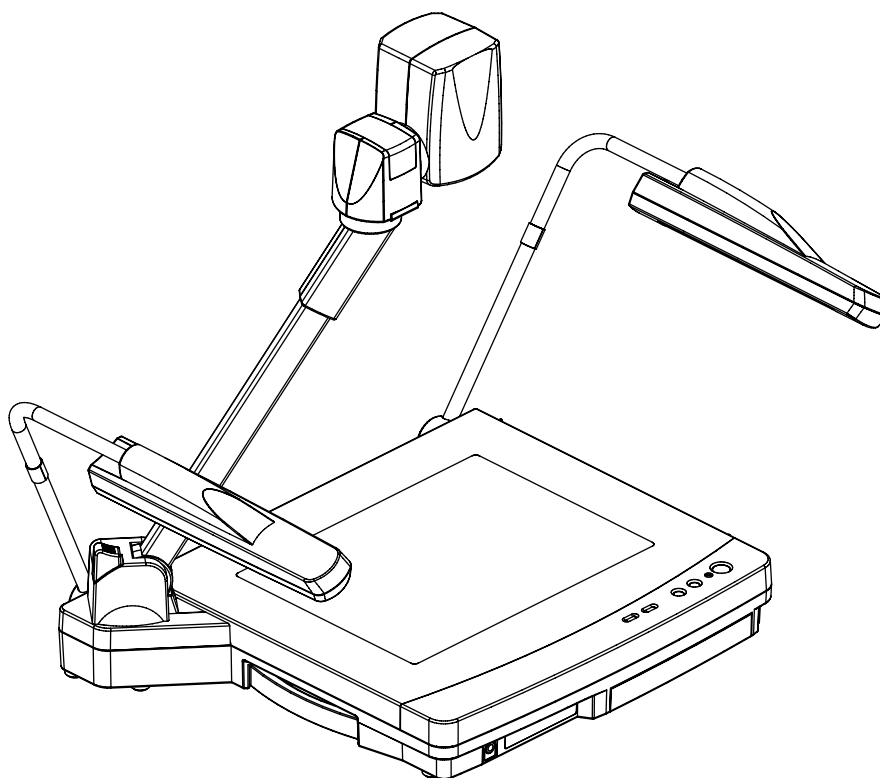

Please read this instruction manual carefully before using this Visual Presenter and keep it for future reference.

IMPORTANT SAFEGUARDS

■ **Read Instructions** – All the safety and operating instructions should be read before the appliance is operated.

■ **Retain Instructions** – The safety and operating instructions should be retained for future reference.

■ **Heed Warnings** – All warnings on the product and in the operating instructions should be adhered to.

■ **Follow Instructions** – All operating and use instructions should be followed.

■ **Cleaning** – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

■ **Attachments** – Do not use attachments not recommended by the product manufacturer as they may cause hazards.

■ **Water and Moisture** – Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

■ **Accessories** – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table

recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

■ **Ventilation** – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

■ **Power Sources** – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

■ **Grounding or Polarization** – This product may be equipped with either a polarized 2-wire AC line plug (a plug having one blade wider than the other) or a 3-wire grounding type plug, a plug having a third (grounding) pin. The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

■ **Power-Cord Protection** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

■ **Lightning** – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

■ **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

■ A product and cart combination should be moved with care.

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



■ **Object and Liquid Entry** – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

■ **Servicing** – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.


■ **Damage Requiring Service** – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance - this indicates a need for service.

■ **Replacement Parts** – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

■ **Safety Check** – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

■ **Heat** – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

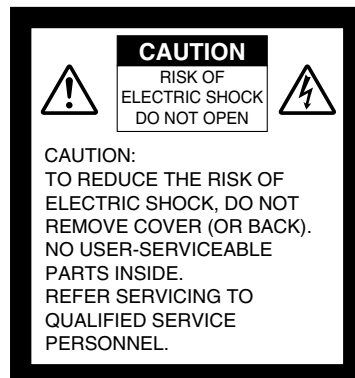



SA 1965

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. This marking is located at the bottom of product.



SA 1966

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:
TO REDUCE THE RISK
OF FIRE OR ELECTRIC
SHOCK, DO NOT
EXPOSE THIS
PRODUCT TO RAIN OR
MOISTURE.**

**THIS IS A CLASS A
PRODUCT.
IN A DOMESTIC
ENVIRONMENT THIS
PRODUCT MAY CAUSE
RADIO
INTERFERENCE IN
WHICH CASE THE USER
MAY BE REQUIRED TO
TAKE ADEQUATE
MEASURES.**

INFORMATION

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

USER-INSTALLER CAUTION:

Your authority to operate this FCC verified equipment could be voided if you make changes or modifications not expressly approved by the party responsible for compliance to Part 15 of the FCC rules.

BEFORE YOU USE

- Use the Visual Presenter under the rated electrical conditions.
- Do not leave the Presenter under direct sunlight or by heaters, or the Presenter may be discolored, deformed, or damaged.
- Do not place the Presenter in any humid, dusty, windy or vibrating location. Use the Presenter in the following environmental conditions:
Temperature: 5°C~35°C (41°F~95°F)
Humidity: 30%~85% (No condensation)
- Use a soft, dry cloth for cleaning. Do not use any volatile solvent, such as thinner or benzine.
- Do not directly point the camera lens into the sun, or the camera may be damaged.
- Caring for the batteries:
 - If the Presenter is not used for a long time, take out the batteries from the wireless remote control.
 - Do not use rechargeable Ni-Cd batteries.
 - Do not use new and old batteries, or batteries of different types together.
 - Do not try to recharge or short-circuit the batteries.


CONTENTS

1. PART NAMES AND FUNCTIONS	8
Appearance	8
Front Panel	8
Operation Panel	9
Rear Panel	10
Wireless Remote Contro	12
2. WIRELESS REMOTE CONTROL	13
Preparation	13
3. MOUSE	14
4. SETTING UP	15
Connection to the monitor and the projector	16
Connection to the analogue RGB-in terminal	16
Connection to the composite video-in terminal	16
Connection to the S video-in terminal	17
Analogue RGB signal	17
Signal allocation	17
Pin assignment	17
5. STORING THE PRESENTER	18
6. OPERATION PROCEDURES	19
Simple steps for presenting printed material	19
Simple steps for showing transparent material, such as overhead transparencies or slide film	20
7. VARIOUS FUNCTIONS	21
Lighting	21
Zoom	22
Input selection	22
Table of Video- and Audio-in/out Terminal Selections	23
Output to the monitor	23
Table of Corresponding Signals	24
Electronic enlargement	25
Color/B&W selection	25
Posi/Nega conversion	26
Image rotation	26
Pause	26
Contrast	27
White Balance	27
Iris	28
Focus	29
Auto Focus	29
Powered Manual Focus	30
About the preset and move operation	30
LCD monitor bracket socket	31
Connecting to the LCD monitor out terminal	31
PC link software "Image Mate"	32


8. OSD (On-Screen Display)	33
Main menu	33
When the white balance is set	34
When the gamma is set	34
When the microphone volume is set	34
When the IP address is displayed	34
9. NETWORK FUNCTIONS	36
Preparation for connection	36
Preparation before setting up	36
Connection to the network	37
Setting up of the network	37
Initialization of the network settings	39
Web server functions	39
Display of quasi-moving images	40
Display of static images	40
Operation of remote control	41
FTP client function	41
Setting up	42
Operation	43
FTP server functions	43
telnet server functions	43
Appendix	44
Setting items of the network	44
Setting items of the FTP client	44
Specifications of the FTP server	45
10. RS-232C SPECIFICATIONS	46
Setting up	46
Cable connection	46
Table of the communication commands	47
Data format specifications	48
Transmission Command (PC → Visual Presenter)	49
Response data format (Visual Presenter → PC)	49
Transmission specifications	50
Connection	50
11. TROUBLESHOOTING HINTS	51
Replacement of fluorescent lamp	51
12. SPECIFICATIONS	52
General	52
Network Specifications	52
Main camera	53
Lighting	54
Supplied accessories	54
Options	54

1. PART NAMES AND FUNCTIONS

○ Appearance

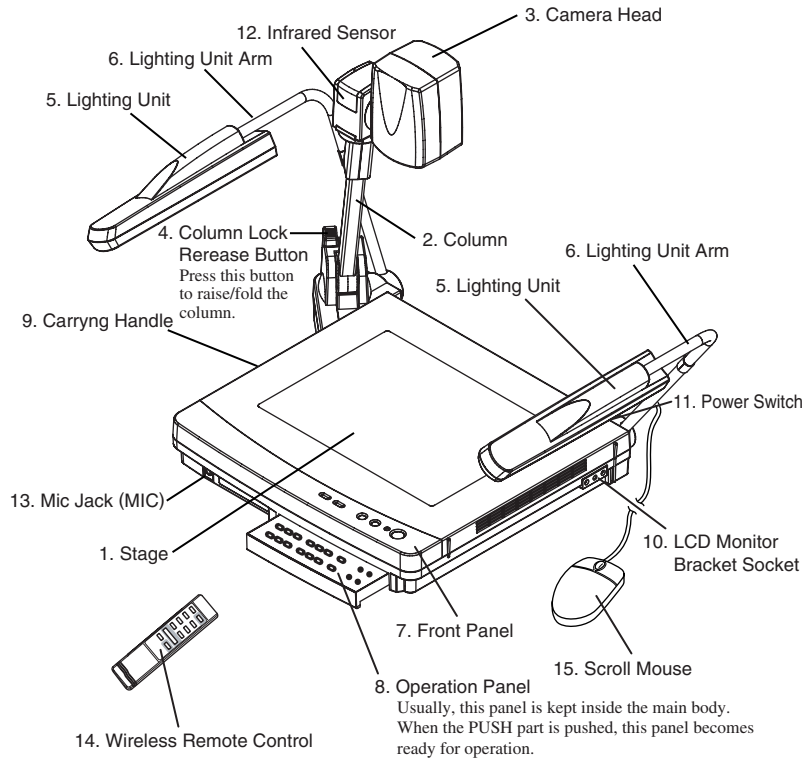


○ Front Panel

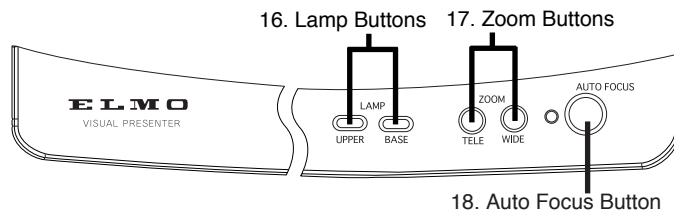


	Name	Function	Reference Page
16.	Lamp Buttons	To turn ON/OFF the lighting.	P.20, P.21
17.	Zoom Buttons	To change the image size.	P.19, P.29
18.	Auto Focus Button	To focus automatically (One-shot auto focus). (FOCUSFREE)	P.19, P.29

○ Operation Panel

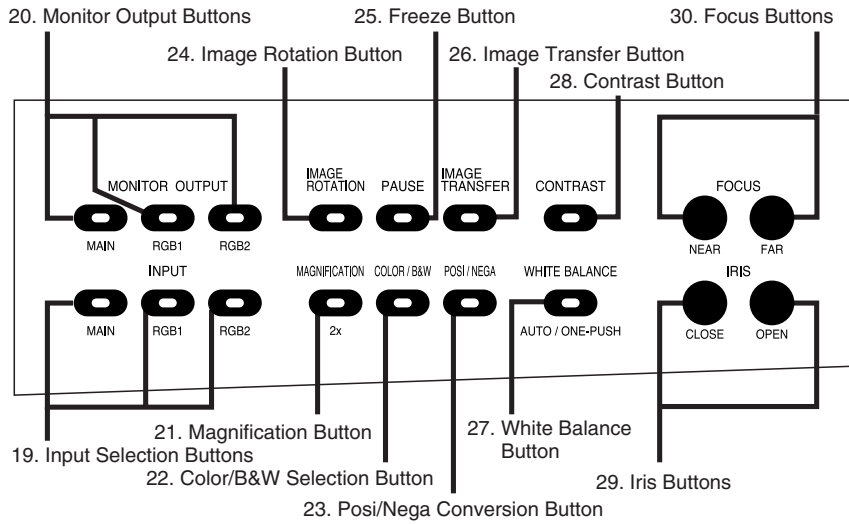

	Name	Function	Reference Page
19.	Input Selection Buttons	To change the input line.	P.22
20.	Monitor Output Buttons	To select the signal for outputting to the NTSC/PAL monitor.	P.23
21.	Magnification Button	To double the image size.	P.25
22.	Color/B&W Selection Button	To present black-and-white material, such as documents.	P.25
23.	Posi/Nega Conversion Button	To show negative films.	P.20, P.26
24.	Image Rotation Button	To rotate the image. Every time this button is pressed, the image rotates counterclockwise by 90°.	P.26
25.	Freeze Button	To freeze the image temporarily.	P.26
26.	Image Transfer Button	To save the static image file in the host (e.g., PC) on the network.	P.43
27.	White Balance Button Auto/ One-Push	To change the mode between AUTO and ONE-PUSH.	P.27
28.	Contrast Button	To make characters in documents, etc. visible clearly.	P.27
29.	Iris Buttons	To adjust the brightness of the screen.	P.28
30.	Focus Buttons	To adjust focus (powered).	P.29, P.30

○ Rear Panel

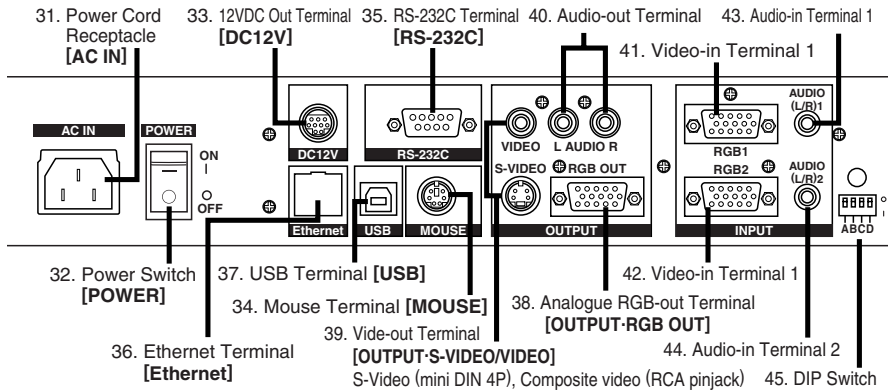


	Name	Function	Reference Page
31.	Power Cord Receptacle [AC IN]	Connected to the power cord connector.	P.19
32.	Power Switch [POWER]	To turn ON/OFF the power supply.	P.19
33.	12VDC Out Terminal [DC12V]	To output 12VDC and the image. Can be connected to the LCD monitor (LM-5011N) (option) by using the LCD monitor connection cable (attached). Note: Do not connect the equipment other than LM-5011N.	P.31
34.	Mouse Terminal [MOUSE]	To connect the mouse (supplied accessory).	P.14
35.	RS-232C Terminal [RS-232C]	To connect the RS-232C cable when controlling the main unit from the PC. Note: This terminal cannot be used when the USB terminal is used to control the main unit.	P.46
36.	Ethernet Terminal [Ethernet]	To connect the Ethernet cable when the network function is used.	P.37
37.	USB Terminal [USB]	To connect the USB cable (attached) to transfer the image or control the main unit with the CD-ROM "Image Mate" (attached). Note: This terminal cannot be used when the RS-232C is used to control the main unit.	P.32
38.	Analogue RGB-out Terminal [OUTPUT-RGB OUT]	Image is output when this terminal is connected to RGB input equipment (e.g., liquid crystal projector, multi-sync monitor).	P.23
39.	Vide-out Terminal [OUTPUT-S-VIDEO/VIDEO] S-Video (mini DIN 4P) Composite video (RCA pinjack)	Image is output when these terminals are connected to the NTSC/PAL monitor (e.g., TV monitor).	P.23
40.	Audio-out Terminal	Audio signal is output when this terminal is connected to audio-in equipment.	P.23

	Name	Function	Reference Page															
41.	Video-in Terminal 1	Video signal from this terminal is output through the analogue RGB-out terminal when the input selection is set at RGB1.	P.22, P23															
42.	Video-in Terminal 2	Video signal from this terminal is output through the analogue RGB-out terminal when the input selection is set at RGB2.	P.22, P23															
43.	Audio-in Terminal 1	Audio signal from this terminal is output through the audio-out terminal when the input selection is set at RGB1.	P.22, P23															
44.	Audio-in Terminal 2	Audio signal from this terminal is output through the audio-out terminal when the input selection is set at RGB2.	P.22, P23															
45.	DIP Switch	<p>The functions can be switched as follows:</p> <p>[A] key: To switch the resolution of video output through the RGB-out terminal [RGB OUT]. · SXGA · XGA</p> <p>[B] key: To switch the TV output. · NTSC · PAL</p> <p>[C] key: To switch the screen size of the TV output. · Over scan · Under scan</p> <p>[D] key: To initialize the setting of the network function to its factory setting. · Normal operation · Initialization</p> <p>Key alignment and functions:</p> <table border="1"> <thead> <tr> <th></th> <th>A</th> <th>B</th> <th>C</th> <th>D</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>SXGA</td> <td>NTSC</td> <td>Over scan</td> <td>Normal operation</td> </tr> <tr> <td>1</td> <td>XGA</td> <td>PAL</td> <td>Under scan</td> <td>Initialization</td> </tr> </tbody> </table>		A	B	C	D	0	SXGA	NTSC	Over scan	Normal operation	1	XGA	PAL	Under scan	Initialization	
	A	B	C	D														
0	SXGA	NTSC	Over scan	Normal operation														
1	XGA	PAL	Under scan	Initialization														

Note: Before switching the DIP switch key, be sure to turn OFF the power supply to the Presenter.

○ **Wireless Remote Control**

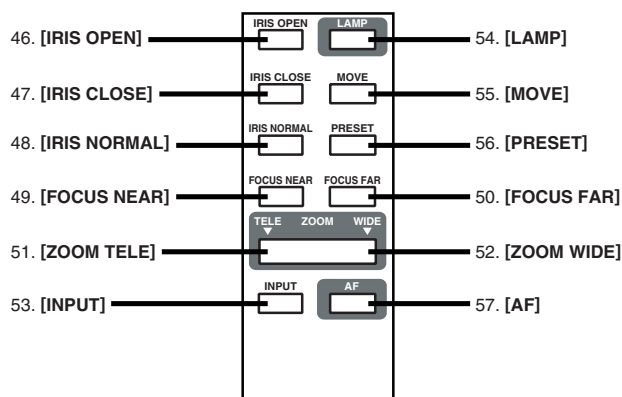

	Button Name	Function	Reference Page
46.	IRIS OPEN	To open the AUTO iris.	P.28
47.	IRIS CLOSE	To close the AUTO iris.	P.28
48.	IRIS NORMAL	To reset the AUTO iris to the initial value.	P.28
49.	FOCUS NEAR	To move the focus near.	P.29, P.30
50.	FOCUS FAR	To move the focus far.	P.29, P.30
51.	ZOOM TELE	To zoom in.	P.19, P.22, P.29
52.	ZOOM WIDE	To zoom out.	P.19, P.22
53.	INPUT	To change the input system.	P.22
54.	LAMP	To turn ON/OFF the lamp.	P.20, P.21
55.	MOVE	To call the operating status of the Presenter saved in [PRESET] .	P.30
56.	PRESET	To save the operating status of the Presenter.	P.30
57.	AF	To focus automatically.	P.19, P.29

2. WIRELESS REMOTE CONTROL


Point the infrared emitting part of the wireless remote control unit at the infrared sensor of the Visual Presenter, located on the top of the column, and press the button for the desired function.

The receivable range may be narrowed when the Presenter is placed under sunlight, near an inverter fluorescent lamp or in any other unfavorable surroundings. Depending on the conditions of fluorescent lamps, etc. the sensor may fail to receive the infrared light. In such a case, relocate the Presenter, or take other countermeasures.

Receivable range

Distance : Approx. 7 m (23 ft.) or less from the light receiving area to the front of the wireless remote control

Angle : Approx. 30° degrees or less from the light receiving area to the front of the wireless remote control rightward, leftward, upward and downward, respectively

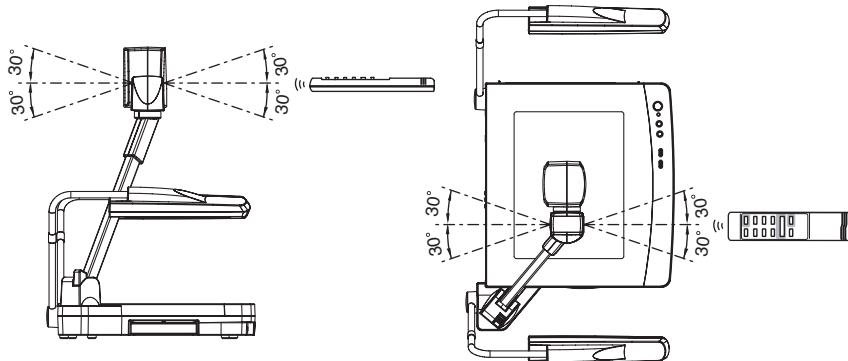

○ Preparation

Remove the battery case cover by pressing downward on the [↓ OPEN] mark part in the direction as indicated by the arrow. Install 2 pcs of batteries (type R03, AAA) into the case in the direction as indicated there.

Note: Install the batteries with the right polarity.

Note: Change the batteries once a year.


Note: The batteries supplied with the Presenter are only for use in initially confirming the operation of the Presenter. It is not guaranteed that these batteries can work effectively for the indicated period.

3. MOUSE

Connect the mouse to the mouse terminal on the rear panel.


The mouse can control the display and operation of the OSD Menu screen, mouse pointer and the Electronic enlargement.

When the left button of the mouse is clicked, the OSD menu and the pointer are displayed. Set each function with the mouse.

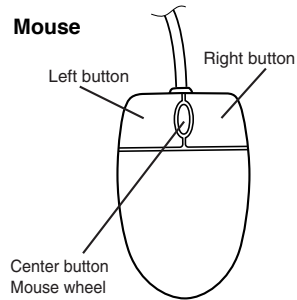

The mouse is operated as follows:

 - **Left button**..... To display or clear the pointer and menu alternately by clicking.



To set each item on the OSD menu while the menu is in display. When the image is in electronic enlargement, the image scroll function is activated by dragging the mouse while holding down this button.

- **Mouse wheel** To scroll the enlarged screen up/down when the image is in electronic enlargement.
- **Right button**..... When this button is clicked when the pointer is in display, the electronic image enlargement function is activated with the position indicated by the pointer as a center.

Note: When the right button is clicked on the OSD menu, the menu functions are given priority.

Reference Page · Electronic enlargement P.25


Note: When using the mouse, connect the mouse before turning ON the power supply to the Presenter.

Note: Use the attached mouse.
If a mouse on the market is used, the normal operation cannot be guaranteed.


Note: The OSD display is assumed to be used for large projection sizes with a projector or the like. Therefore, the display on a monitor or a TV on hand may not be hard to see.

4. SETTING UP


- (1) Unfold the lighting unit arms fully until they come to the deadend. Unfold arm 1 and then arm 2 as illustrated.

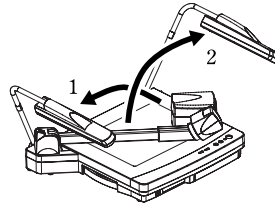


- (2) Press the column lock release button, and raise the column until the column lock release button returns to the original position. Make sure that the column has been completely locked.

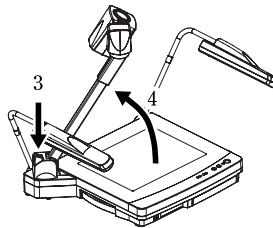

- (3) Turn the main camera head as illustrated until it is stopped.

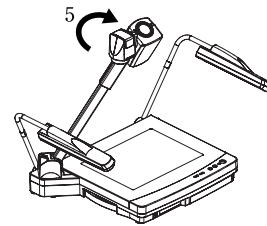

- (4) Turn the main camera head until the lens faces to the stage.

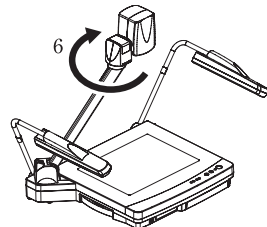

- (5) Plug the power cord into the power cord receptacle of the Presenter and the AC outlet.

○ Connection to the monitor and the projector

The following settings of the Presenter can be switched with the DIP switch. Switch the settings according to the connection environment. The factory settings are as shown in the following table:

Key	Function	Initial setting	
		Key selection	Content
A	To switch the image output	0	SXGA output
B	To switch the TV output method	0	NTSC
C	To switch the TV output screen size	0	Over scan
D	To initialize the network function settings	0	Normal operation

Note: Be sure to turn OFF the power supply to all equipment before making any connections to protect the Presenter and all the connected equipment.


Note: When switching the I/O selection switch key, be sure to turn OFF the power supply to the Presenter beforehand.

Note: Hold the cable plug when connecting or disconnecting the cables.

● Connection to the analogue RGB-in terminal


Connect the analogue RGB-out terminal [**OUTPUT-RGBOUT**] to the equipment having an analogue RGB-in terminal with the analogue RGB cable (attached) or a connection cable available on the market.

At this time, the position of the display may be deviated from the center. If deviated, manually adjust the horizontal and vertical positions on the connected equipment side. Also, vertical stripes may appear on the screen of the liquid crystal projector. That can be alleviated by manually adjusting the dot clock frequency on the projector side.

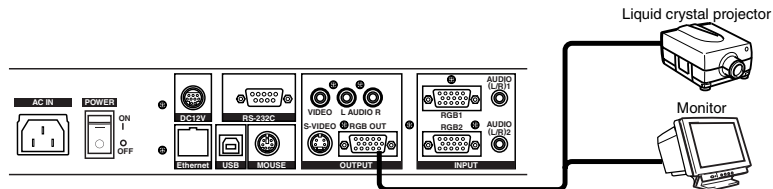


● Connection to the composite video-in terminal

Use the supplied RCA video/audio cable or a BNC cable available on the market.

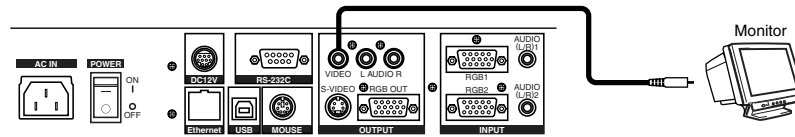


● **Connection to the S video-in terminal**

Connect the S video-out terminal (mini DIN 4P) of the Presenter to the S video-in terminal of the TV/video monitor. For the S video mode, use an S video connection cable available on the market. If the equipment to be used is provided with a Y/C separate connector, a conversion adapter is necessary.

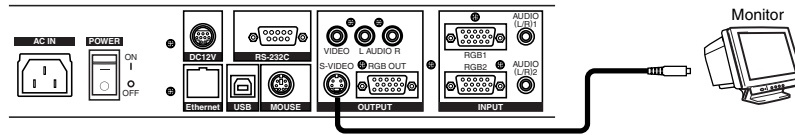

○ **Analogue RGB signal**

 ● **Signal allocation**



Video signal Analogue 0.7V(p-p) 75Ω terminated
 Horizontal synchronized signal TTL level (positive/negative polarity)
 Vertical synchronized signal TTL level (positive/negative polarity)

DSUB 15P shrink terminal (Female)

● **Pin assignment**

Pin No.	Name	Pin No.	Name	Pin No.	Name
1	Video signal (Red)	6	GND (Red)	11	GND
2	Video signal (Green)	7	GND (Green)	12	N.C
3	Video signal (Blue)	8	GND (Blue)	13	Horizontal synchronized signal
4	N.C	9	N.C	14	Vertical synchronized signal
5	GND	10	GND	15	N.C

5. STORING THE PRESENTER




- (1) Turn OFF the power switch, and unplug the power cord and the video cable.
- (2) Turn the main camera head as illustrated until it is stopped.

Note: Be sure to set the camera head in the illustrated position before storing. Storing the main camera head in any other position may damage the stage surface or the lens.

- (3) Press the column lock release button, and fold down the main column.

Note: The illustration shows the right storage position of the column. Never apply excessive force to the column.

- (4) Fold down the lighting unit arms 5 and 6. Be sure to fold down arm 5 first as per the illustration.

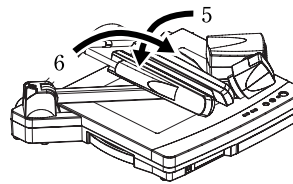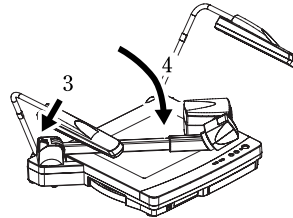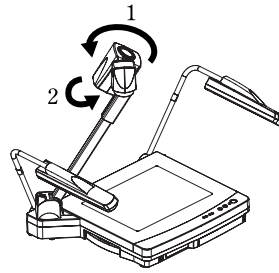

6. OPERATION PROCEDURES


○ Simple steps for presenting printed material

- (1) Turn ON the power switch.

Note: Before turning ON the power switch, connection to the monitor should have been completed.


Note: When the power switch is turned ON, the lighting unit lights up.

Note: If the power switch is turned ON immediately after being turned OFF, the Presenter may not operate. For restarting, turn OFF the Presenter and wait several seconds then turn ON.

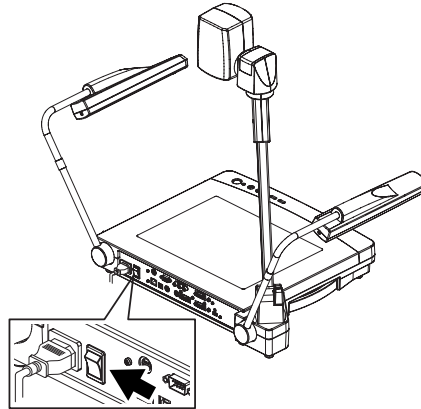


- (2) Place the object on the stage. Adjust the image size according to the object size using the zoom buttons ([TELE] / [WIDE]) on the front panel or the zoom buttons ([TELE] / [WIDE]) on the wireless remote control, while watching the image on the TV monitor.

Front panel

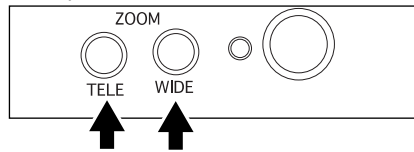


Wireless remote control

 

- (3) Press the auto focus button [AUTO FOCUS] on the front panel or the auto focus button [AF] on the wireless remote control.

Note: The auto focus function works up to a height of approx. 10cm (3.9 in) above the stage surface when the zoom button [TELE] is set to the maximum.

 Front panel




Wireless remote control




○ **Simple steps for showing transparent material, such as overhead transparencies or slide film**


- (1) Press the base button **[BASE]** on the front panel or the lamp button **[LAMP]** on the wireless remote control to light up the base light (transparent lighting unit) built in the stage.

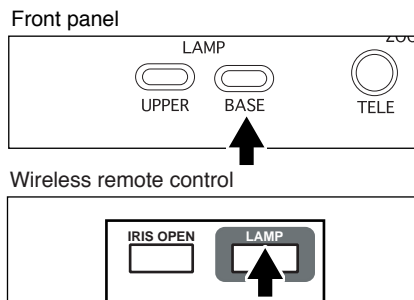

- (2) To present a nega film, press the posi/nega conversion button **[POSI / NEGA]** on the operation panel to change the mode to **[N]** (Negative).

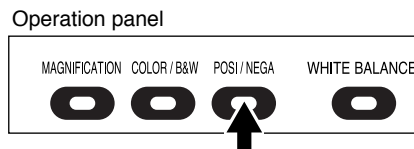

- (3) To turn OFF the base light, press the base button **[BASE]** on the front panel or the lamp button **[LAMP]** on the wireless remote control again.

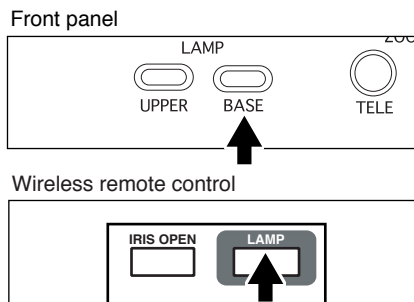

7. VARIOUS FUNCTIONS

○ Lighting

The upper lighting unit for presenting material such as printed matter and 3-D objects, and the baselight for presenting transparent material, such as slide, and negative films, are built in to the Presenter.


When the lamp button **[LAMP]** (**[UPPER]** / **[BASE]**) on the front panel or the lamp button **[LAMP]** on the wireless remote control is pressed, the fluorescent lamp lights up in 1 to 3 seconds.

Every time the lamp button **[LAMP]** on the wireless remote control is pressed, lighting is switched in a cycle of **the lighting unit lights up → the base light lights up → the base light goes out.**

The lighting unit lights up when the power supply is turned ON. To turn OFF the lamp, press the button for the respective lamp.



Note: It is impossible to have the upper lighting unit and the baselight lit up together.

Note: To obtain a sharp image with good color rendering, it is sometimes necessary to use the upper lighting unit.


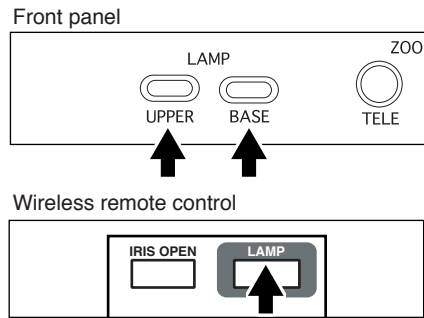


○ **Zoom**

Press the zoom button **[TELE]** on the front panel or wireless remote control, and the image will gradually be enlarged.

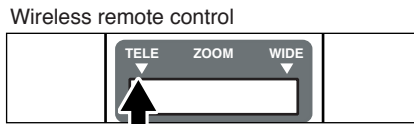
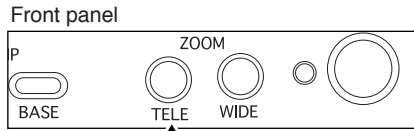


Press the zoom button **[WIDE]** on the front panel or wireless remote control, and the image will gradually be reduced.

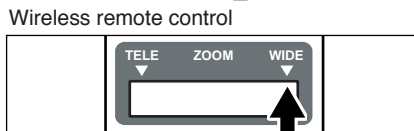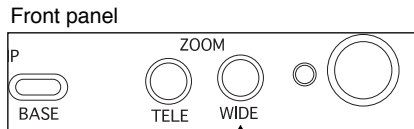

○ **Input selection**

The respective images from two different sources such as a PC and an Elmo Presenter "HV-100XG" can be alternately presented on a TV by selecting the source by pressing the desired input selection buttons without changing the cable connections. The input can be switched by pressing the input select button **[RGB1]** or **[RGB2]** on the operation panel or the input select button **[INPUT]** on the wireless remote control. The lighting of the indicator lamp indicates which input is now selected. Every time the input selection button **[INPUT]** on the wireless remote control is pressed, input is switched in a cycle of **the Main → RGB1 → RGB2**. Input selection is possible as shown in the following table:

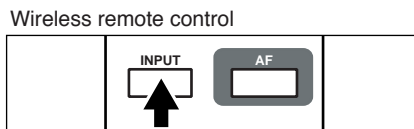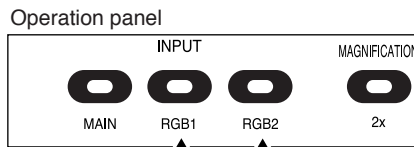


● **Table of Video- and Audio-in / out Terminal Selections**

Input		Output signal	Video-out Terminal	Audio-out Terminal	
			RGB	L	R
Main Unit	Main camera video signal		○	—	—
	Microphone	Monaural	—	○	○
RGB1	Main camera video signal		—	—	—
	External video signal 1	RGB1	○	—	—
	External audio signal 1	Stereo 1 (L/R)	—	○	○
	Microphone	Monaural	—	○	○
RGB2	Main camera video signal		—	—	—
	External video signal 2	RGB2	○	—	—
	External audio signal 2	Stereo 2 (L/R)	—	○	○
	Microphone	Monaural	—	○	○

○ **Output to the monitor**

Select the signal to be output to the NTSC/PAL monitor. When the monitor output button **[RGB1]** or **[RGB2]** on the operation panel is pressed while **[RGB1]** or **[RGB2]** is selected for the input selection, the indicator lamp lights up, and the image from the equipment connected to the external input terminal **[RGB1]** or **[RGB2]** is presented on the NTSC/PAL monitor. When the **[MAIN]** button of the monitor output on the control panel is pressed, the indicator lamp lights up, and the image from the main camera is presented on the NTSC/PAL monitor.

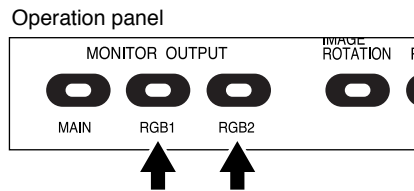

Note: The input signals to the external input terminal RGB1 and RGB2 can be output to the NTSC/PAL monitor if their frequencies are among the listed in the table at the next page.

● Table of Corresponding Signals

Signal	Frequency			Resolution (Number of lines)		Polarity of the synchronized signal (P: Positive, N: Negative)
	Horizontal	Vertical	Pixel clock	Horizontal	Vertical	HV
Mode name	kHz	Hz	MHz			
VGA1	37.861	85.080	31.500	640	350	P / N
VGA2	37.861	85.080	31.500	640	400	N / P
VGA3	37.972	85.039	35.500	720	400	N / P
VGA@60Hz	31.469	59.940	25.175	640	480	N / N
VGA@72Hz	37.861	72.809	31.500	640	480	N / N
VGA@75Hz	37.500	75.000	31.500	640	480	N / N
VGA@85Hz	43.269	85.008	36.000	640	480	N / N
SVGA@56Hz	35.156	56.250	36.000	800	600	P / P
SVGA@60Hz	37.879	60.317	40.000	800	600	P / P
SVGA@72Hz	48.077	72.188	50.000	800	600	P / P
SVGA@75Hz	46.875	75.000	49.500	800	600	P / P
SVGA@85Hz	53.674	85.061	56.250	800	600	P / P
XGA@60Hz	48.363	60.004	65.000	1024	768	P / P
XGA@70Hz	56.476	70.069	75.000	1024	768	N / N
XGA@75Hz	60.023	75.029	78.750	1024	768	N / N
XGA@85Hz	68.677	84.997	94.500	1024	768	P / P
SXGA1	67.500	75.000	108.000	1152	864	P / P
SXGA2	60.000	60.000	108.000	1280	960	P / P
SXGA3	85.938	85.002	148.500	1280	960	P / P
SXGA@60Hz	63.981	60.020	108.000	1280	1024	P / P
SXGA@75Hz	79.976	75.025	135.000	1280	1024	P / P
SXGA@85Hz	91.146	85.024	157.500	1280	1024	P / P
UXGA@60Hz	75.000	60.000	162.000	1600	1200	P / P
UXGA@65Hz	81.250	65.000	175.500	1600	1200	P / P
UXGA@70Hz	87.500	70.000	189.000	1600	1200	P / P
UXGA@75Hz	93.750	75.000	202.500	1600	1200	P / P
UXGA@85Hz	106.250	85.000	229.500	1600	1200	P / P
Mac 13	35.000	66.667	30.240	640	480	P / P
Mac 16	49.725	74.550	57.283	832	624	N / N
Mac 19	60.241	74.927	80.000	1024	768	N / N
Mac 21	68.682	75.062	100.000	1152	870	N / N
PC98	24.825	56.420	21.052	640	400	N / N

○ Electronic enlargement

To double the image.

To double the central part of the image, press the button **[MAGNIFICATION]** on the operation panel. When double magnification is selected, the indicator lamp lights up.

The image can be enlarged only within the shooting area of the main camera.

The mouse can be operated as follows:

- **Left** button To scroll the image according to the dragging of the mouse while holding down the left button.
- **Mouse wheel** To scroll up/down the enlarged screen.
- **Right** button To turn ON/OFF the double enlargement.

Note: When the electronic enlargement is tried while the mouse pointer is in display, since the left button of the mouse is limited to the scroll function, the mouse pointer and the OSD cannot be turned ON/OFF. To turn ON/OFF the mouse pointer and the OSD, turn OFF the electronic enlargement.

Operation panel



○ Color / B&W selection

To present the B&W (Black&White) material such as documents. Sharper image with no color blur on the monitor can be produced. Set to color mode for normal use.

Press the color/B&W selection button **[COLOR / B&W]** on the operation panel, the indicator lamp lights up and the mode changes to B&W mode.

When the color/B&W selection button **[COLOR / B&W]** is pressed again, the indicator lamp goes out and the normal (COLOR) mode is resumed.

Operation panel



 
○ Posi / Nega conversion

To show a negative film.

Press the posi/nega conversion button **[POSI / NEGA]** on the operation panel or wireless remote control, the indicator lamp lights up and the image will be converted accordingly.

When the posi/nega conversion button **[POSI / NEGA]** is pressed again, the indicator lamp goes out and the normal mode is resumed.

Operation panel



○ Image rotation

When the image rotation button **[IMAGE ROTATION]** on the operation panel is pressed, the image rotates. Every time the image rotation button **[IMAGE ROTATION]** is pressed, the image rotates counterclockwise by 90°.

Operation panel



○ Pause

When the freeze button **[PAUSE]** on the operation panel is pressed, the image from the main camera freezes. When the freeze button **[PAUSE]** is pressed again, the freeze is canceled.

Operation panel



Note: When the image remains frozen, the functions such as color/B&W selection are not reflected on the output from the main camera.

○ Contrast

 
To present the material with a little half tone such as documents.

Images with sharp characters and lines contrasty with background can be obtained.

When the contrast button [**CONTRAST**] on the operation panel is pressed, the indicator lamp lights up, and the image becomes contrasty.

When the contrast button [**CONTRAST**] is pressed again, the indicator lamp goes out, and the image is reset to the normal condition.

Operation panel



○ White Balance

The camera of the Presenter automatically adjusts the shooting color balance (AUTO mode). However, depending on the color arrangement of document or the like, this color balance may be lost. In such case, shoot the stage surface, and press the white balance button [**WHITE BALANCE**] on the operation panel. Then, the mode is switched to the ONE-PUSH mode, the indicator lamp blinks and then lights up, and the white balance is fixed.

When the white balance button [**WHITE BALANCE**] is pressed again, the indicator lamp goes out, and the mode returns to the AUTO mode.


AUTOTo set the white balance in the auto follow mode (initial setting).

ONE-PUSH....To set the push-set white balance. By pressing the button [**WHITE BALANCE**], the white balance for the then color temperature is fixed.

Note: The automatically followed color temperature ranges from approx. 3000k to 8000k.

Note: When the white balance is set to the MANUAL mode on the OSD, the white balance is fixed, and the indicator lamp remains lighting. When the white balance button [**WHITE BALANCE**] on the operation panel is pressed while the indicator lamp is lighting, the indicator lamp goes out, and the mode is switched to the AUTO mode.

Operation panel

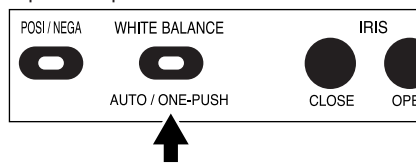


○ Iris


To adjust the Auto iris level of the lens. Press the iris button **[OPEN]** on the operation panel or the iris open button **[IRIS OPEN]** on the wireless remote control, and the iris will open. Press the iris button **[CLOSE]** on the operation panel or the iris close button **[IRIS CLOSE]** on the wireless remote control, and the iris will close. Press the iris normal button **[IRIS NORMAL]** on the wireless remote control, and the initial setting will be resumed.

Note: When the image looks dark, adjust the brightness with iris control.

Operation panel

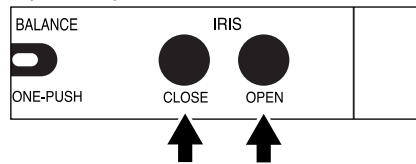

Wireless remote control

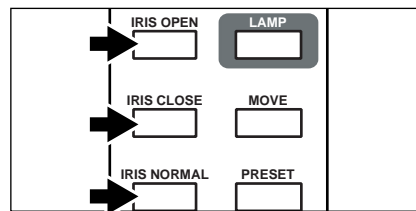

○ Focus

● Auto Focus

Press the auto focus button **[AUTO FOCUS]** on the front panel or the auto focus button **[AF]** on the wireless remote control, and the auto-focus will be activated.

While the auto-focus is in operation, the indicator lamp on the front panel blinks until the object is brought into focus.







The Presenter features a one-push auto focus function. Once focusing is completed, the auto focus function is released, and the focused position maintains unchanged (**FOCUSFREE**). To obtain sharper image, zoom in on the object by pressing the zoom button **[TELE]** on the front panel or wireless remote control and press the auto-focus button.

However, the objects listed below may not be brought into focus in the auto focus mode. In these cases, use the manual focus mode.

- Objects bearing little contrast
- Objects with fine repeated patterns, such as lateral stripes and cross stripes
- Objects glittering or reflecting strong light
- Objects with bright background, or excessive contrast
- Objects in a dark picture plane
- Objects located near and far away at the same time
- Objects in motion

If the focus button **[NEAR]** or **[FAR]** on the front panel or the focus button **[FOCUS NEAR]** or **[FOCUS FAR]** on the wireless remote control is pressed during the auto focus, the auto focus will be released.


Note: The auto focus function works up to a height of approx. 10cm (3.9 in) above the stage surface when the zoom button **[TELE]** is set to the maximum.

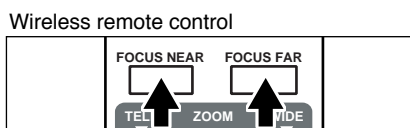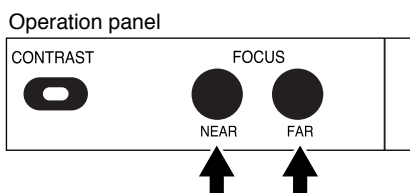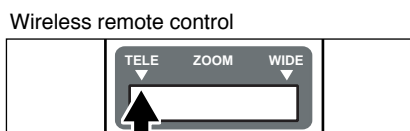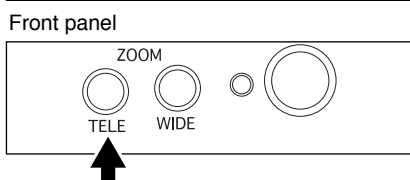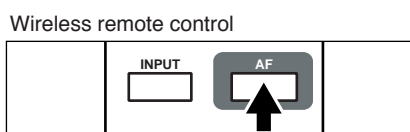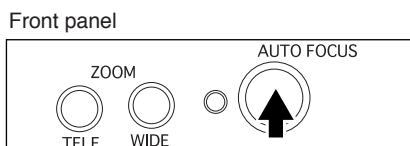

● Powered Manual Focus

To focus on specific part of the material, such as 3-D material. Press the focus button **[NEAR]** or **[FAR]** on the operation panel or the focus button **[FOCUS NEAR]** or **[FOCUS FAR]** on the wireless remote control.

Note: The auto focus functions up to approx. 10cm (3.9 in.) above the stage surface (with the close-up lens attached).

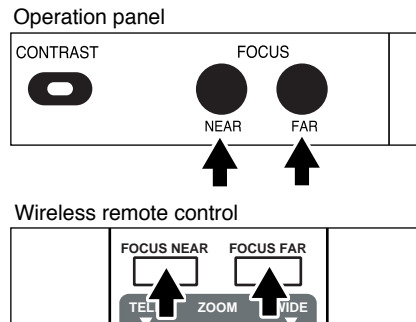

○ About the preset and move operation

The Presenter has a function of saving its operation status (Preset). The preset function is read with the move button **[MOVE]** on the wireless remote control. The operation status that can be saved includes:


- Preset zoom angle of view
- Adjustment status of AUTO iris level
- White balance status
- ON/OFF of aperture
- Status of gamma
- Lighting status
- Microphone level

1. How to move

When the move button **[MOVE]** on the wireless remote control is pressed, the Presenter is set to the preset status.


2. How to preset

When the preset button **[PRESET]** on the wireless remote control is pressed, the current status of the Presenter is saved.

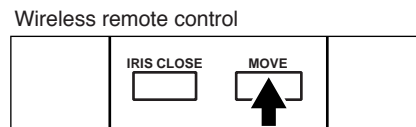

○ **LCD monitor bracket socket**

The LCD monitor bracket socket is used for attaching an LCD monitor (optional) with an LCD monitor bracket (optional).

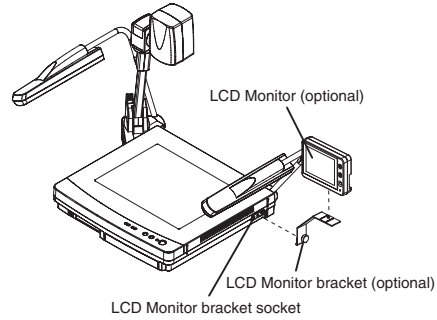


○ **Connecting to the LCD monitor out terminal**

The LCD monitor (LM-5011N) can be connected by using the LCD monitor out terminal of the Presenter.

Note: When connecting to the LCD monitor out terminal, confirm the right connection direction.

Note: When using the LCD monitor connection cable, do not use the AC adapter or video cable attached to the LCD monitor (LM-5011N).

Note: The LCD monitor (LM-5011N) and the LCD monitor bracket are available on option, and not attached to this Presenter (HV-8000SX).

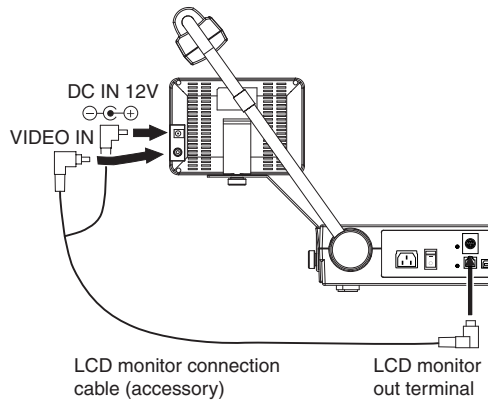

	VIDEO OUT
1	VIDEO OUT
2	GND
3	NC
4	NC
5	NC
6	NC
7	+12V
8	GND
9	CONT.

○ **PC link software “Image Mate”**


When the “Image Mate” is installed in the PC, the following operations are available:




 



- Image data transfer to the PC
- Operation of the Presenter by the PC


 


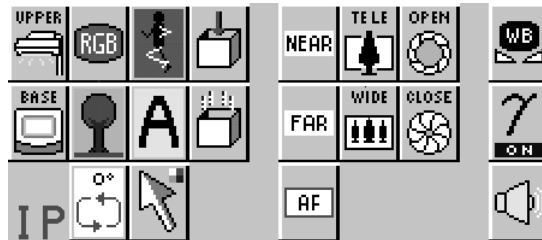


For details, refer to the installation manual of “Image Mate” and “manual.pdf” in the CD-ROM.

8. OSD (On-Screen Display)

○ Main menu



Icon	Name	Function
	Upper light ON/OFF	To turn ON/OFF the upper light. When the Presenter is turned ON, the upper light remains at the previously saved settings.
	Base light ON/OFF	To turn ON/OFF the base light. When the Presenter is turned ON, the base light remains at the previously saved settings.
	Color/B&W selection	To switch the selection of the color/B&W of the screen. When the Presenter is turned ON, the color/B&W selection remains at the previously saved settings.
	Posi/Nega selection	To switch the selection of the positive/negative of the screen. When the Presenter is turned ON, the positive/negative selection remains at the previously saved settings.
	Image rotation	To rotate the image counterclockwise by 90°. When the Presenter is turned ON, the image rotation remains set at 0°.
	Freeze	To switch the selection of the static/moving image. When the Presenter is turned ON, the static/moving image selection remains at the previously saved settings.
	Aperture selection	To switch the modulation (edge emphasis) of the image. When the Presenter is turned ON, the image modulation remains at the previously saved settings. The factory setting is "ON."

Icon	Name	Function
	Pointer	To change the color and shape of the pointer on the screen. Every time the left button of the mouse is clicked, the icon pointer is switched in order of "White arrow→Blue arrow→Yellow arrow→Red arrow" and "White line→Blue line→Yellow line→Red line".
	Status saving	To save each status of the current aperture, lighting, white balance, preset zoom angle of view, gamma, auto iris level and microphone level. The settings save here are reflected on the Presenter when the Presenter is turned ON the next time.
	Initialization	To reset the Presenter to the status of the factory settings
	Focus NEAR/FAR	To adjust the focus of the lens.
	Auto Focus	To focus the lens automatically.
	Zoom TELE/WIDE	To adjust the zoom of the lens.
	Iris Close/Open	To adjust the auto iris level of the lens.

○ When the white balance is set



 
○ When the gamma is set










○ When the microphone volume is set



○ When the IP address is displayed



Icon	Name	Function
	White balance	To display the White Balance Adjustment menu. When the left button of the mouse is clicked again, the White Balance Adjustment menu is closed.
	Auto	To set the white balance in the AUTO FOLLOW mode (initial setting).
	One-push	To set the push-set white balance. When the left button of the mouse is clicked, the white balance for the then color temperature is fixed.
	Manual	To set the white balance with <RED>, <GREEN> and <BLUE>. Adjust the white balance by clicking the left button of the mouse on the direction buttons beside the volume bar. <RED>...To adjust the red component (1-99). <GREEN>...To adjust the green component (1-99). <BLUE>...To adjust the blue component (1-99).
	Gamma adjustment (0-7)	To switch the gamma setting value (0(1.0) / 1(0.9) / 2(0.8) / 3(0.7) / 4(0.6) / 5(0.5) / 6(0.4) / 7 (0.3)). When the Presenter is turned ON, the gamma setting value remains at the previously saved settings. The factory setting is "4 (0.6)."
	Volume adjustment (0-63)	Volume adjustment (0-63) To adjust the audio volume from the microphone terminal. When the Presenter is turned ON, the volume adjustment remains at the previously saved settings. When the left button of the mouse is clicked on this icon, the volume bar is displayed. Adjust the audio volume by clicking the left button of the mouse on the direction buttons beside the volume bar. When the left button of the mouse is clicked on the icon of the volume adjustment again, the volume bar is closed. The factory setting is "50."
	IP address	To display the IP address. When the left button of the mouse is clicked on this icon, the IP address of the Presenter is displayed.

9. NETWORK FUNCTIONS

By connecting this Presenter to the network using Ethernet (10BASE-T/100BASE-TX), the following functions are made available from the host (e.g., PC) on the network:

- Web server functions – Displaying quasi-moving images, displaying static images and operating remote control through the Web browser.
- FTP client functions – Saving image files in the remote host by using the image transfer button **[IMAGE TRANSFER]**.
- FTP server functions – Transferring image files.
- telnet server functions – Operating remote control and acquiring status data.

Note: It is not assured that this Presenter can be connected to all units on the network.

Note: The applicable Web browsers are Internet Explorer 4.0 and newer and Netscape 4.7 and newer. For any other browser, consult your dealer or an authorized ELMO service center.

○ Preparation for connection

Before connecting the Presenter to the network for use, the network must be set up (e.g., IP address). This Presenter provides two procedures for setting up the network as follows:

- Connecting the Presenter from the host on the network through the Web browser.
- Connecting the Presenter from the host on the network through telnet.

Here, the setup procedure using the Web browser is described.

For the setup procedure using telnet, consult your dealer or an authorized ELMO service center.

● Preparation before setting up

Before starting the setup, specify the IP address and subnet mask to be set up in the Presenter. For the IP address and subnet mask to be specified, ask the administrator of the network to be used.

This Presenter has been factory set on the network as follows:

IP address	192.168.0.100
Subnet mask	255.255.255.0

If the network address of the network to be used is not 192.168.0.0 or if there is any other host with the IP address 192.168.0.100 is already in operation on the same network, this Presenter cannot be connected to the network for setup. In this case, a network with the IP address 192.168.0.0 must be configured with this Presenter and the host for setting up this Presenter. Prepare a host having the IP address 192.168.0.X (X: 1~254, excluding 100) and the subnet mask 255.255.255.0, and connect such host to the Presenter.


Reference Page

• Accessing the network P.36, P.37, P38

● **Connection to the network**


- Connection using HUB

Connect the Ethernet terminal (RJ-45) of the Presenter to the HUB port with an Ethernet straight cable (UTP Category 5). For the HUB port, use a port other than the cascade port.

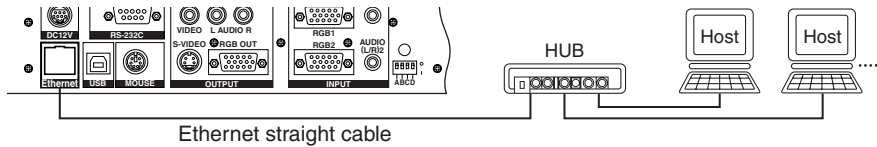

- Connection to one host

Connect the Ethernet terminal (RJ-45) of the Presenter to the Ethernet terminal of the host with an Ethernet cross cable (UTP Category 5).

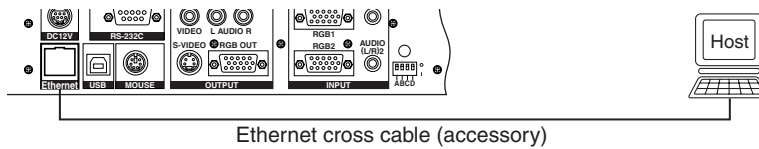

Note: Upon connection of this Presenter to other unit on the network through the Ethernet terminal, the communication protocol is adjusted automatically between the Presenter and the connected unit to 10BASE-T/100BASE-TX and HDX/FDX (i.e., “automatic negotiation”). Therefore, this Presenter may not be properly connected to some units on the network that do not comply with automatic negotiation.

● **Setting up of the network**

- Start the Web browser from the host connected to the Presenter.
- Enter the IP address or host name (if allocated) of the Presenter, following [http://], in the address column of the Web browser provided for entering the URL to be opened. For example, enter the IP address of this Presenter as “http://192.168.0.100/,” since it has been factory set to 192.168.0.100.
- When the HV-800SX/8000SX/8500SX page is displayed in the Web browser, click the link **[SET UP]**.



- Then, the Configurations page is displayed. Confirm the settings, and click the link **[Network Configuration]**. To display the Network Setting Input page, the authentication by the login password is required. When the entry of the password is requested, enter **[root]** for the user name and enter the password set at the Network Setting Input page. No password has been factory set. When the Presenter remains in the factory set condition, enter no password.
- When the Network Setting Input page is displayed, change the set values according to the environment of the network to be used. To reset the changed set values to the original set values, click the clear button **[CLEAR]**.

Configurations

Network Configuration	
IP address	192.168.0.100
Subnet mask	255.255.255.0
Default Gateway	0.0.0.0
root password	
user password	

FTP Client Configuration	
IMAGE TRANSFER	Disable
The IP address of the image receiving server	0.0.0.0
The port number / the image receiving server	21
The account / the image receiving server	anonymous
The password / the image receiving server	
Passive mode	Off
Destination directory to save	
Resolution	SXGA
File name of image	img
Add sequential number to file name?	Yes
The start number of sequence	0
The end number of sequence	999

[TOP](#)

- When all items have been set, click the submit button **[SUBMIT]**. When the message “The saving of the setup was completed. Please restart.” is displayed, the setting up of the network is completed. Then, turn OFF the power supply. The set values are effective as of the time when the power supply is turned ON the next time. If the message “Incorrect value of setting exists. Please set up again.” is displayed when the submit button **[SUBMIT]** is clicked, there is an incorrect value entered for setting. Go back to the Network Setting Input page and redo the setting.

Reference Page

· Appendix: Setting items of the network P.44

Note: If there are more than one unit with the same IP address on the network, a disorder would be caused to the network. Therefore, set the IP address carefully.

Note: Once the submit button **[SUBMIT]** is clicked, do not turn OFF the power supply until the next screen is displayed. Otherwise, the set values will be destroyed and connection from the network will be disabled. If the connection is disabled, reset the settings to the factory settings by referring to “Initialization of Network Settings” in the next section, and the redo the setting.

● Initialization of the network settings

If the connection from the network is disabled due to destruction of the network settings or disremembering of the set value, reset the settings to the factory settings by using the following procedure and then redo the settings:

- If the Presenter is in connection to the network, disconnect the Presenter from the network.
- In the power supply OFF state, lower the [D] key of the DIP switch key on the backside of the Presenter to [1].
- Turn ON the power supply, and wait for approx. 10 seconds.
- Turn OFF the power supply, and return the [D] key of the DIP switch to [0].
- Turn ON the power supply again. Then, the network settings and the FIP client settings are reset to the factory settings.

Note: Ensure that the [D] key of the DIP switch is returned to [0] after the initialization. If the key remains in the [1] position, the connection from the network is disabled.

○ Web server functions – Displaying quasi-moving images, displaying static image and operating remote control through the Web browser

When the Presenter is connected from the Web browser, quasi-moving images can be displayed, static images can be displayed, and remote control can be operated. To connect the Presenter from the Web browser, enter the IP address or host name (if allocated) of the Presenter, following [http://], in the address column of the Web browser provided for entering the URL to be opened. Then, the HV-800SX/8000SX/8500SX page is displayed. Click the desired link there. Then, the selected function can be used.

Note: Even if the image is tried to be electronically magnified, rotated or frozen by operating this Presenter, the image output to the network is not affected by this operation.

● Display of quasi-moving images

When the link [LIVE] is clicked at the HV-800SX/8000SX/8500SX page, another window opens, and a quasi-moving live image is displayed.

However, to display quasi-moving images, Java and JavaScript must have been set enabled. If the Presenter is used in the environment where Java or JavaScript are not set enabled, click the link [REFRESH]. Then, a page that renews static images at specified intervals is displayed.

Quasi-moving images can be displayed simultaneously at up to 15 clients. If more clients access the Presenter, the screen displays the message “LIVE mode already has the limited number of access. Please wait or use REFRESH!”

The frame rate of the quasi-moving image is max. 3.75 frames per second. However, the frame rate depends on the processing capacity of the host, the network environment, the number of connections units, etc.

Note: If the power supply to the Presenter is turned OFF while the quasi-moving image is in display, the host displaying the quasi-moving image may, depending on the Web browser in use, continue the internal processing even if the Web browser is closed. Normally, this causes no problem. However, if this is repeated again and again, the operation of the host may be destabilized. If the host becomes unstable, restart the host.



● Display of static images

By clicking the links [SXGA], [VGA] and [QVGA] at the HV-800SX/8000SX/8500SX page, the quasi-moving image page and the REFRESH page, the static images of 1280X1024, 640X512 and 320X256 in size can be displayed, respectively. To save the static image, use the function of the Web browser.

When any link at the HV-800SX/8000SX/8500SX page is clicked, the static image is displayed in the same window. However, when any link at other pages is clicked, another window opens, and the static image is displayed in that window.

● **Operation of remote control**

When the link [CONTROL] at the quasi-moving image page is clicked, the CONTROL page is displayed. At the CONTROL page, the lighting can be changed, the zoom can be adjusted, the iris can be adjusted, the focus can be adjusted, the color/B&W can be switched, the posi/nega can be switched, the aperture can be adjusted, the contrast can be adjusted and the color tone (RGB) can be adjusted, all through remote control. Click the button for intended operation. For the adjustments of the zoom, iris, focus and color tone, a preset amount changes each time the button is clicked.



○ **FTP client function – Saving image files in the remote host by using the image transfer button [IMAGE TRANSFER]**

When the image transfer button [IMAGE TRANSFER] on the operation panel is pressed, the image file can be saved in the host on the network set in [FTP Client Configuration]. To use this function, the FTP server of the host must be in operation at the saving destination.

Also to use this function, the FTP clients must be set beforehand.

This Presenter provides two procedures for setting the FTP clients as follows:

- Connecting the Presenter from the host on the network through the Web browser.
- Connecting the Presenter from the host on the network through telnet.

Here, the setup procedure using the Web browser is described.

For the setup procedure using telnet, ask your distributor or nearest branch or service office of ELMO.

Note: For some FTP servers, the image may be unable to be saved by using this function. For the information of the applicable FTP servers, consult your dealer or an authorized ELMO service center.

● **Setting up**

- Start the Web browser from the host connected to the Presenter.
- Enter the IP address or host name (if allocated) of the Presenter, following [http://], in the address column of the Web browser provided for entering the URL to be opened.
- When the HV-800SX/8000SX/8500SX page is displayed in the Web browser, click the link **[SET UP]**.
- Then, the Configurations page is displayed. Confirm the settings, and click the link **[FTP Client Configuration]**.

Configurations

Network Configuration	
IP address	192.168.0.100
Subnet mask	255.255.255.0
Default Gateway	0.0.0.0
root password	
user password	

FTP Client Configuration	
IMAGE TRANSFER	Disable
The IP address of the image receiving server	0.0.0.0
The port number / the image receiving server	21
The account / the image receiving server	anonymous
The password / the image receiving server	
Passive mode	Off
Destination directory to save	
Resolution	SXGA
File name of image	img
Add sequential number to file name?	Yes
The start number of sequence	0
The end number of sequence	999

[TOP](#)

To display the FTP Client Setting Input page, the authentication by the login password is required.

When the entry of the password is requested, enter **[root]** or **[user]** for the user name and enter the password set at the Network Setting Input page. No password has been factory set. When the Presenter remains in the factory set condition, enter no password.

- When the FTP Client Setting Input page is displayed, change the set values according to the host at the saving destination. To reset the changed set values to the original set values, click the clear button **[CLEAR]**.
- When all items have been set, click the submit button **[SUBMIT]**. When the message “The saving of the setup was completed.” is displayed, the setting up of the network is completed.

If the message “Incorrect value of setting exists. Please set up again.” is displayed when the submit button **[SUBMIT]** is clicked, there is an incorrect value entered for setting. Go back to the FTP Client Setting Input page and redo the setting.


[Reference Page](#)

· Appendix: Setting items of the FTP client P.44

● Operation

- Check to confirm the image to be saved on the monitor.
- Press the image transfer button **[IMAGE TRANSFER]** on the operation panel.
- LED on the button blinks. When the LED goes out, saving is completed. Now, the next image can be saved.
- When the image cannot be saved, the LED on the button in blinking lights up. Then, check the settings and the like. To turn OFF the LED in lighting, press the image transfer button **[IMAGE TRANSFER]** again.

Operation panel

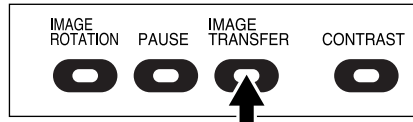

Note: When the host with IP Address set by the IP Address of the image receiving server does not exist on the network, it takes about 90 sec for LED to change from blink to lighting.

○ FTP server functions – Transferring image files

The host connected to the Presenter on the network can obtain the static image files of 3 sizes, 1280X1024 (file name: sxga.jpg), 640X512 (file name: vga.jpg) and 320X256 (file name: qvga.jpg) from this Presenter by using general-purpose FTP client software (e.g., Windows FTP command).

To use the FTP server function, the password is required. Enter “root” or “user” for the user name and enter the password set at the Network Setting page and corresponding to the user name. No password has been factory set. When the Presenter remains in the factory set condition, enter no password.

Only one client can use the FTP server function at the same time.

[Reference Page](#) · Appendix: Specifications of the FTP server P.45

Note: Since the FTP server discriminates between uppercase and lowercase characters, specify the file name with lowercase characters only.

Note: The file size displayed in the file list is given as a reference, and does not indicate the file size after saving. The date and time of updating the file always indicates 0:00, January 1, 2002.

○ telnet server functions – Performing remote operation and acquiring the status

This Presenter can be remotely controlled and its status can be acquired through telnet. For the information of the command, etc., consult your dealer or an authorized ELMO service center.

○ Appendix

● Setting items of the network

Item	Outline
IP Address	The IP address of the Presenter. Specifies the value allocated by the administrator of the network in use. Factory set to 192.168.0.100.
Subnet mask	The mask value for separating the network address from the host address. Used in combination with the IP address to specify the network to which this Presenter belongs. Specifies the value allocated by the administrator of the network in use. Factory set to 255.255.255.0.
Default Gateway	Specifies the IP address of the router when this Presenter is used on the network equipped with a router. For the IP address of the router, ask the administrator of the network to in use. Factory set to 0.0.0.0. Set to 0.0.0.0. when using the Presenter on the network equipped with no router.
root password	The password for setting up the network and using telnet. Not factory set. Should preferably be set for the security purpose.
user password	The password for setting up the FTP client to enable the use of the image transfer button [IMAGE TRANSFER] and for using the FTP server function. Not factory set.

● Setting items of the FTP client

Item	Outline
IMAGE TRANSFER	Specifies Enable/Disable of the image transfer button [IMAGE TRANSFER]. Factory set to Disable.
The IP address / the image receiving server	Specifies the IP address of the destination host to save. Factory set to 0.0.0.0.
The port number / the image receiving server	Specifies the port number used by the FTP server in operation at the destination host to save. Normally, no need to be changed. Factory set to 21.
The account / the image receiving server	Specifies the account name used for connection to the destination host to save. Factory set to anonymous.
The password / the image receiving server	Specifies the password of the above account. Not factory set.
Passive mode	Specifies which mode is used for file transfer, the passive mode or active mode. When the port is limited by firewall, etc., use the passive mode. For whether the passive mode should be used or not, ask the administrator of the network in use. Factory set to no use.
Destination directory to save	Specifies the destination directory to save the image file. Specifies the write-enabled directory of the assigned account. Not factory set. (The root directory has been specified.)
Image size	Specifies the size of image to be saved from among SXGA, VGA and QVGA. The image sizes are 1280X1024 for SXGA, 640X512 for VGA, and 320X256 for QVGA. Factory set to SXGA.
File name of image	Specifies the name of the file to be saved. Automatically adds the extension [.jpg] to the file name. Since any file under the same name in the saving destination is overwritten, specify a different file name from the existing file names. Factory set to [img].
Add sequential number to file name	Specifies whether Yes/No to the addition of sequential number to the file name. When [Yes] is specified, the image is saved under the file name specified for the image with the sequential number added (e.g., img000000.jpg, img000001.jpg) each time the file is saved. When the power supply to the Presenter is turned ON or the FTP client settings are changed, the sequential number to be added to the file name is reset to the number specified for the start number of sequence. Factory set to Yes.
Start number of sequence	Specifies the start number of sequence when the sequential number is add to the file name. Factory set to [0].
End number of sequence	Specifies the end number of sequence when the sequential number is added to the file name. When the sequential number reaches the end number, the sequential number returns to the start number of sequence. Then, if there is a file already saved with the start number of sequence, that file will overwritten when the new file is saved. Therefore, the end number of sequence should preferably be larger. Factory set to 999.

● **Specifications of the FTP server**

Port: No. 21
 Connection time-out: 15min
 Number of connections at the same time: 1

Corresponding command

Command	Operation	Response
USER	To enter the user name	331, 500, 530
PASS	To enter the password	230, 500, 503, 530
PORT	To notify the data port No.	200, 500
TYPE	To switch the file type	200
PWD(XPWD)	To display the current directory	257
RETR	To acquire the file	150, 226, 510, 552, 550
PASV	To enable the passive mode	227, 510
LIST(NLST)	To acquire the file list	150, 226, 510
NOOP	No operation	200
QUIT	To terminate (disconnection)	221

Response message

150 File status OK; About to open data connection.
200 Command OK.
220 FTP server ready.
221 Goodbye.
226 Closing data connection.
227 Entering Passive Mode < IP address and port No. >
230 User logged in.
257 "/" is current directory.
331 User name OK. Need password.
500 Command not understood.
502 Command not implemented.
503 Login with USER first.
510 port open fails.
530 Not logged in.
530 Already logged in.
550 < File name > : No such file.
552 Requested file action aborted.

Note: Even when the file type is changed to ASCII at the TYPE command, the file is transmitted in the Binary mode.

10. RS-232C SPECIFICATIONS

The Presenter can be controlled by a PC connected to the Presenter through the RS-232C terminal [RS-232C].

○ Setting up

- (1) Connect the Presenter to a PC with an RS-232C connection cable.

Note: When using an RS-232C cable available in the market, make sure of the connection shown the next page.

Note: To protect the Presenter and the PC, be sure to turn OFF all the power switches of all equipment before connecting.

- (2) Start the PC, and set the communication mode of the RS-232C to the communication mode of the Presenter.


Note: For the information how to set the communication mode of the RS-232C, refer to the instruction manual of the PC.

- (3) Start the PC program to operate the Presenter.

- (4) Control through the RS-232C will start.

Note: For communication control, be sure to take the above steps for setting.

○ Cable connection

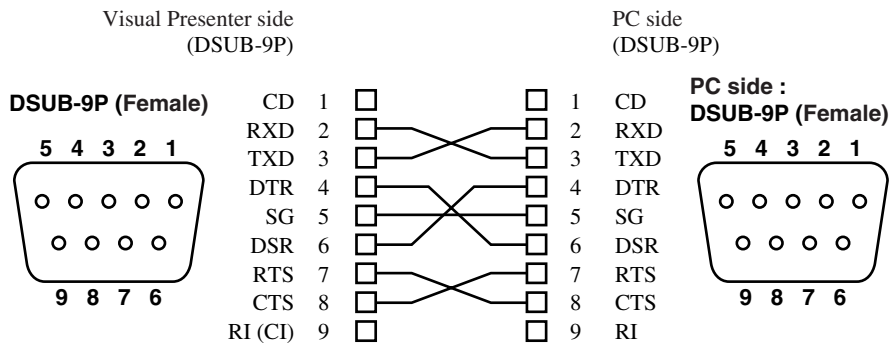

○ Table of the communication commands

Function	Command	Parameter	Data	Comments
Auto Focus	AF	0	■ ■	Command to execute the one-step Auto Focus.
Focus adjustment	FO	+ (NEAR) - (FAR) 0 (STOP)	■ ■	Command to adjust the Focus.
Zoom adjustment	ZO	+ (TELE) - (WIDE) 0 (STOP)	■ ■	Command to adjust the Zoom.
Iris adjustment	IR	+ (OPEN) - (CLOSE) 0 (STOP) 1 (AUTO)	■ ■	Command to adjust the Iris.
Lighting selection	PL	0 (OFF) 1 (BASE) 2 (UPPER)	■ ■	Command to select the Lighting.
Input selection	AV	0 (MAIN) 1 (RGB1) 2 (RGB2)	■ ■	Command to select the Input.
Posi/Nega conversion	NP	0 (POSI) 1 (NEGA)	■ ■	Command to convert Posi/Nega.
Color/B&W selection	CB	0 (COLOR) 1 (B&W)	■ ■	Command to select Color/B&W.
Video pointer display	PO	0 (OFF) 1 (ON)	■ ■	Command to turn ON/OFF the video pointer display.
Enlarged image movement	PM	0 (STOP) 1 (→) 2 (←) 3 (↓) 4 (↑)	■ ■	<ul style="list-style-type: none"> • When the video pointer display is ON The video pointer moves. • When the image enlargement is ON The enlarged image moves. <ol style="list-style-type: none"> 1: To the right side. 2: To the left side. 3: To the upper side. 4: To the lower side.
Image enlargement	MA	0 (OFF) 1 (ON)	■ ■	Command to enlarge the image. This command doubles the area centered around the video pointer display position.
Freeze	FZ	0 (OFF) 1 (ON)	■ ■	Command to freeze the image.
Local lockout	LL	0 (OFF) 1 (ON)	■ ■	Command to disable the switches on the front operation panel and the wireless remote control.

Function	Command	Parameter	Data	Comments
Gamma switch	GM	0 (1.0) 1 (0.9) 2 (0.8) 3 (0.7) 4 (0.6) 5 (0.5) 6 (0.4) 7 (0.3)	■ ■	Command to switch the gamma set value of the image.
Image rotation	RO	0 (OFF) 1 (90°) 2 (180°) 3 (270°)	■ ■	Command to rotate the image.
Aperture selection	AP	0 (OFF) 1 (ON)	■ ■	Command to switch the modulation (edge emphasis) of the image.
White balance selection	AW	0 (OFF) 1 (AUTO) 2 (ONE-PUSH)	■ ■	Command to switch the mode of the white balance.
Contrast selection	CT	0 (OFF) 1 (ON)	■ ■	Command to switch the contrast settings.
Default	DF	0	■ ■	Command to reset to the initialized mode.
Status request	QS	0 2	■ ■	Command to inquire the status of the equipment.
ROM version	QR	0	■ ■	Command to refer to the ROM version.
Response data Selection 1	SA	0 (OFF) 1 (ON)	■ ■	Command to select the presence of the response to each operation command. Default is ON.
Response data Selection 2	SC	0 (OFF) 1 (ON)	■ ■	Command to add CR [0Dh] to the end of the response data. Default is OFF.

Note: "■ ■" in the data column means that SPACE [20H] should be transmitted twice.

 
○ Data format specifications

This command is executed in the form of 1-command/1 packet. The next command is not accepted until the previous processing is completed.

- The communication command always starts with STX (Start of Text) , and ends with ETX (END of Text) .
- If the communication format or command name is wrong, NAK (Negative Acknowledgement) will be sent from the Presenter as a result of failing to receive correctly.
- When the communication format is correctly received, the Presenter sends ACK (Normal Acknowledgement) .

● **Transmission Command (PC → Visual Presenter)**

Each operation command is executed in ASCII code, and transmitted in a set of 7 bytes as follows:



(Visual Presenter) → ACK

● **Response data format (Visual Presenter → PC)**

All response data is transmitted as ASCII code, and it covers parameter of the table of operation command.

● Status request format (Parameter 0)

S T X	Lighting selection	Input selection	Posi /Nega	Color /B&W	Pointer display	Image enlargement	Freeze	Local Lock out	E T X
-------------	-----------------------	--------------------	---------------	---------------	--------------------	----------------------	--------	-------------------	-------------

● Status request format (Parameter 2)

S T X	Resolution selection	γ selection	Image rotation	Aperture election	White balance selection	Contrast selection	30H	30H	E T X
-------------	-------------------------	----------------	-------------------	----------------------	-------------------------------	-----------------------	-----	-----	-------------

● ROM version

S T X	V 56H	H 48H	G 47H	**H	**H	**H	E T X
-------------	----------	----------	----------	-----	-----	-----	-------------

└── Version ──┘

○ **Transmission specifications**

- Full duplex start-stop sync. mode
- Start bit : 1 bit
- Data bit : 8 bits
- Stop bit : 1 bit
- Parity bit : None
- X parameter : None
- Baud rate (Communication speed) : 9600bps

○ **Connection**

If the RS-232C cable is not correctly connected between the Presenter and the PC, no acknowledgement is transmitted. Connect the RS-232C cable correctly, and fix it firmly with the connector set screws before the operation.

11. TROUBLESHOOTING HINTS

Symptom	Possible cause / countermeasure
No Images on TV monitor	<ul style="list-style-type: none"> • Cable is not properly connected to the video-in terminal of monitor. • The power cord is disconnected from the wall AC outlet. • The plug is disconnected from the power cord receptacle of the Presenter. • The power switch is not turned ON. • Zoom is set at TELE to display only white/black part of the material. • The power switch is turned ON immediately after it is turned OFF. In this case, the Presenter may not start. Wait several seconds after turning OFF the power switch, and then turn ON the power switch.
Out of focus	<ul style="list-style-type: none"> • The object is too close to the lens. Check if it does not stand higher than 10cm (3.9 in.) above the stage surface. • Zoom is set at TELE after focusing at WIDE angle. Focus on the point of max. TELE. • In the auto-focus, focusing is difficult in some cases.
The lamp is not quickly turned ON.	<ul style="list-style-type: none"> • For protection purposes, the lamp is turned ON after preheating for 2 seconds. This is not a fault.
Image is too dark.	<ul style="list-style-type: none"> • The intensity of illumination is not sufficient. Press the upper button [UPPER] on the front panel or the lamp button [LAMP] on the wireless remote control and turn ON the upper lamp. • The AUTO iris level is on the "CLOSE" side. Press the open button [OPEN] on the operation panel or the iris open button [IRIS OPEN] on the wireless remote control.
The image is striped	<ul style="list-style-type: none"> • This may be interference fringes between dots of printed matter and TV scanning lines or CCD pixels, which may be mitigated by changing the projection range. • When using a liquid crystal projector, vertical stripes may appear on the screen. This may be mitigated by manually adjusting the dot clock frequency on the projector side (refer to P. 15).
Brightness tone is out of order.	<ul style="list-style-type: none"> • This may be mitigated by switching gamma setting.

If the trouble still remains after checking the above, consult your dealer or an authorized ELMO service center.

○ Replacement of fluorescent lamp

The lighting lamps (fluorescent lamps) are expendables. When any of them begins to shimmer or be less bright, replace it.

Note: For the replacement of the lamp, consult your dealer from whom you have purchased your Visual Presenter or an authorized ELMO service center.

12. SPECIFICATIONS

● General

Item	Specifications		
Power source	AC100-240V 50Hz/60Hz		
Power consumption	0.7A-0.3A		
Outside dimensions	533mm(W) X 449mm(D) X 185mm(H) (21.0 X 17.7 X 7.3 in) (When folded) 766mm(W) X 449mm(D) X 628mm(H) (30.2 X 7.7 X 24.7 in) (When set up)		
Weight	10.5kg (23.2lbs) (main body only)		
Input selection	Main body / External 2 systems		
Output terminal	RGB output	Mini DSUB 15P connector, female	× 1
	Composite video output	RCA pin jack/75Ω unbalanced (NTSC/PAL)	× 1
	S-video output	Mini DIN 4P connector/75Ω unbalanced (NTSC/PAL)	× 1
	Audio output (stereo)	RCA pin jack/adaptable impedance: 10kΩ or more, -10dB	× 1 pair
	LCD monitor output terminal	Mini DIN 9P connector, female	× 1
Input terminal	RGB input	Mini DSUB 15P connector, female	× 2
	Audio input (stereo)	500mV (rms), impedance: 47kΩ or more, φ3.5mm stereo mini jack	× 2
	Microphone input (monaural)	6.3mm jack/adjustable impedance: 600Ω, -65dB	× 1
Ext. control terminal	RS-232C	DSUB 9P connector, male	× 1
	Mouse	Mini DIN 6P connector, female	× 1
	USB	Type B receptacle	× 1
	Ethernet	8-core modular type (RJ-45)	× 1

● Network Specifications

Applicable browser	Internet Explorer 4.0 or upgrades, Netscape Navigator 4.7 or upgrades	
Image compression system	JPEG	
Image quality	Fixed	
Moving picture display	Resolution	640 × 512
	Frame rate	Max. 3.75fps
Still picture display	Resolution	1280 × 1024, 640 × 512, 320 × 256
Main unit remote operation	Illumination, Zoom, Focus, Iris, Color/B&W, Nega/Posi, Contrast, Contour Correction, RGB	
Physical interface	Standard	10Base-T/100Base-TX, Ethernet × 1
	Connector	8P modular type (RJ-45)
Applicable protocol	IP, ARP, TCP, UDP, ICMP, HTTP, FTP, telnet	

● Main camera

Item	Specifications
Lens	f = 7.2 - 72mm (10 - time zoom), F2.8
Shooting speed	7.5 frames / sec
Shooting area	362mm(H) X 290mm(V) (14.3 X 10.2 in) max. 40mm(H) X 32mm(V) (1.6 X 1.3 in) min.
Limit of focus adjustment	From the stage surface to 100mm (3.9 in) above the stage surface
Zooming	Electromotive (with double speed function)
Focusing	Auto / electromotive / manual
Iris	Auto (level adjustable)
Image pick-up element	1/2 CCD
Total picture elements	1434(H) X 1050(V), 1,500,000 pixels
Effective picture element	1280(H) X 1024(V)
Sync. system	Internal sync.
Resolution	Analog RGB output: Horizontal 800TV lines or more; Vertical 800TV lines or more (SXGA output) Video output: Horizontal 400 TV lines or more
Analog RGB output	SXGA: Horizontal frequency 63.981kHz; Vertical frequency 60.020Hz (1280 X 1024 at 60Hz); Compliant with VESA XGA: Horizontal frequency 48.363kHz; Vertical frequency 60.004Hz (1024 X 768 at 60Hz); Compliant with VESA
Composite video output	Compliant with NTSC/PAL
S-video output	Compliant with NTSC/PAL
White balance	Full auto / one-push / manual
Posi/Nega conversion	Provided
Color/B&W selection	Provided
Image rotation	Provided
Contrast	Provided
Resolution selection	Provided (SXGA / XGA)
Gamma selection	Provided (1.0 / 0.9 / 0.8 / 0.7 / 0.6 / 0.5 / 0.4 / 0.3)
Aperture selection	Provided
Video output selection	Provided (NTSC/PAL)
Freeze	Provided
Electronic image enlargement	Provided (double, can be scrolled)
Pointer	Controllable by mouse (color selectable)

● **Lighting**

Item	Specifications
Upper	High frequency lighting mode, 3-wave-length type fluorescent lamp 6W (Model: FHL6EX-N)
Base	High frequency lighting mode, 3-wave-length type fluorescent lamp Area size: 296mm (W) X 216mm (H) (11.7 X 8.5 in.)

● **Supplied accessories**

Name	Quantity
Power cord (2.5m)	1
Video-audio cable (2m)	1
Scroll mouse	1
Infrared wireless remote controller (RCW-632)	1
Batteries (Type R03, AAA)	2
LCD monitor connection cable	1
VGA cable (D · SUB 15P connector)	1
PC link software "Image Mate"	1
USB cable	1
Ethernet cable (UTP category 5 cross cable)	1
Instruction manual for HV-8000SX	1
Warranty card for HV-8000SX	1

● **Options**

- 5" TFT LCD color monitor kit (LM-5011N), LCD monitor bracket (MS-500)
Accessory Lens (ICL-430)

Note: For the RCA pin, use a pin plug compliant with RC-6703.

Note: The above specifications are subject to change without notice.

Trademark Acknowledgements

VESA is a registered trademark of Video Electronics Standards Association.

VGA, SVGA, XGA and SXGA are trademarks or registered trademarks of International Business Machines Corporation.

ELMO, FOCUSFREE are trademarks of ELMO Co., Ltd.

Windows is a registered trademark of Microsoft Corporation, USA in the U.S. and other countries.

The official name of Windows is Microsoft Windows Operating System.

Netscape is a trademark or a registered trademark of Netscape Communications Corporation in the U.S. and other countries.

All other trademarks are the property of their respective owners.

WARNING:

■ Unauthorized recording of copyrighted slide films, materials, photographs, etc. may infringe on the rights of copyright owners and be contrary to copyright laws.



ELMO CO., LTD.

6-14, Meizen-cho, Mizuho-ku,
Nagoya, 467-8567, Japan

OVERSEAS SUBSIDIARY COMPANIES

- U.S.A.** **ELMO Mfg. Corp.**
1478 Old Country Road, Plainview, NY 11803-5034
Tel:(516)501-1400 Fax:(516)501-0429
E-mail:elmo@elmousa.com
web:http://www.elmousa.com
- Canada** **ELMO Canada Mfg. Corp.**
44 West Drive, Brampton, Ontario L6T 3T6
Tel:(905)453-7880 Fax:(905)453-2391
E-mail:info@elmocanada.com
web:http://www.elmocanada.com
- Germany** **ELMO (Europe) G.m.b.H**
Neanderstr. 18, 40233 Düsseldorf
Tel:(0211)376051 Fax:(0211)376630
E-mail:elmoeurope@AOL.com
web:http://www.elmo.de

Printed in Japan 6X1VHGN02