




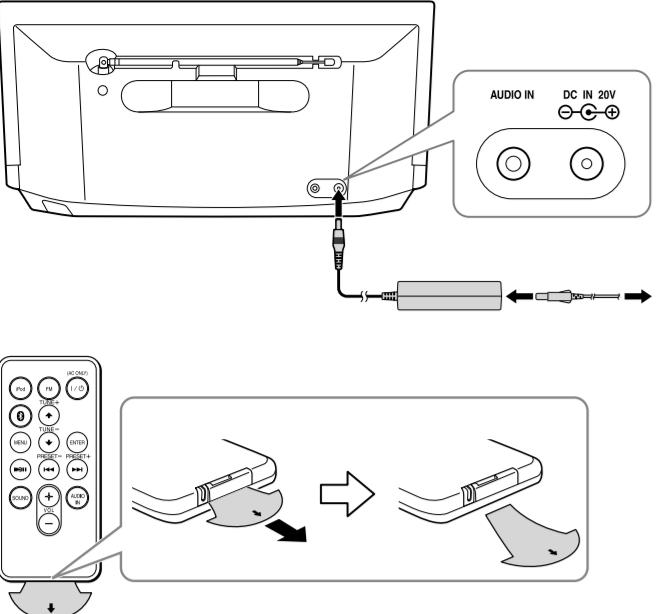





## Startup Guide/Guía de inicio rápido

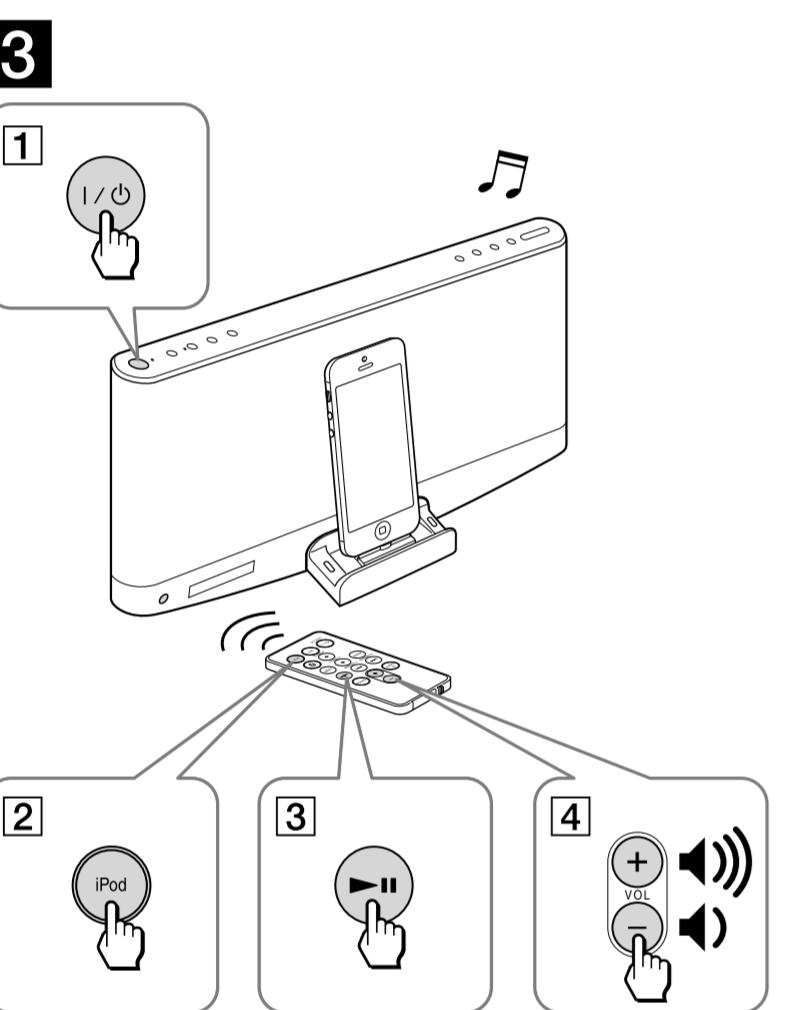

### iPod/iPhone/iPad

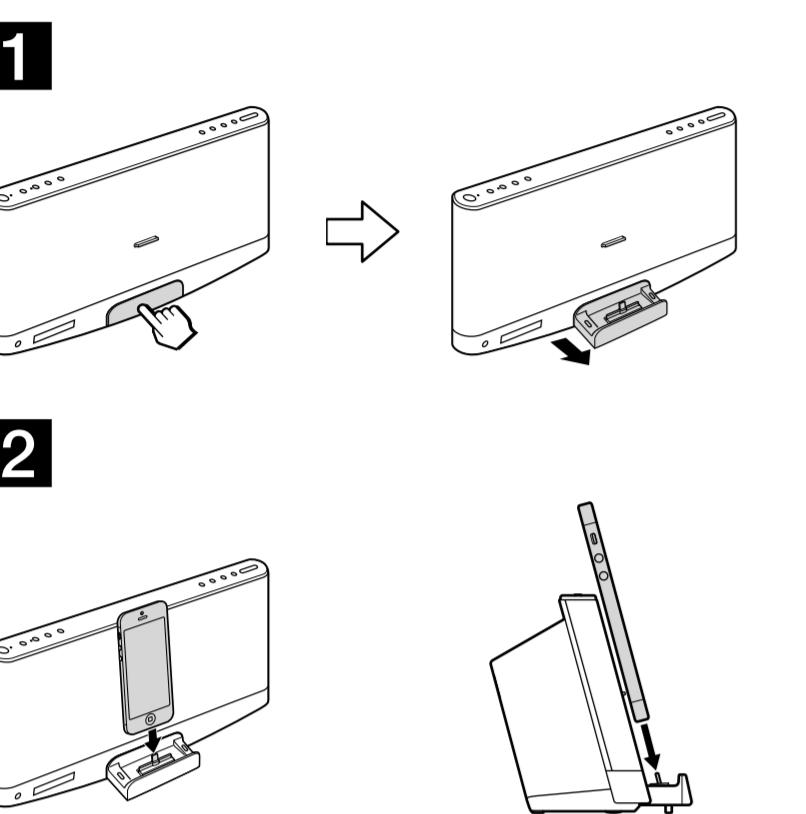


### FM

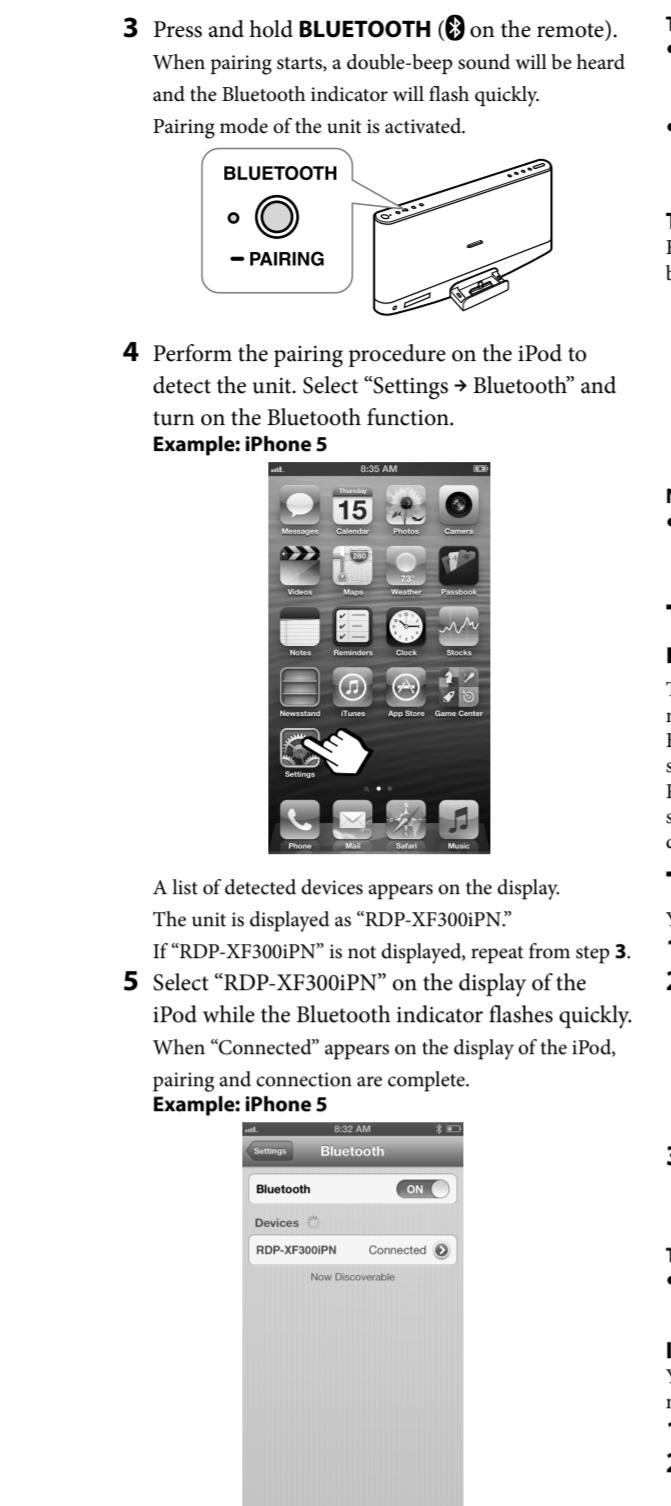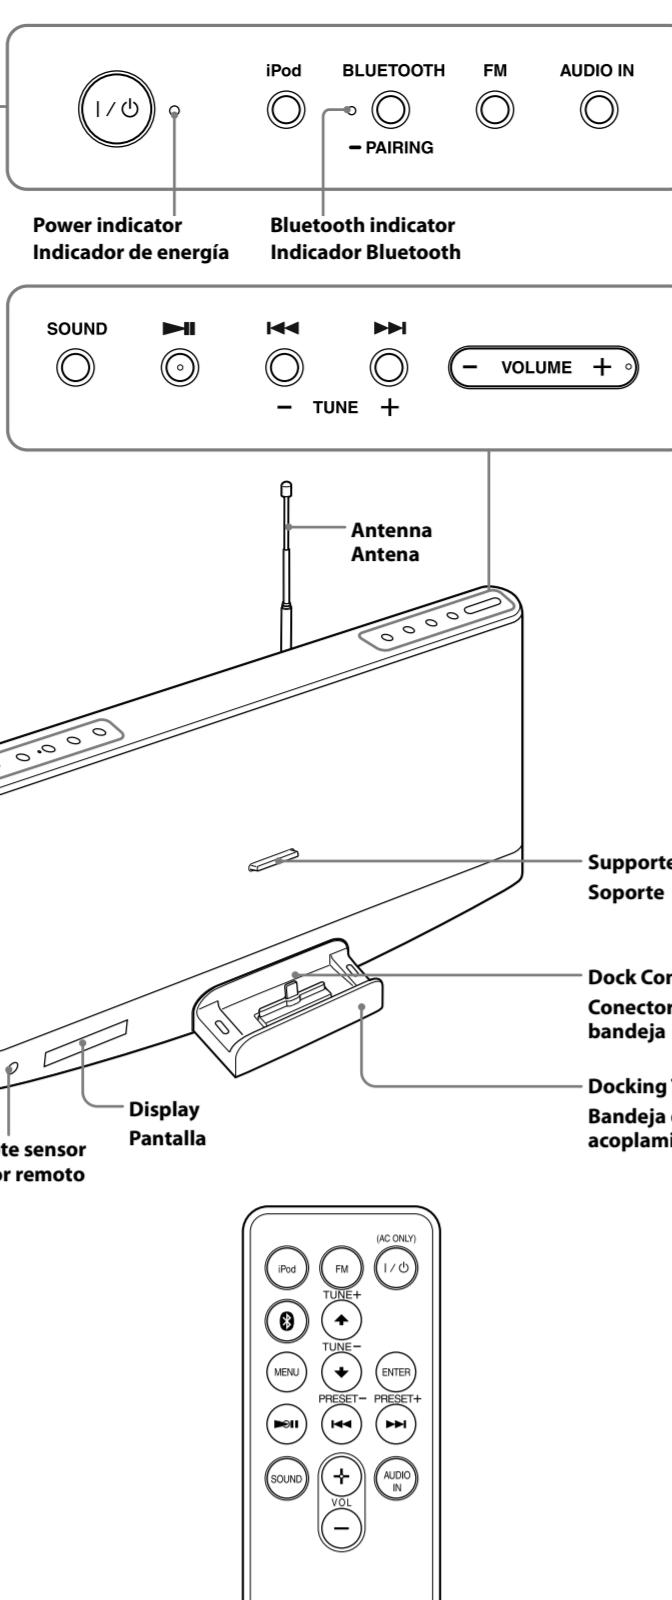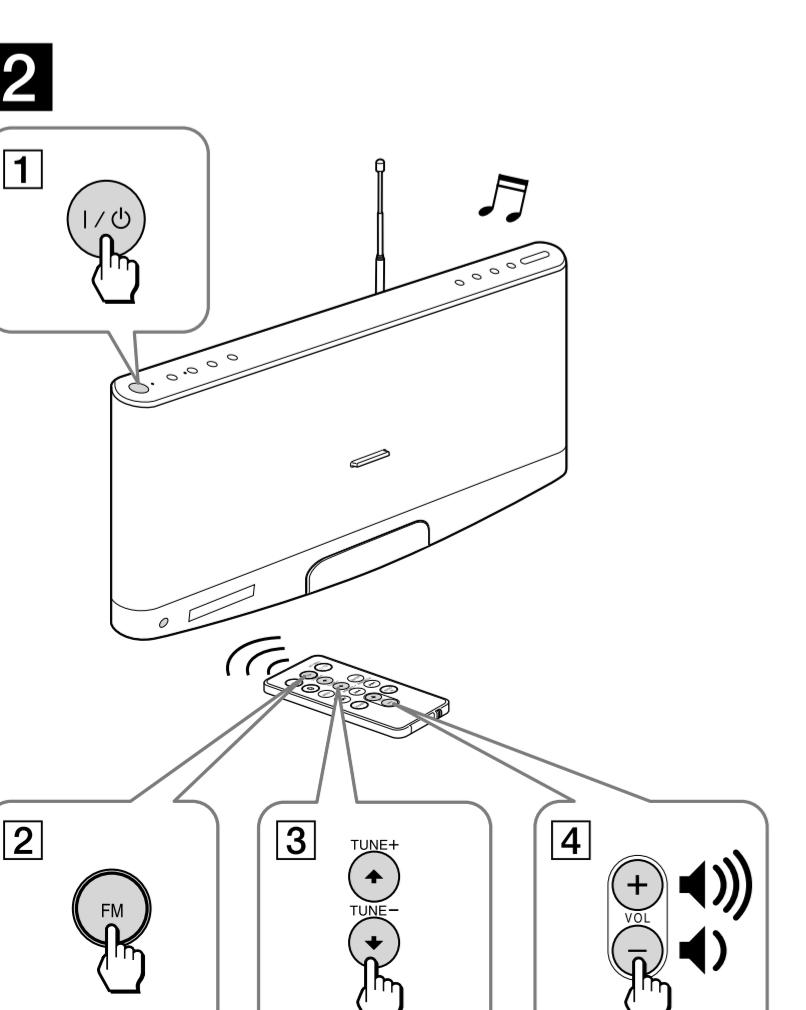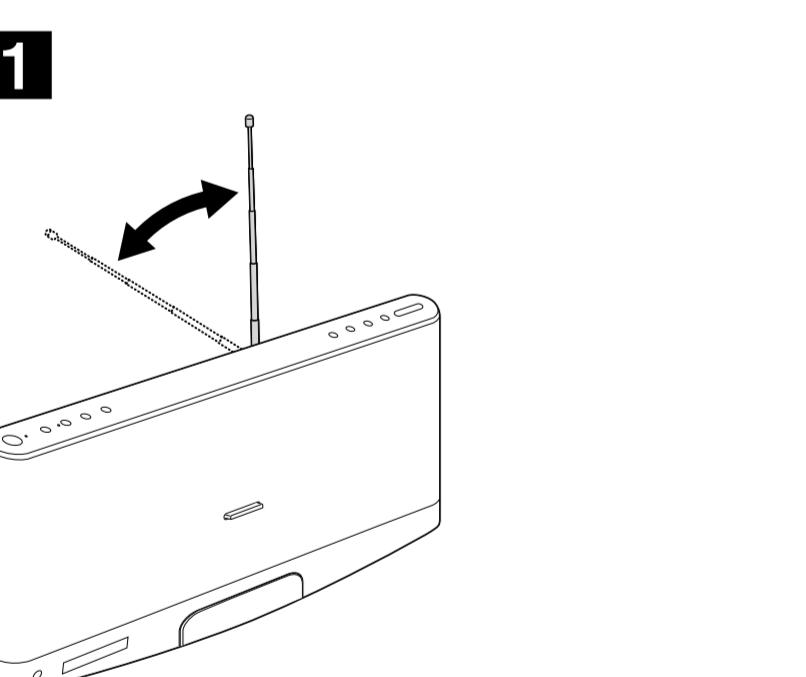

A list of detected devices appears on the display. The unit is displayed as "RDP-XF300PN". If "RDP-XF300PN" is not displayed, repeat from step 3.

5 Select "RDP-XF300PN" on the display of the iPod while the Bluetooth indicator flashes quickly. When "Connected" appears on the display of the iPod, pairing and connection are complete. Example: iPhone 5

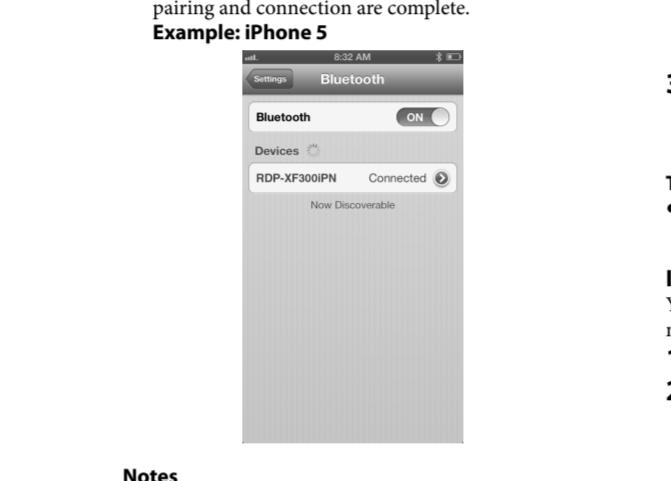

Notes  
• The operation and display may differ depending on the model of iPod and/or software version. For details, refer to the user's guide of the iPod.

• Pairing mode is canceled after about 5 minutes. If pairing mode is canceled halfway, start over from step 3.

• If pairing is not complete, start over from step 3.

• To cancel pairing, press and hold **FM** for 10 seconds.

• While holding down **FM**, also press and hold **FM** on the unit for at least 2 seconds. ("App OFF" appears in the display to show that the App's link function has been deactivated.)

• To re-activate the App's link function, repeat the above steps. ("App ON" appears in the display to show that the App's link function has been activated.)

3 Press **FM**.

The stations are stored in memory from the lower frequencies to the higher ones automatically.

Tip  
• To go back to the previous status, press **FM** instead of **FM** in step 3.

If a station cannot be preset automatically  
You will need to preset a station with a weak signal manually.

1 Tune in the station you want.

2 Press **FM**.

4 PRESET 08

3 Press **FM** or **FM** to select the desired preset number, and press **FM**.

The preset number flashes, then the frequency digits show in the display.

The new station replaces the old one.

Tip  
• To go back to the previous status, press **FM** instead of **FM** in step 3.

To play preset radio stations  
Press **FM** or **FM** to tune in a stored station. If "FREQ. TUNE" appears, press and hold **FM** again.

STEREO 09 87.8

Notes  
• When pairing with a Bluetooth device other than iPod, after step 3, pass code input may be required in the pairing mode. In this case, enter "0000".

• The operation and display may differ depending on the Bluetooth device and/or software version. For details, refer to the user's guide of the Bluetooth device.

To listen to sound  
Turn the iPod and the unit within 10 meters (about 30 ft) of each other for this operation.

Check the following before operating the unit.

• The Bluetooth function of the iPod is on.

• Pairing of the unit and the iPod is complete. If pairing is not complete, perform pairing again. (See "To pair with an iPod".)

1 Press **FM**.

2 Press **BLUETOOTH** (on the remote) to turn on the Bluetooth function.

The last connected iPod will be recognized automatically when the Bluetooth function is turned on.

3 Press **AUDIO IN** to activate the Audio-in function. "AUDIO IN" appears in the display.

4 Turn the connected component on.

5 Play the connected component.

The sound from the connected component is output from the speakers of this unit.

Notes  
• The necessary type of audio connecting cable depends on the optional component. Be sure to use the correct type of cable.

• If the volume level is low, adjust the volume of the unit first. If the volume is still too low, adjust the volume of the connected component.

6 To listen to sound  
Turn the iPod and the unit within 10 meters (about 30 ft) of each other for this operation.

Check the following before operating the unit.

• The Bluetooth function of the iPod is on.

• Pairing of the unit and the iPod is complete. If pairing is not complete, perform pairing again. (See "To pair with an iPod".)

7 To charge an iPod with the rechargeable battery  
With the function for iPod activated, if the battery indicator is level 1 or 2, charging will start. If the battery indicator is level 3 or 4, stop the charging, press and hold **FM** again, and then "FM" (or "FM") will appear on the display. Charging will terminate when the unit turns off automatically. (For details, see "Auto power off".)

• When charging, please do not turn off the unit.

• Do not turn off the unit while it is being charged.

• Remove the iPod when transporting it; otherwise, a malfunction may result.

8 Notes  
• An iPod in a case or cover can be set in this unit. However, if the case or cover interferes with the connection, remove the case or cover before setting the iPod on the Dock Connector.

• When placing or removing the iPod, hold it at the same angle as the Dock Connector on the unit. Do not pull the iPod forward too far.

• When placing or removing the iPod, hold the unit securely.

• Do not twist or bend the iPod, as this may result in connector damage.

• Remove the iPod when transporting it; otherwise, a malfunction may result.

### Operating by wireless music streaming

By using the Bluetooth connection, you can listen to the sound from an iPod or other Bluetooth device with the unit wirelessly.

1 Press **FM**.

2 Press **BLUETOOTH** (on the remote) to turn on the Bluetooth function.

3 Press and hold **BLUETOOTH** and **VOLUME** – at the same time on the unit.

"CLEAR" appears in the display.

Notes  
• You can perform step 3 to clear the list even during Bluetooth connection.

• This operation cannot be performed when the unit is paired.

• Pair with this unit again, delete the model name of this unit from the iPod and perform pairing again. (See "To pair with an iPod".)

### Operating the radio

1 Press **FM**.

2 Press **FM** to activate the radio function. "FM" appears in the display.

3 Set the iPod on the Dock Connector.

The Dock Connector will be tilted slightly.

For details, see "How to handle an iPod".

4 Press **FM**.

5 Press **FM** to activate the function for iPod. "iPod" appears in the display.

6 To pair with an iPod  
Keep the iPod and the unit within 1 meter (3 ft) of each other for this operation.

1 Press **FM**.

2 Press **BLUETOOTH** (on the remote) to turn on the Bluetooth function when the Bluetooth indicator is off.

"Bluetooth" appears in the display.

The unit automatically scans the radio frequencies and stops when it finds a clear station.

If you cannot tune to a station, press **TUNE +** or **TUNE -** repeatedly to change the frequency step-by-step.

When an FM stereo broadcast is received, "STEREO" appears.

7 Frequency digits appear in the display after a short period.

8 Press and hold **FM** until "FREQ. TUNE" appears in the display.

If "PRESET TUNE" appears, press and hold **FM** again.

When using the remote to operate the unit, you can skip this step and directly operate step 4.

9 Press and hold **TUNE +** or **-** until the frequency digits begin to change in the display.

The unit automatically scans the radio frequencies and stops when it finds a clear station.

If you cannot tune to a station, press **TUNE +** or **TUNE -** repeatedly to change the frequency step-by-step.

When an FM stereo broadcast is received, "STEREO" appears.

10 Frequency digits appear in the display.

11 Press **FM**.

12 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

13 Frequency digits appear in the display.

14 Press **FM**.

15 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

16 Frequency digits appear in the display.

17 Press **FM**.

18 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

19 Frequency digits appear in the display.

20 Press **FM**.

21 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

22 Frequency digits appear in the display.

23 Press **FM**.

24 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

25 Frequency digits appear in the display.

26 Press **FM**.

27 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

28 Frequency digits appear in the display.

29 Press **FM**.

30 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

31 Frequency digits appear in the display.

32 Press **FM**.

33 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

34 Frequency digits appear in the display.

35 Press **FM**.

36 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

37 Frequency digits appear in the display.

38 Press **FM**.

39 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

40 Frequency digits appear in the display.

41 Press **FM**.

42 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

43 Frequency digits appear in the display.

44 Press **FM**.

45 The iPod begins to play back.

If the iPod does not start playing back, operate directly on the iPod.

You can operate the connected iPod via this unit or the iPod itself.

46 Frequency digits appear in the display.

47 Press **FM**.</