

mellerware®

makes life easier

LUNA dome kettle



1.8L Capacity

360° Cordless
kettle base

Brushed stainless
steel body




complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
1800W

2 YEAR
GUARANTEE

Model:
22362B

Important Safety Instruction

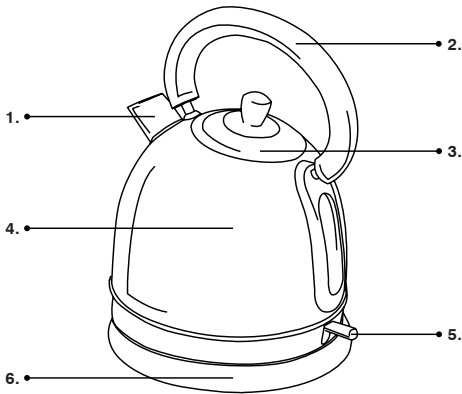

1. Spout
2. Handle
3. Lid
4. Body
5. Switch
6. Base

Please keep this instruction manual in a safe place, along with the warranty card, purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

1. Do not attempt to repair, disassemble or modify the appliance.
2. If the power cable is damaged, it must be repaired by an approved servicecentre to avoid injury.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning us of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.

5. Do not operate this appliance outdoors.
6. The plug must be removed from wall socket before cleaning or moving the appliance.
7. The appliance should be placed on a flat surface when operating to avoid overturning.
8. The kettle must only be used with the base provided.
9. This appliance is intended to be used in households and similar environments such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farm houses.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
10. Do not move the kettle while it is switched on.

Caution

1. Always keep the appliance away from children.
2. Never overfill the kettle, make sure the water level is above the “MIN” mark but below the “MAX” mark.
3. Make sure that the appliance is on a flat and secure surface before being switched on.
4. Make sure that all electrical connections are clean and dry.
5. Make sure the lid is correctly and securely fitted before switching the appliance on.
6. Never leave the filter loose in the kettle.
7. Never remove the filter while the kettle contains hot water.
8. Never fill the kettle while it is on its base. If the base unit becomes wet, unplug it prior to cleaning.
9. Make sure the kettle is disconnected

from the wall socket when it is not in use.

Before Use

1. Read these instructions carefully with the illustrations before using the appliance for the first time.
2. Before connecting the kettle, check that the voltage indicated on the rating label (underneath of base) corresponds with the mains voltage in your home.
3. The kettle will switch off automatically when the water has boiled. You can switch the kettle off manually before boiling by using the switch.
4. After the kettle has switched off automatically (or has been switched off manually) it will need some time to cool down. After 15-20 seconds, the kettle can be switched on again.
5. The kettle is protected against dry-boiling. This happens when the kettle is switched on with insufficient water. The kettle will switch off by means of a safety cut out switch to prevent the element from over heating.
6. If the kettle runs dry while operating, allow to cool down for 15 minutes before refilling with cold water. The safety cut-out will automatically reset.
7. Place the appliance on a stable, flat surface. Ensure that the kettle cannot fall into water.
8. Never immerse the kettle in water. Do not allow water to penetrate the electrical parts inside the kettle.
9. Prevent children from pulling the power cord, or knocking the kettle over.
10. Before cleaning the kettle, make sure the kettle is disconnected from the wall socket and that it has cooled down.
11. The kettle may be cleaned with a damp cloth.
12. Discard the very first water boiled from

this kettle.

13. Only use the base unit supplied with this product. If a replacement is required only approved components must be used.

Operating Instructions

1. Make sure that the filter is pressed into the holes of the lid tongue and fitted correctly.
2. Fill the water into the kettle making sure that the water capacity is not lower than the "MIN" mark and does not exceed the "MAX" mark.
3. Ensure the lid is closed properly.
4. Insert plug into wall socket.
5. Put the kettle body onto the base.
6. Switch the appliance on, making sure that the indicator light is illuminated.
7. When the water is boiled, the appliance will automatically switch off and the indicator light will switch off.
8. If the water has to be reheated, please wait several minutes before reboiling.

Cleaning Instructions:

Always disconnect the kettle from the wall socket when cleaning.

A. Kettle Body Cleaning:

Scaling or furring up is a common problem. A water purifier and periodic cleaning is recommended.

Scaling will damage the function of the heating element and impair the function of the dry boil protector.

- To clean the inside of the kettle, fill with water, then add 200ml of white vinegar and let the mixture boil.
- Unplug the appliance, pour away this mixture.
- Re-clean at least three times with water to remove the particles.

B. Filter Cleaning:

- Take out and place the filter under a tap and rub gently with your fingers.

- Be careful not to use anything that will tear the filter when cleaning.
- b. Dip in a proprietary descaling agent and rub gently then rinse.
- c. Descale your filter at regular intervals in order not to impair the pouring performance of your kettle.

Specification

Voltage:220-240V 50Hz


Power:1850-2200W

Capacity:1.8 L

22362B_


creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 www.creativehousewares.co.za