

Fisher-Price®

Learning Table™

www.fisher-price.com

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for
battery replacement:
Phillips screwdriver
(not included).



Green
square

1-2-3

Laugh & Learn™



2 interactive play modes

1. Learning time


ABC



2. Music fun





Stir the soup bowl	ABC Hear the A-B-C song or a fun phrase
	 Hear a fun song
Press the pizza shape buttons	ABC Learn the colour or shape of the button you pressed or hear a fun sound effect
	 Hear three musical notes – play like a piano
Lift up the napkin	ABC Hear a peek-a-boo greeting
	 Hear a fun tune – flip the napkin down and the music stops
Press the sippy cup	ABC See it magically fill and empty and learn about opposites
	 See it magically fill and empty with fun music or sound effects
Spin the apple, Slide the berries Press the banana	ABC Learn about colours and textures
	 Hear more enjoyable songs
Press the cookie	ABC Hear the numbers counted to 10 in a fun song or hear a fun phrase
	 Hear a another song or a fun sound effect
Twist the salt and pepper shakers	ABC Hear a fun sound effect
	 Hear short song

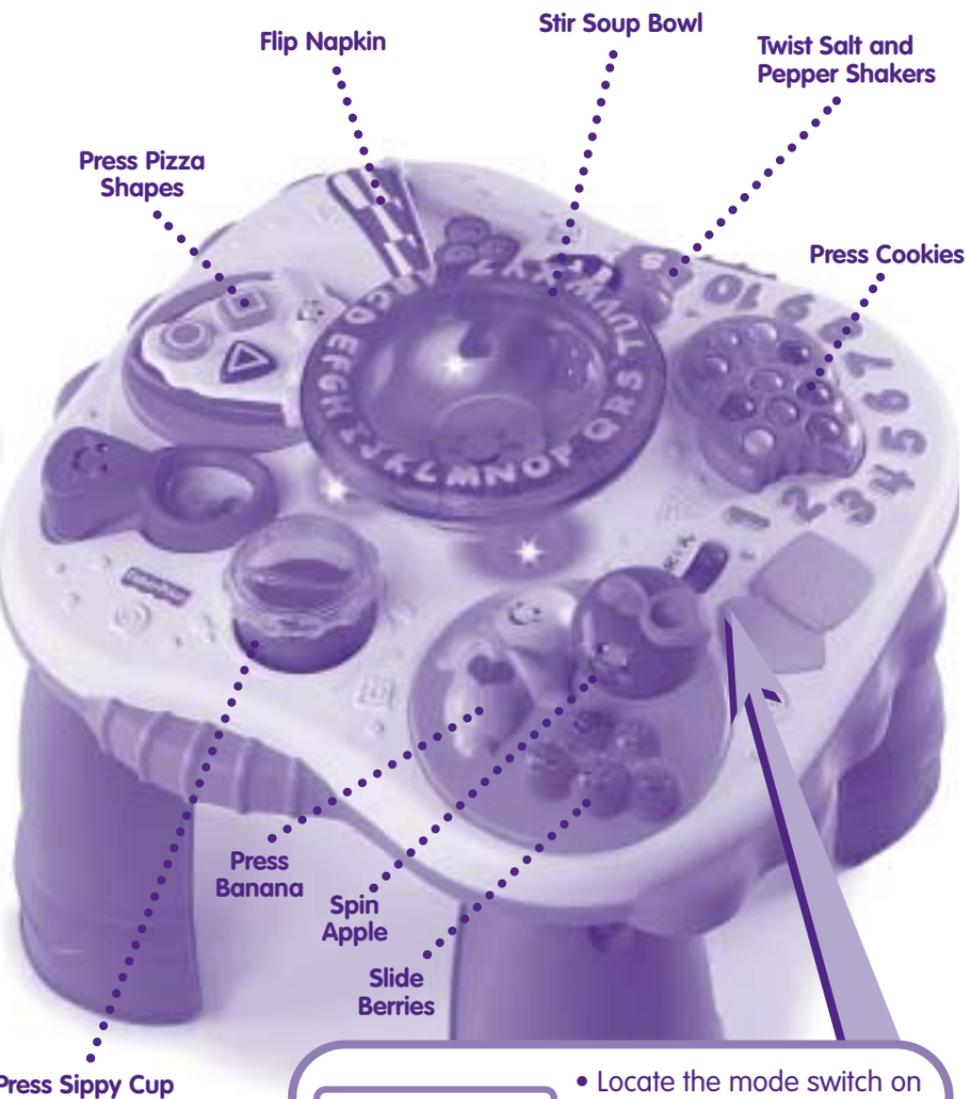

MODE SWITCH

- Locate the mode switch on the top of the toy.
- Slide the mode switch to either learning mode **ABC**, music mode **🎵** or off **O**.
- When your child is finished playing with this toy, slide the mode switch to the off **O** position.

Battery Replacement

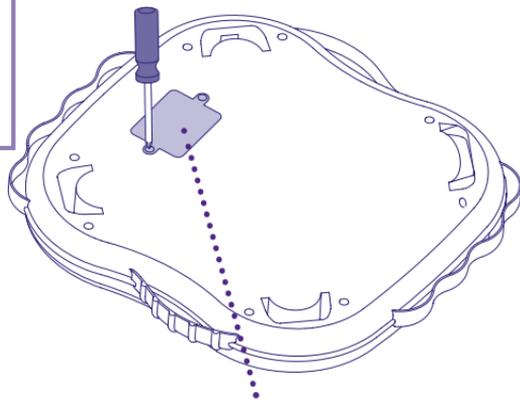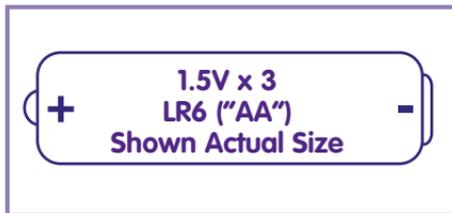

Battery Compartment Door

Note: We recommend replacing the batteries that came with this toy with three, new alkaline LR6 ("AA") batteries.

- Locate the battery compartment on the underside of the tabletop.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three LR6 ("AA") **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer life.


- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembly

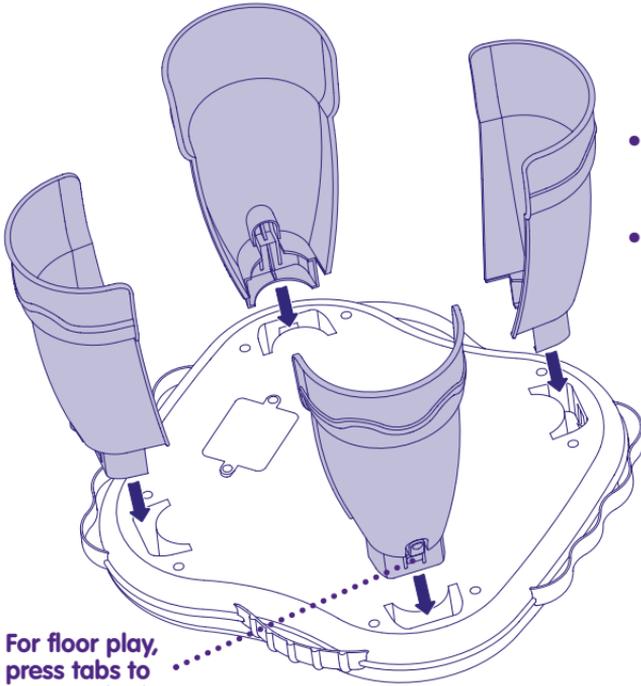

- Turn the tabletop upside down on a soft surface.
- Insert and “snap” the legs into the slots in the tabletop.

For floor play, press tabs to remove the legs.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Questions? We'd like to hear from you!

In Great Britain - Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



Learn each day— through fun, familiar play!

Our Laugh & Learn™ toys build upon babies' innate curiosity and the natural way they learn through everyday experiences. Whether baby is stirring the soup for A-B-C's or pressing the sippy cup to see it fill and empty, the Laugh & Learn™ Learning Table™ provides baby with the opportunity to imitate mom and dad to learn the alphabet, numbers, colours, shapes, words, opposites, actions, textures, manners and more!

The Laugh & Learn™ Learning Table™ has two interactive modes of play – learning time and musical fun. Simply slide the switch and stir, flip, spin, press and twist for a whole new way to play! Snap the legs to the table top for walk around fun or remove them for sit and play fun!

Look for other
Laugh & Learn toys ...



Learning Phone™

G2811



Learning Home™

G2809



Learning Birdbath™

G2807



Learning Puppy™

G2810