

 **BLACK & DECKER®**

POWER-TO-GO RADIO INSTRUCTION MANUAL



Catalog Number PSS100B

Thank you for choosing Black & Decker!
Go to www.BlackandDecker.com/NewOwner
to register your new product

**BEFORE RETURNING THIS PRODUCT
FOR ANY REASON PLEASE CALL
1-800-544-6986**

BEFORE YOU CALL, HAVE THE CATALOG No, AND DATE CODE AVAILABLE. IN MOST CASES, A **BLACK & DECKER** REPRESENTATIVE CAN RESOLVE THE PROBLEM OVER THE PHONE. IF YOU HAVE A SUGGESTION OR COMMENT, GIVE US A CALL. YOUR FEEDBACK IS VITAL TO BLACK & DECKER.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Cat. # PSS100B
August 2007

Form # 90521849
Copyright © 2007 Black & Decker

Printed in China

⚠ GENERAL SAFETY WARNINGS AND INSTRUCTIONS FOR ALL APPLIANCES

READ ALL INSTRUCTIONS

⚠ **WARNING:** Read all instructions before operating product. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- **AVOID DANGEROUS ENVIRONMENTS:** Don't use appliances in damp or wet locations. Don't use appliances in the rain.
- **KEEP CHILDREN AWAY.** All visitors should be kept at a distance from work area.
- **STORE IDLE APPLIANCES INDOORS.** When not in use, appliances should be stored indoors in dry, and high or locked-up place – out of reach of children.
- **DON'T FORCE APPLIANCE.** It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.
- **USE RIGHT APPLIANCE.** Do not use the appliance for any job except that for which it is intended.
- **DRESS PROPERLY.** Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and substantial, non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
- **USE SAFETY GLASSES AND OTHER SAFETY EQUIPMENT.** Use safety goggles or safety glasses with side shields, complying with applicable safety standards and, when needed, a face shield. Also use face or dust mask if operation is dusty. This applies to all persons in the work area. Also use a hard hat, hearing protection, gloves, safety shoes and dust collection systems when specified or required. Safety glasses or the like are available at extra cost at your local dealer or Black & Decker Service Center.
- **DON'T ABUSE CORD.** Never carry appliance by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
- **DON'T OVERREACH.** Keep proper footing and balance at all times.
- **DISCONNECT APPLIANCES.** Disconnect the appliance from the power supply when not in use, before servicing, and when changing accessories such as blades and the like.
- **AVOID UNINTENTIONAL STARTING.** Don't carry plugged-in appliance with finger on switch. Be sure switch is off when plugging in.
- **ELECTRICAL FAULT CIRCUIT INTERRUPTOR** protection should be provided on the circuits or outlets to be used. Receptacles are available having built in electrical fault circuit interruptor protection and may be used for this measure of safety.
- **USE OF ACCESSORIES AND ATTACHMENTS.** The use of any accessory or attachment not recommended for use with this appliance could be hazardous.
Note: Refer to the accessory section of this manual for further details.
- **STAY ALERT.** Watch what you are doing. Use common sense. Do not operate tool when you are tired.
- **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.
- **DO NOT OPERATE** portable electric tools near flammable liquids or in gaseous or explosive atmospheres. Motors in these tools normally spark, and the sparks might ignite fumes.
- **OUTDOOR USE EXTENSION CORDS.** When tool is used outdoors, use only extension cords intended for use outdoors and so marked.

Minimum Gage for Cord Sets				
Volts	Total Length of Cord in Feet			
	0-25 (0-7,6m)	26-50 (7,6-15,2m)	51-100 (15,2-30,4m)	101-150 (30,4-45,7m)
120V				
240V	0-50 (0-15,2m)	51-100 (15,2-30,4m)	101-200 (30,4-60,9m)	201-300 (60,9-91,4m)
Ampere Rating				
More Than	Not more Than	American Wire Gage		
0 -	6	18	16	14
6 -	10	18	16	12
10 -	12	16	14	12
12 -	16	14	12	Not Recommended

- **EXTENSION CORDS.** Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The accompanying table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

SAFETY GUIDELINES / DEFINITIONS

⚠ DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

RISK OF UNSAFE OPERATION. When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Black & Decker strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed. Read and understand all warnings and operating instructions before using any tool or equipment.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING: This product or its power cord contains lead, a chemical known to the State of California to cause cancer and birth defect or other reproductive harm. Wash hands after handling.

⚠ WARNING: SHOCK HAZARD:

- If an extension cord is used, make sure that:
 - a) the pins of extension cord are the same number, size and shape as those in the Charger/Adapter,
 - b) the extension cord is properly wired and in good electrical condition,
 - c) the wire size is large enough for the AC rating of the charger as indicated in the Minimum Gage for Cord Sets Table under General Safety Warnings and Instructions.
- Do not operate unit with damaged cord or plug; or if the unit has received a sharp blow, been dropped, or otherwise damaged in any way. Do not disassemble the unit; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire, and will void warranty.
- Use of an attachment not supplied, recommended or sold by manufacturer specifically for use with this unit may result in a risk of electrical shock and injury to persons.
- NEVER submerge this unit in water; do not expose it to rain, snow or use when wet.
- To reduce risk of electric shock, disconnect the unit from any power source before attempting maintenance or cleaning. Turning off controls without disconnecting will not reduce this risk.
- NEVER IMMERSE THE UNIT IN WATER.

⚠ WARNING: EXPLOSION HAZARD:

- DO NOT use the inverter near flammable materials or in locations that may accumulate flammable fumes or gases.

⚠ CAUTION: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:

- THIS UNIT IS NOT FOR USE BY CHILDREN AND SHOULD ONLY BE OPERATED BY ADULTS.
- This equipment employs components that tend to produce arcs or sparks.
- DO NOT install in compartments containing batteries or flammable materials.
- Use this unit in properly ventilated areas ONLY. Do not block ventilation slots.
- Do not open — there are no user-serviceable parts inside.

- Do not insert foreign objects into the outlets.
- This unit has not been tested for use with medical devices.
- DO NOT expose to extreme heat or flames.
- Although this unit contains a non-spillable battery, it is recommended that unit be kept upright during storage, use and recharging. To avoid possible damage that may shorten the unit's working life, protect it from direct sunlight, direct heat and/or moisture.
- Check unit periodically for wear and tear. Take to a qualified technician for replacement of worn or defective parts immediately.
- **FIRST AID – LCD Liquid Crystal Display:** If liquid crystal comes in contact with your skin: Wash area off completely with plenty of water. Remove contaminated clothing. If liquid crystal gets into your eye: Flush the affected eye with clean water and then seek medical attention. If liquid crystal is swallowed: Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical attention.

CAUTION: TO REDUCE THE RISK OF DAMAGE TO THE UNIT:

- Although this unit contains a non-spillable battery, it is recommended that unit be kept upright during storage, use and recharging. To avoid possible damage that may shorten the unit's working life, protect it from direct sunlight, direct heat and/or moisture.
- Do not plug surge-protected power bars into the unit's 120 VAC outlets.
- Do not connect an AC power source to the 120 VAC outlets.
- Do not connect the unit's AC Charging Adapter to its 120 VAC outlets.

CAUTION: TO REDUCE THE RISK OF DAMAGING RECHARGEABLE APPLIANCES:

Most rechargeable battery-operated appliances use a separate charger or transformer that plugs directly into an AC receptacle and produces a low voltage charging output. However, some chargers for rechargeable batteries can be damaged if connected to this unit.

- Do not use small battery-operated appliances like flashlights, razors and night lights that can be plugged directly into an AC receptacle to recharge with this unit.
- Read And Understand This Instruction Manual Before Using This Unit.

SAVE THESE INSTRUCTIONS

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR THE BLACK & DECKER® POWER-TO-GO RADIO MODEL PSS100B.

⚠ WARNING: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:

- Follow these instructions and those published by the manufacturer of any equipment you intend to use with this unit. Review cautionary markings on these products.

INTRODUCTION

Thank you for choosing the *Black & Decker® Power-To-Go Radio*. Please read this guide carefully before use to ensure optimum performance and avoid damage to the unit or items that you are using it with.

FEATURES


- Built-in 100 Watt Inverter
- Two 120 Volt AC Outlets to power and/or recharge 110/120 volt AC household appliances with Tethered Protective Outlet Covers
- 2 USB Charging Ports to power and/or recharge USB personal devices
- Built-in Input Cable Plug for digital music player
- Digital AM/FM Stereo Tuner
- Dual 4" Speakers W/ 1" Tweeters
- Earphone Jack for private listening
- Built-in Dual Area Lights for night time use
- 120 Volt AC Charging/Power Adapter included with built-in cable storage compartment
- Rechargeable SLA Battery
- Battery Status Icon
- Digital Alarm Clock

- MP3/Digital Music Player Compartment
- Removable Shoulder Strap
- Built-in Antenna

Protective Features

- **Automatic Overload:** Built-in protection against overload — in the event the AC outlets draw more than 100 watts, power to the unit's outlets will automatically shut off.
- **Electrical Fault Circuit Interruptor:** Protects the unit and the user by monitoring the AC output leakage current to the ground.
- **Overheating:** Unit automatically shuts down if it exceeds a safe temperature.
- **Low Battery:** If the battery power level is too low, the AC Power Supply shuts down automatically.

Controls and Indicators

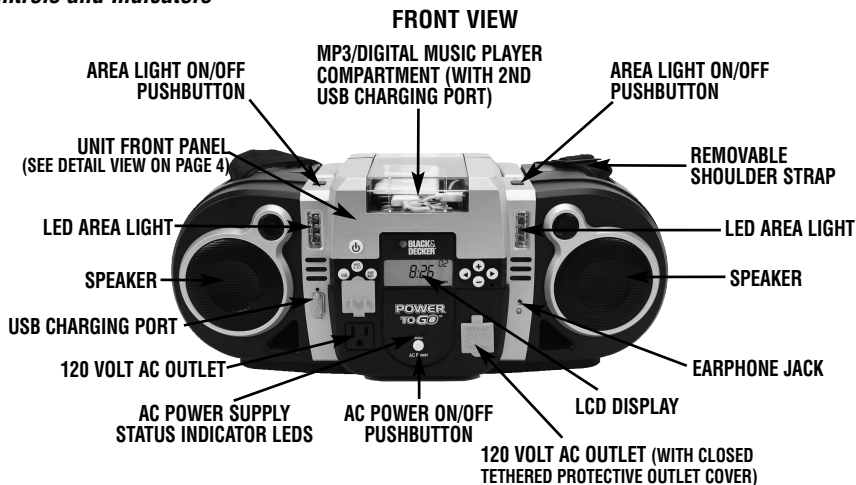

UNIT FRONT PANEL (DETAIL VIEW)



PREPARING THE UNIT FOR FIRST USE

Activating the Unit

Prior to first use, open the cable compartment located on the back of the unit (refer to the illustrations in the "Controls and Features" section) and push and then slide the ON/OFF Switch to the ON Position; this switch enables the unit to respond to the AC Power ON/OFF Pushbutton and Radio ON/OFF Pushbutton (disabling the Radio and Inverter when these are in the OFF position), protecting the battery from draining.

Note: If this switch is turned OFF and back ON again, the unit will lose all the memory settings; therefore the clock, alarm and programmed radio stations will have to be reset.

Charging the Unit

This unit is delivered in a partially charged state – you must fully charge it before using it for the first time before using it in cordless mode. Initial AC charge should be for 24 hours. Follow the directions in the following section.

AC CHARGING/RECHARGING

For maximum battery life, we recommend the unit be kept fully charged at all times. If the battery is allowed to remain in a discharged state, battery life will be shortened.

- MAKE SURE ALL SWITCHES ARE TURNED OFF DURING RECHARGING.
- FULLY CHARGE THE UNIT USING THE SUPPLIED 120 VOLT AC CHARGER/ADAPTER BEFORE FIRST USE.
- Recharge the unit fully after each use.
- Recharge the unit every two months when it has not been used regularly.

Note: Recharging the battery after each use prolongs battery life; frequent discharges between recharges reduces battery life.

120 Volt AC Charging Using the AC Power/Charger Adapter

1. Remove AC Power/Charger Adaptor from the cable storage compartment on the back of the unit.
2. Connect the cube to a standard North American 120 volt wall outlet.
3. Connect the other end of the cord to the jack labeled "DC IN" located inside the cable storage compartment (refer to the illustrations in the "Controls and Features" section).
4. Once fully charged, disconnect the extension cord and return it to the cable storage compartment.

Note: The unit cannot be overcharged using this method.

Viewing Battery Charge Status

Battery Status Icon is located on the LCD Display. When the full icon displays, the unit is fully charged. As power is used, the Icon displays partially (fading from left to right), similar to the charge bars on a cell phone. This Icon will blink while the unit is charging, and display completely again once the unit is returned to full charge.



BATTERY STATUS ICON

POWERING THE UNIT

Corded Use

1. Remove AC Power/Charger Adaptor from the cable storage compartment on the back of the unit.
2. Connect the cube to a standard North American 120 volt wall outlet.
3. Connect the other end of the cord to the jack labeled "DC IN" located inside the cable storage compartment (refer to the illustrations in the "Controls and Features" section).

Note: When the unit is powered using this method, it will also be in "recharge mode" as long as it is connected to an AC wall outlet, so there is no drain on the built-in battery and it will remain charged.

When the unit is powered using this method, the unit's AC power outlets are disabled. To enable the AC power outlets, disconnect the AC Power/Charger Adapter and turn the unit's AC power button ON.

Cordless Use

This unit has a built-in SLA rechargeable battery, simple push the ON/OFF Power Button to turn the unit on and check the Battery Status Icon periodically on the LCD Display to monitor battery (charge) status.

USING THE RADIO

Refer to the enlargement of the Clock/Radio Panel below to locate referenced buttons and controls.

CLOCK/RADIO PANEL (DETAIL VIEW)



By default, the Digital Display shows the time. Pressing the Radio ON/OFF Pushbutton (⏻) toggles between turning the Radio ON and OFF. When it is ON, the LCD Display shows the currently selected frequency and station. Note that the back light will activate automatically whenever any button is pressed.

Press the BAND/MODE Pushbutton to cycle through to the desired frequency (AM, FM or AU [digital audio player] mode).

Use the TUNING Pushbuttons (◀ or ▶) to cycle up or down to the desired station.

Use the VOLUME Pushbuttons (+ or -) to select desired volume. The Digital Display will briefly show selected volume level (from 0 to 30).

Programming Stations Into Memory

Up to 10 stations can be programmed into memory.

- Press the Radio ON/OFF Pushbutton to turn the Radio ON.
- Press the BAND/MODE Pushbutton to cycle through to the desired frequency (AM or FM).
- Use the TUNING Pushbuttons (◀ or ▶) to cycle up or down to the desired station.
- Press and hold the MEM/CLOCK Pushbutton until a blinking "M" appears on the Digital Display.
- Press the TUNING Pushbutton (◀ or ▶) to select the desired memory station number.
- Press the MEM/CLOCK Pushbutton to save the setting.
- Repeat this process (up to 9 times). Stations will be accessed in the order they were programmed in.

To Access User-Programmed Stations:

- Press the Radio ON/OFF Pushbutton to turn the Radio ON.
- Press the BAND/MODE Pushbutton to cycle through to the desired frequency (AM or FM).
- Press the MEM/CLOCK Pushbutton to cycle through all programmed stations until desired memory number appears.

USING THE MP3/DIGITAL MUSIC PLAYER COMPARTMENT/CABLE PLUG

The PSS100B comes with an MP3/Digital Music Player Compartment (top of unit – refer to the illustration to right) and built-in Input Cable Plug. To play music from an MP3 or digital musicPlayer:

1. Lift the MP3/Digital Music Player Compartment cover door up (refer to the illustration to locate).
2. Insert the built-in Input Cable Plug into the headphone jack on audio player device.
3. Open the spring loaded bracket and set the audio player device into place.
4. Release the spring loaded bracket slowly to secure the audio player device.
5. Place the unit into auxiliary input (AU) mode by pressing the BAND/MODE button.
6. Operate the MP3/Digital Music Player as usual.
7. Use the VOLUME Pushbuttons (+ or -) to select desired volume. The Digital Display will briefly show selected volume level (from 0 to 30).



8. Close the MP3/Digital Music Player Compartment cover door.

Note: MP3/Digital Music Player and USB charging cables are not included.

If you want to recharge the MP3/Digital Music Player while it is playing, plug the device's USB charging cable into the USB Power Port inside the MP3/Digital Music Player Compartment and press the USB Charging Port ON/OFF Pushbutton to turn the USB Ports ON.

USING THE 120 VOLT AC POWER SUPPLY

The unit comes with:

1. AC Power ON/OFF Pushbutton — Press pushbutton to turn the AC Power Supply ON and OFF.
2. Dual 120 Volt AC Power Outlets.
3. AC Power Supply Status Indicator LEDs — both green and red light when AC outlet is turned on and ready to use; red light only indicates the inverter is overloaded or faulted.
4. AC Power Electrical Fault Circuit Interruptor— two three-prong outlets for 110/120 volt AC appliances which shut down inverter if leakage or ground fault current is detected.
5. Internal protective circuits including:
 - Overload and over-temperature shutdown (activated if AC output exceeds 100 watts or the unit overheats)
 - AC short-circuit shutdown
 - Low voltage shutdown (shuts down inverter when internal battery voltage is too low)

AC Power Supply Controls, Indicators and Operation

The illustration in the previous section details the AC Power Supply Panel. The AC Power ON/OFF Switch turns the AC power circuitry ON and OFF. It can also be used to reset AC power after shutdown due to overvoltage, overload or over-temperature condition. Both Status Indicator LEDs light when AC power supply is available.

1. Press the AC Power ON/OFF Pushbutton to turn the AC Power Supply ON (both Status Indicator LEDs light).
2. Plug in appliance (rated up to 100 watts) and operate as usual.

Make sure the 120 Volt AC Power Supply is turned OFF when the unit is being recharged or stored.

The standard North American 120 volt AC outlets and USB ports allow simultaneous operation of multiple devices. Simply plug the equipment into the unit's AC outlets and operate normally. ***Ensure that the wattage of all equipment simultaneously plugged into the unit's 120 Volt AC Outlets does not exceed 100 watts continuous.***

Notes: The AC power supply shuts down automatically when the battery voltage level is too low. If only the red Status Indicator LED lights, a fault condition such as an overload, overheating or short circuiting has occurred. Turn the AC Power Supply OFF and unplug the appliance. Wait a few minutes, then turn power back ON.

This unit's 120 volt AC outlets will not operate appliances and equipment that generate heat, such as hair dryers, electric blankets, microwave ovens and toasters.

USING THE USB CHARGING PORTS

One of the USB Charging Ports and the ON/OFF Pushbutton are located on the Unit Front Panel. The second USB Charging Port is located inside the MP3/Digital Music Player Compartment. Refer to the illustrations in the "Controls and Features" and "Using the MP3/Digital Music Player Compartment/Cable Plug" sections to locate.

Note: The USB Charging Port ON/OFF Pushbutton on the Unit Front Panel controls both USB charging ports.

1. Press the USB Charging Port ON/OFF Pushbutton to turn the USB Ports ON. The red USB Power LED will light.
2. Access the USB Charging Ports (one on the front of the unit; the second is located inside the MP3/Digital Music Player Compartment).
3. Plug the USB-powered device into one of the USB Power Ports and operate normally.
4. Press the ON/OFF Pushbutton again to turn the USB Charging Port OFF when you are finished.

Make sure the USB Charging Port ON/OFF Pushbutton is in the OFF position when the unit is being recharged or stored.

Notes: This unit's USB Charging Ports do NOT support data communication. They only provide 5 volts/500 mA DC maximum power (total) to an external USB-powered device.

To conserve battery power, ALWAYS turn the USB Charging Port OFF when not in use.

USING THE DUAL AREA LIGHTS

Each Area Light is controlled by an ON/OFF pushbutton (located above the respective light). Make sure the Area Lights are turned OFF when the unit is being recharged or stored.

USING THE CLOCK/ALARM CLOCK

Programming the Clock and Alarm Clock

Refer to the enlargement of the Clock/Radio Panel on page 5 to locate referenced buttons and controls.

By default, the LCD Display shows the time [hours:minutes (AM/PM)], with the seconds displayed in the upper right corner). Note that the back light will activate automatically whenever any button is pressed.

The Alarm Clock setting can be programmed to respond at the programmed time with either the Alarm sound or automatically turn the Radio ON (to the last station tuned in).

Before using the Alarm Clock feature, you must program in the time. Refer to the enlargement of the Radio Panel to locate referenced buttons and controls. Make sure the Radio ON/OFF Pushbutton is in the OFF position, as this puts the unit in Clock mode (where you can program the clock and alarm time and settings).

Setting Up the Clock

1. Press the MEM/CLOCK Pushbutton once. The numbers on the Digital Display will blink.
2. Press the left arrow (◀) until the correct hour displays (cycling through from AM to PM).
3. Press the right arrow (▶) until the correct minute displays.
4. Press the MEM/CLOCK Pushbutton to save. The unit automatically goes to alarm set-up. Simply press the MEM/CLOCK Pushbutton twice to exit and save all changes without setting up an alarm time.

Setting Up the Alarm Clock

5. To set the Alarm Clock, press the MEM/CLOCK Pushbutton until the numbers on the Digital Display blink and "AL" (Alarm setting) appears at the top of the display.
6. Program in the time for the alarm as outlined in steps 2 through 3 above.
7. When finished, press the MEM/CLOCK Pushbutton once more to save all settings.

Alarm Clock Settings

Pressing the BASS/AL SET cycles through the Alarm/Radio/OFF settings.

To verify that the alarm is activated, check the Digital Display:

If the alarm has been programmed for the beep to sound, the alarm bell symbol (🔔) will show.

If the alarm has been programmed for music to play, the music note symbol (🎵) will show.

TROUBLESHOOTING

General

Problem	Solution
The unit will not power ON	<ul style="list-style-type: none"> • Connect the AC Power/Charger Adapter to the wall outlet securely • Make sure that the batteries are charged (check the Battery Status Icon on the LCD Display). If charge is low, recharge the battery. • Check the ON/OFF Power Switch located in the Cable Storage Compartment on the back of the unit (refer to the "Controls and Indicators" section) and make sure it is in the ON position.
Unit locks up	Switching the ON/OFF Power Switch located in the Cable Storage Compartment on the back of the unit from the OFF and back to the ON position restarts the unit, deletes all user settings and restores the unit to its initialized factory setting.

Auxiliary input

Problem	Solution
Audio player will not play	<ul style="list-style-type: none"> • Assure that the Audio Player is functioning properly (refer to manufacturer's documentation for Troubleshooting). • Connect the built-in Input cable plug into the Audio player securely.
The sound drops out	<ul style="list-style-type: none"> • Reduce the volume. • Connect the AC Power/Charger Adapter to the wall outlet.

Radio

Problem	Solution
Receptions is poor	Reorient the antenna to improve reception.
The sound drops out	<ul style="list-style-type: none"> • Reduce the volume. • Connect the AC Power/Charger Adapter to the wall outlet.
Audio is weak or has poor quality	<ul style="list-style-type: none"> • Connect the AC Power/Charger Adapter to the wall outlet. • Recharge built-in battery.

Inverter (120 Volt AC Power Supply and USB Charging Ports)

Problem	Solution
Only the red AC Status Indicator LED light	<ul style="list-style-type: none"> • Battery voltage below 10.5 volts: recharge unit. • Equipment being operated draws too much power: reduce load to maximum 100 watts. • Inverter in thermal shutdown condition: allow inverter to cool down. Shutdown AC power and ensure that there is adequate ventilation around unit, and load is not more than 100 watts for continuous operation.

CARE AND MAINTENANCE

This product has a sealed lead acid battery that should be kept fully charged. Charge before first use, immediately after each use, and once every two months if not used regularly. Failure to do this may reduce the battery life dramatically.

Accessories

Recommended accessories for use with your tool are available from your local dealer or authorized service center. If you need assistance regarding accessories, please call: 1-800-544-6986.

⚠ WARNING: The use of any accessory not recommended for use with this tool could be hazardous.

Service Information

All Black & Decker Service Centers are staffed with trained personnel to provide customers with efficient and reliable power tool service. Whether you need technical advice, repair, or genuine factory replacement parts, contact the Black & Decker location nearest you. To find your local service location, refer to the yellow page directory under "Tools-Electric" or call: **1-800-544-6986** or visit www.blackanddecker.com.

⚠ CAUTION

If the cord, wires, or cables become damaged, return the entire unit to manufacturer immediately for service/repair.

Battery Replacement/Disposal

It is recommended that the unit be returned to manufacturer for battery replacement. Contact Customer Service, toll-free, at 1-800-544-6986.

Battery Disposal

Contains a maintenance-free, sealed, non-spillable, lead acid battery, which must be disposed of properly. Recycling is required — contact your local authority for information. or imprisonment. For more information on recycling this battery, call toll-free (800) 822-8837. Failure to comply with local, state and federal regulations can result in fines

**⚠ WARNINGS**

Do not dispose of this unit in fire as batteries inside this product may explode or leak.

Do not expose the unit containing a battery to fire or intense heat as it may explode.

Before disposing of the battery, protect exposed terminals with heavy-duty electrical tape to prevent shorting (shorting can result in injury or fire).

FULL TWO-YEAR HOME USE WARRANTY

Black & Decker (U.S.) Inc. warrants this product for two years against any defects in material or workmanship. The defective product will be replaced or repaired at no charge in either of two ways.

The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's

policy for exchanges (usually 30 to 90 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns that are beyond the time set for exchanges.

The second option is to take or send the product (prepaid) to a Black & Decker owned or authorized Service Center for repair or replacement at our option. Proof of purchase may be required. Black & Decker owned and authorized Service Centers are listed under "Tools–Electric" in the yellow pages of the phone directory and on our website www.blackanddecker.com.

This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state or province to province. Should you have any questions, contact the manager of your nearest Black & Decker Service Center. This product is not intended for commercial use.

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, call 1-800-544-6986 for a free replacement.

SPECIFICATIONS

RADIO

Frequency Range

FM:	87.5 – 108 MHz
AM:	530 – 1710 kHz

GENERAL

Speaker

Full Range:	10 cm (4" Inches) dia. 10 Watt Cone Type (2)
Inputs:	AUDIO IN Plug (stereo mini plug)
Outputs:	Headphone Jack (stereo mini jack) for 32 OHM impedance headphones
Power Output:	4 Watts + 4 Watts

AC Power Adapter

Input:	120V AC, 60Hz 22Watts
Output:	12V DC 1.2A

AC Power inverter

Input:	12 Volts DC, 9.5 amps
Output:	120 Volts AC, 100 watts
Frequency:	60Hz
Output Wave Form:	Modified sine wave
Overheat Protection:	Yes
Overload Protection:	Yes
Output Short Circuit Protection:	Yes

USB Charging Ports

Output:	5 volts DC 500 mA (total)
---------	---------------------------

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is not guarantee that interference to radio or television reception, with can be determined by turning the equipment off and on, user is encouraged to try to connect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Imported by
Black & Decker (U.S.) Inc.,
701 E. Joppa Rd.
Towson, MD 21286 U.S.A.



See "Tools–Electric"
– Yellow Pages –
for Service & Sales



BD082807