

PLM102

User's Manual



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.



PLM102

MONITOR:

1.P. Power

2.+. Positive

3.M. Menu

4.-. Negative

5.CH+. V1/V2 Change

6.CH-. Mode Change

CAUTION:

For your safety, please rotate the angle of the display or turn off the display while driving.


R/C Window

SPECIAL STATEMENT:

LCD may have a few bright dots, which is normal for the matrix display technology, and doesn't indicate defects of faults


NOTICE:

- $\bullet \textbf{Please operate instruction manual completely before use;} \\$
- The unit is manufactured with precision elements pay attention to protection against dampness;
- Prevent the hard object from scratchirg LCD surface;
- •High voltage inside non-technical authorized person is not allowed to dismantle the unit.

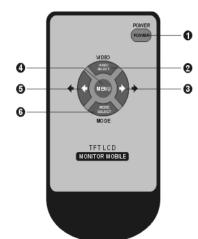

REMOTE CONTROL

 - 1. Power
- 2. V1/V2 Change
- 3. Positive Increase
- 4. Menu
- 5. Negative Decrease
- 6. Mode Selection



SPECIFICATIONS:

- Display size : 10.2", 7" & 5.6
- Dual video inputs
- PAL/NTSC Auto switching
- \bullet Power supply: DC + 12V
- All functions are controlled by remote control
- Anti-glare mirror
- Wide view angle