

41016VI

User manual

Free standing electric
cooker

Dear Customer

Thank you for choosing one of our high-quality products.

With this appliance you will experience the perfect combination of functional design and cutting edge technology.

Convince yourself that our appliances are engineered to deliver the best performance and control - indeed we are setting the highest standards of excellence.

In addition to this you find environmental and energy saving aspects as an integral part of our products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently.

To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Contents

Operating Instructions	5
Safety instructions	5
Description of the Appliance	7
General Overview	7
Control Panel	8
Cooking surface	9
Oven Features	10
Oven accessories	10
Before Using for the first time	11
Setting and changing the time	11
Initial Cleaning	12
Operating the hob	12
Setting the heat setting	13
Switching on the dual fry/cook area	14
Residual heat indicator	14
Using the Oven	14
Switching the Oven On and Off	15
Oven Functions	15
Inserting the Oven Shelf, Baking Tray and Roasting Pan	16
Inserting/Removing the Grease Filter	18
Clock Functions	18
Switching Off the Time Display	19
Uses, Tables and Tips	24
Pans	24
Cooking table	24
Baking	26
Baking table	27
Table for Bakes and Gratins	31
Frozen Ready Meals Table	32
Roasting	32
Roasting table	33
Grill Sizes	34
Grilling table	35
Defrosting	35
Defrosting table	35
Drying	36
Making Preserves	36

Cleaning and Care	37
Outside of the appliance	38
Cooking surface	38
Hob Frame	39
Oven interior	39
Accessories	39
Fat Filter	39
Shelf Support Rails	39
Oven Lighting	40
Oven Ceiling	41
Oven door	42
Oven door glass	44
Pan drawer	47
What to do if ...	48
Disposal	49
Instruction on setting up	50
Setting up	50
Making the appliance level	50
Safety information for the installer	50
Guarantee/Customer Service	52
Service	58

Operating Instructions

Safety instructions

-  This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
 - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
 - 93/68/EEC dated 22.07.1993 CE Marking Directive

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst Using

- This appliance is intended to be used for cooking, roasting and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.

Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discoloration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven enamel.
- After switching off the cooling fan, do not keep uncovered dishes in the oven. Moisture may condense in the oven interior or on the glass doors and may get into the units.




Note on enamel coating


Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law.

Description of the Appliance


General Overview

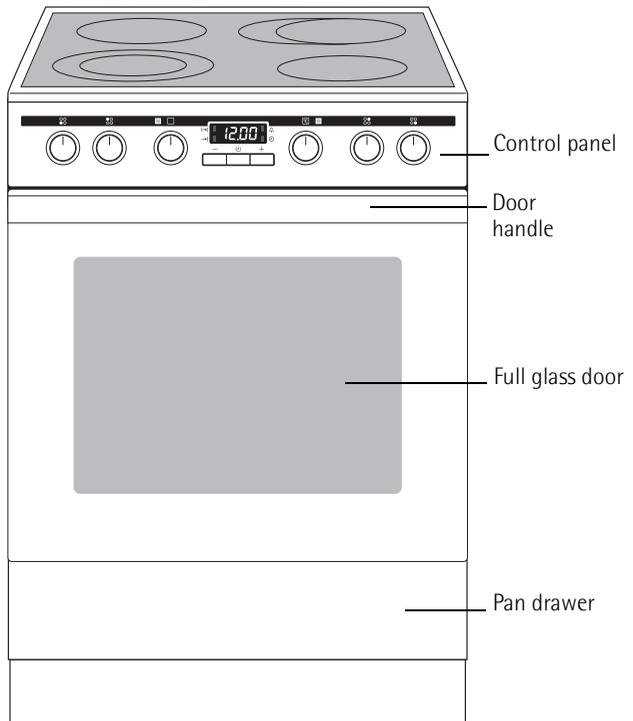


Control Panel

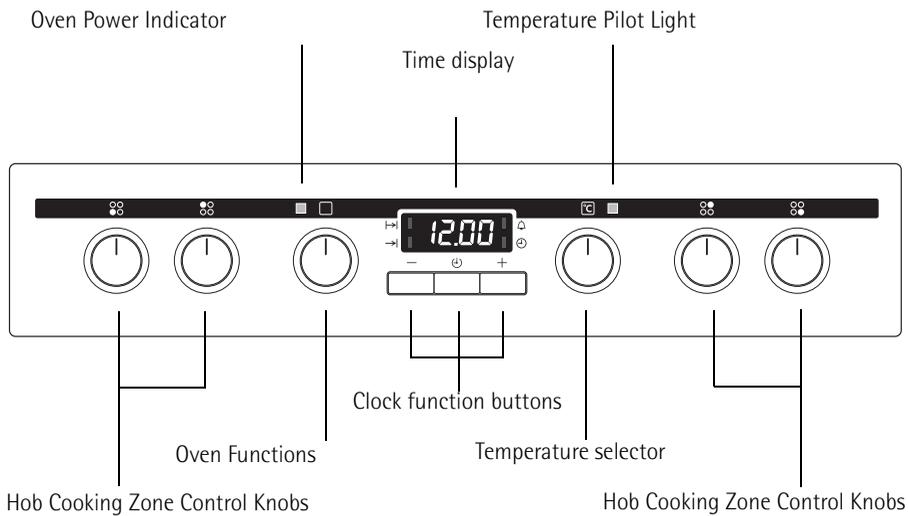

Cooking surface

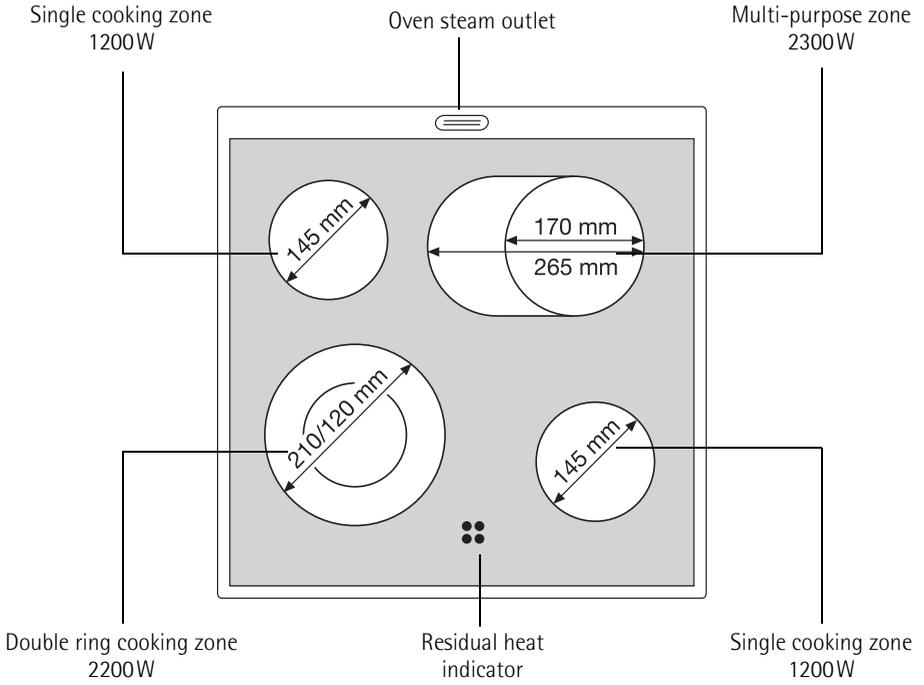


Oven Features

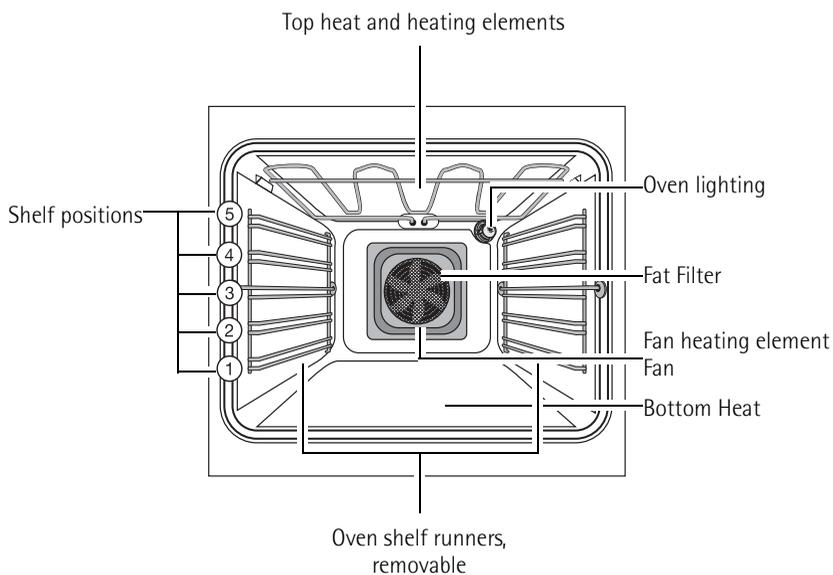

Oven accessories


Oven shelf

For cookware, cake tins, roasts and grilled foods.

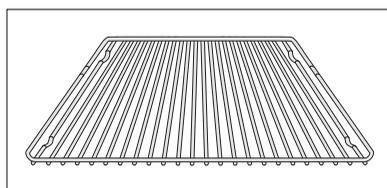


Baking tray

For cakes and biscuits.

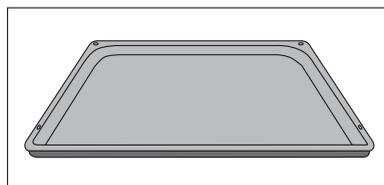

Roasting Pan

For baking and roasting or as a pan for collecting fat.

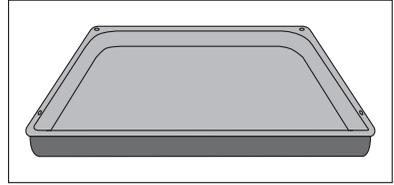



Before Using for the first time

Setting and changing the time

i The oven only operates when the time has been set.


When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time  flashes automatically.

1. To change a time that has already been set, press the Selection  button repeatedly until the function indicator Time  flashes.
2. Using the **+** or **-** button, set the current time.

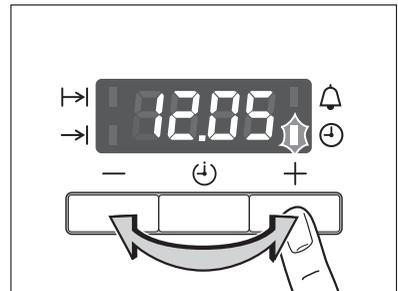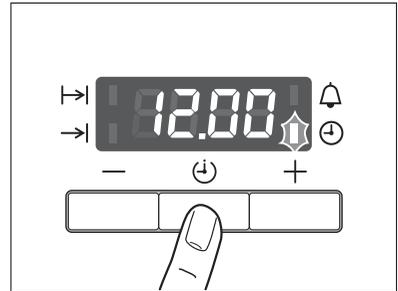

After approx. 5 seconds, the flashing stops and the clock displays the time set.

The appliance is now ready to use.

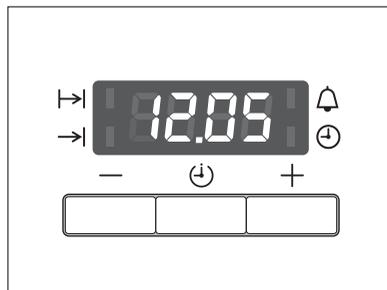

- i** The time can only be changed if no automatic function (Cook time or End time) has been set.

Initial Cleaning

You should clean the appliance thoroughly before using for the first time. Wipe the glass ceramic cooking surface with a damp cloth.

- !** **Attention:** Do not use sharp or abrasive cleaning materials. These could damage the surface.

- i** For appliances with metal fronts, use normal commercially available cleaning agents.

1. Turn the oven functions dial to Light .
2. Remove all accessories and the side rails and clean with warm water and washing-up liquid.
3. Wash the oven in the same way, with warm water and washing-up liquid, and dry it.
4. Wipe the front of the appliance with a damp cloth.

Operating the hob

- i** When a cooking zone is switched on, it may hum briefly. This is a characteristic of all ceramic glass cooking zones and does not impair either the function or the life of the appliance.

Heat settings

- Heat settings can be set from 1-9.
- Intermediate positions are possible for settings 2-7.


1 = lowest output

9 = highest output

= double ring switching




Switch the cooking zone off approx. 5-10 minutes before cooking is finished to make use of the residual heat. This saves electricity.

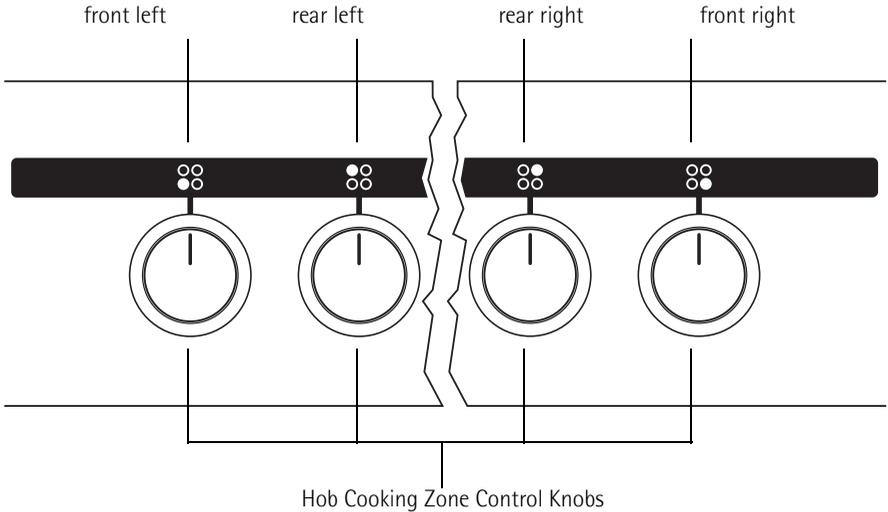


The cooker has **pop-up ring switches**. Press the ring switch to use it. The switch will then pop up.

Setting the heat setting

1. Select the heat setting.

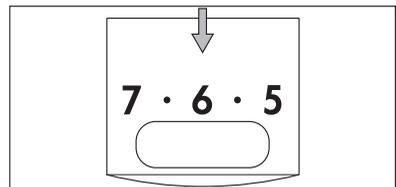

2. To end the cooking process, turn back to the Off position.

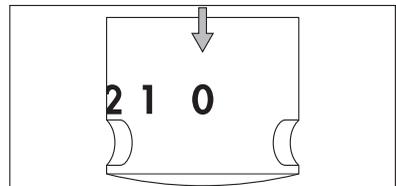


Switching on the dual fry/cook area



The control for the dual fry/cook area is switched on by turning to the right, and cannot be turned past the stop!

1. Turn the dual fry/cook control to the right. Continue turning to Position 9, and onto the  symbol (you will feel a slight resistance). The stop position will then be clearly detectable.
2. Finally, turn back to the desired setting.
3. After cooking, turn back to the OFF position.

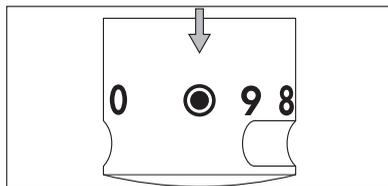

To use the dual fry/cook area again afterwards, the larger ring must be switched back on.

Residual heat indicator

The residual heat indicator lights up, as soon as the corresponding cooking zone is hot.



Danger! Risk of burns from residual heat. After being switched off, the cooking zones need some time to cool down. Look at the residual heat indicator.




Residual heat can be used for melting and keeping food warm.

Using the Oven



The oven is equipped with **retractable buttons** for "Oven functions" and "Temperature selection". To use, press the relevant button. The button then sticks out.

Switching the Oven On and Off

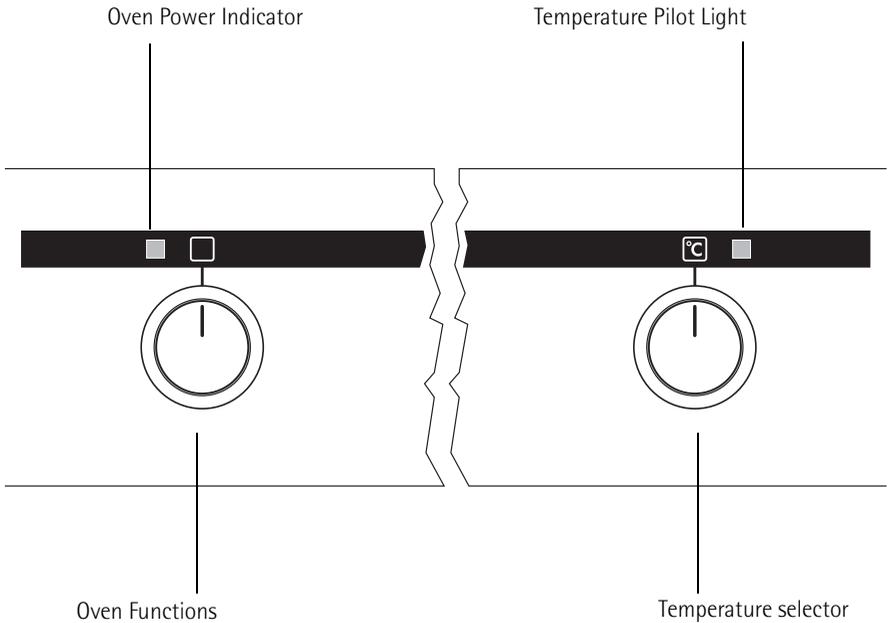

1. Turn the oven functions dial to the desired function.
2. Turn the temperature selector to the desired temperature.
The power indicator is lit as long as the oven is in operation.
The temperature pilot light is lit as long as the oven is heating up.
3. To turn the oven off, turn the oven functions dial and the temperature selector to the Off position.



Cooling fan

The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions

The oven has the following functions:

Oven function	Application	Heating element/fan
 Light	Using this function you can light up the oven interior, e.g. for cleaning.	---
 Fan cooking	For baking on up to three oven levels at the same time. Set the oven temperatures 20-40 °C lower than when using Conventional.	Rear heating element, fan
 AI Gusto Hot air	For baking on one oven level dishes that require more intensive browning and a crispy base . Set the oven temperatures 20-40 °C lower than when using Conventional.	Bottom heat, rear wall heating element, fan
 Conventional	For baking and roasting on one oven level .	Top heat, bottom heat
 Bottom heat	For baking cakes with crispy or crusty bases .	Bottom heat
 Defrost	For defrosting e. g. flans and gateaux, butter, bread, fruit or other frozen foods .	Fan
 Grill	For grilling flat foodstuffs placed in the middle of the grill and for toasting .	Grill
 Dual grill	For grilling flat foodstuffs in large quantities and for toasting .	Grill, top heat
 Rotitherm	For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning .	Grill, top heat, fan

Inserting the Oven Shelf, Baking Tray and Roasting Pan


Shelf runner safety and anti-tip device

As a shelf runner safety device, all insertable components have a small curved indentation at the bottom on the right and left-hand edge.

Always insert insertable components so that this indentation is at the back of the oven interior. This indentation is also important for preventing the insertable components from tipping.

Inserting the baking tray or roasting pan


Push the baking tray or roasting pan between the guide bars of the selected oven level.

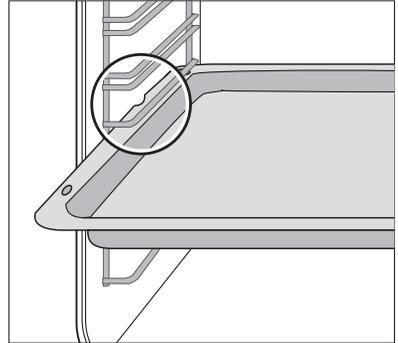

Inserting the oven shelf:

Insert the oven shelf so that the feet point downwards.

Push the oven shelf between the guide bars of the selected oven level.

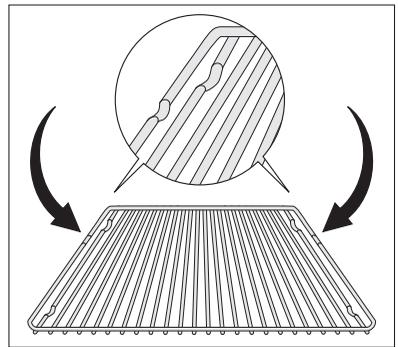


The high rim around the oven shelf is an additional device to prevent cookware from slipping.

Inserting the oven shelf and roasting pan together

Lay the oven shelf on the roasting pan.

Push the roasting pan **between** the guide bars of the selected oven level.

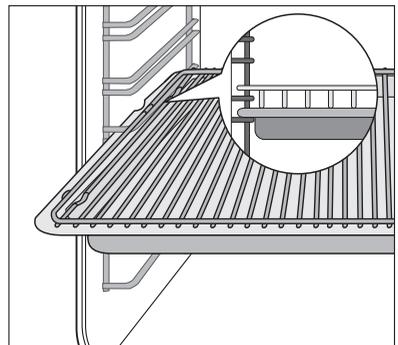

Inserting/Removing the Grease Filter


Only use the grease filter when roasting to protect the rear heating elements from fat splashes.

Inserting the grease filter


Hold the grease filter by the grip and insert the two mounts downwards into the opening on the rear wall of the oven (fan opening).

Taking out the grease filter

Hold the grease filter by the grip and unhook it.

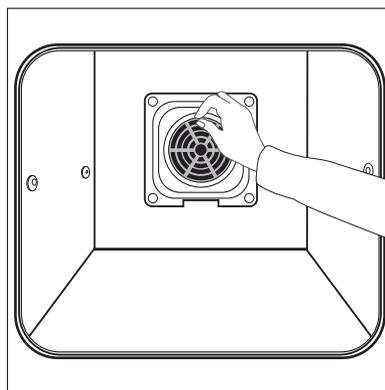

Clock Functions

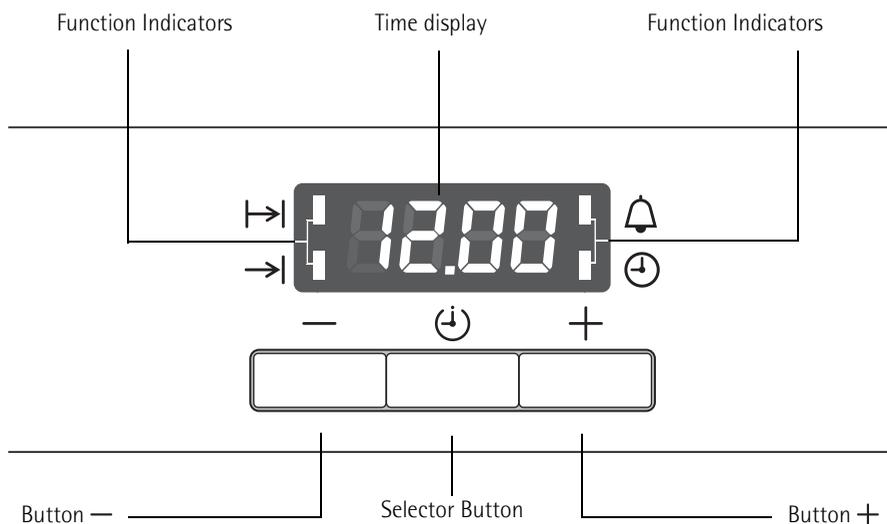

Countdown

To set a countdown. A signal sounds after the time has elapsed. This function does not affect the functioning of the oven.

Cook time

To set how long the oven is to be in use.

End time 

To set when the oven is to switch off again.

Time 

To set, change or check the time

(See also section "Before Using for the First Time").

**How to use the clock functions**

- After a function has been selected, the corresponding function indicator flashes for about 5 seconds. During this period, the desired times can be set using the **+** or **-** button.
- When the desired time has been set, the function indicator continues to flash for approx. 5 seconds. After that the function indicator is then lit. The set time begins to run.
- Press any of the buttons to stop the audible signal.
- The desired oven function and temperature can be selected before or after the clock functions Cook time  and End time  are set.
- When the cooking process is completed, turn the oven function dial and the temperature selector back to the OFF position.

**Switching Off the Time Display**

By switching off the time display you can save energy.

Switching off the time display

Press and hold down any two buttons until the display becomes dark.

Switching on the time display


Hold down any button until the time reappears in the display.




The display can only be switched off if none of the clock functions Cook time , End time  or Countdown  is in use.

Countdown 


1. Press the Selection  button repeatedly until the function indicator Countdown  flashes.

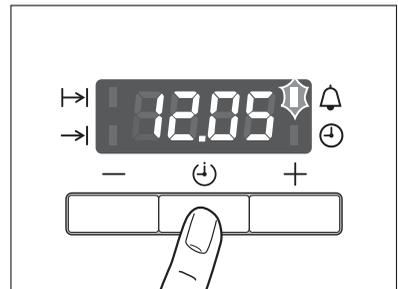


2. Using the $+$ or $-$ button set the desired Countdown (max. 2 hours 30 minutes).

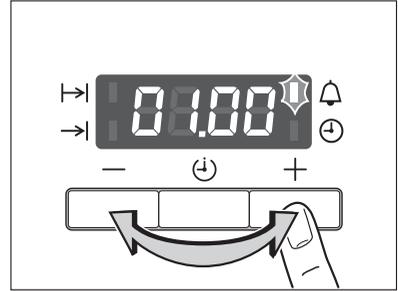

After approx. 5 seconds the display shows the time remaining.
The function indicator Countdown \triangle lights up.

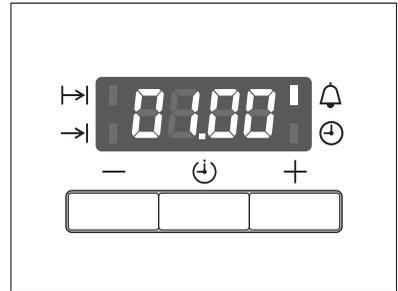


When the time has elapsed, the function indicator flashes and an audible signal sounds for 2 minutes.
The signal can be stopped by pressing any button.

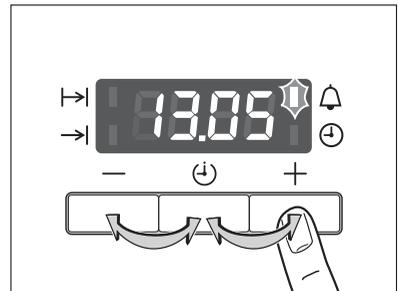


Cook time 

1. Press the Selection  button repeatedly until the function indicator Cook time  flashes.

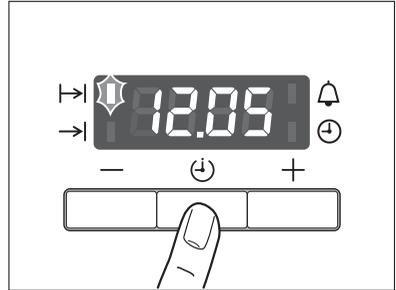

2. Using the $+$ or $-$ button set the desired cooking time.

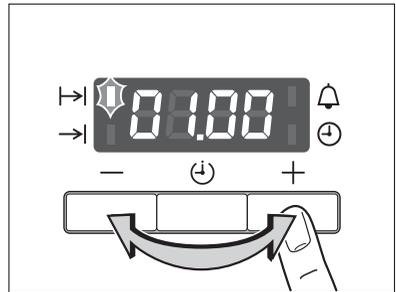


After approx. 5 seconds the display returns to showing the current time. The function indicator Cook time  lights up.




When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.

3. The signal and the programme can be stopped by pressing any button.

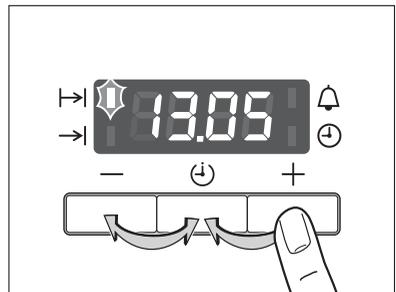

End time 

1. Press the Selection  button repeatedly until the function indicator End time  flashes.

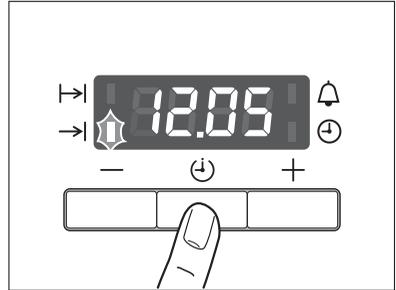

2. Using the $+$ or $-$ button set the desired switch-off time.



After approx. 5 seconds the display returns to showing the current time. The function indicator End time  lights up.



When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.

3. The signal and the programme can be stopped by pressing any button.




Cook time and End time combined




Cook time  and End time  can be used simultaneously, if the oven is to be switched on and off automatically **at a later time**.

- Using the Cook time  function, set the time required for cooking the dish.
In this example, 1 hour.

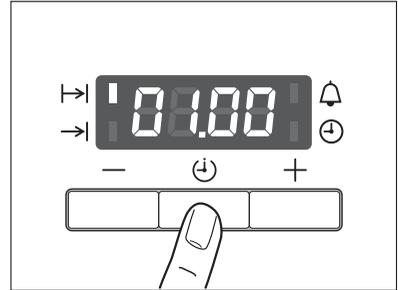


- Using the End time  function, set the time at which the dish should be ready.
In this case 14:05:00.

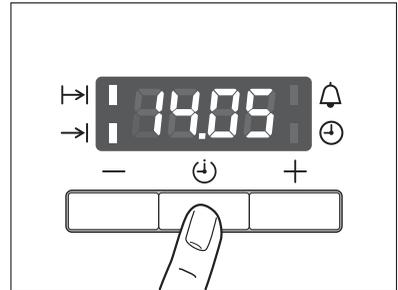

The function indicators Cook time  and End time  light up and the current time is shown in the display.
In this case 12:05.

The oven switches on automatically at the time calculated.
In this case, at 13:05:00.


And switches itself off again when the cooking time entered has elapsed.
In this case, at 14:05.

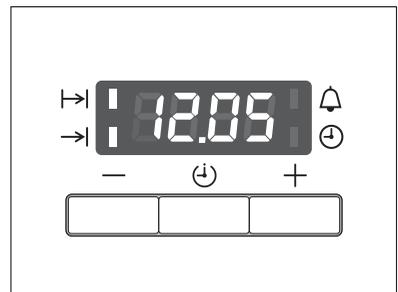

Uses, Tables and Tips



Pans

- You can recognise good pans by their bases. The base should be as thick and flat as possible.
- Pay particular attention when buying new pans to the diameter of the base. Manufacturers often give only the diameter of the upper rim.
- Pots with aluminium or copper bases can cause metallic discolouring on the ceramic glass surface, which is very difficult or impossible to remove.
- Do not use cast iron pans or pans with a rough, burred or damaged base. This can produce permanent scratching if the pan is slid across the surface.
- When cold, pan bases are normally bowed slightly inwards (concave). They should never be bowed outwards (convex).
- If you wish to use special types of pan (e.g. a pressure cooker, simmering pan, wok, etc.), please observe the manufacturer's instructions.

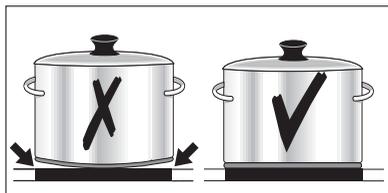

Energy saving tips

- Always position pots and pans before switching on the cooking zone.
- Whenever possible always position the lids firmly on pots and pans to cover completely.
- Switch off the cooking zones before the end of the cooking time to use the residual heat such as to keep foods warm or for melting.
- The base of the pan should be the same size as the cooking zone.

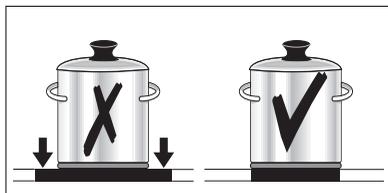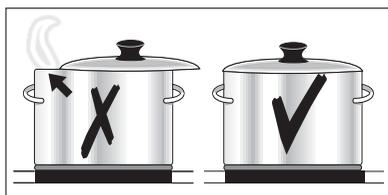

Cooking table

The information given in the following table is for guidance only.

Heat setting	Cooking-process	suitable for	Cooking time	Tips/Hints
0		Residual heat, Off position		
1	Keeping food warm	Keeping cooked foods warm	as required	Cover
1-2	Melting	Hollandaise sauce, melting butter, chocolate, gelatine	5-25 mins.	Stir occasionally
	Solidifying	Fluffy omelettes, baked eggs	10-40 mins.	Cook with lid on
2-3	Simmering on low heat	Simmering rice and milk-based dishes Heating up ready-cooked meals	25-50 mins.	Add at least twice as much liquid as rice, stir milk dishes part way through cooking
3-4	Steaming Braising	Steaming vegetables, fish braising meat	20-45 mins.	With vegetables add only a little liquid (a few table-spoons)
4-5	Boiling	Steaming potatoes	20-60 mins.	Use only a little liquid, e. g.: max. 1/4 l water for 750 g potatoes
		Cooking larger quantities of food, stews and soups	60-150 mins.	Up to 3 l liquid plus ingredients
6-7	Gentle Frying	Frying escalopes, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	Steady frying	Turn halfway through cooking
7-8	Heavy Frying	Hash browns, loin steaks, steaks, Flädle (pancakes for garnishing soup)	5-15 mins. per pan	Turn halfway through cooking
9	Boiling Searing Deep frying	Boiling large quantities of water, cooking pasta, searing meat (goulash, pot roast), deep frying chips		



We recommend when boiling or searing foods using the highest heat setting at first and then letting foods requiring a longer cooking time finish cooking on the desired heat setting.



Overheated fats and oils can ignite quickly. If you are cooking foods in fat or oil (e.g. chips), remain nearby.

Baking

Oven function: Fan cooking  or Conventional 

Baking tins


- For Conventional  dark metal and non-stick tins are suitable.
- For Fan cooking  bright metal tins are also suitable.

Oven levels

- Baking with Conventional  is possible on one oven level.
- With Fan cooking  you can bake on up to 3 baking trays at the same time:


1 baking tray:

e.g. oven level 3

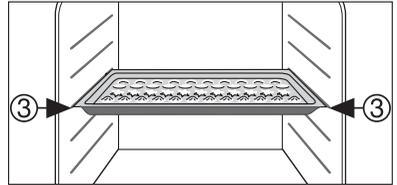


1 cake tin:

e.g. oven level 1

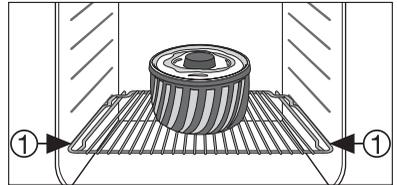


2 baking trays:

z. g., oven levels 1 and 3

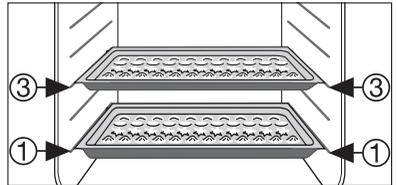

3 baking trays:

oven levels 1, 3 and 5

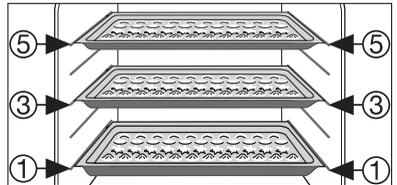

General Instructions

- Insert the tray with the bevel at the front.
- With Conventional  or Fan cooking  you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the Baking Tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.

- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry, dough or mixture, the amount and the type of baking tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or in tins on more than one level, baking time may be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.
- Your new oven may bake or roast differently to your previous appliance. So adapt your normal settings (temperature, cooking times) and oven shelf levels to the recommendations in the following tables.



With longer baking times, the oven can be switched off about 10 minutes before the end of baking time, to make use of the residual heat.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

Baking on one oven level

Type of baking	Oven function	Oven level	Temperature °C	Time Hr: Mins.	
Baking in tins					
Ring cake or brioche		Fan cooking	1	150-160	0:50-1:10
Madeira cake/fruit cakes		Fan cooking	1	140-160	1:10-1:30
Sponge cake		Fan cooking	1	140	0:25-0:40
Sponge cake		Conventional	1	160	0:25-0:40

Type of baking		Oven function	Oven level	Temperature °C	Time Hr: Mins.
Flan base - short pastry		Fan cooking	3	170-180 ¹⁾	0:10-0:25
Flan base - sponge mixture		Fan cooking	3	150-170	0:20-0:25
Apple pie		Conventional	1	170-190	0:50-1:00
Apple pie (2 tins Ø20cm, diagonally off set)		Fan cooking	1	160	1:10-1:30
Apple pie (2 tins Ø20cm, diagonally off set)		Conventional	1	180	1:10-1:30
Savoury flan (e. g. quiche lorraine)		Fan cooking	1	160-180	0:30-1:10
Cheesecake		Conventional	1	170-190	1:00-1:30
Cakes/pastries/breads on baking trays					
Plaited bread/bread crown		Conventional	3	170-190	0:30-0:40
Christmas stollen		Conventional	3	160-180 ¹⁾	0:40-1:00
Bread (rye bread) -first of all -then		Conventional	1	230 ¹⁾ 160-180	0:25 0:30-1:00
Cream puffs/eclairs		Conventional	3	160-170 ¹⁾	0:15-0:30
Swiss roll		Conventional	3	180-200 ¹⁾	0:10-0:20
Cake with crumble topping (dry)		Fan cooking	3	150-160	0:20-0:40
Buttered almond cake/sugar cakes		Conventional	3	190-210 ¹⁾	0:15-0:30
Fruit flans (made with yeast dough/sponge mixture) ²⁾		Fan cooking	3	150	0:35-0:50
Fruit flans (made with yeast dough/sponge mixture) ²⁾		Conventional	3	170	0:35-0:50
Fruit flans made with short pastry		Fan cooking	3	160-170	0:40-1:20
Yeast cakes with delicate toppings (e. g. quark, cream, custard)		Conventional	3	160-180 ¹⁾	0:40-1:20
Pizza (with a lot of topping) ²⁾		Fan cooking	1	180-200 ¹⁾	0:30-1:00
Pizza (thin crust)		Fan cooking	1	200-220 ¹⁾	0:10-0:25
Unleavened bread		Fan cooking	1	200-220	0:08-0:15
Tarts (CH)		Fan cooking	1	180-200	0:35-0:50
Biscuits					

Type of baking	Oven function	Oven level	Temperature °C	Time Hr: Mins.
Short pastry biscuits	 Fan cooking	3	150-160	0:06-0:20
Viennese whirls	 Fan cooking	3	140	0:20-0:30
Viennese whirls	 Conventional	3	160 ¹⁾	0:20-0:30
Biscuits made with sponge mixture	 Fan cooking	3	150-160	0:15-0:20
Pastries made with egg white, meringues	 Fan cooking	3	80-100	2:00-2:30
Macaroons	 Fan cooking	3	100-120	0:30-0:60
Biscuits made with yeast dough	 Fan cooking	3	150-160	0:20-0:40
Puff pastries	 Fan cooking	3	170-180 ¹⁾	0:20-0:30
Rolls	 Fan cooking	3	160 ¹⁾	0:20-0:35
Rolls	 Conventional	3	180 ¹⁾	0:20-0:35
Small cakes (20per tray)	 Fan cooking	3	140 ¹⁾	0:20-0:30
Small cakes (20per tray)	 Conventional	3	170 ¹⁾	0:20-0:30

1) Pre-heat the oven

2) Use the drip tray or roasting tray

Baking on more than one oven level

Type of baking	Fan cooking 	Fan cooking 	Temperature in °C	Time Hours: Mins.
	Shelf positions from bottom			
	2 levels	3 levels		
Cakes/pastries/breads on baking trays				
Cream puffs/Eclairs	1 / 4	---	160-180 ¹⁾	0:35-0:60
Dry streusel cake	1 / 3	---	140-160	0:30-0:60
Biscuits/small cakes/pastries/rolls				
Short pastry biscuits	1 / 3	1 / 3 / 5	150-160	0:15-0:35
Viennese whirls	1 / 3	1 / 3 / 5	140	0:20-0:60
Biscuits made with sponge mixture	1 / 3	---	160-170	0:25-0:40
Biscuits made with egg white, meringues	1 / 3	---	80-100	2:10-2:50
Macaroons	1 / 3	---	100-120	0:40-1:20
Biscuits made with yeast dough	1 / 3	---	160-170	0:30-0:60

Type of baking	Fan cooking 	Fan cooking 	Temperature in °C	Time Hours: Mins.
	Shelf positions from bottom			
	2 levels	3 levels		
Puff pastries	1 / 3	---	170-180 ¹⁾	0:30-0:50
Rolls	1 / 4	---	160	0:30-0:55
Small cakes (20 per tray)	1 / 4	---	140 ¹⁾	0:25-0:40

1) Pre-heat the oven

Tips on Baking

Baking results	Possible cause	Remedy
The cake is not browned enough underneath	Wrong oven level	Place cake lower
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the mixture	Use less liquid. Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher.
	Baking time too long	Set a shorter baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
	Grease filter is inserted	Take out the grease filter
Cake does not cook in the baking time given	Temperature too low	Use a slightly higher oven setting
	Grease filter is inserted	Take out the grease filter

Table Al Gusto Hot air 

Type of baking	Shelf position	Temperature °C	Time Hr: Mins.
Pizza (thin crust)	1	180 - 200 ¹⁾	20 - 30
Pizza (with a lot of topping)	1	180 - 200	20 - 30
Tarts	1	180 - 200	45 - 60
Spinach flan	1	160 - 180	45 - 60
Quiche Lorraine	1	170 - 190	40 - 50
Quark flan, round	1	140 - 160	60 - 90
Quark flan on tray	1	140 - 160	50 - 60
Apple cake, covered	1	150 - 170	50 - 70
Vegetable pie	1	160 - 180	50 - 60
Unleavened bread	1	250 - 270 ¹⁾	10 - 20
Puff pastry flan	1	160 - 180 ¹⁾	40 - 50
Flammekuchen (Pizza-like dish from Alsace)	1	250 - 270 ¹⁾	12 - 20
Piroggen (Russian version of calzone)	1	180 - 200 ¹⁾	15 - 25

1) Pre-heat the oven

Table for Bakes and Gratins

Dish	Oven function	Shelf position	Temperature °C	Time Hr: Mins.	
Pasta bake		Conventional	1	180-200	0:45-1:00
Lasagne		Conventional	1	180-200	0:25-0:40
Vegetables au gratin ¹⁾		Fan cooking	1	160-170	0:15-0:30
Baguettes topped with melted cheese ¹⁾		Fan cooking	1	160-170	0:15-0:30
Sweet bakes		Conventional	1	180-200	0:40-0:60
Fish bakes		Conventional	1	180-200	0:30-1:00
Stuffed vegetables		Fan cooking	1	160-170	0:30-1:00

1) Pre-heat the oven

Frozen Ready Meals Table

Food to be cooked	Oven function	Shelf position	Temperature °C	Time
Frozen pizza		Conventional	3	as per manufacturer's instructions
Chips ¹⁾ (500 g)		Fan cooking	3	200-220
Baguettes		Conventional	3	as per manufacturer's instructions
Fruit flans		Conventional	3	as per manufacturer's instructions

1) Comments: Turn chips 2 or 3 times during cooking

Roasting

Oven function: Conventional  **or Rotitherm** 

Roasting dishes

- Any heat-resistant ovenware is suitable to use for roasting (please read the manufacturer's instructions).
- Large roasting joints can be roasted **directly in the roasting tray or on the oven shelf with the roasting tray placed below it.**
- For all lean meats, we recommend **roasting these in a roasting tin with a lid.** This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid.**



Tips on using the roasting chart

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1 kg and above in the oven.**
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting pan.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).

- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.
- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Beef						
Pot roast	1-1.5 kg		Conventional	1	200-250	2:00-2:30
Roast beef or fillet	per cm. of thickness		Rotitherm	1	190-200 ¹⁾	per cm. of thickness
- rare						0:05-0:06
- medium						0:06-0:08
- well done						0:08-0:10
Pork						
Shoulder, neck, ham joint	1-1.5 kg		Rotitherm	1	160-180	1:30-2:00
Chop, spare rib	1-1.5 kg		Rotitherm	1	170-180	1:00-1:30
Meat loaf	750 g-1 kg		Rotitherm	1	160-170	0:45-1:00
Porkknuckle (pre-cooked)	750 g-1 kg		Rotitherm	1	150-170	1:30-2:00
Veal						
Roast veal	1 kg		Rotitherm	1	160-180	1:30-2:00
Knuckle of veal	1.5-2 kg		Rotitherm	1	160-180	2:00-2:30
Lamb						
Leg of lamb, roast lamb	1-1.5 kg		Rotitherm	1	150-170	1:15-2:00
Saddle of lamb	1-1.5 kg		Rotitherm	1	160-180	1:00-1:30
Game						
Saddle of hare, leg of hare	up to 1 kg		Conventional	3	220-250 ¹⁾	0:25-0:40
Saddle of venison	1.5-2 kg		Conventional	1	210-220	1:15-1:45

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.
Haunch of venison	1.5-2 kg	 Conventional	1	200-210	1:30-2:15
Poultry					
Poultry portions	200-250g each	 Rotitherm	1	200-220	0:35-0:50
Half chicken	400-500g each	 Rotitherm	1	190-210	0:35-0:50
Chicken, poulard	1-1.5 kg	 Rotitherm	1	190-210	0:45-1:15
Duck	1.5-2 kg	 Rotitherm	1	180-200	1:15-1:45
Goose	3.5-5 kg	 Rotitherm	1	160-180	2:30-3:30
Turkey	2.5-3.5 kg	 Rotitherm	1	160-180	1:45-2:30
Turkey	4-6 kg	 Rotitherm	1	140-160	2:30-4:00
Fish (steamed)					
Whole fish	1-1.5 kg	 Conventional	1	210-220	0:45-1:15

1) Pre-heat the oven

Grill Sizes

Oven function: Grill  or Dual grill  with maximum temperature setting



Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated with the grill functions for 5 minutes.**

- For grilling, place the **shelf** in the **recommended shelf position**.
- Always insert the **tray for collecting the fat** into the **first shelf position** from the bottom.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

Food to be grilled	Oven level	Grilling time	
		1st side	2nd side
Burgers	4	8-10 mins.	6-8 mins.
Pork fillet	4	10-12 mins.	6-10 mins.
Sausages	4	8-10 mins.	6-8 mins.
Fillet steaks, veal steaks	4	6-7 mins.	5-6 mins.
Fillet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast ¹⁾	3	4-6 mins.	3-5 mins.
Toast with topping	3	6-8 mins.	---

1) Do not pre-heat

Defrosting

Oven function: Defrost  (no temperature setting)

- Unwrap the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf in the **1st oven level from the bottom**.

Defrosting table

Dish	Defrosting time mins.	Further defrosting time (mins.)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate Turn halfway through
Meat, 1000 g	100-140	20-30	Turn halfway through
Meat, 500 g	90-120	20-30	Turn halfway through
Trout, 150g	25-35	10-15	---
Strawberries, 300g	30-40	10-20	---
Butter, 250g	30-40	10-15	---
Cream, 2 x 200g	80-100	10-15	Cream can also be whipped when still slightly frozen in places
Gateau, 1400g	60	60	---

Drying

Oven function: Fan cooking

- Use oven shelves covered with greaseproof paper or baking parchment.
- You get a better result if you switch the oven off halfway through the drying time, open the door and leave the oven to cool down overnight.
- After this finish drying the food to be dried.

Food to be dried	Temperature in °C	Oven level		Time in hours (Guideline)
		1 level	2 levels	
Vegetables				
Beans	60-70	3	1 / 4	6-8
Peppers (strips)	60-70	3	1 / 4	5-6
Vegetables for soup	60-70	3	1 / 4	5-6
Mushrooms	50-60	3	1 / 4	6-8
Herbs	40-50	3	1 / 4	2-3
Fruit				
Plums	60-70	3	1 / 4	8-10
Apricots	60-70	3	1 / 4	8-10
Apple slices	60-70	3	1 / 4	6-8
Pears	60-70	3	1 / 4	6-9

Making Preserves

Oven function: Bottom heat

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable.**
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.

- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100 °C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100 °C in mins.
Soft fruit			
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	---
Unripe gooseberries	160-170	35-45	10-15
Stone fruit			
Pears, quinces, plums	160-170	35-45	10-15
Vegetables			
Carrots ¹⁾	160-170	50-60	5-10
Mushrooms ¹⁾	160-170	40-60	10-15
Cucumbers	160-170	50-60	---
Mixed pickles	160-170	50-60	15
Kohlrabi, peas, asparagus	160-170	50-60	15-20
Beans	160-170	50-60	---

1) Leave standing in oven when switched off

Cleaning and Care



Warning: For cleaning, the appliance must be switched off and cooled down.

Warning: For safety reasons, **do not** clean the appliance with steam jet or high-pressure cleaning equipment.

Attention: Do not use any scouring agents, sharp cleaning tools or scourers.

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and warm water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.

Cooking surface



Important: Cleaning agents must not be used on **hot** glass ceramic surfaces. All cleaning agents must be removed with plenty of clean water, as they can have a corrosive effect when the cooking surface is heated up. Only clean when the surface is cold.

Do not use any aggressive cleaning materials, such as grill or oven sprays, rough scouring agents or scratchy pan cleaners.



Clean the glass ceramic cooking surface after every use, when it is hand-hot or cold. This prevents food residues from being burnt on. Limestone and water rings, fat splashes and shiny metallic discolorations can be removed with a standard commercially available cleaner for glass ceramic or stainless steel. Follow the manufacturer's instructions.

Light soiling

1. Wipe glass ceramic surface with a damp cloth and a little washing up liquid.
2. Then rub dry using a clean cloth. No cleaning agent residues must remain on the surface.

Stubborn residues

1. Use a scraper to remove foods that have boiled over or stubborn splashes.
2. Place the scraper on the glass ceramic surface at an angle.
3. Remove residues by sliding the blade over the surface.



You can get scrapers and glass ceramic cleaners from specialist shops.



Special residues

1. Remove burnt on sugar, melted plastic, tin foil or other materials that melt **immediately, while still hot** with a scraper.



Attention: There is a risk of burns when using the scraper on the hot cooking zone.

2. Then clean the cooking surface in the normal way when it has cooled down.



If the cooking zone that has the melted materials on it has already cooled down, heat it up again before cleaning it.

Scratches or dark stains on the glass ceramic surface, that have been made e. g. by pot and pan bottoms with sharp edges, cannot be removed. However they do not affect the cooking surface's ability to function.

Hob Frame



Important! Do not put vinegar, lemon-juice or scale removers on the hob frame, otherwise dull spots will appear.

1. Wipe the frame with a damp cloth and a little washing up liquid.
2. Soften dried dirt with a wet cloth. Then wipe off and rub dry.

Oven interior

Clean the appliance after each use. In this way, dirt is easier to clean off and is not allowed to burn on.

1. For cleaning, turn the oven light on.
2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry.



Clean stubborn dirt with a special oven cleaner.



Important: If using an oven spray, please follow the manufacturer's instructions exactly.

Accessories

Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Fat Filter



1. Clean the fat filter in hot water and washing up liquid or in the dishwasher.
2. Badly burned on soiling can be removed by boiling the filter in a little water to which 2-3 tablespoonsful of dishwasher cleaner has been added.

Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails


First pull the front of the rail away from the oven wall (1) and then unhitch at the back (2).

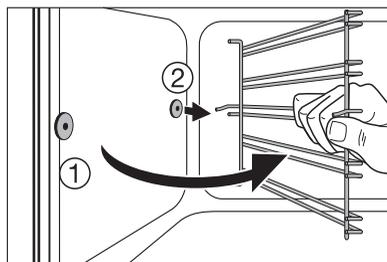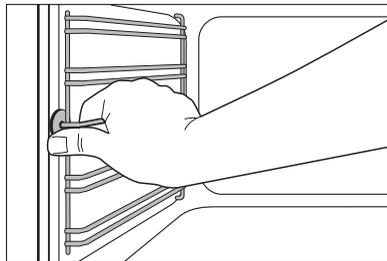


Fitting the shelf support rails



Important! The rounded ends of the guide rails must be pointing forwards!

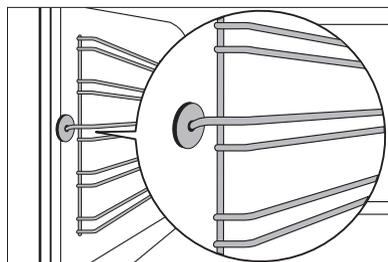

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

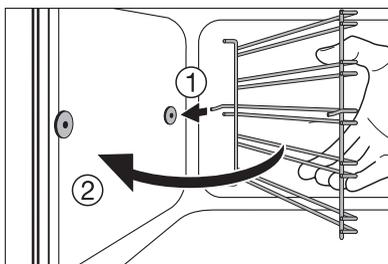

Oven Lighting




Warning: Risk of electric shock! Prior to changing the oven light bulb:
 – Switch off the oven!
 – Disconnect from the electricity supply.



Place a cloth on the oven floor to protect the oven light and glass cover.

Changing the oven light bulb/cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary: replace with **25 watt, 230 V, 300 °C heat-resistant oven lighting.**
3. Refit the glass cover.

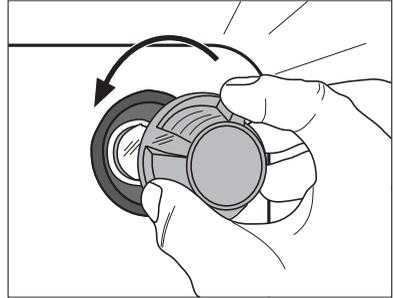

Oven Ceiling

The upper heating element can be folded down to make it easier to clean the oven ceiling.

Folding down the heating element




Warning: Only fold down the heating element when the oven is switched off and there is no risk of being burnt!

1. Remove the side shelf support rails.
2. Grip the heating element at the front and pull it forwards and out over the support lug on the inner wall of the oven.
3. The heating element will now fold down.




Caution: Do not use force to press the heating element down! The heating element might break.

Cleaning the oven ceiling

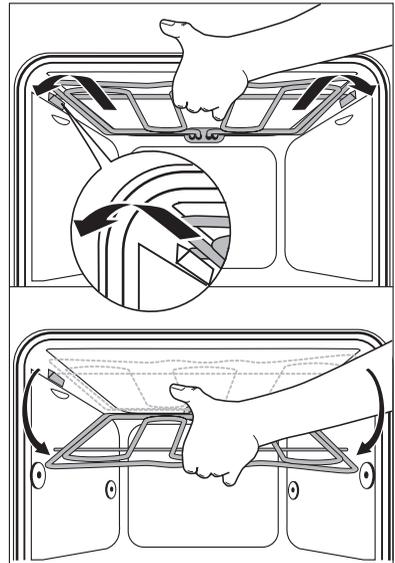

Repositioning the heating element

1. Move the heating element back up towards the oven ceiling.
2. Pull the heating element forwards against the spring pressure and guide it over the oven support lug.
3. Settle it onto the support.
4. Insert shelf support rail.

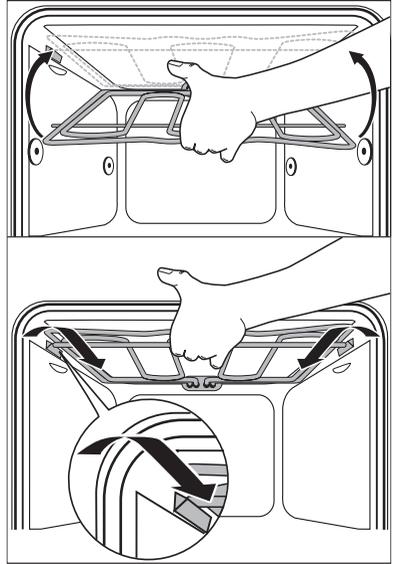


Important: The heating element must be positioned correctly and securely on both sides above the support lug on the inner wall of the oven.

Oven door


For easier cleaning of the oven interior the oven door of your appliance can be taken off its hinges.

Removing the oven door from its hinges


1. Open the oven door as far as it will go.

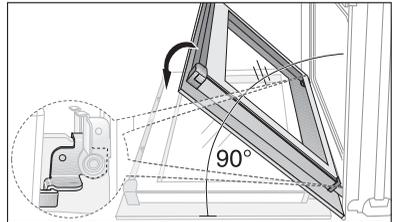


2. Undo the **clamping levers (A)** on both door hinges **fully**.

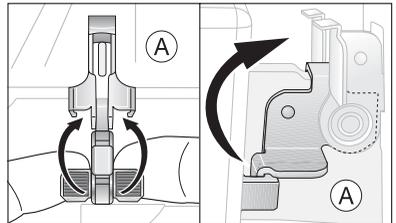

3. Close the oven door as far as the first position (approx. 45°).

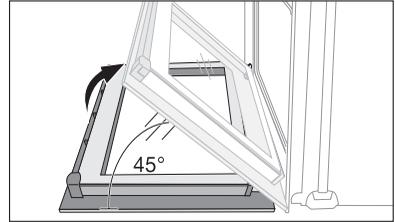


4. Take hold of the oven door with a hand on each side and pull it away from the oven at an upwards angle (**Take care:** It is heavy).

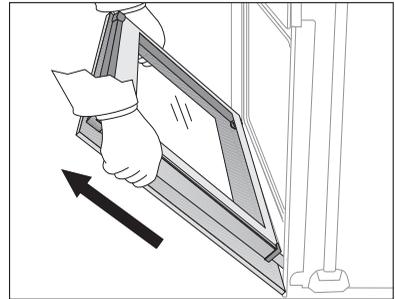


Lay the oven door with the outer side facing downwards on something soft and level, for example, a blanket in order to prevent scratches.

Hang the oven door back on its hinges


1. From the handle side take hold of the oven door with a hand on each side and hold at an angle of approx. 45°. Position the recesses on the bottom of the oven door on the hinges on the oven. Let the door slide down as far as it will go.

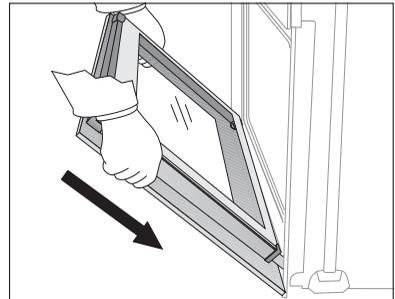

2. Open the oven door as far as it will go.

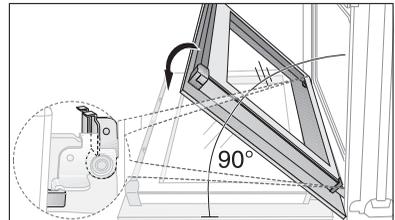

3. Fold up the clamping levers (A) on both door hinges back into their original positions.

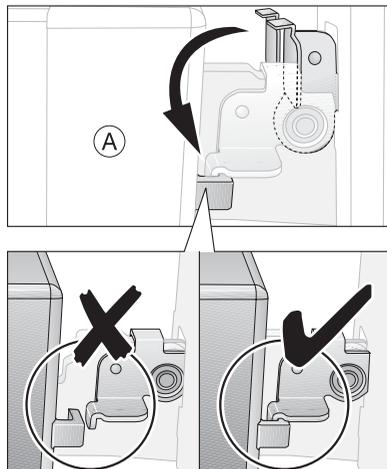

4. Close the oven door.

Oven door glass


The oven door is fitted with two panels of glass mounted one behind the other. The inner panel can be removed for cleaning.




Important Rough handling, especially around the edges of the front panel, can cause the glass to break.

Removing the door glass


1. Open the oven door as far as it will go.

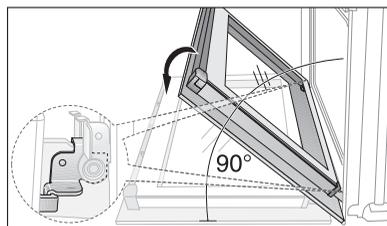


2. Undo the clamping levers (A) on both door hinges **fully**.

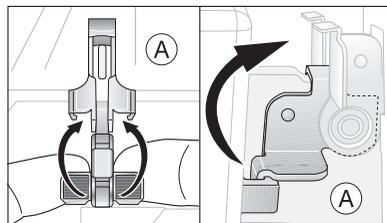


3. Close the oven door as far as the first position (approx. 45°).

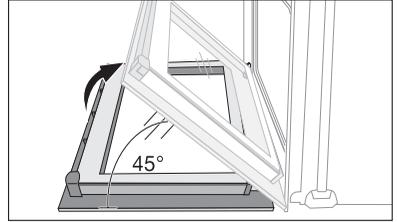

4. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling upwards.

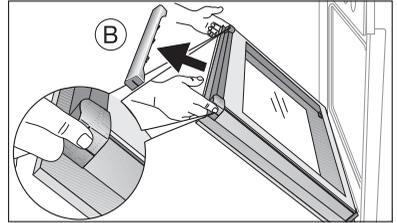

5. Take hold of the door glass on its upper edge and take it out of the guide by pulling it upwards.

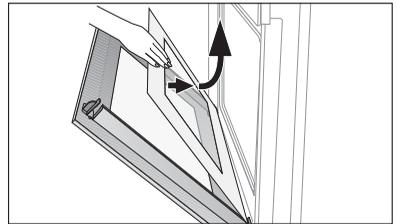


Cleaning the door glass


Clean the door glass thoroughly with a solution of water and washing up liquid. Then dry it carefully.

Putting the door glass back



1. From above insert the door glass at an angle into the door profile at the bottom edge of the door and lower it.

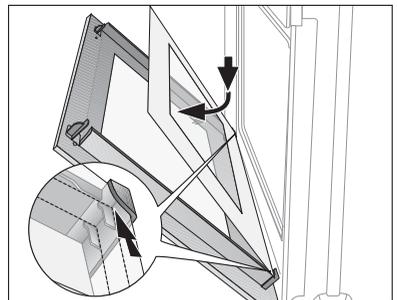


2. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

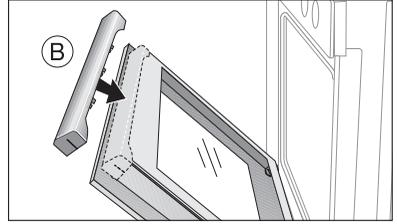


On the open side of the door trim (B) there is a guide bar (C). This must be pushed **between** the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

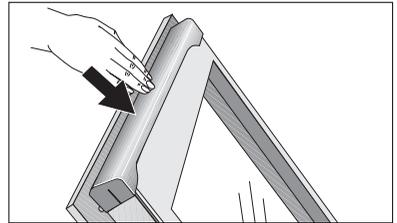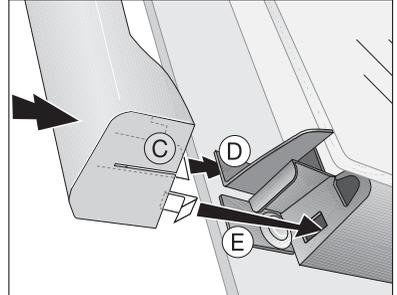

3. Open the oven door as far as it will go.

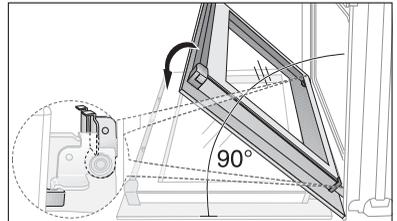

4. Fold up the clamping levers (A) on both door hinges back into their original positions.

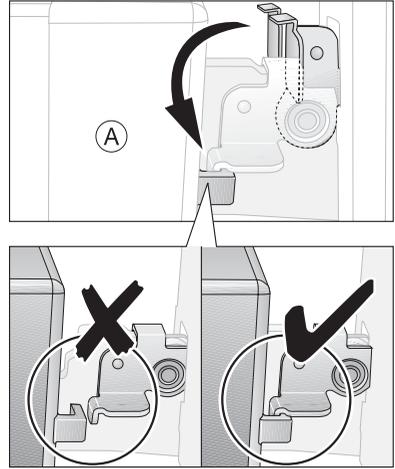


5. Close the oven door.

Pan drawer


The pan drawer underneath the oven can be removed for easier cleaning.

Removing / Replacing the pan drawer

1. Pull the pan drawer out of the cooker as far as possible.
2. Lift the pan drawer slightly, so that it can be lifted upwards at an angle out of the drawer guides.

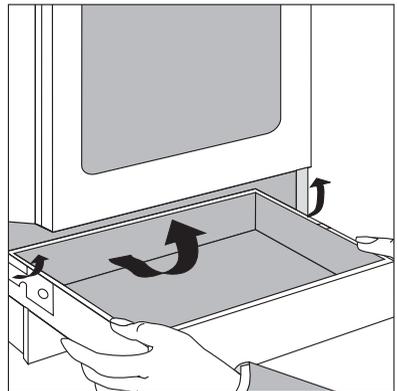

3. When re-inserting the drawer, make sure that the pan drawer's middle guide engages into the middle guide rails.
4. Lower the pan drawer to the horizontal and push it in.

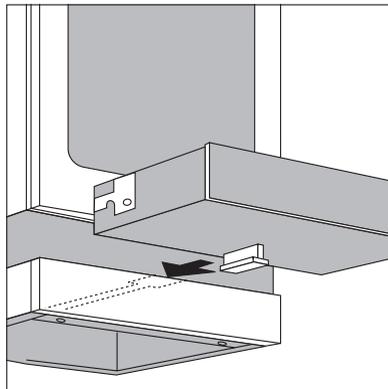

Warning: When the oven is in use, heat can build up in the pan drawer. For this reason, do not keep flammable things in there such as e. g. cleaning materials, plastic bags, oven gloves, paper, etc.

On no account store oven cleaning sprays there!

What to do if ...

Problem	Possible cause	Remedy
The cooking zones are not functioning	Consult the operating instructions for the built-in cooking surface	
The oven does not heat up	The oven is not switched on	Switch the oven on
	The clock is not set	Set the current time on the clock
	The required settings have not been set	Check the settings
	The house wiring fuse (in the fuse box) has tripped	Check the fuse. If the fuses trip a number of times, please call an authorised electrician.
The oven lighting is not operating	The oven light bulb is faulty	Replace the oven bulb

If you are unable to remedy the problem by following the above suggestions, please contact your dealer or the Customer Care Department.



Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been wrongly operated, the visit from the customer service technician or dealer may not take place free of charge, even during the warranty period.



Advice on cookers with metal fronts:

Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Disposal



Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Warning: So that the old appliance can no longer cause any danger, make it unusable before disposing of it.

To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

Instruction on setting up



Important! The new appliance may only be installed and connected by **qualified personnel**.

Please observe this instruction, otherwise the warranty will not cover any damage that may occur.

Setting up

- In the units or furniture surrounding the appliance, veneers or plastic coatings must have been made up using heat-resistant bonding agents (100 °C). If plastic coatings or cements are not sufficiently heat-resistant, the coating may be deformed or loosened.
- The appliance may be installed up against tall units or walls on one side only.
- The distance between the cooking surface and the cooker hood must as a minimum be as great as that indicated in the installation instructions for the cooker hood.
- If the appliance is being placed on a base, measures must be taken to prevent the appliance from sliding off the base.


Making the appliance level

Underneath the appliance there are 4 adjustable feet, which can be used to even out small unlevelnesses in the floor.

1. Remove the pan drawer.
2. Turn the adjustable feet to make them higher or lower as required, until the cooker is standing level.
3. Re-insert the pan drawer.



The adjustable feet are easier to turn, if the cooker is tilted slightly to take the weight off the foot.

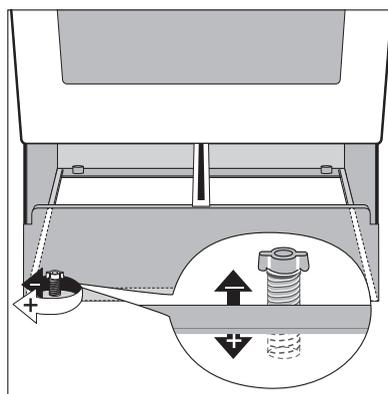

Safety information for the installer

- The set-up of the electrical installation is arranged so that the appliance can be isolated from the mains with a minimum 3 mm all-pole contact separation.

Suitable separation devices include e. g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors.

- Avoid installing the appliance next to doors and under windows. Otherwise hot cookware may be knocked off the rings when doors and windows are opened.
- The appliance must be connected to the electricity according to the connection schematic on the outside of the terminal cover.
- The cable which connects the appliance to the mains must correspond to insulation standard H05VV-F (=227 IEC 53) as a minimum.

Guarantee/Customer Service

Belgium

DECLARATION OF GUARANTEE TERMS.

Our appliances are produced with the greatest of care. However, a defect may still occur. Our consumer services department will repair this upon request, either during or after the guarantee period. The service life of the appliance will not, however, be reduced as a result.

This declaration of guarantee terms is based on European Union Directive 99/44/EC and the provisions of the Civil Code. The statutory rights that the consumer has under this legislation are not affected by this declaration of guarantee terms.

This declaration does not affect the vendor's statutory warranty to the end user. The appliance is guaranteed within the context of and in adherence with the following terms:

1. In accordance with provisions laid down in paragraphs 2 to 15, we will remedy free of charge any defect that occurs within 24 months from the date the appliance is delivered to the first end user. These guarantee terms do not apply in the event of use for professional or equivalent purposes.
2. Performing the guarantee means that the appliance is returned to the condition it was in before the defect occurred. Defective parts are replaced or repaired. Parts replaced free of charge become our property.
3. So as to avoid more severe damage, the defect must be brought to our attention immediately.
4. Applying the guarantee is subject to the consumer providing proof of purchase showing the purchase and/or delivery date.
5. The guarantee will not apply if damage caused to delicate parts, such as glass (vitreous ceramic), synthetic materials and rubber, is the result of inappropriate use.
6. The guarantee cannot be called on for minor faults that do not affect the value or the overall reliability of the appliance.
7. The statutory warranty does not apply when defects are caused by:
 - a chemical or electrochemical reaction caused by water,
 - abnormal environmental conditions in general,
 - unsuitable operating conditions,
 - contact with harsh substances.
8. The guarantee does not apply to defects due to transport which have occurred outside of our responsibility. Nor will the guarantee cover those caused by inadequate installation or assembly, lack of maintenance or failure to respect the assembly instructions or directions for use.
9. Defects that result from repairs or measures carried out by people who are not qualified or expert or defects that result from the addition of non-original accessories or spare parts are not covered by the guarantee.
10. Appliances that are easy to transport may be delivered or sent to the consumer services department. Home repairs are only anticipated for bulky appliances or built-in appliances.
11. If the appliances are built-in, built-under, fixed or suspended in such a way that removing and replacing them in the place where they are fitted takes more than half an hour, the costs that result therefrom will be charged for. Connected damage caused by these removal and replacement operations will be the responsibility of the user.
12. If, during the guarantee period, repairing the same defect repeatedly is not conclusive, or if the repair costs are considered disproportionate, in agreement with the consumer, the defective appliance may be replaced with another appliance of the same value. In this event, we reserve the right to ask for a financial contribution calculated according to the length of time it has been used.
13. A repair under guarantee does not mean that the normal guarantee period will be extended nor that a new guarantee period begins.
14. We give a twelve month guarantee for repairs, limited to the same defect.
15. Except in the event where liability is legally imposed, this declaration of guarantee terms excludes any compensation for damage outside the appliance for which the consumer wishes to assert his rights. In the event of legally admitted liability, compensation will not exceed the purchase price paid for the appliance.

These guarantee terms are only valid for appliances purchased and used in Belgium. For exported appliances, the user must first make sure that they satisfy the technical conditions (e.g.: voltage, frequency, installation instructions, type of gas, etc.) for the country concerned and that they can withstand the local climatic and environmental conditions. For appliances purchased abroad, the user must first ensure that they meet the

qualifications required in Belgium. Non-essential or requested adjustments are not covered by the guarantee and are not possible in all cases.

Our consumer services department is always at your disposal, even after the guarantee period has expired.

Address for our consumer services department:
ELECTROLUX HOME PRODUCTS BELGIUM
Bergensesteenweg, 719 - 1502 LEMBEEK
Tel.: 02.363.04.44

Weitere Kundendienststellen im Ausland

In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

Further after-sales service agencies overseas

In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après-vente

Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

Otros puntos de Postventa en el extranjero

En estos países rigen las condiciones de nuestros representantes locales. las cuales pueden ser consultadas allí mismo.

Ulteriori uffici del servizio tecnico assistenza clienti all'estero

In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminate sul luogo.

Serviços de assistência técnica no estrangeiro

Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

További vevőszolgálati irodák külföldön

Ezekben az országokban a mi AEG-Electrolux vevőszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

Servisne službe

Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG-Electrolux.

Belgium

Electrolux Home Products Belgium
ELECTROLUX SERVICE
Bergensesteenweg 719
1502 Lembeek
E-mail:
consumer.services@electrolux.be

Consumer services

02/363.04.44

02/363.04.00
02/363.04.60

<p>U.A.E. Abu Dhabi Universal Trading Company P.O. Box 43 99 Tel.: 6335331 Service Center 6733974</p>	<p>Jordan Jordan Household Supply Co. Ltd. P.O. Box 3/68 Amman/Tel.: 69 70 50</p>	<p>Malta ITC International Trading Company White House Building Mountbatte Street Blata L-Bajda/Tel.: 220644</p>
<p>Egypt Middle East Commercial Center 4 Salah El Dein St. - 2nd floor Heliopolis, Kairo Egypt Tel.: 2024181719</p>	<p>Canada EURO-LINE Appliances 2150 Winston PARK Drive 20 Oakville, Ontario L6H 5V1 Tel.: 905 829 3980 Fax: 905 829 3985</p>	<p>Mauritius Happy World Centre Ltd. P.O. 7 54 1 Chausee Street Port Louis Tel.: 25355</p>
<p>Australia The Andi-Co Group 1 Stamford Road Oakleigh VIC 3166 Tel.: (03) 9569 1255 Fax: (03) 9569 1450 www.andico.com.au</p>	<p>Korea (South) Core Incorp. 3/F Chewoo Bldg. 200 Nonhyun-Dong Kangnam-Ku 135-010 Seoul Telefon 82 2 549 89 61</p>	<p>Namibia AEG NAMIBIA (PTY) LIMITED-Jeppe Street Northern Industrial Area Windhoek Tel.: (061) 21-6082/4 Fax: (061) 217838</p>
<p>Bahrain/Arabian Gulf A.A. Zayani & Sons P.O. Box 9 32 Bahrain Tel.: 17311124</p>	<p>Croatia Electrolux D.O.O. Suplova 7 10000 Zagreb Tel.: 1 61 19512 Fax: 1 61 19513</p>	<p>New Zealand Monaco Corporation Ltd. 10 Rothwell Avenue Albany - Auckland 4399 Auckland 1 New Zealand Tel.: 00 64-92 59 11 11 Fax: 00 64-92 59 11 12</p>
<p>Bulgaria Electrolux Bulgaria E.O.O.D. 91 Levski Blvd. 1000 Sofia Tel.: 2 806676 Fax. 2 980 5276</p>	<p>Kuwait/Arabian Gulf Ali Al-Ghanim Est. P.O. Box 21540 - Safat Tel.: 4822190 Fax: 4820116</p>	<p>Syria WATTAR CO. P.O. Box 36109 Mazzeah - Damascus Direct Phone: 00963116132649 Fax: 00963116119537</p>
<p>Cyprus Hadjikyrlakos & Sons Ltd. Prodromou 121 P.O. Box 21587 Nicosia 1511 Service Telephones: Nicosia 02 481226 Limassol 05 562182 Larnaca 04 633929 Paphos 06 932 699</p>	<p>Lebanon Adib & Assaferi P.O. Box 539 Tripoli</p>	<p>Iran ARIAN International Development Co. AEG Showroom Shariati, Balatar as Safar Teheran / Iran Phone No. Showroom: 021 / 285 513 / 4 Phone No. Service: 021 / 312 27 67 / 8</p>

<p>Estonia Electrolux Estonia Ltd. Mustamäe tee 24 EE0006 Tallinn Tel.: (372) 6 650 090 Fax: (372) 6 650 092</p>	<p>Latvia Electrolux Latvija Ltd. Kr.Barona iela 130/2 Riga, LV-1012 Tel.: 371 7313626 Fax: 371 7845954</p>	<p>Poland Electrolux Poland Sp. zo.o. ul. Domaniewska 41 02-034 Warszawa tel.: 022 874 33 33 fax: 022 874 33 00</p>
<p>Hong Kong Dah Chong Hong Ltd. 20 Kai Cheung Road Kowloon Bay Kowloon - Hong Kong Tel.: 0085222621620 Fax: 0085227550333</p>	<p>Lithuania Electrolux Lithuania Verkui 29 2600 Vilnius Tel.: 372 272 3326 Fax: 372 272 3366</p>	<p>Russia Electrolux Russia Ltd. 16 Olimpiysky prospekt 129090 Moscow Tel.: (095) 937 7837 Fax: (095) 926 5513</p>
<p>Israel Evis Ltd. Tadiran-Ampa Service 10 Gibonay Israel Street New Industrial Zone Netanya, 42504 Israel</p>	<p>Malaysia Arzbergh Engineering No. 49A/B, Jalan Petaling Utama 7 4600 Petaling Jaya Tel.: 3 795 1084 Fax: 3 795 1082</p>	<p>Saudi Arabia Awad Badi Nahas Est Shara Siteen Jeddah 21463 Phone: 6646583 Alia Trading Co Mecca Road Riyadh 11491 Phone 4645977</p>
<p>Japan Electrolux Japan Ltd. Domestic Appliances Department Maruzen Showa Warehouse Building Tookai 4-5-12, Ota-ku 143-006 Tokyo Tel.: 0120-13-7117 Fax: 03-3790-5257</p>	<p>Singapore Group Pte Ltd. 833 Bukit Timah Road Unit no. 01-11 Royalville 279887 Singapore Tel.: 0065 64638484 Fax: 0065 64638488</p>	<p>Slovenia Electrolux Slovenia D.O.O. Traska Ul. 132 1000 Ljubljana Tel.: 61 1234 137 Fax: 61 1234 238</p>
<p>Thailand Olympia Thai Tower, 444 Rachadapiser Road Samsennok- Huaykwang 10320 Bangkok Thailand Tel.: 006625136111 Fax: 006625136334</p>	<p>Slovakia Rep. Electrolux Slovakia S.R.O. Seberiniho 1 821 03 Bratislava Tel.: 02 4333 4322, 4355 Fax: 02 4333 6976</p>	<p>South Africa AEG (Pty) Ltd. 55, 12th Road P.O. Box 1 02 64 Kew/Johannesburg 2000 Tel.: 8069111</p>
<p>Hungary Electrolux Lehel KFT Erzsébet Királyné útja 87. 1142 Budapest Tel.: 00361/467-3200</p>	<p>Czech Rep. ELECTROLUX DOMÁCI SPOTŘEBIČE CZ DIVIZE ELECTROLUX S.R.O. Customer Centre Hanusova ul. 140 21 Praha 4 Tel.: 2 6112 6112 Telefax: 2 6112 3504</p>	

European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/ Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4 Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 2780609	Ozo 10A, LT 08200 Vilnius
Luxembourg	+352 42 431 301	Rue de Bittbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87

		
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warszawa
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edificio Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz/Suisse/ Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana d.o.o. Gerbiceva 98, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spot- rebiäte SK, Seberiniho 1, 821 03 Bratislava
Suomi	www.electrolux.fi	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabası caddesi no : 35 Taksim Istanbul
Россия	+7 095 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

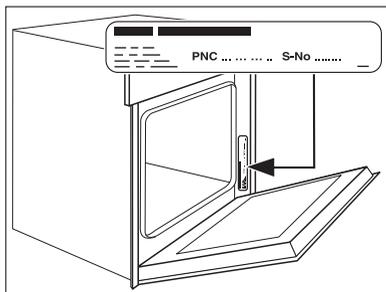

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

www.electrolux.com

822 928 779-B-160407-03 Subject to change without notice

822 928 779-B-160407-03