



User's Manual




Before operating the Monitor, please read this manual thoroughly and retain it for future reference. http://www.pyleaudio.com

PYLE



Warning

- ► Read this manual before using this product.
- ▶ This product is composed of precision components and shall not be dissembled unless approved or authorized by us, otherwise we shall not provide any maintenance
- protect the product from moisture and shock

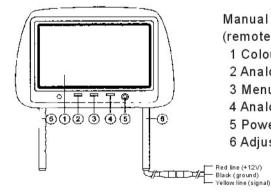


Manual button

(remote control possible)

- 1 Colour LCD screen
- 2 Analog minus
- 3 Menu
- 4 Analog plus
- 5 Power switch
- 6 Adjustable steel Pipe

Remote control

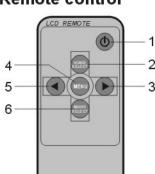

- 1. POWR ON/OFF
- 2. AV
- 3. POSITIVE ADJUSTMEN
- 4. MENU
- 5. NEGATIVE ADJUSTMENT
- 6. MODE SELECTION

Installation

- 1: Take down the original pillow in the car.
- 2. Install the pillow of this monitor. Adjust the steel tube in or out (max. interval: 5cm) according to the interval between pillow holes so that the interval between steel tubes of the pillow monitor coincides with that between steel tubes of the original
- 3. The circuit connection of the pillow monitor is very simple. As shown in Fig. connect the +12V power of the sound system (red line to +, black line to ground), and then connect the video signals.
- 4. After the pillow monitor is connected properly, press the Power switch and the screen lights up; press Menu, adjust Analog Plus or Analog Minus to the desired mode, or use the remote control if any

Move the steel tubes back and fro to pull them in and out so that the interval between steel tubes coincides with that of the original pillow.







How to use the accessory tubes

As pillow holes are of different sizes, this product is provided with two tubes 12mm in diameter. When the pillow hole is large, fit this fitting to meet different needs.

Specifications

Display Size:5.6" System: PAL/NTSC Power supply: DC 12V Resolution:320*240*RGB =230400 Power: 6W