


REMOVABLE BODICE

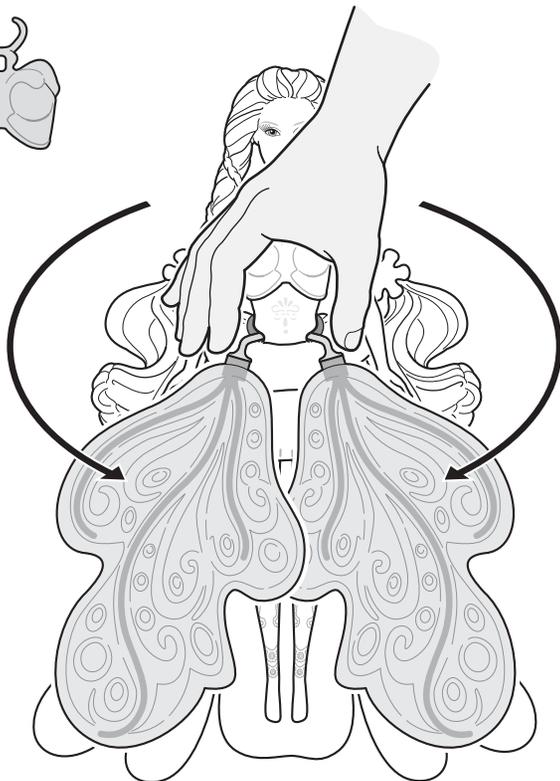

4.
Swing wings down together.


Barbie®

WONDER FAIRY® doll Instructions



B5760-0920

3+

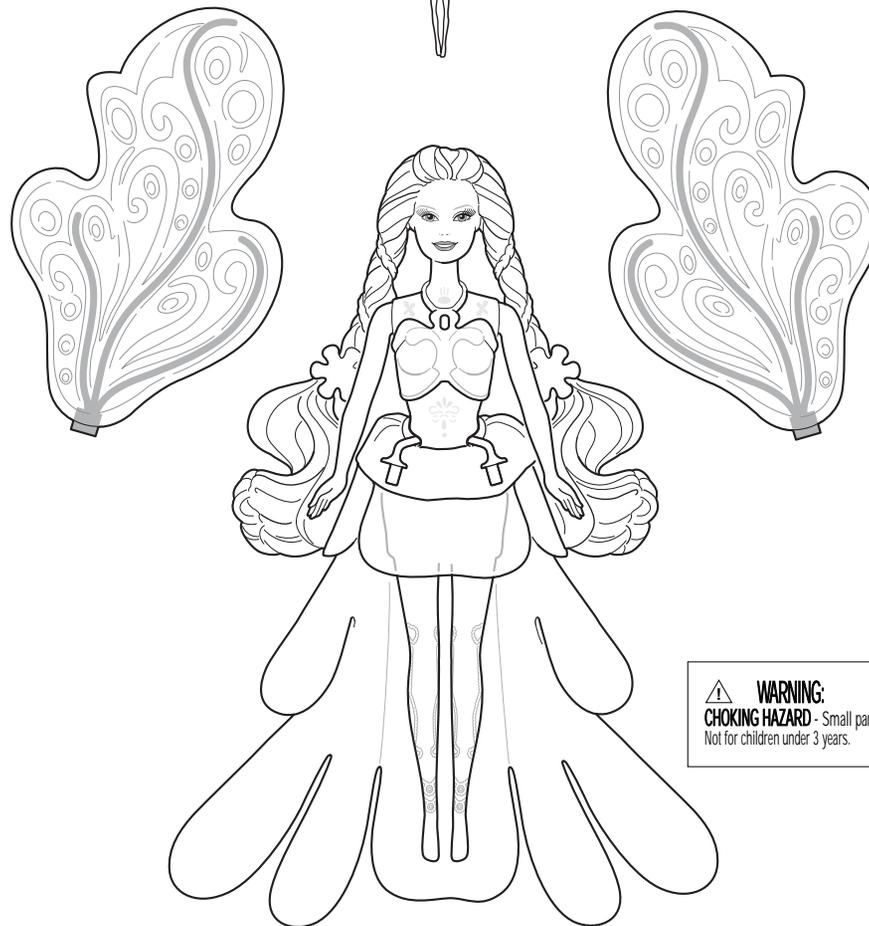

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Barbie®
com

CONSUMER INFORMATION

YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1 (800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Dirmport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-TOYS

CONTENTS


Colors and decorations may vary from those shown. Dolls cannot stand alone.

Please remove everything from the package and compare to the contents shown here.
If any items are missing, please call 1-800-524-TOYS.


Keep these instructions for future reference as they contain important information.

Assemble Wonder Fairy®!


1. Attach each wing to wing support. Plastic frame must face toward the doll.

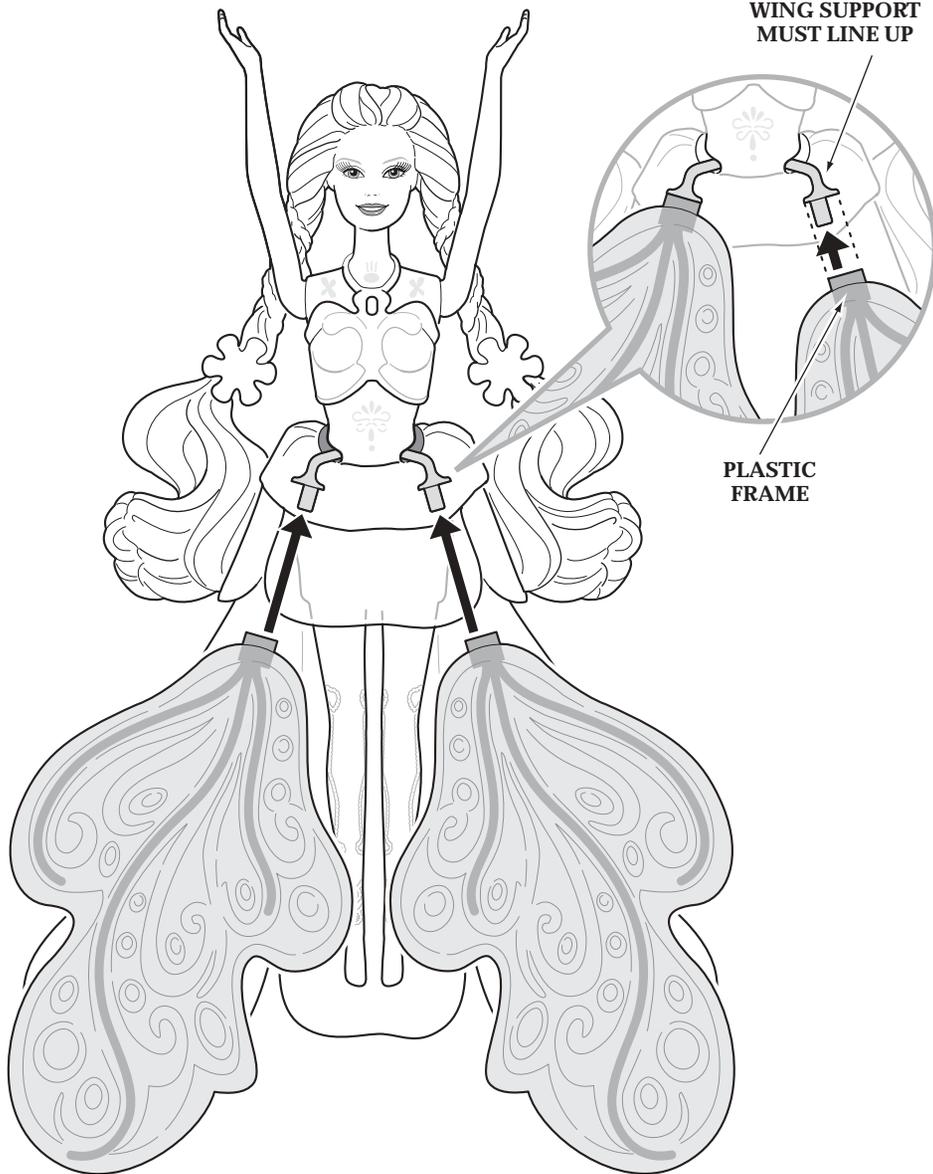

2. Push wings back together until they "click" all the way UP.

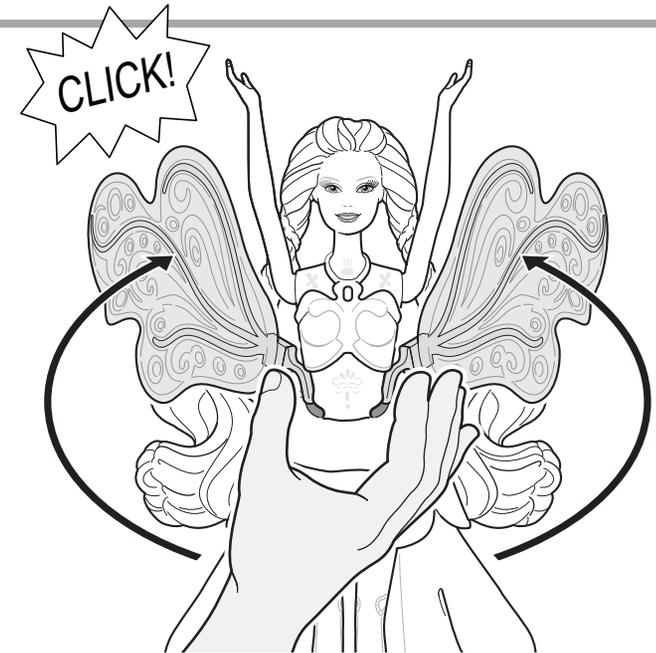

3. Hold doll by the waist. Press and release button repeatedly to make wings flutter.

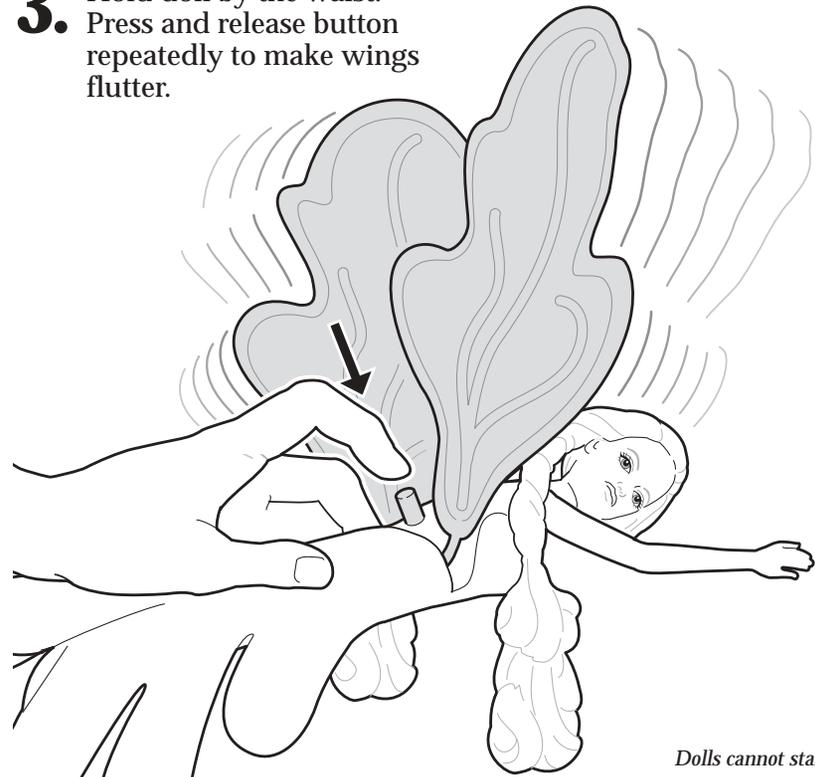

Dolls cannot stand or "fly" alone.